# plexiphon

## _travelers guide
## _for weaving the plexus

| 16 hp | 0 modes to pick | ∞+ decay at max |
|---|---|---|

› then  noon = 12 o'clock  tags = the panel drawing

stereo modeless spatial texturizer · reverb to multi-tap echo and everything between · by tom erbe

## 01 what it is

px_01

| | |
|---|---|
| a texturizer | stereo, morphs smoothly from reverb to multi-tap echo · best results are neither |
| modeless | no algorithms to pick · every knob works across its whole range, all the time |
| everything talks | "delay time" comes from plexus, size and couple together · explore rather than aim |


## 02 in · out · level

px_02

| | |
|---|---|
| stereo | patch only `L[M]` and it feeds both · take only `L[M]` out for a mono mix |
| `level` | input gain · unity about 2:30 · start at noon – 1:00, more for quiet signals or clipping |
| `mix` | dry ↔ wet · has its own cv jack |
| the window | the light grid shows the current size, in mimeophon-style colours |

## __fig.10 : patching

L(M) normals

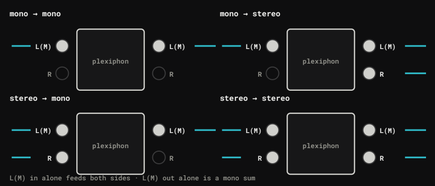


## __fig.04 : level

input gain




## 09 first flight

px_09 · first space

1. audio into `L[M]` · both outs to your mixer
2. `level` around 1:00 · `mix` at noon
3. `plexus` low, `size` middle = a room
4. raise `decay` · move `color`
5. `plexus` up slowly to hear it turn into echoes
6. press `[ skew ]` and turn plexus, size or color

## 03 the plexus

px_03 · fig.01

| | |
|---|---|
| `plexus` | down = more paths, more tangled = reverb · up = fewer paths = multi-tap echo |
| `size` | with plexus low it acts like room size · with plexus high, like the repeat rate |
| `couple` | how much L and R mix inside · full ccw = two separate mono plexiphons |


## __fig.01 : plexus x size

one continuous space




## __fig.06 : couple

stereo inside the plexus

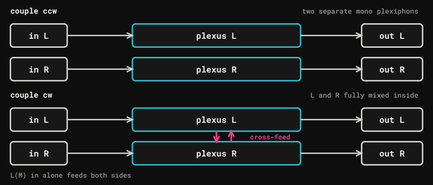



## 04 tone · time

px_04

| | |
|---|---|
| `diffuse` | filtering + early reflections · softens or sharpens the plexus |
| `decay` | feedback inside the network · max = more than infinite |
| `color` | darkens ccw of 1:00 · brightens cw of 1:00 · changes over time with decay |


## __fig.05 : diffuse

soften ↔ sharpen

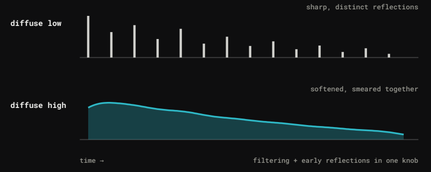


## __fig.08 : decay


feedback in the network

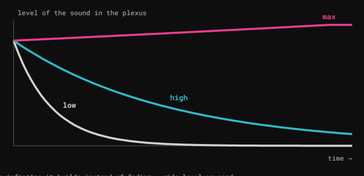


max = more than infinite: it builds instead of fading · ride level or send

## __fig.07 : color

1:00 = neutral

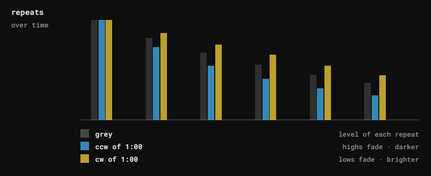



## 05 send

px_05 · gate in · fig.02

| | |
|---|---|
| high | input goes into the plexus · unpatched = always high |
| low | input is kept out · what is already inside keeps ringing |
| note | it does not change `mix` · the dry signal still passes |

## __fig.02 : send

gate in




high = feed it · low = it keeps ringing, nothing new enters


## 06 skew

px_06 · button

| | |
|---|---|
| press · yellow | plexus, size and color move L and R in opposite directions · wider, stranger |
| press · green | keeps the spread, now both sides move the same way |
| hold | clears the skew (light off) |

## __fig.09 : skew

button · plexus, size, color

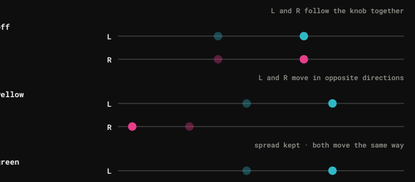


faint = before turning · solid = after · hold skew to clear
skews plexus, size and color


## 07 cv

px_07

| | |
|---|---|
| `cv out` | an envelope follower: a voltage that follows the output level |
| attenuverters | `plexus` `decay` `color` `size` · noon = off |
| direct | `couple` `diffuse` `mix` cv jacks |

## __fig.11 : cv out

envelope follower

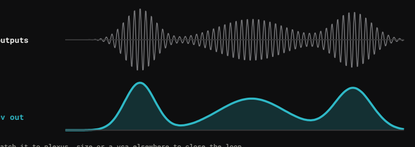


patch it to plexus, size or a vca elsewhere to close the loop

## 10 tips

px_10


**tempo feel** — send gate
gate the send from a clock division for rhythmic bursts into the plexus

**mono tricks** — skew · couple
still useful from the `L[M]` out alone, or for parallel processing

**feedback in** — cv out
patch the follower to plexus, size or a vca elsewhere

## __fig.03 : the panel

numbers match the legend

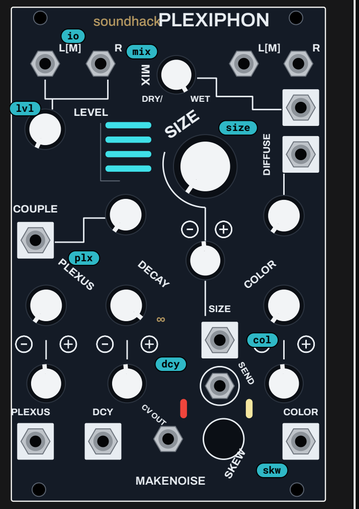


| | |
|---|---|
| `io` | **in** · **out** · stereo · L[M] for mono |
| `lvl` | **level** · input gain · unity ~2:30 |
| `mix` | **mix** · dry ↔ wet + cv |
| `size` | **size** · room size ↔ repeat rate |
| `plx` | **plexus** · **couple** · paths · L/R coupling |
| `dcy` | **decay** · **diffuse** · feedback · softness |
| `col` | **color** · dark ← 1:00 → bright |
| `skw` | **skew** · **send** · **cv out** · stereo spread … |

## 08 specs

px_08

| | |
|---|---|
| size | 16 hp |
| power | 240 mA +12 V · 5 mA –12 V |
| code | tom erbe (soundhack) for make noise |