Lecture 10: LTI Resistive Circuits and Equivalent One-Ports

EE201 – Circuit Theory I

M. Mert Ankaralı

Department of Electrical and Electronics Engineering
Middle East Technical University

current voltage a part of a circuit (box N)

Review: equations from the graph alone

	incidence / mesh	**fundamental cutset / loop**
KCL	$A\mathbf{i} = \mathbf{0}$	$Q\mathbf{i} = \mathbf{0}$
KVL	$M\mathbf{v} = \mathbf{0}$	$B\mathbf{v} = \mathbf{0}$
$n-1$ voltages	node voltages $\mathbf{e}$	tree voltages $\mathbf{v}_T$
$b-n+1$ currents	mesh currents $\mathbf{i}_M$	co-tree currents $\mathbf{i}_C$
works for	M: planar, nonseparable	any connected graph

KCL and KVL depend only on the graph: they hold for any elements.

A circuit has $2b$ unknowns: b more equations come from the elements.

Why this lecture?

- **So far:** KCL and KVL, written for any elements.

Why this lecture?

- **So far:** KCL and KVL, written for any elements.
- **Now:** we restrict the elements. In an LTI resistive circuit every equation is linear and algebraic.

Why this lecture?

- **So far:** KCL and KVL, written for any elements.
- **Now:** we restrict the elements. In an LTI resistive circuit every equation is linear and algebraic.
- **Before solving:** simplify. Replace a part of the circuit by a source, or by a simpler part with the same behaviour at its terminals.

Why this lecture?

- **So far:** KCL and KVL, written for any elements.
- **Now:** we restrict the elements. In an LTI resistive circuit every equation is linear and algebraic.
- **Before solving:** simplify. Replace a part of the circuit by a source, or by a simpler part with the same behaviour at its terminals.
- **Tools:** the substitution theorem, equivalent one-ports, series and parallel connections, source transformation.

Why this lecture?

- **So far:** KCL and KVL, written for any elements.
- **Now:** we restrict the elements. In an LTI resistive circuit every equation is linear and algebraic.
- **Before solving:** simplify. Replace a part of the circuit by a source, or by a simpler part with the same behaviour at its terminals.
- **Tools:** the substitution theorem, equivalent one-ports, series and parallel connections, source transformation.
- **Next:** systematic methods for every LTI resistive circuit — node voltage and mesh current analysis.

Roadmap

1. **LTI resistive circuits** — what the words mean, and what we gain
2. **Substitution theorem** — replace a part of a circuit by a source
3. **One-ports and equivalence** — the same i–v characteristic at the port
4. **Series and parallel** — combine resistors and sources
5. **One source and one resistor** — exchange a voltage source and a current source

Three pairs of words

the circuit is ...	if it contains ...	otherwise it is ...
nonlinear	a nonlinear R, L, C or dependent source	**linear**

Three pairs of words

the circuit is ...	if it contains ...	otherwise it is ...
nonlinear	a nonlinear R, L, C or dependent source	**linear**
time-varying	a time-varying R, L, C or dependent source	**time-invariant**

Three pairs of words

the circuit is ...	if it contains ...	otherwise it is ...
nonlinear	a nonlinear R, L, C or dependent source	**linear**
time-varying	a time-varying R, L, C or dependent source	**time-invariant**
dynamic	an L or a C	**resistive**


Three pairs of words

the circuit is ...	if it contains ...	otherwise it is ...
nonlinear	a nonlinear R, L, C or dependent source	**linear**
time-varying	a time-varying R, L, C or dependent source	**time-invariant**
dynamic	an L or a C	**resistive**

LTI resistive circuit


Linear, time-invariant and resistive: it contains only LTI resistors, linear time-invariant dependent sources and independent sources.

Independent sources do not count

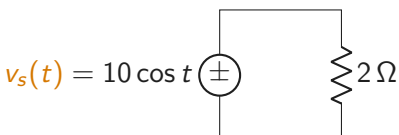

The source varies in time. Is the circuit time-varying?


Independent sources do not count

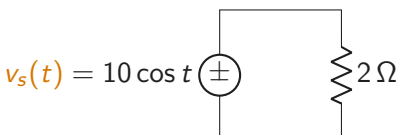

The source varies in time. Is the circuit time-varying?

No. The three pairs of words look only at R, L, C and dependent sources. This is an LTI resistive circuit.

Independent sources do not count

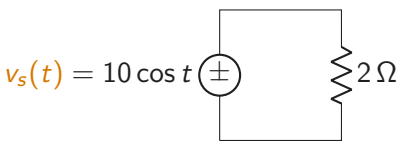


The source varies in time. Is the circuit time-varying?


No. The three pairs of words look only at R, L, C and dependent sources. This is an LTI resistive circuit.

The words describe the circuit, not the waveform that drives it.


Which circuit is which?

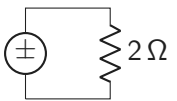


(a)

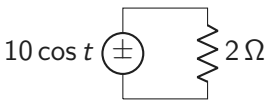


(b)

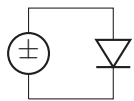

(c) diode

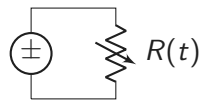

(d)

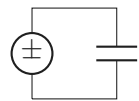


(e) capacitor

Sources: $5\,\mathrm{V}$ except (b). In (d), $R(t) = 2 + \sin t\ \Omega$.

Linear? Time-invariant? Resistive?

Which circuit is which?

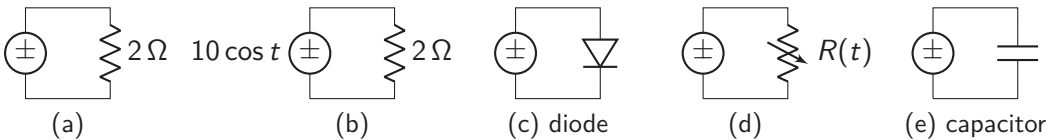

(a) (b) (c) diode (d) (e) capacitor

	(a)	(b)	(c)	(d)	(e)
linear	✓	✓	×	✓	✓
time-invariant	✓	✓	✓	×	✓
resistive	✓	✓	✓	✓	×
LTI resistive	✓	✓	×	×	×

What we gain

- KCL and KVL are linear.

What we gain

- KCL and KVL are linear.
- Every element equation is linear and algebraic:

  $v = Ri$ (resistor), $\quad v = \mu v_x, \quad i = g v_x, \ \ldots$ (dependent sources)

  No derivative appears.

What we gain

- KCL and KVL are linear.
- Every element equation is linear and algebraic:

  $$v = Ri \quad \text{(resistor)}, \qquad v = \mu v_x, \quad i = g v_x, \quad \ldots \quad \text{(dependent sources)}$$

  No derivative appears.
- Time enters only through the values of the independent sources.

What we gain

- KCL and KVL are linear.
- Every element equation is linear and algebraic:


  $$v = Ri \ \text{(resistor)}, \qquad v = \mu v_x, \quad i = g v_x, \ \ldots \ \text{(dependent sources)}$$

  No derivative appears.
- Time enters only through the values of the independent sources.
- So at each instant the circuit is solved like a circuit with constant sources: $2b$ linear algebraic equations.

Roadmap

1. **LTI resistive circuits** — what the words mean, and what we gain ✓
2. **Substitution theorem** — replace a part of a circuit by a source
3. **One-ports and equivalence** — the same i–v characteristic at the port
4. **Series and parallel** — combine resistors and sources
5. **One source and one resistor** — exchange a voltage source and a current source


The substitution theorem

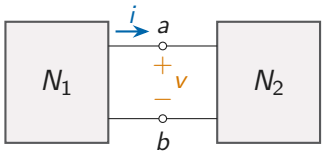

(I)


A circuit cut into two parts, joined at the terminals a, b.
i: current from N_1 into N_2 v: voltage between a and b

The substitution theorem

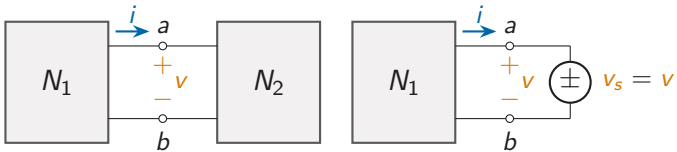


Replace N_2 by a voltage source with $v_s(t) = v(t)$ ...

The substitution theorem

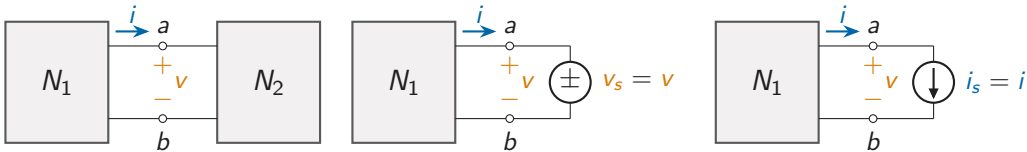

... or by a current source with $i_s(t) = i(t)$.

The substitution theorem

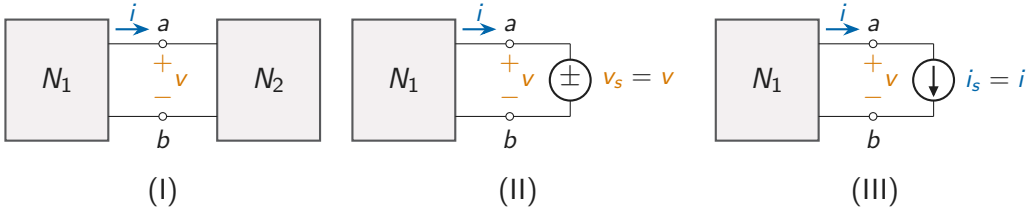

Substitution theorem

No branch voltage or branch current inside N_1 changes. An observer inside N_1 cannot tell (I), (II) and (III) apart.

Why does it work?

- The equations inside N_1 (KCL, KVL, element equations) do not change.

Why does it work?

- The equations inside N_1 (KCL, KVL, element equations) do not change.
- N_1 meets the rest only through v and i.

Why does it work?

- The equations inside N_1 (KCL, KVL, element equations) do not change.
- N_1 meets the rest only through v and i.
- The source fixes one of them at the value it had in (I). The solution of (I) still satisfies every equation of (II) and (III).

Why does it work?

- The equations inside N_1 (KCL, KVL, element equations) do not change.
- N_1 meets the rest only through v and i.
- The source fixes one of them at the value it had in (I). The solution of (I) still satisfies every equation of (II) and (III).
- N_2 can be anything, even nonlinear: only its port values matter.


Why does it work?

- The equations inside N_1 (KCL, KVL, element equations) do not change.
- N_1 meets the rest only through v and i.
- The source fixes one of them at the value it had in (I). The solution of (I) still satisfies every equation of (II) and (III).
- N_2 can be anything, even nonlinear: only its port values matter.

One condition


The new circuit must have a unique solution. If N_1 is a single current source, replacing N_2 by a current source leaves v undetermined.

Example: substitution

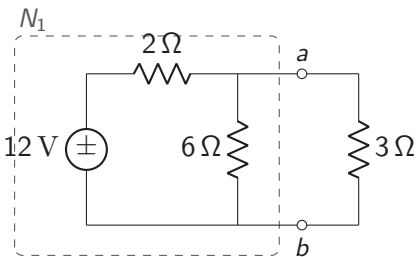

N_2 is the 3 Ω resistor. Find v, i and the currents inside N_1.

Example: substitution

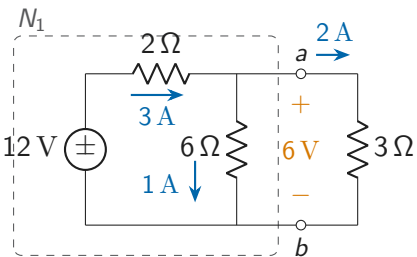


(I) $6\,\Omega \parallel 3\,\Omega = 2\,\Omega$; the two $2\,\Omega$ share $12\,\mathrm{V}$:

$v = 6\,\mathrm{V}, \quad i = 6/3 = 2\,\mathrm{A}$

Inside N_1: $3\,\mathrm{A}$ in the $2\,\Omega$, $1\,\mathrm{A}$ in the $6\,\Omega$.

Example: substitution

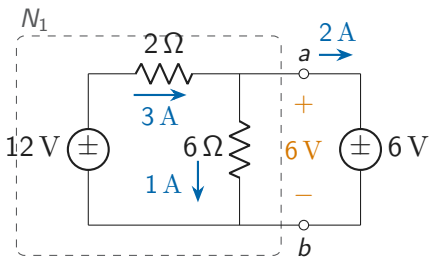


(I) $6\,\Omega \parallel 3\,\Omega = 2\,\Omega$; the two $2\,\Omega$ share $12\,\mathrm{V}$:

$v = 6\,\mathrm{V}, \quad i = 6/3 = 2\,\mathrm{A}$

Inside N_1: $3\,\mathrm{A}$ in the $2\,\Omega$, $1\,\mathrm{A}$ in the $6\,\Omega$.

(II) A $6\,\mathrm{V}$ source fixes $v = 6\,\mathrm{V}$: again $3\,\mathrm{A}$ and $1\,\mathrm{A}$. ✓

Example: substitution

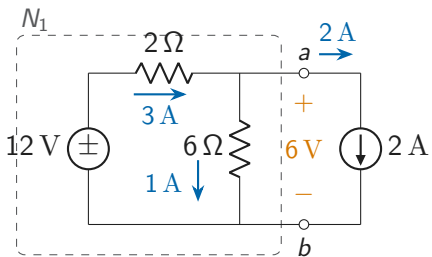

(I) $6\,\Omega \parallel 3\,\Omega = 2\,\Omega$; the two $2\,\Omega$ share $12\,\mathrm{V}$:

$v = 6\,\mathrm{V}, \quad i = 6/3 = 2\,\mathrm{A}$

Inside N_1: $3\,\mathrm{A}$ in the $2\,\Omega$, $1\,\mathrm{A}$ in the $6\,\Omega$.

(II) A $6\,\mathrm{V}$ source fixes $v = 6\,\mathrm{V}$: again $3\,\mathrm{A}$ and $1\,\mathrm{A}$. ✓

(III) A $2\,\mathrm{A}$ source: KCL at a, $\frac{12-v}{2} = \frac{v}{6} + 2$, so $v = 6\,\mathrm{V}$: again $3\,\mathrm{A}$ and $1\,\mathrm{A}$. ✓


Roadmap

1. **LTI resistive circuits** — what the words mean, and what we gain ✓
2. **Substitution theorem** — replace a part of a circuit by a source ✓
3. **One-ports and equivalence** — the same i–v characteristic at the port
4. **Series and parallel** — combine resistors and sources
5. **One source and one resistor** — exchange a voltage source and a current source

Ports and one-ports

Port, one-port


A pair of terminals is a port if the current entering one terminal equals the current leaving the other. A one-port is a circuit, or a circuit element, with one pair of terminals accessible from outside.

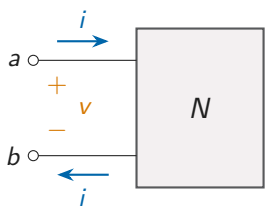

Ports and one-ports

Port, one-port

A pair of terminals is a port if the current entering one terminal equals the current leaving the other. A one-port is a circuit, or a circuit element, with one pair of terminals accessible from outside.

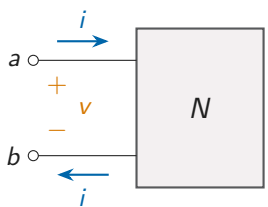


- A one-port is always a port: KCL on a closed surface around N.

Ports and one-ports

Port, one-port

A pair of terminals is a port if the current entering one terminal equals the current leaving the other. A one-port is a circuit, or a circuit element, with one pair of terminals accessible from outside.

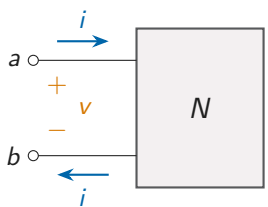


- A one-port is always a port: KCL on a closed surface around N.
- i enters the $+$ terminal of v.

Ports and one-ports

Port, one-port

A pair of terminals is a port if the current entering one terminal equals the current leaving the other. A one-port is a circuit, or a circuit element, with one pair of terminals accessible from outside.

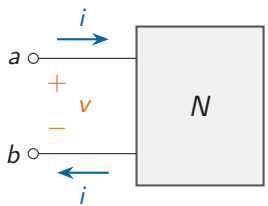


- A one-port is always a port: KCL on a closed surface around N.
- i enters the $+$ terminal of v.
- The relation between v and i: the i–v characteristic. A resistor: $v = Ri$.

Equivalent one-ports

Equivalent one-ports


$N_1 \equiv N_2$ if they have the same i–v characteristic at their terminals.

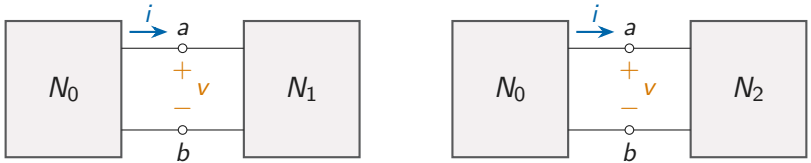

Equivalent one-ports

Equivalent one-ports

$N_1 \equiv N_2$ if they have the same i–v characteristic at their terminals.

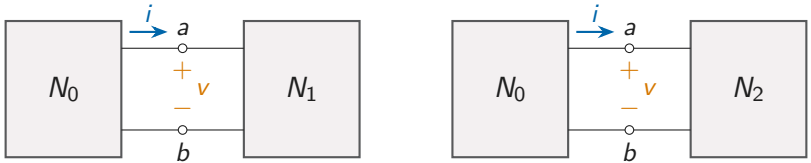


For any N_0: every branch voltage and current inside N_0 is the same in both.

Equivalent one-ports

Equivalent one-ports

$N_1 \equiv N_2$ if they have the same i–v characteristic at their terminals.

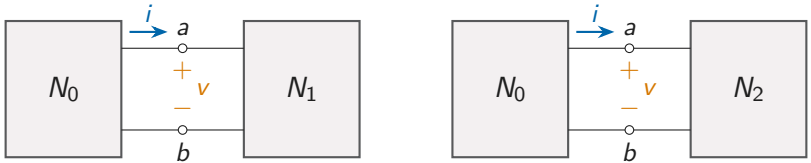


For any N_0: every branch voltage and current inside N_0 is the same in both.

Why: the equations are those of N_0 plus the i–v characteristic at the port.

Equivalent one-ports

Equivalent one-ports

$N_1 \equiv N_2$ if they have the same i–v characteristic at their terminals.

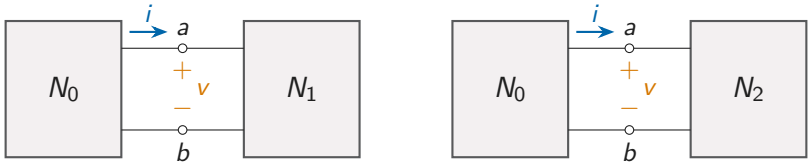

For any N_0: every branch voltage and current inside N_0 is the same in both.

Why: the equations are those of N_0 plus the i–v characteristic at the port.


Inside N_1 and N_2 the branch values may differ.

Roadmap

1. **LTI resistive circuits** — what the words mean, and what we gain ✓
2. **Substitution theorem** — replace a part of a circuit by a source ✓
3. **One-ports and equivalence** — the same i–v characteristic at the port ✓
4. **Series and parallel** — combine resistors and sources
5. **One source and one resistor** — exchange a voltage source and a current source


Series connection

Same current i through every element (KCL); the voltages add (KVL).

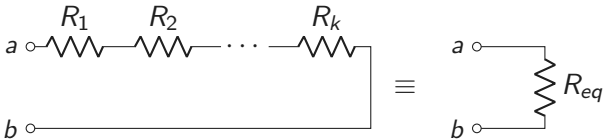

Series connection

Same current i through every element (KCL); the voltages add (KVL).

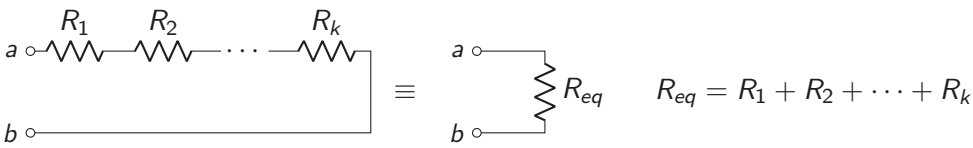


$$R_{eq} = R_1 + R_2 + \cdots + R_k$$

$$v = R_1 i + R_2 i + \cdots + R_k i = R_{eq} i$$

Series connection

Same current i through every element (KCL); the voltages add (KVL).

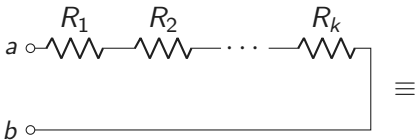


$$R_{eq} = R_1 + R_2 + \cdots + R_k$$


Voltage divider: the share of R_j is $v_j = \dfrac{R_j}{R_{eq}}\, v$

Series connection


Same current i through every element (KCL); the voltages add (KVL).

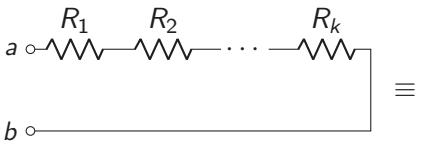


$\equiv$

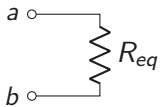

$$R_{eq} = R_1 + R_2 + \cdots + R_k$$

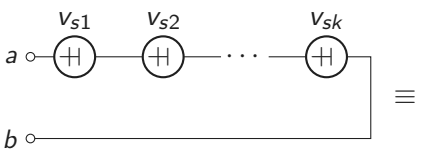

$\equiv$

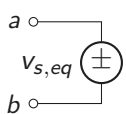


$$v_{s,eq} = v_{s1} + v_{s2} + \cdots + v_{sk}$$

All $+$ signs towards a; a source turned the other way enters with $-$.


Parallel connection

Same voltage v across every element (KVL); the currents add (KCL).

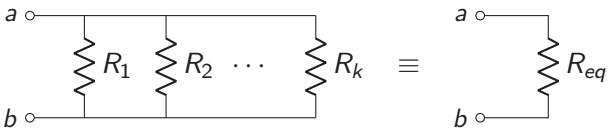

Parallel connection

Same voltage v across every element (KVL); the currents add (KCL).

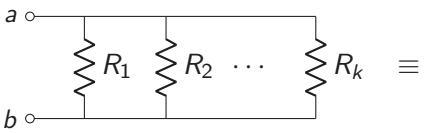


$$\frac{1}{R_{eq}} = \frac{1}{R_1} + \frac{1}{R_2} + \cdots + \frac{1}{R_k}$$

With $G_j = 1/R_j$: $\quad i = G_1 v + \cdots + G_k v = G_{eq} v, \quad G_{eq} = G_1 + \cdots + G_k$

Parallel connection

Same voltage v across every element (KVL); the currents add (KCL).

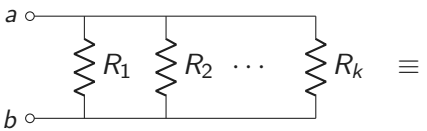


$$\frac{1}{R_{eq}} = \frac{1}{R_1} + \frac{1}{R_2} + \cdots + \frac{1}{R_k}$$


Current divider: $i_j = \dfrac{G_j}{G_{eq}}\, i.$ Two resistors: $R_{eq} = \dfrac{R_1 R_2}{R_1 + R_2}$

Parallel connection

Same voltage v across every element (KVL); the currents add (KCL).

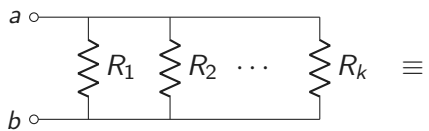


$$\frac{1}{R_{eq}} = \frac{1}{R_1} + \frac{1}{R_2} + \cdots + \frac{1}{R_k}$$

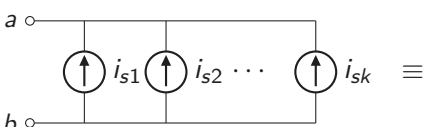


$$i_{s,eq} = i_{s1} + i_{s2} + \cdots + i_{sk}$$

All arrows towards a; a source turned the other way enters with $-$.

Two connections to avoid

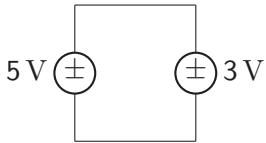


two voltage sources in parallel

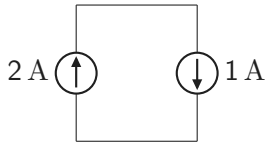

two current sources in series


Are these allowed?

Two connections to avoid

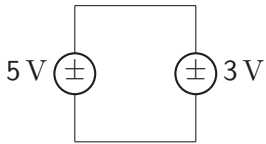

two voltage sources in parallel

KVL fails: $5 \neq 3$.

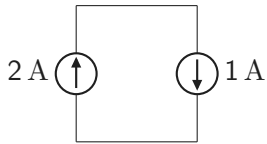

two current sources in series


KCL fails: $2 \neq 1$.


With equal values they are allowed, but the shared current (or voltage) is not fixed.

Roadmap

1. **LTI resistive circuits** — what the words mean, and what we gain ✓
2. **Substitution theorem** — replace a part of a circuit by a source ✓
3. **One-ports and equivalence** — the same i–v characteristic at the port ✓
4. **Series and parallel** — combine resistors and sources ✓
5. **One source and one resistor** — exchange a voltage source and a current source


One source and one resistor

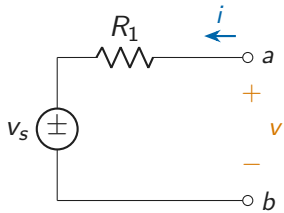


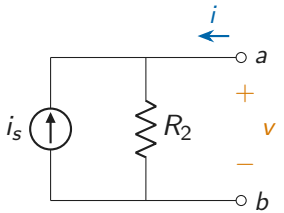

When do these two one-ports have the same i–v characteristic?

One source and one resistor

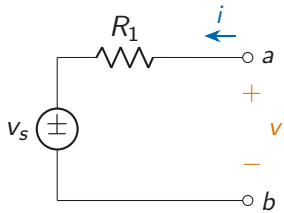


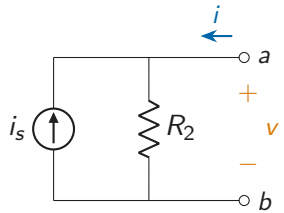


$$v = R_1 i + v_s$$

KVL around the loop: R_1 carries i.

One source and one resistor

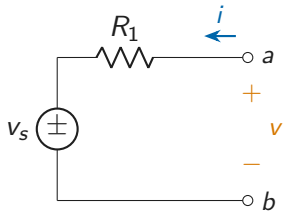


$v = R_1 i + v_s$

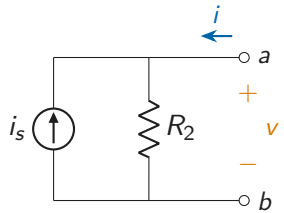


$v = R_2(i + i_s) = R_2 i + R_2 i_s$

i and i_s both flow into the top node: R_2 carries $i + i_s$.

One source and one resistor

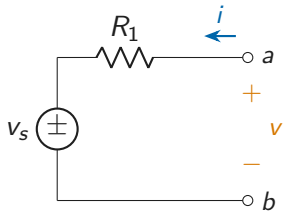

$$v = R_1 i + v_s$$

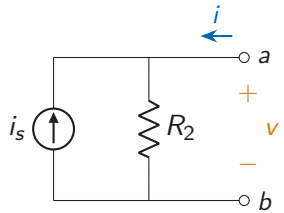

$$v = R_2(i + i_s) = R_2 i + R_2 i_s$$


Both are straight lines in the i–v plane: equal slopes and equal intercepts.

Source transformation

Source transformation

The two one-ports are equivalent if

$$R_1 = R_2 = R \qquad \text{and} \qquad v_s = R\, i_s.$$

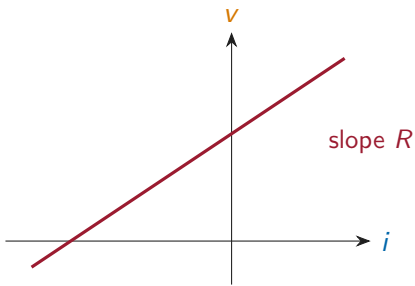


Source transformation

Source transformation

The two one-ports are equivalent if

$$R_1 = R_2 = R \qquad \text{and} \qquad v_s = R\, i_s.$$

Open circuit ($i = 0$): $v = v_s$.

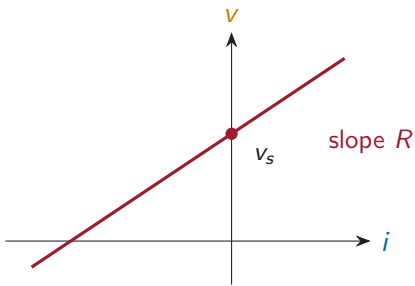

Source transformation


Source transformation

The two one-ports are equivalent if


$$R_1 = R_2 = R \qquad \text{and} \qquad v_s = R\, i_s.$$

Open circuit ($i = 0$): $v = v_s$.

Short circuit ($v = 0$): $i = -i_s$.

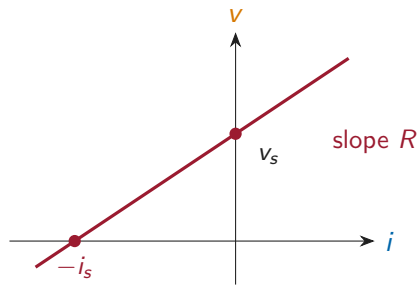


Example: a source transformation

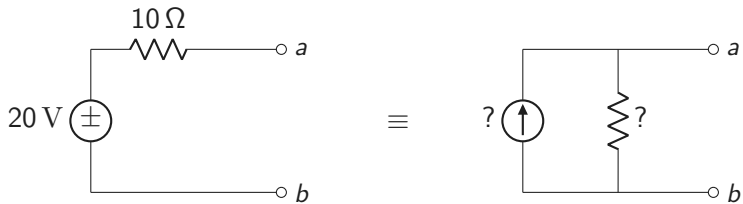

Find the current source and the resistor.


Example: a source transformation

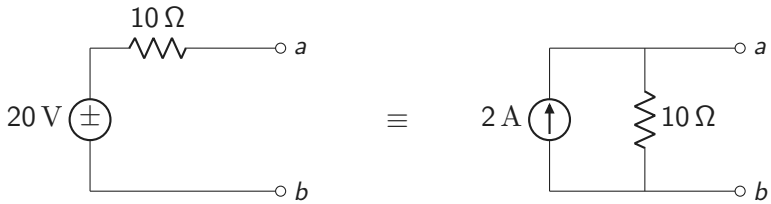

$$R = 10\,\Omega, \qquad i_s = v_s/R = 20/10 = 2\,\mathrm{A}$$


Both: open-circuit voltage $20\,\mathrm{V}$, short-circuit current $2\,\mathrm{A}$ (out of a).

Example: the substitution example, by transformations

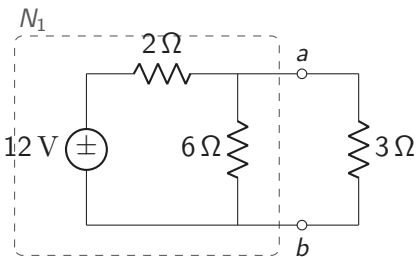


Find v again, with source transformations only.

Example: the substitution example, by transformations

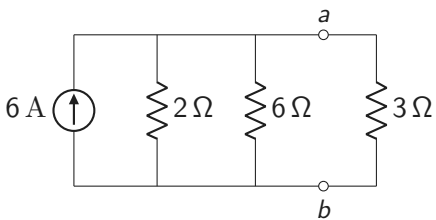

$12\,\mathrm{V}$ with $2\,\Omega$ in series $\rightarrow$ $6\,\mathrm{A}$ with $2\,\Omega$ in parallel.

Example: the substitution example, by transformations

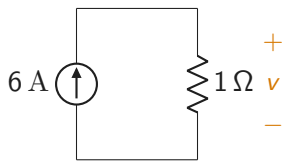


$12\,\mathrm{V}$ with $2\,\Omega$ in series $\rightarrow$ $6\,\mathrm{A}$ with $2\,\Omega$ in parallel.

$2\,\Omega$, $6\,\Omega$, $3\,\Omega$ in parallel:
$G_{eq} = \frac{1}{2} + \frac{1}{6} + \frac{1}{3} = 1\,\mathrm{S}$, so $R_{eq} = 1\,\Omega$.

$v = 6\,\mathrm{A} \times 1\,\Omega = 6\,\mathrm{V}, \quad i = 6/3 = 2\,\mathrm{A}.$ ✓

Example: the substitution example, by transformations

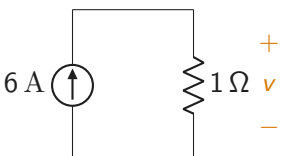

$12\,\mathrm{V}$ with $2\,\Omega$ in series $\rightarrow$ $6\,\mathrm{A}$ with $2\,\Omega$ in parallel.

$2\,\Omega$, $6\,\Omega$, $3\,\Omega$ in parallel:
$G_{eq} = \frac{1}{2} + \frac{1}{6} + \frac{1}{3} = 1\,\mathrm{S}$, so $R_{eq} = 1\,\Omega$.

$v = 6\,\mathrm{A} \times 1\,\Omega = 6\,\mathrm{V}, \quad i = 6/3 = 2\,\mathrm{A}.$ ✓

Careful: inside the transformed one-port the values differ. The $12\,\mathrm{V}$ source carries $3\,\mathrm{A}$, the $6\,\mathrm{A}$ source carries $6\,\mathrm{A}$.

Solving LTI resistive circuits

- Series and parallel connections and source transformations simplify many circuits, but not all.

Solving LTI resistive circuits

- Series and parallel connections and source transformations simplify many circuits, but not all.
- Two systematic methods solve every LTI resistive circuit:
  1. node voltage analysis: the $n-1$ node voltages are the unknowns;
  2. mesh current analysis: the $b-n+1$ mesh currents are the unknowns.

Solving LTI resistive circuits

- Series and parallel connections and source transformations simplify many circuits, but not all.
- Two systematic methods solve every LTI resistive circuit:
  1. node voltage analysis: the $n-1$ node voltages are the unknowns;
  2. mesh current analysis: the $b-n+1$ mesh currents are the unknowns.
- Both start from the matrices met earlier (A, M); now the element equations are linear too.

Summary

- LTI resistive: no nonlinear element, no time-varying element, no L or C. Independent sources do not count. All equations are linear and algebraic.
- Substitution: replace N_2 by a voltage source $v_s = v$ or a current source $i_s = i$; nothing changes inside N_1.
- Equivalent one-ports: the same i–v characteristic; the rest cannot tell them apart.
- Series: $R_{eq} = \sum R_j$, $v_{s,eq} = \sum v_{sj}$. Parallel: $G_{eq} = \sum G_j$, $i_{s,eq} = \sum i_{sj}$.
- Source transformation: v_s with series $R \equiv i_s = v_s/R$ with parallel R.