Lecture 11: Node Voltage Analysis

EE201 – Circuit Theory I

M. Mert Ankaralı

Department of Electrical and Electronics Engineering
Middle East Technical University

current voltage, node voltage e supernode

Review: two ways to solve an LTI resistive circuit

Transform the circuit

- Substitution, equivalents
- Series, parallel
- Source transformation

Many circuits, not all

Review: two ways to solve an LTI resistive circuit

Transform the circuit

- Substitution, equivalents
- Series, parallel
- Source transformation

Many circuits, not all

Keep the original circuit

- KCL: $A\mathbf{i} = \mathbf{0}$
- KVL: $\mathbf{v} = A^T\mathbf{e}$
- Element laws

Every circuit

Review: two ways to solve an LTI resistive circuit

Transform the circuit

- Substitution, equivalents
- Series, parallel
- Source transformation

Many circuits, not all

Keep the original circuit

- KCL: $A\mathbf{i} = \mathbf{0}$
- KVL: $\mathbf{v} = A^T\mathbf{e}$
- Element laws

Every circuit

Unknowns $\mathbf{e}$ $\Rightarrow$ KVL holds automatically

Review: two ways to solve an LTI resistive circuit

Transform the circuit

- Substitution, equivalents
- Series, parallel
- Source transformation

Many circuits, not all

Keep the original circuit

- KCL: $A\mathbf{i} = \mathbf{0}$
- KVL: $\mathbf{v} = A^T\mathbf{e}$
- Element laws

Every circuit

Unknowns $\mathbf{e}$ $\Rightarrow$ KVL holds automatically

Only KCL is left

Motivation

Simplifying the circuit

- So far: simplify

Motivation

Simplifying the circuit

- So far: simplify
- Changes the circuit

Motivation

Simplifying the circuit

- So far: simplify
- Changes the circuit
- Go back step by step

Motivation

Simplifying the circuit

- So far: simplify
- Changes the circuit
- Go back step by step
- Not always possible

Motivation

Simplifying the circuit

- So far: simplify
- Changes the circuit
- Go back step by step
- Not always possible

Node voltage analysis

- Original circuit

Motivation

Simplifying the circuit

- So far: simplify
- Changes the circuit
- Go back step by step
- Not always possible

Node voltage analysis

- Original circuit
- Unknowns: $n-1$ node voltages

Motivation

Simplifying the circuit

- So far: simplify
- Changes the circuit
- Go back step by step
- Not always possible

Node voltage analysis

- Original circuit
- Unknowns: $n-1$ node voltages
- Then every v and i

Motivation


Simplifying the circuit

- So far: simplify
- Changes the circuit
- Go back step by step
- Not always possible

Node voltage analysis

- Original circuit
- Unknowns: $n-1$ node voltages
- Then every v and i
- Every LTI resistive circuit

Roadmap

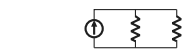







Current sources | **Voltage sources** | **Dependent sources** | **The ground**

1 — 2 — 3 — 4

the procedure, on an example

matrix form

one end at the ground

between two nodes


a dependent current source

a dependent voltage source

does its choice matter?

Example 11.1: node voltage analysis step by step

For now: only resistors and independent current sources

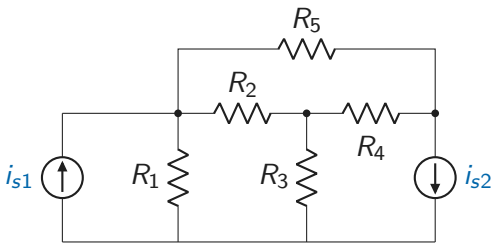


Goal: every branch voltage and current

Four steps:


1. Choose a reference node
2. Label the node voltages
3. Currents with node voltages
4. KCL at every node except the ground

Step 1: choose a reference node

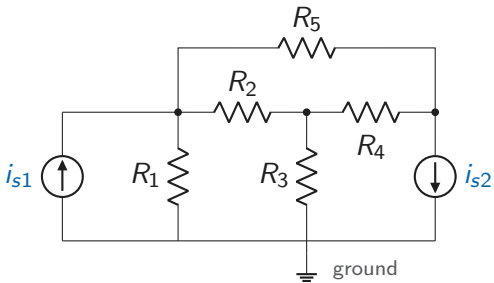

Reference node: the ground


Step 1: choose a reference node

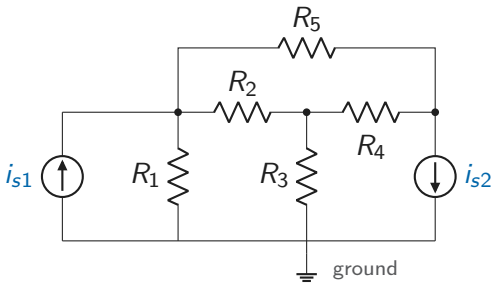

Reference node: the ground

Its node voltage: 0

Step 1: choose a reference node

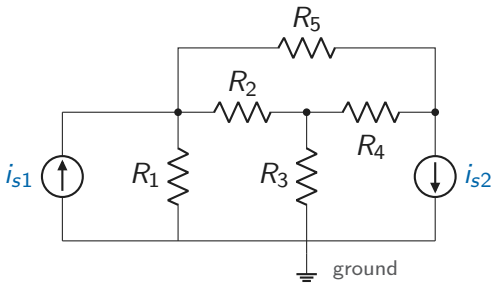


Reference node: the ground

Its node voltage: 0


Any node can be the ground

Step 2: label the node voltages

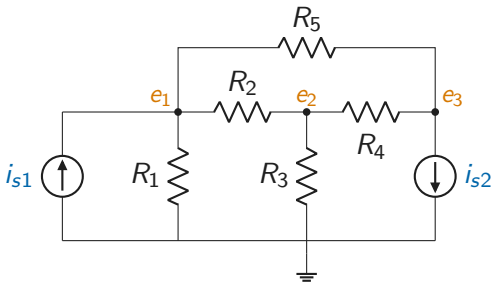

Unknowns: e_1, e_2, e_3


Step 2: label the node voltages

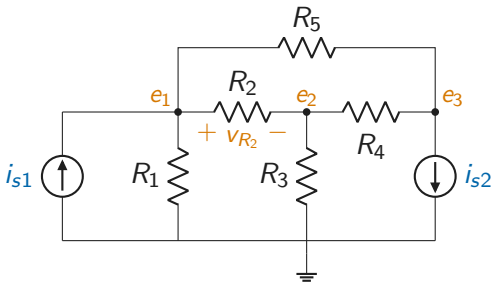

Unknowns: e_1, e_2, e_3

$v_{R_2} = e_1 - e_2$

Step 2: label the node voltages

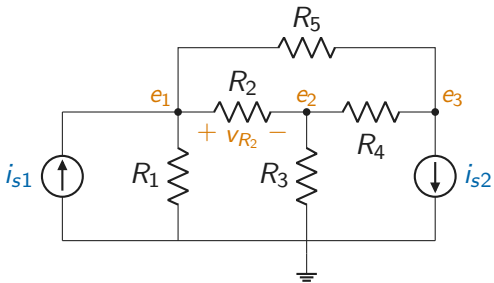

Unknowns: e_1, e_2, e_3


$v_{R_2} = e_1 - e_2$

KVL holds automatically:

$v_{R_1} = v_{R_2} + v_{R_3}$


$e_1 = (e_1 - e_2) + e_2$

Step 3: write the currents with node voltages

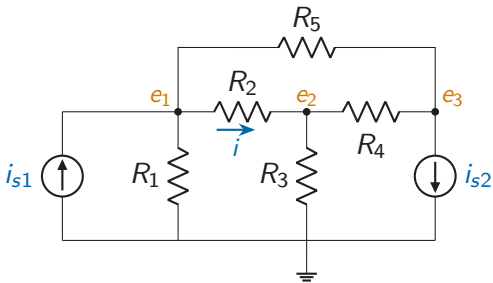

$i = ?$


Step 3: write the currents with node voltages

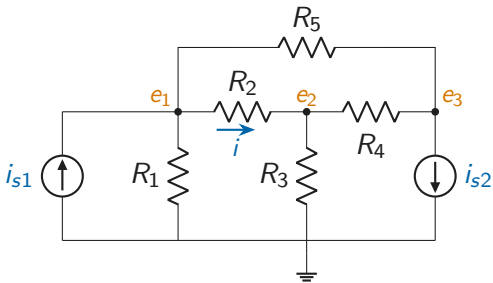

$$i = ?$$

$$i = \frac{e_1 - e_2}{R_2}$$

Step 3: write the currents with node voltages

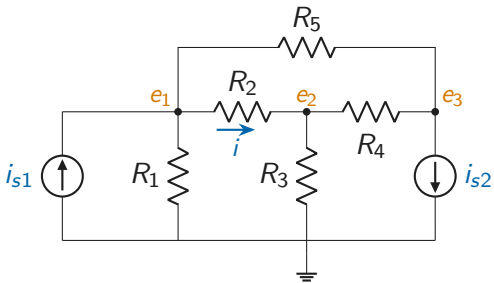


$i = ?$

$$i = \frac{e_1 - e_2}{R_2}$$

Through R_1: $\dfrac{e_1}{R_1}$

Step 3: write the currents with node voltages

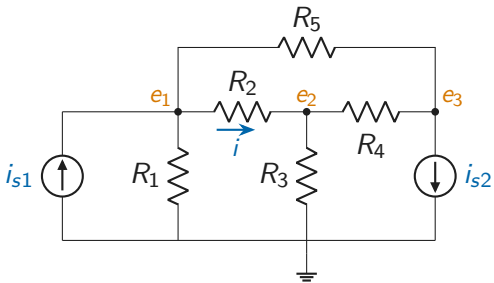


$i = ?$

$$i = \frac{e_1 - e_2}{R_2}$$

Through R_1: $\dfrac{e_1}{R_1}$

$$\boxed{\frac{\text{own} - \text{other}}{R}}$$


Step 4: KCL at every node except the ground

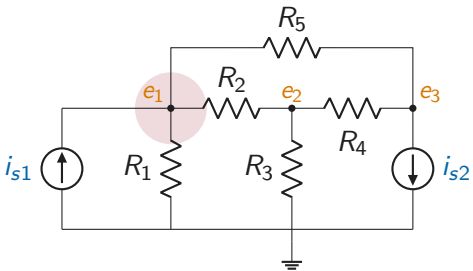

Node 1:

$$-i_{s1} + \frac{e_1}{R_1} + \frac{e_1 - e_2}{R_2} + \frac{e_1 - e_3}{R_5} = 0$$

Step 4: KCL at every node except the ground

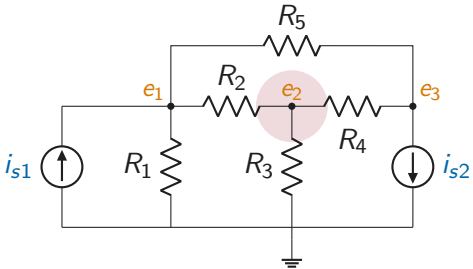


Node 1:

$$-i_{s1} + \frac{e_1}{R_1} + \frac{e_1 - e_2}{R_2} + \frac{e_1 - e_3}{R_5} = 0$$

Node 2:

$$\frac{e_2 - e_1}{R_2} + \frac{e_2}{R_3} + \frac{e_2 - e_3}{R_4} = 0$$

Step 4: KCL at every node except the ground

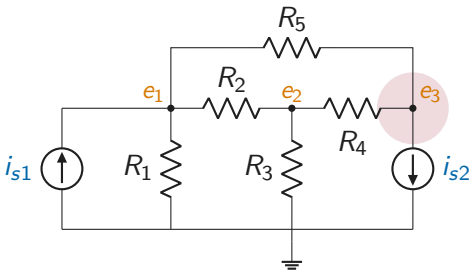

Node 1:

$$-i_{s1} + \frac{e_1}{R_1} + \frac{e_1 - e_2}{R_2} + \frac{e_1 - e_3}{R_5} = 0$$


Node 2:

$$\frac{e_2 - e_1}{R_2} + \frac{e_2}{R_3} + \frac{e_2 - e_3}{R_4} = 0$$

Node 3:

$$\frac{e_3 - e_2}{R_4} + \frac{e_3 - e_1}{R_5} + i_{s2} = 0$$

Step 4: KCL at every node except the ground

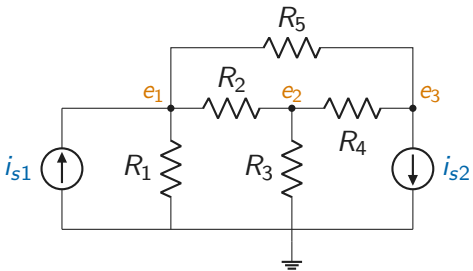

Node 1:

$$-i_{s1} + \frac{e_1}{R_1} + \frac{e_1 - e_2}{R_2} + \frac{e_1 - e_3}{R_5} = 0$$

Node 2:


$$\frac{e_2 - e_1}{R_2} + \frac{e_2}{R_3} + \frac{e_2 - e_3}{R_4} = 0$$

Node 3:

$$\frac{e_3 - e_2}{R_4} + \frac{e_3 - e_1}{R_5} + i_{s2} = 0$$

Source into the node: minus

Step 4: KCL at every node except the ground

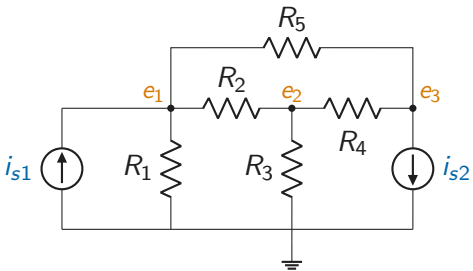

Node 1:

$$-i_{s1} + \frac{e_1}{R_1} + \frac{e_1 - e_2}{R_2} + \frac{e_1 - e_3}{R_5} = 0$$

Node 2:

$$\frac{e_2 - e_1}{R_2} + \frac{e_2}{R_3} + \frac{e_2 - e_3}{R_4} = 0$$

Node 3:

$$\frac{e_3 - e_2}{R_4} + \frac{e_3 - e_1}{R_5} + i_{s2} = 0$$

Source into the node: minus

3 equations, 3 unknowns

Roadmap









Current sources | **Voltage sources** | **Dependent sources** | **The ground**

1 — 2 — 3 — 4

the procedure, on an example ✓

matrix form

one end at the ground

between two nodes

a dependent current source

a dependent voltage source

does its choice matter?

Example 11.1 in matrix form

$G_k = 1/R_k$:

$$
\begin{aligned}
(G_1 + G_2 + G_5)\, e_1 - G_2\, e_2 - G_5\, e_3 &= i_{s1} \\
-G_2\, e_1 + (G_2 + G_3 + G_4)\, e_2 - G_4\, e_3 &= 0 \\
-G_5\, e_1 - G_4\, e_2 + (G_4 + G_5)\, e_3 &= -i_{s2}
\end{aligned}
$$

Example 11.1 in matrix form

$G_k = 1/R_k$:

$$
\begin{aligned}
(G_1 + G_2 + G_5)\, e_1 - G_2\, e_2 - G_5\, e_3 &= i_{s1} \\
-G_2\, e_1 + (G_2 + G_3 + G_4)\, e_2 - G_4\, e_3 &= 0 \\
-G_5\, e_1 - G_4\, e_2 + (G_4 + G_5)\, e_3 &= -i_{s2}
\end{aligned}
$$

$$
\underbrace{\begin{bmatrix} G_1 + G_2 + G_5 & -G_2 & -G_5 \\ -G_2 & G_2 + G_3 + G_4 & -G_4 \\ -G_5 & -G_4 & G_4 + G_5 \end{bmatrix}}_{Y_n}
\underbrace{\begin{bmatrix} e_1 \\ e_2 \\ e_3 \end{bmatrix}}_{\mathbf{e}}
=
\underbrace{\begin{bmatrix} i_{s1} \\ 0 \\ -i_{s2} \end{bmatrix}}_{\mathbf{i}_n}
$$

Example 11.1 in matrix form

$G_k = 1/R_k$:

$$
\begin{aligned}
(G_1 + G_2 + G_5)\, e_1 - G_2\, e_2 - G_5\, e_3 &= i_{s1} \\
-G_2\, e_1 + (G_2 + G_3 + G_4)\, e_2 - G_4\, e_3 &= 0 \\
-G_5\, e_1 - G_4\, e_2 + (G_4 + G_5)\, e_3 &= -i_{s2}
\end{aligned}
$$

$$
\underbrace{\begin{bmatrix} G_1 + G_2 + G_5 & -G_2 & -G_5 \\ -G_2 & G_2 + G_3 + G_4 & -G_4 \\ -G_5 & -G_4 & G_4 + G_5 \end{bmatrix}}_{Y_n}
\underbrace{\begin{bmatrix} e_1 \\ e_2 \\ e_3 \end{bmatrix}}_{\mathbf{e}}
=
\underbrace{\begin{bmatrix} i_{s1} \\ 0 \\ -i_{s2} \end{bmatrix}}_{\mathbf{i}_n}
$$

Y_n: node admittance matrix

Example 11.1 in matrix form

$G_k = 1/R_k$:


$$
\begin{aligned}
(G_1 + G_2 + G_5)\, e_1 - G_2\, e_2 - G_5\, e_3 &= i_{s1} \\
-G_2\, e_1 + (G_2 + G_3 + G_4)\, e_2 - G_4\, e_3 &= 0 \\
-G_5\, e_1 - G_4\, e_2 + (G_4 + G_5)\, e_3 &= -i_{s2}
\end{aligned}
$$

$$
\underbrace{\begin{bmatrix} G_1 + G_2 + G_5 & -G_2 & -G_5 \\ -G_2 & G_2 + G_3 + G_4 & -G_4 \\ -G_5 & -G_4 & G_4 + G_5 \end{bmatrix}}_{Y_n}
\underbrace{\begin{bmatrix} e_1 \\ e_2 \\ e_3 \end{bmatrix}}_{\mathbf{e}}
=
\underbrace{\begin{bmatrix} i_{s1} \\ 0 \\ -i_{s2} \end{bmatrix}}_{\mathbf{i}_n}
$$

Y_n: node admittance matrix


$\mathbf{i}_n$: source currents entering each node

Writing Y_n directly from the circuit

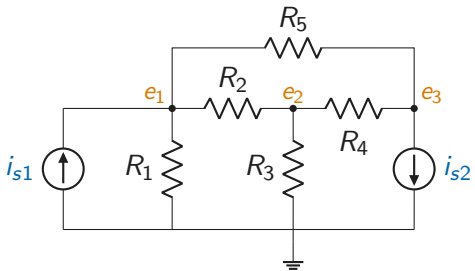

$$\begin{bmatrix} G_1 + G_2 + G_5 & -G_2 & -G_5 \\ -G_2 & G_2 + G_3 + G_4 & -G_4 \\ -G_5 & -G_4 & G_4 + G_5 \end{bmatrix}$$


Writing Y_n directly from the circuit

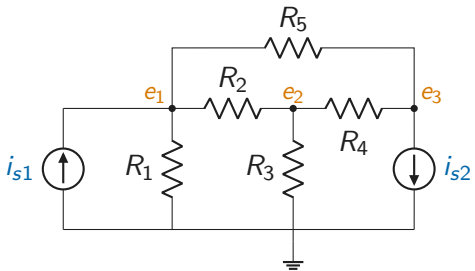

Diagonal (k, k):
$+\sum G$ at node k

$$\begin{bmatrix} G_1 + G_2 + G_5 & -G_2 & -G_5 \\ -G_2 & G_2 + G_3 + G_4 & -G_4 \\ -G_5 & -G_4 & G_4 + G_5 \end{bmatrix}$$

Writing Y_n directly from the circuit

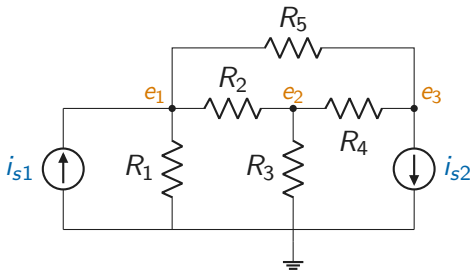


$$\begin{bmatrix} G_1+G_2+G_5 & -G_2 & -G_5 \\ -G_2 & G_2+G_3+G_4 & -G_4 \\ -G_5 & -G_4 & G_4+G_5 \end{bmatrix}$$

Diagonal (k,k):
$+\sum G$ at node k

Off-diagonal (k,j):
$-\sum G$ between k and j

Writing Y_n directly from the circuit

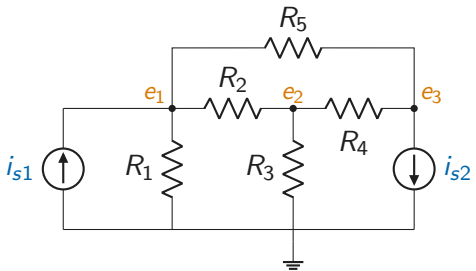


$$\begin{bmatrix} G_1+G_2+G_5 & -G_2 & -G_5 \\ -G_2 & G_2+G_3+G_4 & -G_4 \\ -G_5 & -G_4 & G_4+G_5 \end{bmatrix}$$

Diagonal (k,k):
$+\sum G$ at node k

Off-diagonal (k,j):
$-\sum G$ between k and j

Right side k:
$\sum i_s$ entering node k

Writing Y_n directly from the circuit

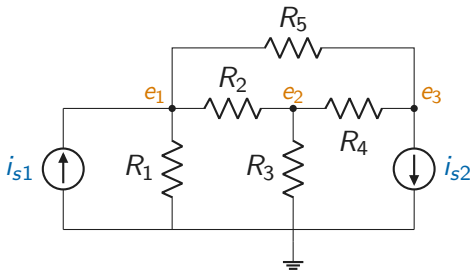

$$\begin{bmatrix} G_1+G_2+G_5 & -G_2 & -G_5 \\ -G_2 & G_2+G_3+G_4 & -G_4 \\ -G_5 & -G_4 & G_4+G_5 \end{bmatrix}$$


Diagonal (k,k):
$+\sum G$ at node k

Off-diagonal (k,j):
$-\sum G$ between k and j

Right side k:
$\sum i_s$ entering node k


Y_n is symmetric

Roadmap

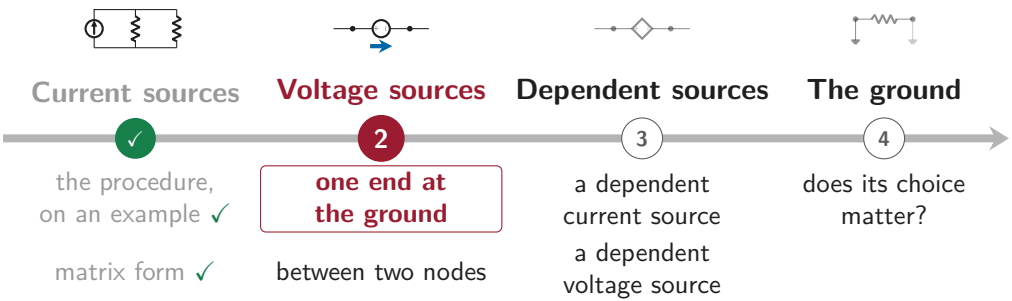

Current sources
Voltage sources
Dependent sources
The ground
✓
2
3
4
the procedure, on an example ✓
matrix form ✓
one end at the ground
between two nodes
a dependent current source
a dependent voltage source
does its choice matter?

Example 11.2: a voltage source to the ground

$e_3 = v_s$: known

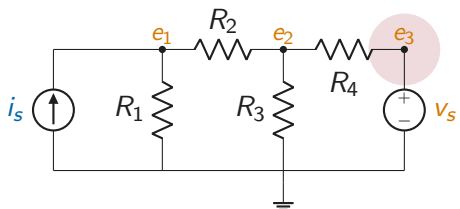


Example 11.2: a voltage source to the ground

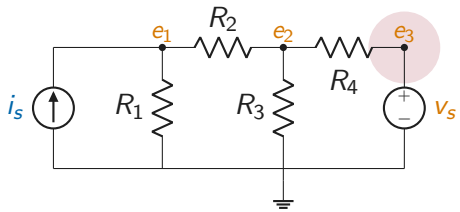

$e_3 = v_s$: known

No KCL at node 3. Unknowns: e_1, e_2

Example 11.2: a voltage source to the ground

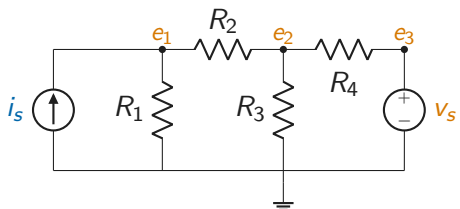


$e_3 = v_s$: known

No KCL at node 3. Unknowns: e_1, e_2

Node 1: $-i_s + \dfrac{e_1}{R_1} + \dfrac{e_1 - e_2}{R_2} = 0$

Example 11.2: a voltage source to the ground

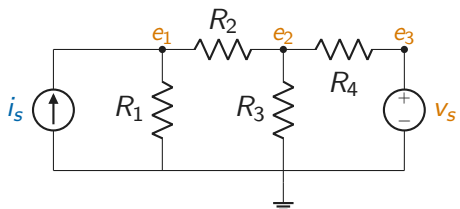


$e_3 = v_s$: known

No KCL at node 3. Unknowns: e_1, e_2

Node 1: $$-i_s + \frac{e_1}{R_1} + \frac{e_1 - e_2}{R_2} = 0$$

Node 2: $$\frac{e_2 - e_1}{R_2} + \frac{e_2}{R_3} + \frac{e_2 - v_s}{R_4} = 0$$

Example 11.2: a voltage source to the ground

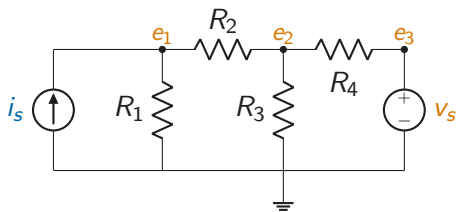

$e_3 = v_s$: known

No KCL at node 3. Unknowns: e_1, e_2

Node 1: $-i_s + \dfrac{e_1}{R_1} + \dfrac{e_1 - e_2}{R_2} = 0$

Node 2: $\dfrac{e_2 - e_1}{R_2} + \dfrac{e_2}{R_3} + \dfrac{e_2 - v_s}{R_4} = 0$

$$\begin{bmatrix} \frac{1}{R_1} + \frac{1}{R_2} & -\frac{1}{R_2} \\ -\frac{1}{R_2} & \frac{1}{R_2} + \frac{1}{R_3} + \frac{1}{R_4} \end{bmatrix} \begin{bmatrix} e_1 \\ e_2 \end{bmatrix} = \begin{bmatrix} i_s \\ v_s/R_4 \end{bmatrix}$$

Roadmap









Current sources ✓

the procedure, on an example ✓

matrix form ✓

Voltage sources 2

one end at the ground ✓

between two nodes

Dependent sources 3


a dependent current source

a dependent voltage source

The ground 4


does its choice matter?

Example 11.3: a voltage source between two nodes

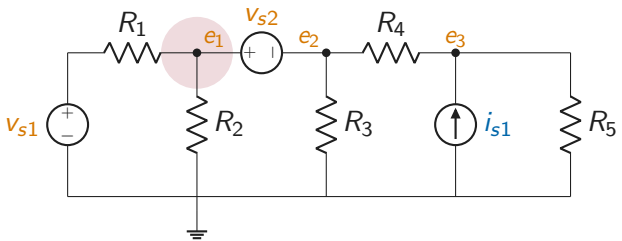


- Current through v_{s2}: ?

Example 11.3: a voltage source between two nodes

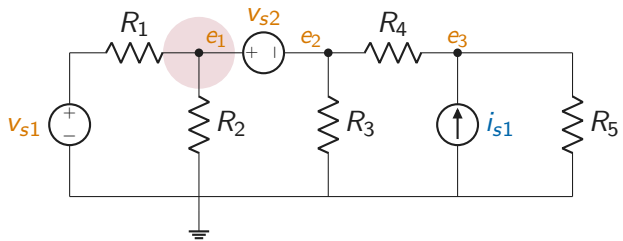


- Current through v_{s2}: ?
- Not given by e_1, e_2: a voltage source fixes v, not i

Example 11.3: a voltage source between two nodes

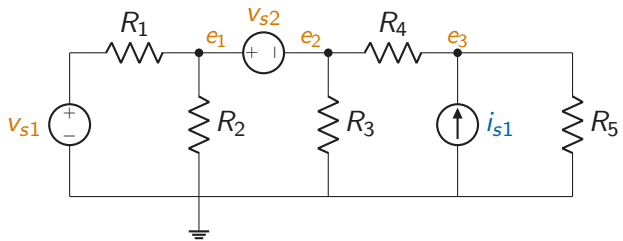


- Current through v_{s2}: ?
- Not given by e_1, e_2: a voltage source fixes v, not i
- Method I: its current as an unknown Method II: supernode

Method I: the current as an unknown

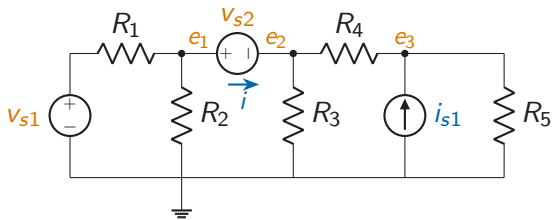

New unknown: i


Method I: the current as an unknown

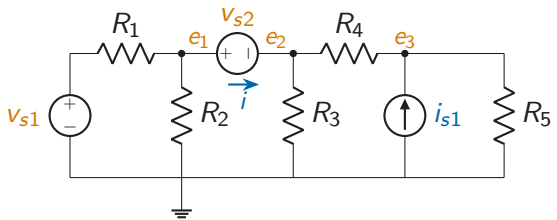

Node 1: $\dfrac{e_1 - v_{s1}}{R_1} + \dfrac{e_1}{R_2} + i = 0$

New unknown: i

Method I: the current as an unknown

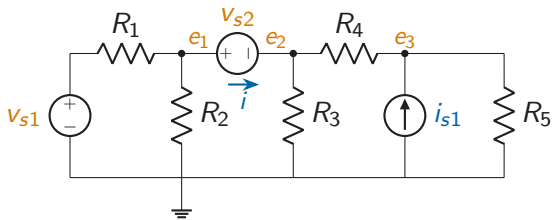


Node 1: $\dfrac{e_1 - v_{s1}}{R_1} + \dfrac{e_1}{R_2} + i = 0$

New unknown: i

Node 2: $-i + \dfrac{e_2}{R_3} + \dfrac{e_2 - e_3}{R_4} = 0$

Method I: the current as an unknown

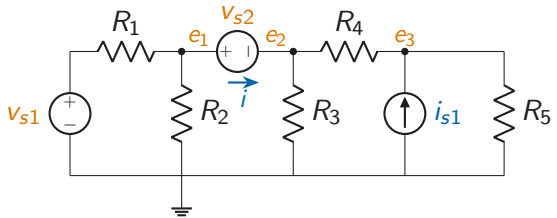


Node 1: $\dfrac{e_1 - v_{s1}}{R_1} + \dfrac{e_1}{R_2} + i = 0$

Node 2: $-i + \dfrac{e_2}{R_3} + \dfrac{e_2 - e_3}{R_4} = 0$

Node 3: $\dfrac{e_3 - e_2}{R_4} - i_{s1} + \dfrac{e_3}{R_5} = 0$

New unknown: i

Method I: the current as an unknown

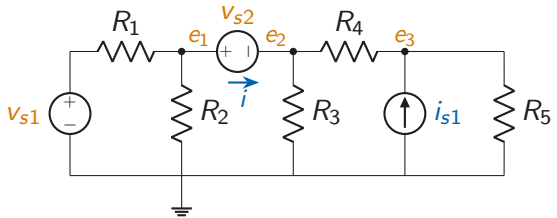

Node 1: $\dfrac{e_1 - v_{s1}}{R_1} + \dfrac{e_1}{R_2} + i = 0$


Node 2: $-i + \dfrac{e_2}{R_3} + \dfrac{e_2 - e_3}{R_4} = 0$

Node 3: $\dfrac{e_3 - e_2}{R_4} - i_{s1} + \dfrac{e_3}{R_5} = 0$

New unknown: i

Constraint: $e_1 - e_2 = v_{s2}$

Method I: the current as an unknown

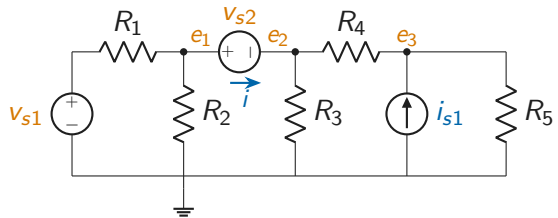


$$\begin{bmatrix} G_1+G_2 & 0 & 0 & 1 \\ 0 & G_3+G_4 & -G_4 & -1 \\ 0 & -G_4 & G_4+G_5 & 0 \\ 1 & -1 & 0 & 0 \end{bmatrix} \begin{bmatrix} e_1 \\ e_2 \\ e_3 \\ i \end{bmatrix} = \begin{bmatrix} G_1 v_{s1} \\ 0 \\ i_{s1} \\ v_{s2} \end{bmatrix}$$

New unknown: i

Constraint: $e_1 - e_2 = v_{s2}$


4 unknowns, 4 equations

Method II: the supernode

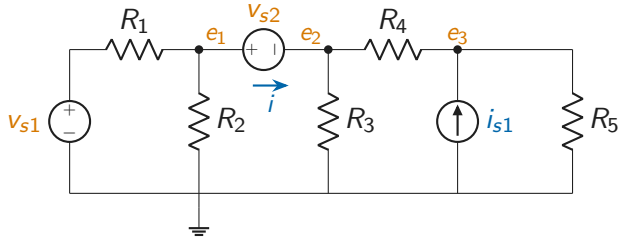

Can we get rid of i?

Method II: the supernode

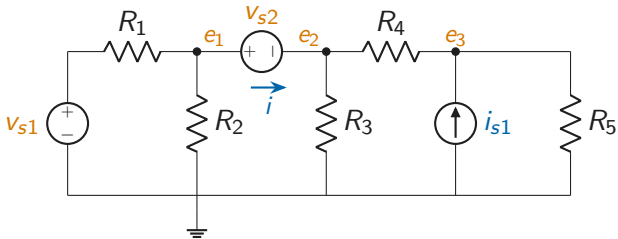


Can we get rid of i?

Add KCL of nodes 1 and 2:

i cancels

Method II: the supernode

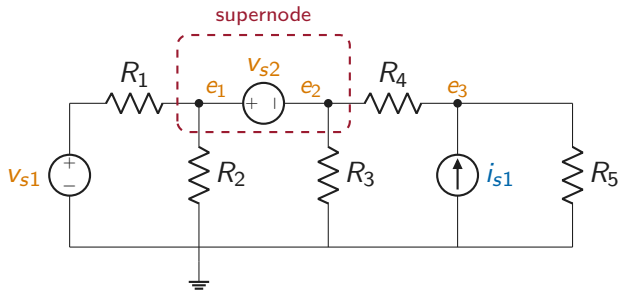


Can we get rid of i?

= KCL on a closed surface

Add KCL of nodes 1 and 2:

i cancels

Method II: the supernode

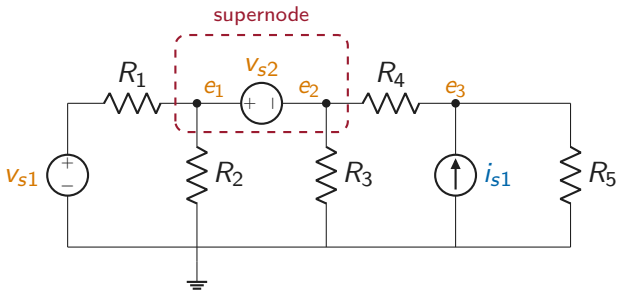

Can we get rid of i?

Add KCL of nodes 1 and 2:


i cancels

= KCL on a closed surface


Supernode

Two nodes of the source as one node

Method II: the equations

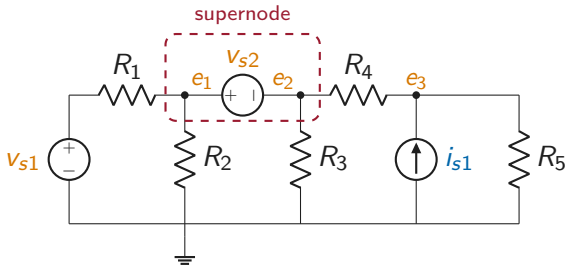


Method II: the equations

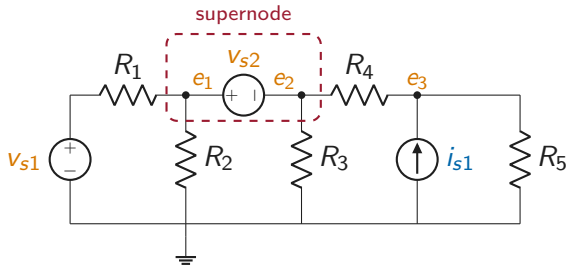

Supernode:

$$\frac{e_1 - v_{s1}}{R_1} + \frac{e_1}{R_2} + \frac{e_2}{R_3} + \frac{e_2 - e_3}{R_4} = 0$$

Method II: the equations

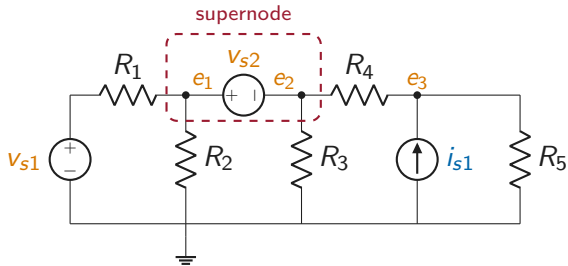


Supernode:

$$\frac{e_1 - v_{s1}}{R_1} + \frac{e_1}{R_2} + \frac{e_2}{R_3} + \frac{e_2 - e_3}{R_4} = 0$$

Node 3: $\dfrac{e_3 - e_2}{R_4} - i_{s1} + \dfrac{e_3}{R_5} = 0$

Method II: the equations

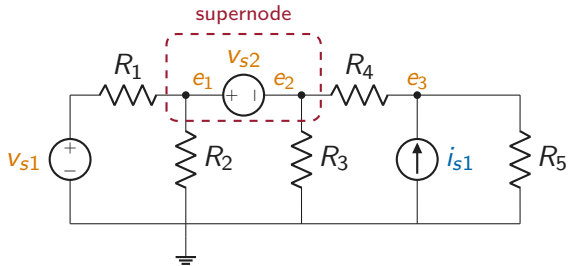


Supernode:

$$\frac{e_1 - v_{s1}}{R_1} + \frac{e_1}{R_2} + \frac{e_2}{R_3} + \frac{e_2 - e_3}{R_4} = 0$$

Node 3: $\dfrac{e_3 - e_2}{R_4} - i_{s1} + \dfrac{e_3}{R_5} = 0$

Constraint: $e_1 - e_2 = v_{s2}$

Method II: the equations

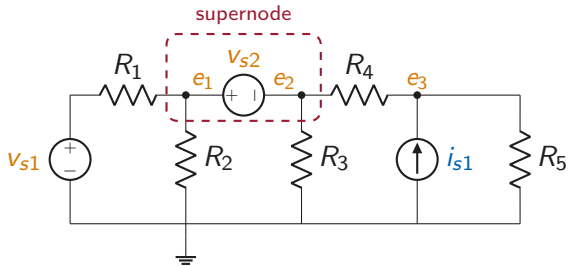

Supernode:


$$\frac{e_1 - v_{s1}}{R_1} + \frac{e_1}{R_2} + \frac{e_2}{R_3} + \frac{e_2 - e_3}{R_4} = 0$$

Node 3: $\dfrac{e_3 - e_2}{R_4} - i_{s1} + \dfrac{e_3}{R_5} = 0$

Constraint: $e_1 - e_2 = v_{s2}$

$$\begin{bmatrix} G_1 + G_2 & G_3 + G_4 & -G_4 \\ 0 & -G_4 & G_4 + G_5 \\ 1 & -1 & 0 \end{bmatrix} \begin{bmatrix} e_1 \\ e_2 \\ e_3 \end{bmatrix} = \begin{bmatrix} G_1 v_{s1} \\ i_{s1} \\ v_{s2} \end{bmatrix}$$

Method II: the equations

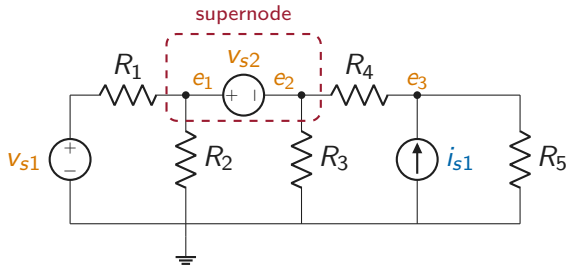

Supernode:

$$\frac{e_1 - v_{s1}}{R_1} + \frac{e_1}{R_2} + \frac{e_2}{R_3} + \frac{e_2 - e_3}{R_4} = 0$$


Node 3: $\dfrac{e_3 - e_2}{R_4} - i_{s1} + \dfrac{e_3}{R_5} = 0$

Constraint: $e_1 - e_2 = v_{s2}$

$$\begin{bmatrix} G_1 + G_2 & G_3 + G_4 & -G_4 \\ 0 & -G_4 & G_4 + G_5 \\ 1 & -1 & 0 \end{bmatrix} \begin{bmatrix} e_1 \\ e_2 \\ e_3 \end{bmatrix} = \begin{bmatrix} G_1 v_{s1} \\ i_{s1} \\ v_{s2} \end{bmatrix}$$

3 unknowns (one fewer)

Method II: the equations

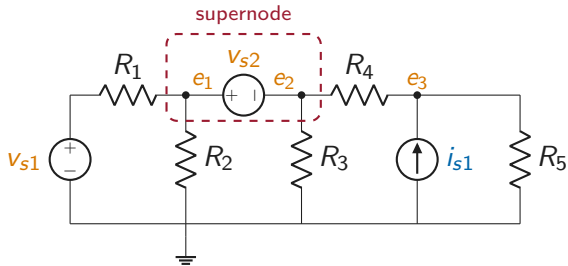

Supernode:

$$\frac{e_1 - v_{s1}}{R_1} + \frac{e_1}{R_2} + \frac{e_2}{R_3} + \frac{e_2 - e_3}{R_4} = 0$$

Node 3: $\dfrac{e_3 - e_2}{R_4} - i_{s1} + \dfrac{e_3}{R_5} = 0$


Constraint: $e_1 - e_2 = v_{s2}$

$$\begin{bmatrix} G_1 + G_2 & G_3 + G_4 & -G_4 \\ 0 & -G_4 & G_4 + G_5 \\ 1 & -1 & 0 \end{bmatrix} \begin{bmatrix} e_1 \\ e_2 \\ e_3 \end{bmatrix} = \begin{bmatrix} G_1 v_{s1} \\ i_{s1} \\ v_{s2} \end{bmatrix}$$

3 unknowns (one fewer)


Not symmetric

Roadmap

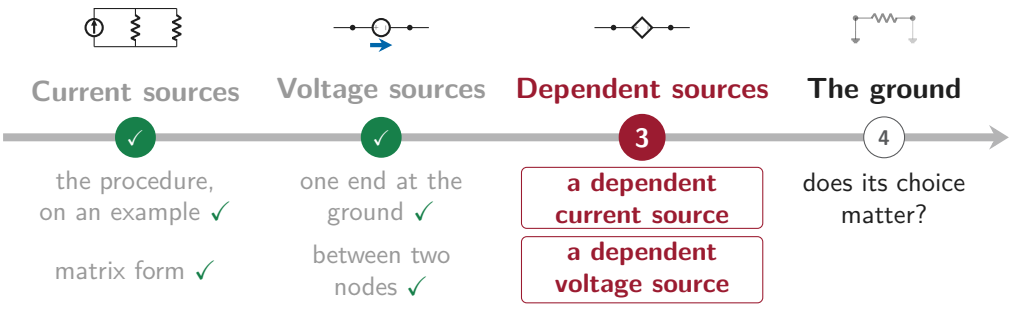

Current sources
Voltage sources
Dependent sources
The ground
✓
✓
3
4
the procedure, on an example ✓
matrix form ✓
one end at the ground ✓
between two nodes ✓
a dependent current source
a dependent voltage source
does its choice matter?

Example 11.4: a dependent current source

Find e_1 and e_2.

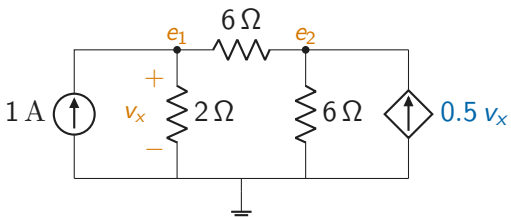


Example 11.4: a dependent current source

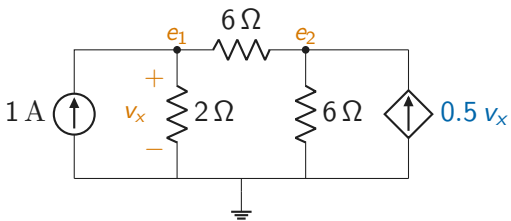

Find e_1 and e_2.

Treat $0.5\,v_x$ as a current source

Example 11.4: a dependent current source

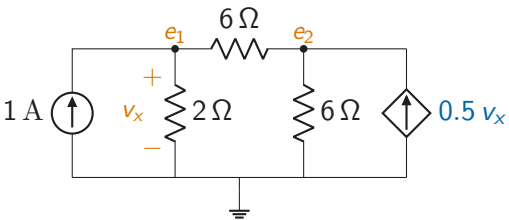


Find e_1 and e_2.

Treat $0.5\,v_x$ as a current source

Node 1: $-1 + \dfrac{e_1}{2} + \dfrac{e_1 - e_2}{6} = 0$

Example 11.4: a dependent current source

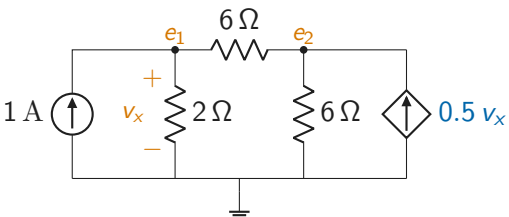


Find e_1 and e_2.

Treat $0.5\,v_x$ as a current source

Node 1: $$-1 + \frac{e_1}{2} + \frac{e_1 - e_2}{6} = 0$$

Node 2: $$\frac{e_2 - e_1}{6} + \frac{e_2}{6} - 0.5\,v_x = 0$$

Example 11.4: a dependent current source

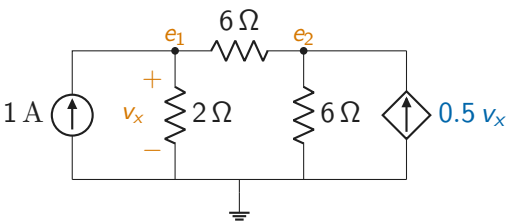

Find e_1 and e_2.


Treat $0.5\,v_x$ as a current source

Node 1: $-1 + \dfrac{e_1}{2} + \dfrac{e_1 - e_2}{6} = 0$

Node 2: $\dfrac{e_2 - e_1}{6} + \dfrac{e_2}{6} - 0.5\,v_x = 0$

$v_x = ?$

Example 11.4: a dependent current source

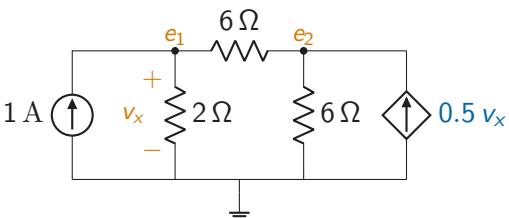

Find e_1 and e_2.

Treat $0.5\,v_x$ as a current source

Node 1: $$-1 + \frac{e_1}{2} + \frac{e_1 - e_2}{6} = 0$$

Node 2: $$\frac{e_2 - e_1}{6} + \frac{e_2}{6} - 0.5\,v_x = 0$$

$v_x = ?$

$v_x = e_1$

Example 11.4: matrix form

First plug $v_x = e_1$ into node 2:

$$\frac{e_2 - e_1}{6} + \frac{e_2}{6} - 0.5\, e_1 = 0$$

Example 11.4: matrix form

First plug $v_x = e_1$ into node 2:

$$\frac{e_2 - e_1}{6} + \frac{e_2}{6} - 0.5\, e_1 = 0 \qquad \Rightarrow \qquad -\frac{2}{3}\, e_1 + \frac{1}{3}\, e_2 = 0$$

Example 11.4: matrix form

First plug $v_x = e_1$ into node 2:

$$\frac{e_2 - e_1}{6} + \frac{e_2}{6} - 0.5\, e_1 = 0 \qquad \Rightarrow \qquad -\frac{2}{3}\, e_1 + \frac{1}{3}\, e_2 = 0$$

$$\begin{bmatrix} \frac{2}{3} & -\frac{1}{6} \\ -\frac{2}{3} & \frac{1}{3} \end{bmatrix} \begin{bmatrix} e_1 \\ e_2 \end{bmatrix} = \begin{bmatrix} 1 \\ 0 \end{bmatrix}$$

Example 11.4: matrix form

First plug $v_x = e_1$ into node 2:

$$\frac{e_2 - e_1}{6} + \frac{e_2}{6} - 0.5\, e_1 = 0 \qquad \Rightarrow \qquad -\tfrac{2}{3}\, e_1 + \tfrac{1}{3}\, e_2 = 0$$

$$\begin{bmatrix} \frac{2}{3} & -\frac{1}{6} \\ -\frac{2}{3} & \frac{1}{3} \end{bmatrix} \begin{bmatrix} e_1 \\ e_2 \end{bmatrix} = \begin{bmatrix} 1 \\ 0 \end{bmatrix} \qquad \Rightarrow \qquad e_1 = 3\,\mathrm{V}, \quad e_2 = 6\,\mathrm{V}$$

Example 11.4: matrix form


First plug $v_x = e_1$ into node 2:

$$\frac{e_2 - e_1}{6} + \frac{e_2}{6} - 0.5\, e_1 = 0 \qquad \Rightarrow \qquad -\frac{2}{3}\, e_1 + \frac{1}{3}\, e_2 = 0$$

$$\begin{bmatrix} \frac{2}{3} & -\frac{1}{6} \\ -\frac{2}{3} & \frac{1}{3} \end{bmatrix} \begin{bmatrix} e_1 \\ e_2 \end{bmatrix} = \begin{bmatrix} 1 \\ 0 \end{bmatrix} \qquad \Rightarrow \qquad e_1 = 3\,\mathrm{V}, \quad e_2 = 6\,\mathrm{V}$$


$-\frac{1}{6} \neq -\frac{2}{3}$: not symmetric

Example 11.5: a dependent voltage source

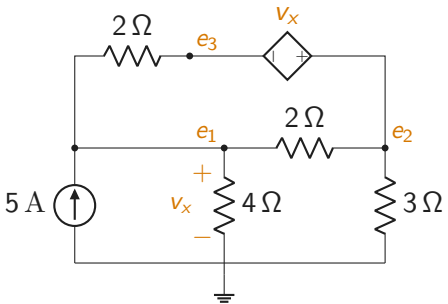

$P_{3\Omega} = ?$


Example 11.5: a dependent voltage source

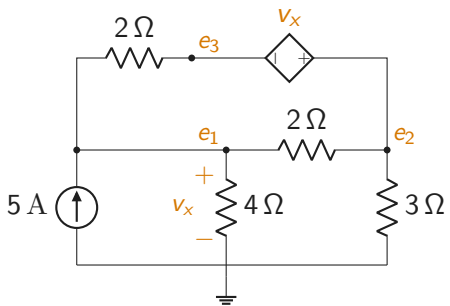

$P_{3\Omega} = ?$

v_x: between nodes 3 and 2, no ground

Example 11.5: a dependent voltage source

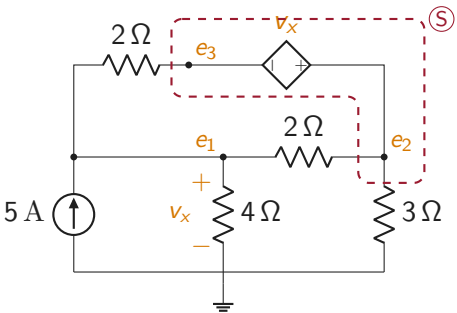


$P_{3\Omega} = ?$

v_x: between nodes 3 and 2, no ground

$\Rightarrow$ supernode Ⓢ

Example 11.5: a dependent voltage source

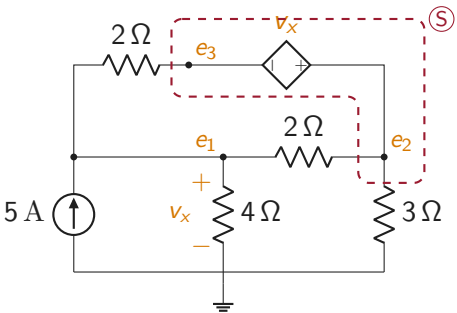


$P_{3\Omega} = ?$

v_x: between nodes 3 and 2, no ground

$\Rightarrow$ supernode Ⓢ


Unknowns: e_1, e_2, e_3

Example 11.5: the equations

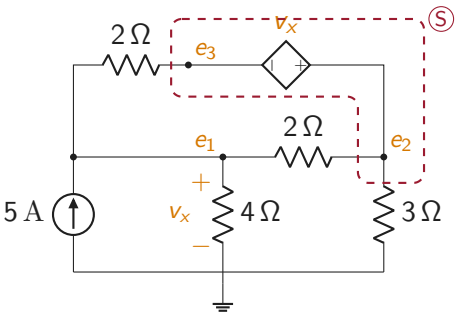

Node 1: $$-5 + \frac{e_1 - e_3}{2} + \frac{e_1}{4} + \frac{e_1 - e_2}{2} = 0 \quad (1)$$


Example 11.5: the equations

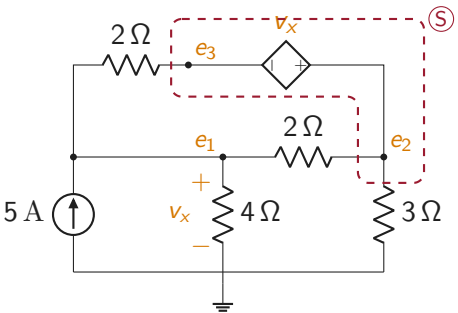

Node 1: $$-5 + \frac{e_1 - e_3}{2} + \frac{e_1}{4} + \frac{e_1 - e_2}{2} = 0 \quad (1)$$

Supernode Ⓢ: $$\frac{e_3 - e_1}{2} + \frac{e_2 - e_1}{2} + \frac{e_2}{3} = 0 \quad (2)$$

Example 11.5: the equations

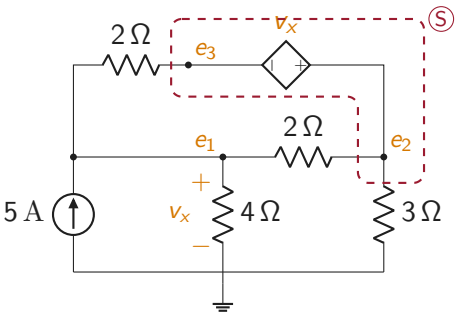


Node 1: $-5 + \dfrac{e_1 - e_3}{2} + \dfrac{e_1}{4} + \dfrac{e_1 - e_2}{2} = 0 \quad (1)$

Supernode Ⓢ: $\dfrac{e_3 - e_1}{2} + \dfrac{e_2 - e_1}{2} + \dfrac{e_2}{3} = 0 \quad (2)$

Source: $e_2 - e_3 = v_x$

Example 11.5: the equations

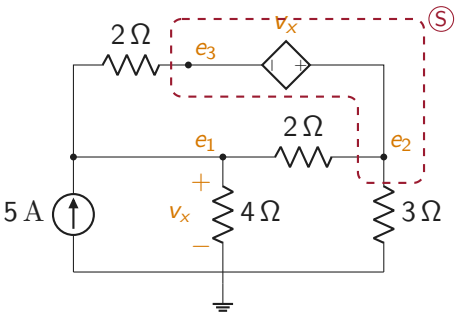


Node 1: $-5 + \dfrac{e_1 - e_3}{2} + \dfrac{e_1}{4} + \dfrac{e_1 - e_2}{2} = 0 \quad (1)$

Supernode Ⓢ: $\dfrac{e_3 - e_1}{2} + \dfrac{e_2 - e_1}{2} + \dfrac{e_2}{3} = 0 \quad (2)$

Source: $e_2 - e_3 = v_x$

Control: $v_x = e_1$

Example 11.5: the equations

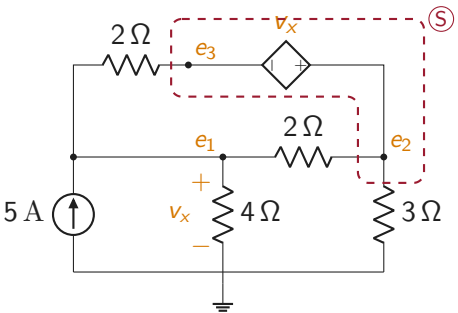

Node 1: $-5 + \dfrac{e_1 - e_3}{2} + \dfrac{e_1}{4} + \dfrac{e_1 - e_2}{2} = 0 \quad (1)$

Supernode Ⓢ: $\dfrac{e_3 - e_1}{2} + \dfrac{e_2 - e_1}{2} + \dfrac{e_2}{3} = 0 \quad (2)$

Source: $e_2 - e_3 = v_x$

Control: $v_x = e_1$

Constraint: $e_2 - e_3 = e_1 \quad (3)$

Example 11.5: matrix form

(1), (2), (3):

$$\begin{bmatrix} \frac{5}{4} & -\frac{1}{2} & -\frac{1}{2} \\ -1 & \frac{5}{6} & \frac{1}{2} \\ 1 & -1 & 1 \end{bmatrix} \begin{bmatrix} e_1 \\ e_2 \\ e_3 \end{bmatrix} = \begin{bmatrix} 5 \\ 0 \\ 0 \end{bmatrix}$$

Example 11.5: matrix form

(1), (2), (3):

$$\begin{bmatrix} \frac{5}{4} & -\frac{1}{2} & -\frac{1}{2} \\ -1 & \frac{5}{6} & \frac{1}{2} \\ 1 & -1 & 1 \end{bmatrix} \begin{bmatrix} e_1 \\ e_2 \\ e_3 \end{bmatrix} = \begin{bmatrix} 5 \\ 0 \\ 0 \end{bmatrix}$$

$$e_1 = 8\,\mathrm{V}, \quad e_2 = 9\,\mathrm{V}, \quad e_3 = 1\,\mathrm{V}$$

Example 11.5: matrix form

(1), (2), (3):

$$\begin{bmatrix} \frac{5}{4} & -\frac{1}{2} & -\frac{1}{2} \\ -1 & \frac{5}{6} & \frac{1}{2} \\ 1 & -1 & 1 \end{bmatrix} \begin{bmatrix} e_1 \\ e_2 \\ e_3 \end{bmatrix} = \begin{bmatrix} 5 \\ 0 \\ 0 \end{bmatrix}$$

$$e_1 = 8\,\mathrm{V}, \quad e_2 = 9\,\mathrm{V}, \quad e_3 = 1\,\mathrm{V}$$

$$P_{3\Omega} = \frac{{e_2}^2}{3} = \frac{9^2}{3} = 27\,\mathrm{W}$$

Dependent sources

- Like an independent source of the same kind

Dependent sources

- Like an independent source of the same kind
- Control variable in node voltages

Dependent sources

- Like an independent source of the same kind
- Control variable in node voltages
- First plug it in, then form the matrix

Dependent sources

- Like an independent source of the same kind
- Control variable in node voltages
- First plug it in, then form the matrix


Remark

Dependent voltage source from node k to the ground:
no KCL at node k; write the constraint instead

Roadmap









Current sources ✓

the procedure, on an example ✓

matrix form ✓

Voltage sources ✓

one end at the ground ✓

between two nodes ✓

Dependent sources ✓


a dependent current source ✓

a dependent voltage source ✓


The ground 4

does its choice matter?

Example 11.6: where to put the ground?

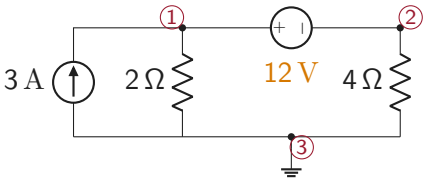


Ground at node 3

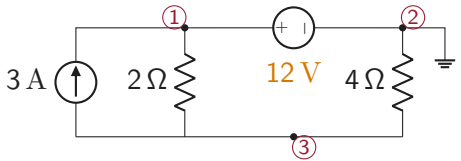


Ground at node 2: the − terminal of 12 V


Solve both. Which is easier?


Example 11.6: side by side

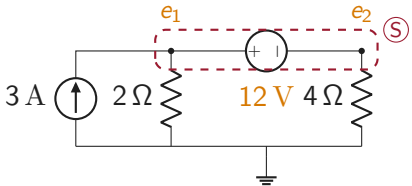

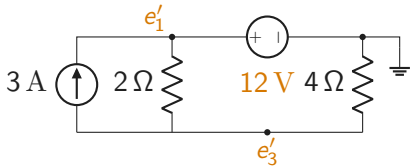


Example 11.6: side by side

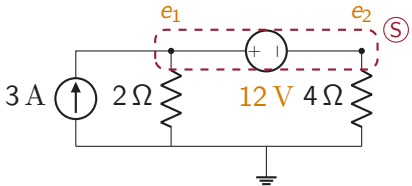


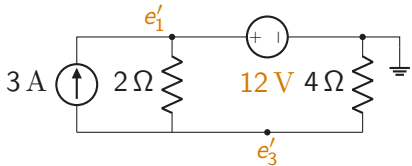

12 V between two nodes: supernode

Example 11.6: side by side

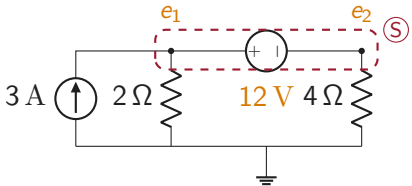


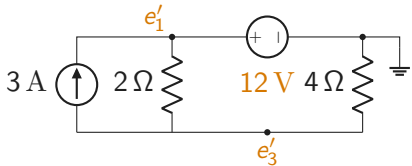


12 V between two nodes: supernode

S: $-3 + \frac{e_1}{2} + \frac{e_2}{4} = 0$

Example 11.6: side by side

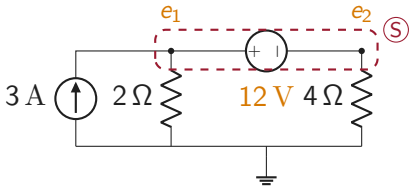

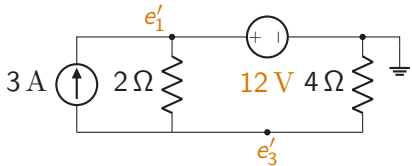



12 V between two nodes: supernode

S: $-3 + \frac{e_1}{2} + \frac{e_2}{4} = 0$

Constraint: $e_1 - e_2 = 12$

Example 11.6: side by side

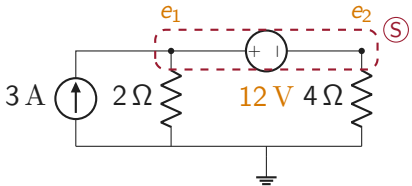

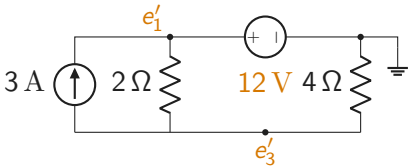


12 V between two nodes: supernode


S: $-3 + \frac{e_1}{2} + \frac{e_2}{4} = 0$

Constraint: $e_1 - e_2 = 12$

$$\begin{bmatrix} \frac{1}{2} & \frac{1}{4} \\ 1 & -1 \end{bmatrix} \begin{bmatrix} e_1 \\ e_2 \end{bmatrix} = \begin{bmatrix} 3 \\ 12 \end{bmatrix} \Rightarrow \begin{array}{l} e_1 = 8\,\text{V} \\ e_2 = -4\,\text{V} \end{array}$$

Example 11.6: side by side

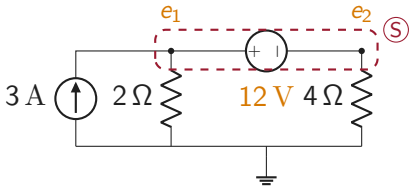

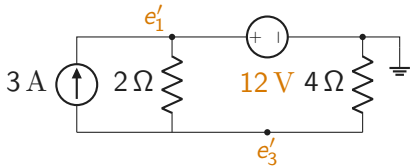

12 V between two nodes: supernode


$e_1' = 12\,\text{V}$: known

S: $-3 + \dfrac{e_1}{2} + \dfrac{e_2}{4} = 0$

Constraint: $e_1 - e_2 = 12$

$$\begin{bmatrix} \frac{1}{2} & \frac{1}{4} \\ 1 & -1 \end{bmatrix} \begin{bmatrix} e_1 \\ e_2 \end{bmatrix} = \begin{bmatrix} 3 \\ 12 \end{bmatrix} \Rightarrow \begin{matrix} e_1 = 8\,\text{V} \\ e_2 = -4\,\text{V} \end{matrix}$$

Example 11.6: side by side

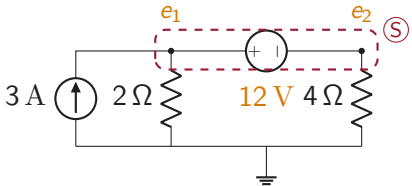


12 V between two nodes: supernode

S: $-3 + \frac{e_1}{2} + \frac{e_2}{4} = 0$

Constraint: $e_1 - e_2 = 12$


$$\begin{bmatrix} \frac{1}{2} & \frac{1}{4} \\ 1 & -1 \end{bmatrix} \begin{bmatrix} e_1 \\ e_2 \end{bmatrix} = \begin{bmatrix} 3 \\ 12 \end{bmatrix} \Rightarrow \begin{matrix} e_1 = 8\,\text{V} \\ e_2 = -4\,\text{V} \end{matrix}$$

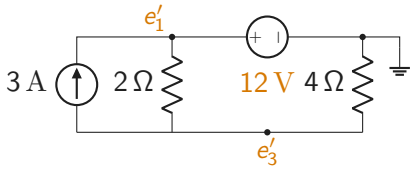

$e_1' = 12\,\text{V}$: known

Node 3: $3 + \frac{e_3' - 12}{2} + \frac{e_3'}{4} = 0$

Example 11.6: side by side

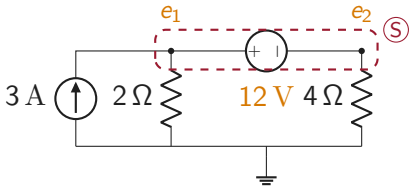


12 V between two nodes: supernode

S: $-3 + \frac{e_1}{2} + \frac{e_2}{4} = 0$

Constraint: $e_1 - e_2 = 12$

$$\begin{bmatrix} \frac{1}{2} & \frac{1}{4} \\ 1 & -1 \end{bmatrix} \begin{bmatrix} e_1 \\ e_2 \end{bmatrix} = \begin{bmatrix} 3 \\ 12 \end{bmatrix} \Rightarrow \begin{matrix} e_1 = 8\,\text{V} \\ e_2 = -4\,\text{V} \end{matrix}$$

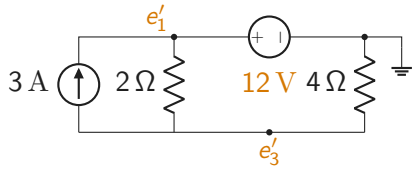


$e_1' = 12\,\text{V}$: known

Node 3: $3 + \frac{e_3' - 12}{2} + \frac{e_3'}{4} = 0$

$\frac{3}{4}\, e_3' = 3 \;\Rightarrow\; e_3' = 4\,\text{V}$

Example 11.6: side by side

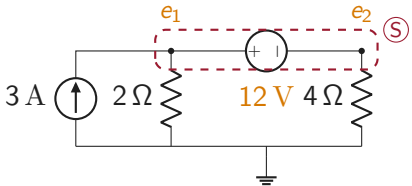


12 V between two nodes: supernode

S: $-3 + \frac{e_1}{2} + \frac{e_2}{4} = 0$

Constraint: $e_1 - e_2 = 12$

$$\begin{bmatrix} \frac{1}{2} & \frac{1}{4} \\ 1 & -1 \end{bmatrix} \begin{bmatrix} e_1 \\ e_2 \end{bmatrix} = \begin{bmatrix} 3 \\ 12 \end{bmatrix} \Rightarrow \begin{matrix} e_1 = 8\,\text{V} \\ e_2 = -4\,\text{V} \end{matrix}$$

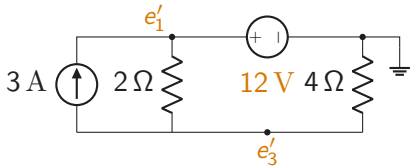

$e_1' = 12\,\text{V}$: known

Node 3: $3 + \frac{e_3' - 12}{2} + \frac{e_3'}{4} = 0$

$\frac{3}{4}\, e_3' = 3 \;\Rightarrow\; e_3' = 4\,\text{V}$

2 unknowns | 1 unknown

Example 11.6: the same branch voltages

	ground at 3	ground at 2
$v_{2\Omega}$: node 1 to 3	$8 - 0 = 8$	$12 - 4 = 8$
$v_{4\Omega}$: node 2 to 3	$-4 - 0 = -4$	$0 - 4 = -4$

(V)

Example 11.6: the same branch voltages

	ground at 3	ground at 2
$v_{2\Omega}$: node 1 to 3	$8 - 0 = 8$	$12 - 4 = 8$
$v_{4\Omega}$: node 2 to 3	$-4 - 0 = -4$	$0 - 4 = -4$

(V)

Node voltages shift by $4\,\mathrm{V}$; branch voltages and currents do not change

Example 11.6: the same branch voltages

	ground at 3	ground at 2
$v_{2\Omega}$: node 1 to 3	$8 - 0 = 8$	$12 - 4 = 8$
$v_{4\Omega}$: node 2 to 3	$-4 - 0 = -4$	$0 - 4 = -4$

(V)

Node voltages shift by $4\,\mathrm{V}$; branch voltages and currents do not change

Tip. Put the ground at the $-$ terminal of a voltage source: one node voltage is known, and no supernode is needed

Summary


In the circuit	What to do
resistors, current sources	$Y_n\mathbf{e} = \mathbf{i}_n$, by the rules; symmetric
voltage source to the ground	e_k known; no KCL at node k
voltage source between nodes	Method I or supernode, plus constraint
dependent source	control in node voltages: constraint
choice of ground	any node; best at the $-$ terminal of a voltage source


Then $\mathbf{v} = A^T\mathbf{e}$ and the element laws

Appendix

Y_n from the graph

Y_n from the graph: the reduced incidence matrix

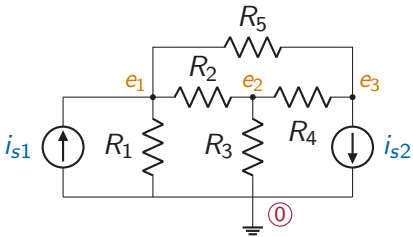


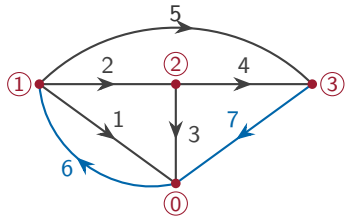


1–5: $R_1, \ldots, R_5$; 6, 7: i_{s1}, i_{s2}; ⓪: ground

$A = ?$

Y_n from the graph: the reduced incidence matrix

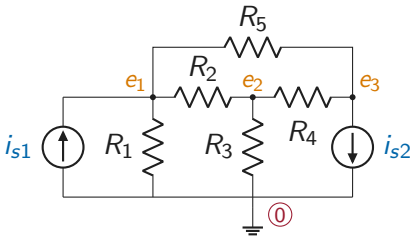

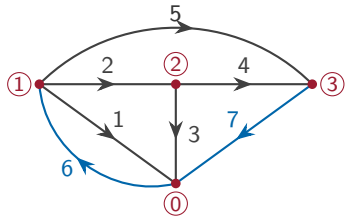

1–5: $R_1, \ldots, R_5$; 6, 7: i_{s1}, i_{s2}; ⓪: ground


$A = ?$


One row per non-ground node

$+1$ leaves, -1 enters

$$A = \begin{array}{c} \\ ① \\ ② \\ ③ \end{array} \begin{array}{c} \begin{array}{ccccccc} 1 & 2 & 3 & 4 & 5 & 6 & 7 \end{array} \\ \left[\begin{array}{ccccccc} & & & & & & \\ & & & & & & \\ & & & & & & \end{array}\right] \end{array}$$

Y_n from the graph: the reduced incidence matrix

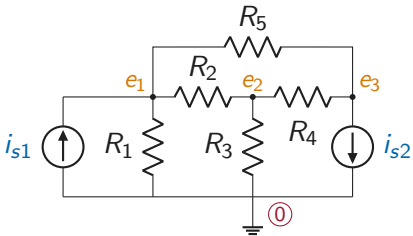

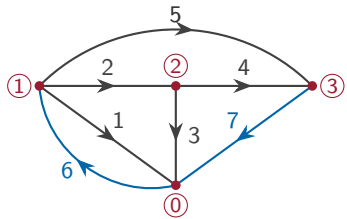

1–5: $R_1, \ldots, R_5$; 6, 7: i_{s1}, i_{s2}; ⓪: ground


$A = ?$


One row per non-ground node

$+1$ leaves, -1 enters

$$A = \begin{array}{c} \\ ① \\ ② \\ ③ \end{array} \begin{array}{c} \begin{array}{ccccccc} 1 & 2 & 3 & 4 & 5 & 6 & 7 \end{array} \\ \left[\begin{array}{ccccccc} 1 & 1 & 0 & 0 & 1 & -1 & 0 \\ & & & & & & \\ & & & & & & \end{array}\right] \end{array}$$

Y_n from the graph: the reduced incidence matrix

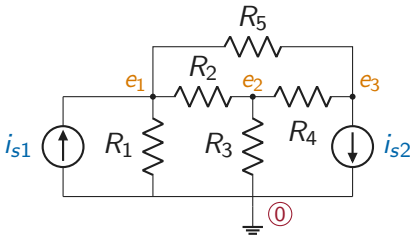

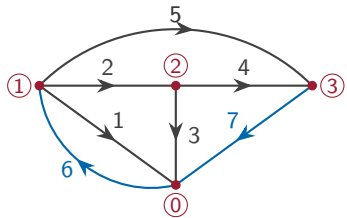

1–5: $R_1, \ldots, R_5$; 6, 7: i_{s1}, i_{s2}; ⓪: ground


$A = ?$


One row per non-ground node

$+1$ leaves, -1 enters

$$A = \begin{array}{c} \\ ① \\ ② \\ ③ \end{array} \begin{array}{c} \begin{array}{ccccccc} 1 & 2 & 3 & 4 & 5 & 6 & 7 \end{array} \\ \begin{bmatrix} 1 & 1 & 0 & 0 & 1 & -1 & 0 \\ 0 & -1 & 1 & 1 & 0 & 0 & 0 \\ & & & & & & \end{bmatrix} \end{array}$$

Y_n from the graph: the reduced incidence matrix

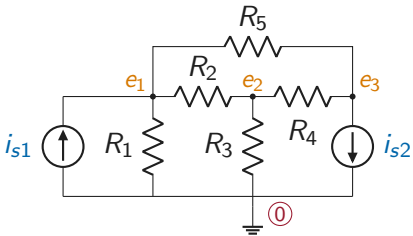

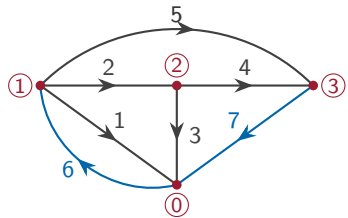

1–5: $R_1, \ldots, R_5$; 6, 7: i_{s1}, i_{s2}; ⓪: ground


$A = ?$


One row per non-ground node

$+1$ leaves, -1 enters

$$A = \begin{array}{c} \\ ① \\ ② \\ ③ \end{array} \begin{array}{c} \begin{array}{ccccccc} 1 & 2 & 3 & 4 & 5 & 6 & 7 \end{array} \\ \begin{bmatrix} 1 & 1 & 0 & 0 & 1 & -1 & 0 \\ 0 & -1 & 1 & 1 & 0 & 0 & 0 \\ 0 & 0 & 0 & -1 & -1 & 0 & 1 \end{bmatrix} \end{array}$$

Y_n from the graph: the reduced incidence matrix

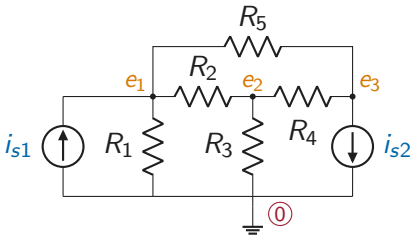

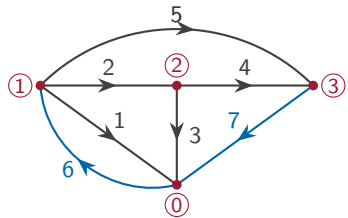

1–5: $R_1, \ldots, R_5$; 6, 7: i_{s1}, i_{s2}; ⓪: ground

$A = ?$

One row per non-ground node

$+1$ leaves, -1 enters

$$A = \begin{array}{c} \\ ① \\ ② \\ ③ \end{array} \overset{\begin{array}{ccccc|cc} 1 & 2 & 3 & 4 & 5 & 6 & 7 \end{array}}{\left[\begin{array}{ccccc|cc} 1 & 1 & 0 & 0 & 1 & -1 & 0 \\ 0 & -1 & 1 & 1 & 0 & 0 & 0 \\ 0 & 0 & 0 & -1 & -1 & 0 & 1 \end{array}\right]}$$

A_R: resistors A_S: sources

Y_n from the graph: the general result

Resistors first, then current sources: $A = [\, A_R \;\; A_S \,]$

Y_n from the graph: the general result

Resistors first, then current sources: $A = [\, A_R \;\; A_S \,]$

$$\textbf{KCL:} \quad A_R \mathbf{i}_R + A_S \mathbf{i}_S = \mathbf{0}$$

Y_n from the graph: the general result

Resistors first, then current sources: $A = [\, A_R \;\; A_S \,]$

$$\textbf{KCL:} \quad A_R \mathbf{i}_R + A_S \mathbf{i}_S = \mathbf{0}$$

$$\textbf{KVL:} \quad \mathbf{v}_R = A_R^T \mathbf{e}$$

Y_n from the graph: the general result

Resistors first, then current sources: $A = [\, A_R \;\; A_S \,]$

KCL: $A_R \mathbf{i}_R + A_S \mathbf{i}_S = \mathbf{0}$

KVL: $\mathbf{v}_R = A_R^T \mathbf{e}$

Ohm: $\mathbf{i}_R = G\,\mathbf{v}_R, \quad G = \mathrm{diag}(G_1, \ldots, G_{b_R})$

Y_n from the graph: the general result

Resistors first, then current sources: $A = [\, A_R \;\; A_S \,]$

KCL: $A_R \mathbf{i}_R + A_S \mathbf{i}_S = \mathbf{0}$

KVL: $\mathbf{v}_R = A_R^T \mathbf{e}$

Ohm: $\mathbf{i}_R = G\,\mathbf{v}_R, \quad G = \mathrm{diag}(G_1, \ldots, G_{b_R})$

$$A_R\, G\, A_R^T\, \mathbf{e} = -A_S \mathbf{i}_S$$

Y_n from the graph: the general result

Resistors first, then current sources: $A = [\,A_R \;\; A_S\,]$

KCL: $A_R \mathbf{i}_R + A_S \mathbf{i}_S = \mathbf{0}$

KVL: $\mathbf{v}_R = A_R^T \mathbf{e}$

Ohm: $\mathbf{i}_R = G\,\mathbf{v}_R, \qquad G = \mathrm{diag}(G_1, \ldots, G_{b_R})$

$$A_R\, G\, A_R^T\, \mathbf{e} = -A_S \mathbf{i}_S$$

$$Y_n = A_R\, G\, A_R^T, \qquad \mathbf{i}_n = -A_S \mathbf{i}_S$$

Y_n from the graph: the general result

Resistors first, then current sources: $A = [\,A_R \;\; A_S\,]$

KCL: $A_R \mathbf{i}_R + A_S \mathbf{i}_S = \mathbf{0}$

KVL: $\mathbf{v}_R = A_R^T \mathbf{e}$

Ohm: $\mathbf{i}_R = G\,\mathbf{v}_R, \quad G = \mathrm{diag}(G_1, \ldots, G_{b_R})$

$$A_R\, G\, A_R^T\, \mathbf{e} = -A_S \mathbf{i}_S$$

$$Y_n = A_R\, G\, A_R^T, \qquad \mathbf{i}_n = -A_S \mathbf{i}_S$$

$Y_n^T = Y_n$: always symmetric

Y_n from the graph: Example 11.1

From A: A_R = columns 1–5, A_S = columns 6, 7

$$A_R\, G = \begin{bmatrix} G_1 & G_2 & 0 & 0 & G_5 \\ 0 & -G_2 & G_3 & G_4 & 0 \\ 0 & 0 & 0 & -G_4 & -G_5 \end{bmatrix}$$

Y_n from the graph: Example 11.1

From A: A_R = columns 1–5, A_S = columns 6, 7

$$A_R\, G = \begin{bmatrix} G_1 & G_2 & 0 & 0 & G_5 \\ 0 & -G_2 & G_3 & G_4 & 0 \\ 0 & 0 & 0 & -G_4 & -G_5 \end{bmatrix}$$

$$A_R\, G\, A_R^T = \begin{bmatrix} G_1 + G_2 + G_5 & -G_2 & -G_5 \\ -G_2 & G_2 + G_3 + G_4 & -G_4 \\ -G_5 & -G_4 & G_4 + G_5 \end{bmatrix}$$

Y_n from the graph: Example 11.1

From A: A_R = columns 1–5, A_S = columns 6, 7

$$A_R\, G = \begin{bmatrix} G_1 & G_2 & 0 & 0 & G_5 \\ 0 & -G_2 & G_3 & G_4 & 0 \\ 0 & 0 & 0 & -G_4 & -G_5 \end{bmatrix}$$

$$A_R\, G\, A_R^T = \begin{bmatrix} G_1 + G_2 + G_5 & -G_2 & -G_5 \\ -G_2 & G_2 + G_3 + G_4 & -G_4 \\ -G_5 & -G_4 & G_4 + G_5 \end{bmatrix} \quad \checkmark$$

Y_n from the graph: Example 11.1

From A: A_R = columns 1–5, A_S = columns 6, 7

$$A_R\, G = \begin{bmatrix} G_1 & G_2 & 0 & 0 & G_5 \\ 0 & -G_2 & G_3 & G_4 & 0 \\ 0 & 0 & 0 & -G_4 & -G_5 \end{bmatrix}$$

$$A_R\, G\, A_R^T = \begin{bmatrix} G_1 + G_2 + G_5 & -G_2 & -G_5 \\ -G_2 & G_2 + G_3 + G_4 & -G_4 \\ -G_5 & -G_4 & G_4 + G_5 \end{bmatrix} \quad \checkmark$$

$$-A_S \mathbf{i}_S = -\begin{bmatrix} -1 & 0 \\ 0 & 0 \\ 0 & 1 \end{bmatrix} \begin{bmatrix} i_{s1} \\ i_{s2} \end{bmatrix} = \begin{bmatrix} i_{s1} \\ 0 \\ -i_{s2} \end{bmatrix} = \mathbf{i}_n \quad \checkmark$$

Y_n from the graph: Example 11.1

From A: A_R = columns 1–5, A_S = columns 6, 7

$$A_R\, G = \begin{bmatrix} G_1 & G_2 & 0 & 0 & G_5 \\ 0 & -G_2 & G_3 & G_4 & 0 \\ 0 & 0 & 0 & -G_4 & -G_5 \end{bmatrix}$$

$$A_R\, G\, A_R^T = \begin{bmatrix} G_1 + G_2 + G_5 & -G_2 & -G_5 \\ -G_2 & G_2 + G_3 + G_4 & -G_4 \\ -G_5 & -G_4 & G_4 + G_5 \end{bmatrix} \quad \checkmark$$

$$-A_S \mathbf{i}_S = -\begin{bmatrix} -1 & 0 \\ 0 & 0 \\ 0 & 1 \end{bmatrix} \begin{bmatrix} i_{s1} \\ i_{s2} \end{bmatrix} = \begin{bmatrix} i_{s1} \\ 0 \\ -i_{s2} \end{bmatrix} = \mathbf{i}_n \quad \checkmark$$

The rules = this product