Lecture 11: Node Voltage Analysis

EE201 – Circuit Theory I

M. Mert Ankaralı

Department of Electrical and Electronics Engineering
Middle East Technical University

current voltage, node voltage e supernode

Review: two ways to solve an LTI resistive circuit

Transform the circuit

- Substitution, equivalent one-ports.
- Series and parallel connections.
- Source transformation.

Works for many circuits, but not all.

Write its equations as it is

- KCL: $A\mathbf{i} = \mathbf{0}$.
- KVL: $\mathbf{v} = A^T\mathbf{e}$.
- One element law per branch.

Works for every circuit.

With the node voltages $\mathbf{e}$ as the unknowns, KVL holds automatically.

Only KCL is left to write.

Motivation

- So far, we solved circuits by simplifying them: series, parallel, source transformation.

Motivation

- So far, we solved circuits by simplifying them: series, parallel, source transformation.
- These simplifications do not work for every circuit.

Motivation

- So far, we solved circuits by simplifying them: series, parallel, source transformation.
- These simplifications do not work for every circuit.
- Node voltage analysis writes the equations of the circuit directly, without changing the circuit.

Motivation

- So far, we solved circuits by simplifying them: series, parallel, source transformation.
- These simplifications do not work for every circuit.
- Node voltage analysis writes the equations of the circuit directly, without changing the circuit.
- Its unknowns are only the $n-1$ node voltages, instead of $2b$ branch voltages and currents.

Motivation

- So far, we solved circuits by simplifying them: series, parallel, source transformation.
- These simplifications do not work for every circuit.
- Node voltage analysis writes the equations of the circuit directly, without changing the circuit.
- Its unknowns are only the $n-1$ node voltages, instead of $2b$ branch voltages and currents.
- Its steps are the same for every LTI resistive circuit.


Motivation

- So far, we solved circuits by simplifying them: series, parallel, source transformation.
- These simplifications do not work for every circuit.
- Node voltage analysis writes the equations of the circuit directly, without changing the circuit.
- Its unknowns are only the $n-1$ node voltages, instead of $2b$ branch voltages and currents.
- Its steps are the same for every LTI resistive circuit.
- Later, mesh current analysis will do the same with mesh currents.

Roadmap


1. **The idea of node voltage analysis**
2. Resistors and current sources
3. A voltage source connected to the ground
4. A voltage source between two nodes: Method I
5. A voltage source between two nodes: Method II, the supernode
6. Dependent sources
7. Choosing the ground

The idea: a small example

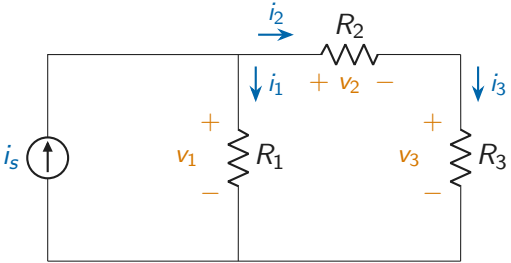

Question. How many unknowns does this circuit have?


The idea: a small example

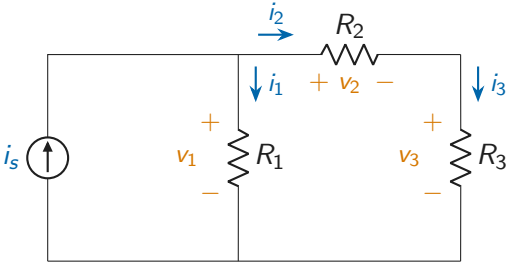

Question. How many unknowns does this circuit have?

4 branches: 4 branch voltages and 4 branch currents.

The idea: a small example

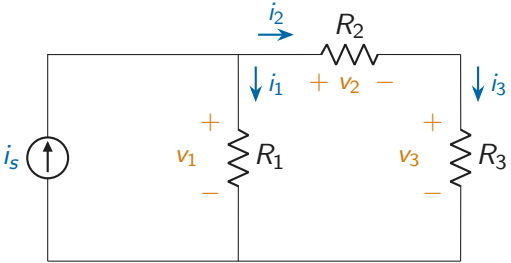


Question. How many unknowns does this circuit have?

4 branches: 4 branch voltages and 4 branch currents.

So 8 unknowns, and we would need 8 equations.

The idea: a small example

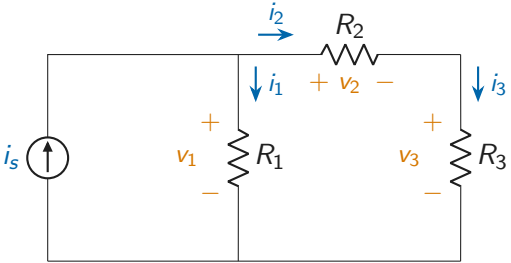

Question. How many unknowns does this circuit have?


4 branches: 4 branch voltages and 4 branch currents.

So 8 unknowns, and we would need 8 equations.

With node voltages, only 2 unknowns are left.

Three steps show how.


Step 1: node voltages give the branch voltages

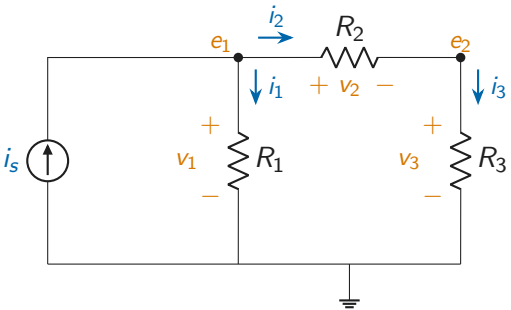

Choose the bottom node as the ground.

Call the other node voltages e_1 and e_2.

Step 1: node voltages give the branch voltages

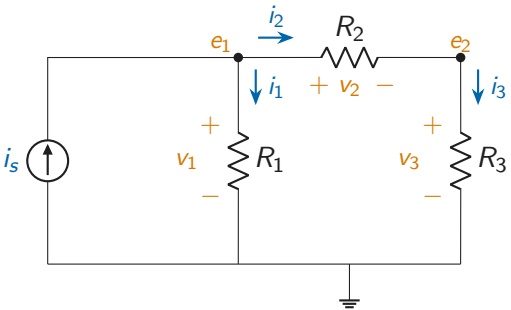


Choose the bottom node as the ground.

Call the other node voltages e_1 and e_2.

$v_1 = e_1, \qquad v_2 = e_1 - e_2, \qquad v_3 = e_2$

Step 1: node voltages give the branch voltages

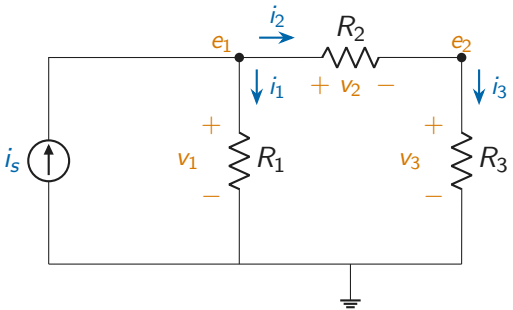


Choose the bottom node as the ground.

Call the other node voltages e_1 and e_2.

$v_1 = e_1, \qquad v_2 = e_1 - e_2, \qquad v_3 = e_2$

Question. Does KVL hold around the loop R_1, R_2, R_3?

Step 1: node voltages give the branch voltages

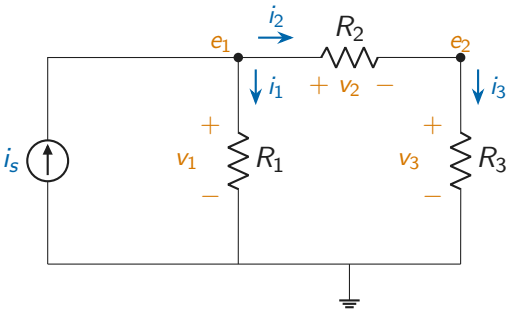

Choose the bottom node as the ground.


Call the other node voltages e_1 and e_2.

$v_1 = e_1, \qquad v_2 = e_1 - e_2, \qquad v_3 = e_2$


Question. Does KVL hold around the loop R_1, R_2, R_3?

$v_1 = v_2 + v_3$: $\ e_1 = (e_1 - e_2) + e_2$ ✓

KVL holds automatically, for any e_1, e_2.

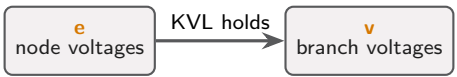


Step 2: the element laws give the branch currents

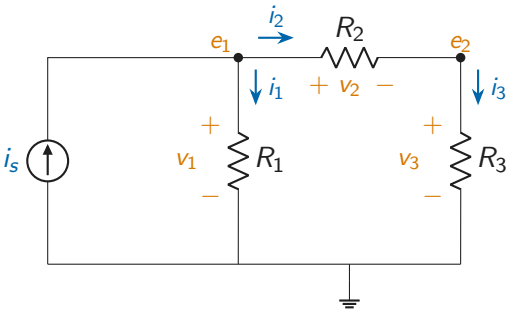

Each resistor obeys $i = v/R$:



Step 2: the element laws give the branch currents

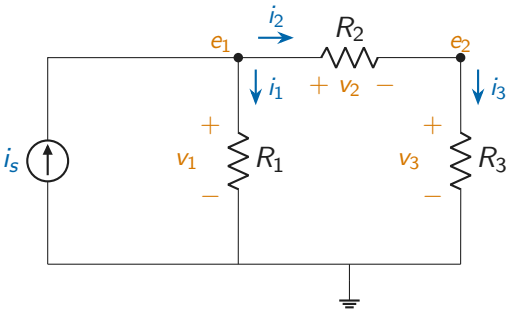


Each resistor obeys $i = v/R$:

$$i_1 = \frac{e_1}{R_1}, \qquad i_2 = \frac{e_1 - e_2}{R_2}, \qquad i_3 = \frac{e_2}{R_3}$$



Step 2: the element laws give the branch currents

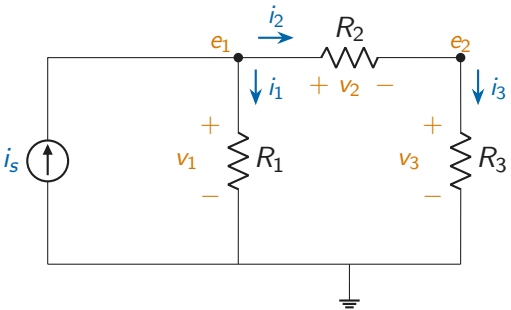


Each resistor obeys $i = v/R$:

$$i_1 = \frac{e_1}{R_1}, \qquad i_2 = \frac{e_1 - e_2}{R_2}, \qquad i_3 = \frac{e_2}{R_3}$$

Every branch current is now written with e_1 and e_2.




Step 3: KCL gives the equations

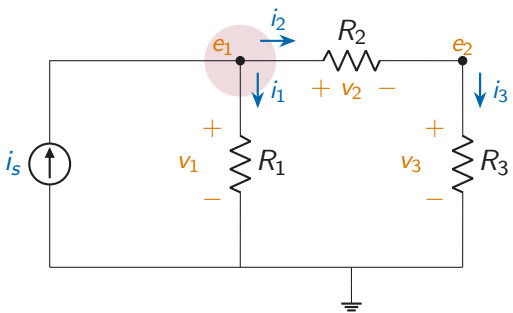

Node 1: $-i_s + \dfrac{e_1}{R_1} + \dfrac{e_1 - e_2}{R_2} = 0$


Step 3: KCL gives the equations

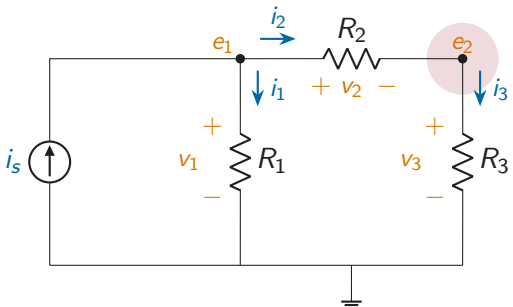

Node 1: $$-i_s + \frac{e_1}{R_1} + \frac{e_1 - e_2}{R_2} = 0$$

Node 2: $$-\frac{e_1 - e_2}{R_2} + \frac{e_2}{R_3} = 0$$


Step 3: KCL gives the equations

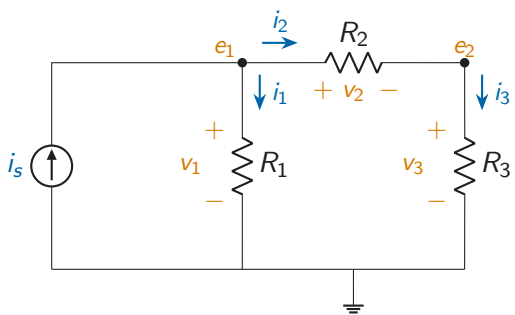


Node 1: $-i_s + \dfrac{e_1}{R_1} + \dfrac{e_1 - e_2}{R_2} = 0$

Node 2: $-\dfrac{e_1 - e_2}{R_2} + \dfrac{e_2}{R_3} = 0$

Two equations, two unknowns: solve for e_1 and e_2.

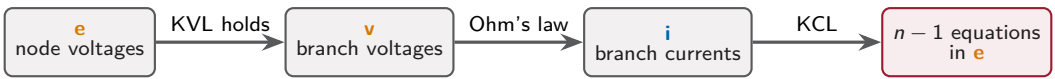

Step 3: KCL gives the equations

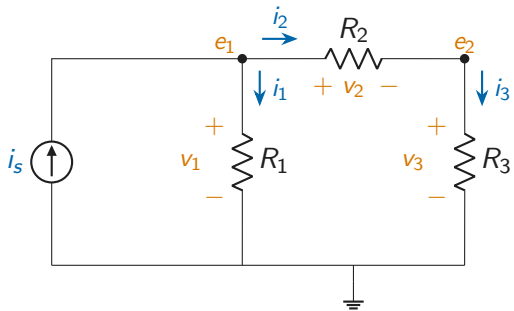


Node 1: $-i_s + \dfrac{e_1}{R_1} + \dfrac{e_1 - e_2}{R_2} = 0$

Node 2: $-\dfrac{e_1 - e_2}{R_2} + \dfrac{e_2}{R_3} = 0$

Two equations, two unknowns: solve for e_1 and e_2.

Then Steps 1 and 2 give all branch voltages and currents.

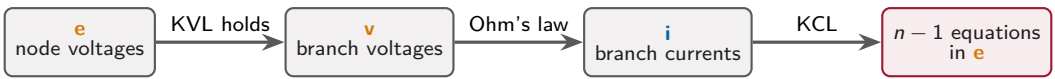

The procedure


1. Choose a reference node (ground); its node voltage is 0.

The procedure

1. Choose a reference node (ground); its node voltage is 0.
2. Label the other node voltages $e_1, \ldots, e_{n-1}$.

The procedure


1. Choose a reference node (ground); its node voltage is 0.
2. Label the other node voltages $e_1, \ldots, e_{n-1}$.
3. Write KCL at every other node, in terms of node voltages.

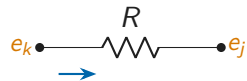


$$i = \frac{e_k - e_j}{R} = G\,(e_k - e_j)$$

The procedure

1. Choose a reference node (ground); its node voltage is 0.
2. Label the other node voltages $e_1, \ldots, e_{n-1}$.
3. Write KCL at every other node, in terms of node voltages.

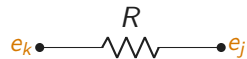


$$i = \frac{e_k - e_j}{R} = G\,(e_k - e_j)$$

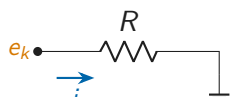


$$i = \frac{e_k - 0}{R} = G\,e_k$$

The procedure

1. Choose a reference node (ground); its node voltage is 0.
2. Label the other node voltages $e_1, \ldots, e_{n-1}$.
3. Write KCL at every other node, in terms of node voltages.

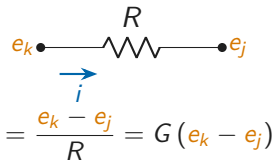

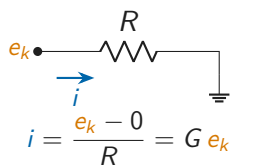


The current leaving node k through a resistor is its own node voltage minus the other one, over R.

Roadmap

1. The idea of node voltage analysis ✓
2. **Resistors and current sources**
3. A voltage source connected to the ground
4. A voltage source between two nodes: Method I
5. A voltage source between two nodes: Method II, the supernode
6. Dependent sources
7. Choosing the ground


Example 11.1: only current sources

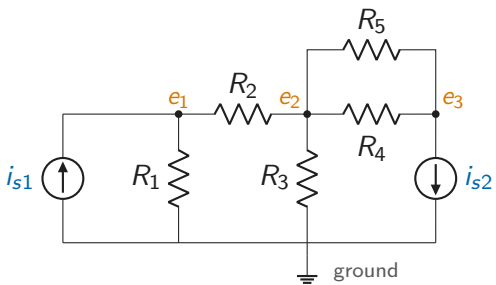

Question. How many unknowns does this circuit have?

How many does node voltage analysis need?

Example 11.1: only current sources

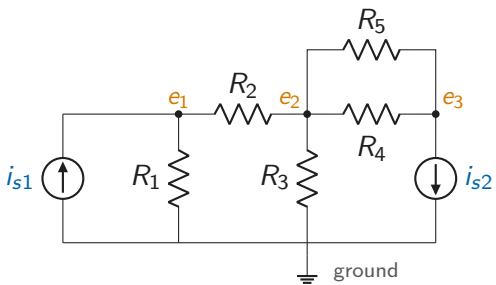


Question. How many unknowns does this circuit have?

How many does node voltage analysis need?

$b = 7$ branches: $2b = 14$ branch voltages and currents.

Example 11.1: only current sources

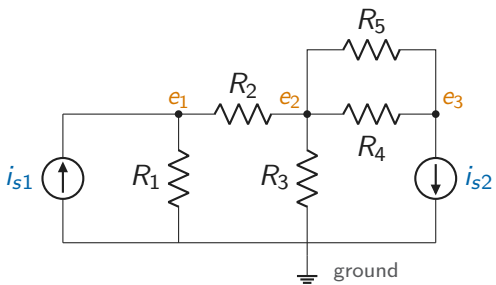


Question. How many unknowns does this circuit have?

How many does node voltage analysis need?

$b = 7$ branches: $2b = 14$ branch voltages and currents.

$n = 4$ nodes: only 3 node voltages, e_1, e_2, e_3.

Example 11.1: only current sources

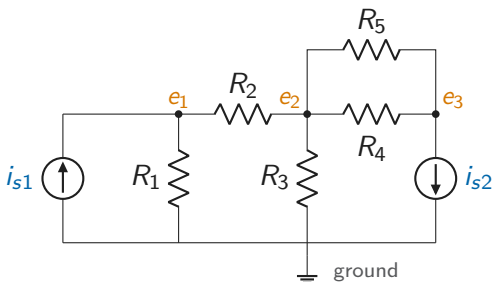

Question. How many unknowns does this circuit have?


How many does node voltage analysis need?

$b = 7$ branches: $2b = 14$ branch voltages and currents.

$n = 4$ nodes: only 3 node voltages, e_1, e_2, e_3.

So we need three KCL equations, at nodes 1, 2 and 3.


Example 11.1: KCL at each node

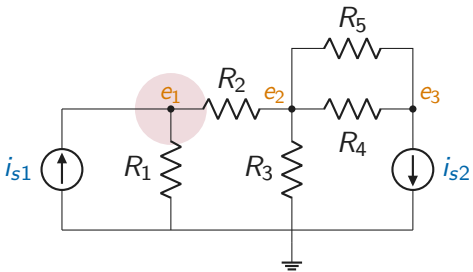

Node 1:

$$-i_{s1} + \frac{e_1}{R_1} + \frac{e_1 - e_2}{R_2} = 0$$

Example 11.1: KCL at each node

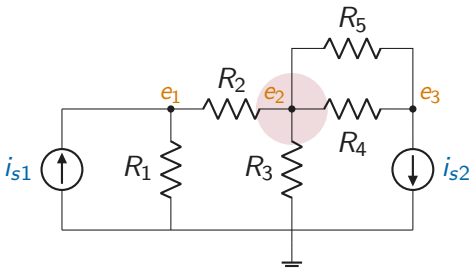


Node 1:

$$-i_{s1} + \frac{e_1}{R_1} + \frac{e_1 - e_2}{R_2} = 0$$

Node 2:

$$\frac{e_2 - e_1}{R_2} + \frac{e_2}{R_3} + \frac{e_2 - e_3}{R_4} + \frac{e_2 - e_3}{R_5} = 0$$

Example 11.1: KCL at each node

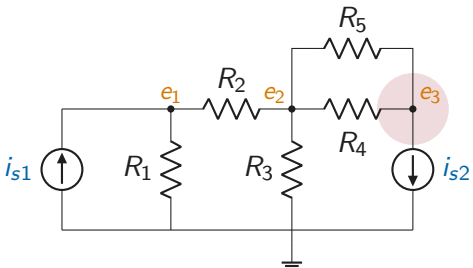

Node 1:

$$-i_{s1} + \frac{e_1}{R_1} + \frac{e_1 - e_2}{R_2} = 0$$


Node 2:

$$\frac{e_2 - e_1}{R_2} + \frac{e_2}{R_3} + \frac{e_2 - e_3}{R_4} + \frac{e_2 - e_3}{R_5} = 0$$

Node 3:

$$\frac{e_3 - e_2}{R_4} + \frac{e_3 - e_2}{R_5} + i_{s2} = 0$$

Example 11.1: KCL at each node

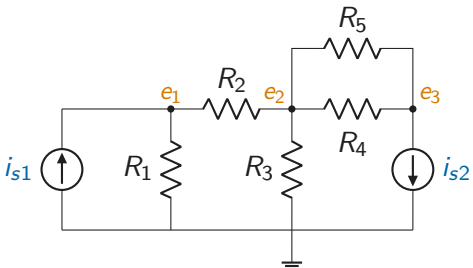

Node 1:

$$-i_{s1} + \frac{e_1}{R_1} + \frac{e_1 - e_2}{R_2} = 0$$

Node 2:

$$\frac{e_2 - e_1}{R_2} + \frac{e_2}{R_3} + \frac{e_2 - e_3}{R_4} + \frac{e_2 - e_3}{R_5} = 0$$

Node 3:

$$\frac{e_3 - e_2}{R_4} + \frac{e_3 - e_2}{R_5} + i_{s2} = 0$$

Every term is a current leaving the node.

A source pointing into the node enters with a minus sign.

Example 11.1: matrix form

With the conductances $G_k = 1/R_k$:

$$\begin{aligned}
(G_1 + G_2)\, e_1 - G_2\, e_2 &= i_{s1} \\
-G_2\, e_1 + (G_2 + G_3 + G_4 + G_5)\, e_2 - (G_4 + G_5)\, e_3 &= 0 \\
-(G_4 + G_5)\, e_2 + (G_4 + G_5)\, e_3 &= -i_{s2}
\end{aligned}$$

Example 11.1: matrix form

With the conductances $G_k = 1/R_k$:

$$
\begin{aligned}
(G_1 + G_2)\, e_1 - G_2\, e_2 &= i_{s1} \\
-G_2\, e_1 + (G_2 + G_3 + G_4 + G_5)\, e_2 - (G_4 + G_5)\, e_3 &= 0 \\
-(G_4 + G_5)\, e_2 + (G_4 + G_5)\, e_3 &= -i_{s2}
\end{aligned}
$$

$$
\underbrace{\begin{bmatrix} G_1 + G_2 & -G_2 & 0 \\ -G_2 & G_2 + G_3 + G_4 + G_5 & -(G_4 + G_5) \\ 0 & -(G_4 + G_5) & G_4 + G_5 \end{bmatrix}}_{Y_n}
\underbrace{\begin{bmatrix} e_1 \\ e_2 \\ e_3 \end{bmatrix}}_{\mathbf{e}}
=
\underbrace{\begin{bmatrix} i_{s1} \\ 0 \\ -i_{s2} \end{bmatrix}}_{\mathbf{i}_s}
$$

Example 11.1: matrix form


With the conductances $G_k = 1/R_k$:

$$\begin{aligned}
(G_1 + G_2)\, e_1 - G_2\, e_2 &= i_{s1} \\
-G_2\, e_1 + (G_2 + G_3 + G_4 + G_5)\, e_2 - (G_4 + G_5)\, e_3 &= 0 \\
-(G_4 + G_5)\, e_2 + (G_4 + G_5)\, e_3 &= -i_{s2}
\end{aligned}$$

$$\underbrace{\begin{bmatrix} G_1 + G_2 & -G_2 & 0 \\ -G_2 & G_2 + G_3 + G_4 + G_5 & -(G_4 + G_5) \\ 0 & -(G_4 + G_5) & G_4 + G_5 \end{bmatrix}}_{Y_n} \underbrace{\begin{bmatrix} e_1 \\ e_2 \\ e_3 \end{bmatrix}}_{\mathbf{e}} = \underbrace{\begin{bmatrix} i_{s1} \\ 0 \\ -i_{s2} \end{bmatrix}}_{\mathbf{i}_s}$$

Y_n is the node admittance matrix: $Y_n \mathbf{e} = \mathbf{i}_s$.


Writing Y_n by inspection

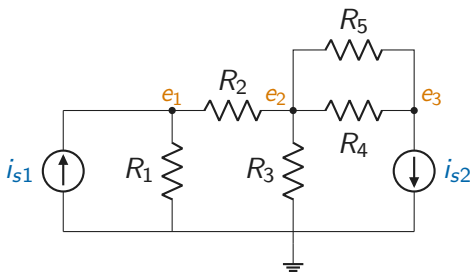

$$\begin{bmatrix} G_1 + G_2 & -G_2 & 0 \\ -G_2 & G_2 + \cdots + G_5 & -(G_4 + G_5) \\ 0 & -(G_4 + G_5) & G_4 + G_5 \end{bmatrix}$$

Question. Can you read each entry of Y_n directly from the circuit?

Writing Y_n by inspection

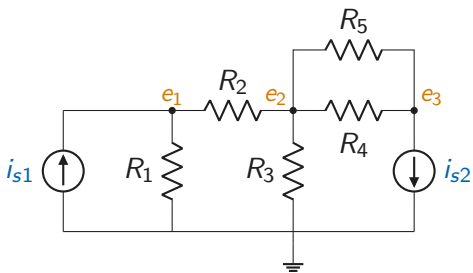


$$\begin{bmatrix} G_1 + G_2 & -G_2 & 0 \\ -G_2 & G_2 + \cdots + G_5 & -(G_4 + G_5) \\ 0 & -(G_4 + G_5) & G_4 + G_5 \end{bmatrix}$$

Question. Can you read each entry of Y_n directly from the circuit?

Diagonal (k, k): the sum of the conductances connected to node k.

Writing Y_n by inspection

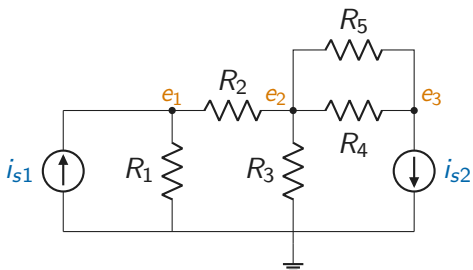


$$\begin{bmatrix} G_1+G_2 & -G_2 & 0 \\ -G_2 & G_2+\cdots+G_5 & -(G_4+G_5) \\ 0 & -(G_4+G_5) & G_4+G_5 \end{bmatrix}$$

Question. Can you read each entry of Y_n directly from the circuit?

Diagonal (k,k): the sum of the conductances connected to node k.

Off-diagonal (k,j): minus the sum of the conductances between nodes k and j.

Writing Y_n by inspection

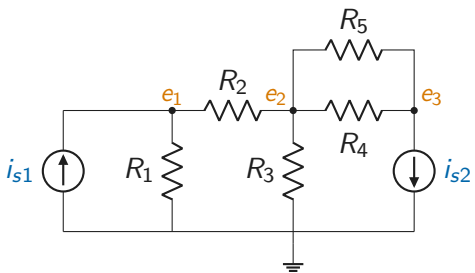

$$\begin{bmatrix} G_1+G_2 & -G_2 & 0 \\ -G_2 & G_2+\cdots+G_5 & -(G_4+G_5) \\ 0 & -(G_4+G_5) & G_4+G_5 \end{bmatrix}$$


Question. Can you read each entry of Y_n directly from the circuit?

Diagonal (k,k): the sum of the conductances connected to node k.

Off-diagonal (k,j): minus the sum of the conductances between nodes k and j.

Right side k: the sum of the source currents entering node k.

Writing Y_n by inspection

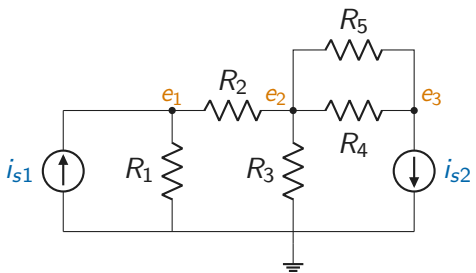

$$\begin{bmatrix} G_1+G_2 & -G_2 & 0 \\ -G_2 & G_2+\cdots+G_5 & -(G_4+G_5) \\ 0 & -(G_4+G_5) & G_4+G_5 \end{bmatrix}$$

Question. Can you read each entry of Y_n directly from the circuit?

Diagonal (k,k): the sum of the conductances connected to node k.

Off-diagonal (k,j): minus the sum of the conductances between nodes k and j.

Right side k: the sum of the source currents entering node k.

So Y_n is symmetric: the entry (k,j) equals the entry (j,k).

Why is Y_n symmetric?

Split A into the resistor branches and the current source branches: $A = [\, A_R \;\; A_S \,]$.

Why is Y_n symmetric?

Split A into the resistor branches and the current source branches: $A = [\, A_R \;\; A_S \,]$.

- KCL: $A_R \mathbf{i}_R + A_S \mathbf{i}_S = \mathbf{0}$.

Why is Y_n symmetric?

Split A into the resistor branches and the current source branches: $A = [\, A_R \;\; A_S \,]$.

- KCL: $A_R \mathbf{i}_R + A_S \mathbf{i}_S = \mathbf{0}$.
- Resistors: $\mathbf{i}_R = G\,\mathbf{v}_R$,
  $G = \mathrm{diag}(G_1, \ldots, G_5)$.

Why is Y_n symmetric?

Split A into the resistor branches and the current source branches: $A = [\, A_R \;\; A_S \,]$.

- KCL: $A_R \mathbf{i}_R + A_S \mathbf{i}_S = \mathbf{0}$.
- Resistors: $\mathbf{i}_R = G\,\mathbf{v}_R$,
  $G = \mathrm{diag}(G_1, \ldots, G_5)$.
- KVL: $\mathbf{v}_R = A_R^T \mathbf{e}$.

Why is Y_n symmetric?

Split A into the resistor branches and the current source branches: $A = [\, A_R \;\; A_S \,]$.

- KCL: $A_R \mathbf{i}_R + A_S \mathbf{i}_S = \mathbf{0}$.
- Resistors: $\mathbf{i}_R = G\,\mathbf{v}_R$, $G = \mathrm{diag}(G_1, \ldots, G_5)$.
- KVL: $\mathbf{v}_R = A_R^T \mathbf{e}$.

$$\underbrace{A_R\, G\, A_R^T}_{Y_n}\, \mathbf{e} = \underbrace{-A_S \mathbf{i}_S}_{\mathbf{i}_s}$$

Why is Y_n symmetric?

Split A into the resistor branches and the current source branches: $A = [\, A_R \;\; A_S \,]$.

- KCL: $A_R \mathbf{i}_R + A_S \mathbf{i}_S = \mathbf{0}$.
- Resistors: $\mathbf{i}_R = G\,\mathbf{v}_R$, $G = \mathrm{diag}(G_1, \ldots, G_5)$.
- KVL: $\mathbf{v}_R = A_R^T \mathbf{e}$.

$$\underbrace{A_R\, G\, A_R^T}_{Y_n}\, \mathbf{e} = \underbrace{-A_S \mathbf{i}_S}_{\mathbf{i}_s}$$

$$Y_n^T = A_R\, G^T A_R^T = A_R\, G\, A_R^T = Y_n$$

Why is Y_n symmetric?

Split A into the resistor branches and the current source branches: $A = [\, A_R \;\; A_S \,]$.

- KCL: $A_R \mathbf{i}_R + A_S \mathbf{i}_S = \mathbf{0}$.
- Resistors: $\mathbf{i}_R = G\,\mathbf{v}_R$, $G = \mathrm{diag}(G_1, \ldots, G_5)$.
- KVL: $\mathbf{v}_R = A_R^T \mathbf{e}$.

$$\underbrace{A_R\, G\, A_R^T}_{Y_n}\, \mathbf{e} = \underbrace{-A_S \mathbf{i}_S}_{\mathbf{i}_s}$$

$$Y_n^T = A_R\, G^T A_R^T = A_R\, G\, A_R^T = Y_n$$


G is diagonal, so Y_n is symmetric.

$-A_S \mathbf{i}_S$ adds up the source currents entering each node.

Roadmap


1. The idea of node voltage analysis ✓
2. Resistors and current sources ✓
3. **A voltage source connected to the ground**
4. A voltage source between two nodes: Method I
5. A voltage source between two nodes: Method II, the supernode
6. Dependent sources
7. Choosing the ground

Example 11.2: a voltage source to the ground

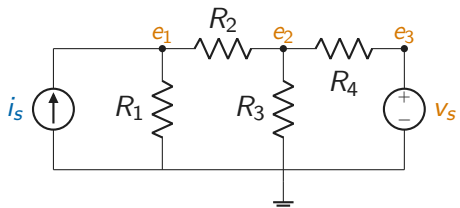

Unknowns e_1, e_2, e_3: three equations needed.

Example 11.2: a voltage source to the ground

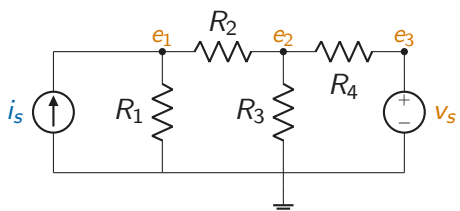


Unknowns e_1, e_2, e_3: three equations needed.

Node 1: $-i_s + \dfrac{e_1}{R_1} + \dfrac{e_1 - e_2}{R_2} = 0$

Node 2: $\dfrac{e_2 - e_1}{R_2} + \dfrac{e_2}{R_3} + \dfrac{e_2 - e_3}{R_4} = 0$

Example 11.2: a voltage source to the ground

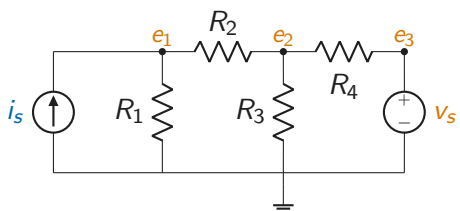


Unknowns e_1, e_2, e_3: three equations needed.

Node 1: $-i_s + \dfrac{e_1}{R_1} + \dfrac{e_1 - e_2}{R_2} = 0$

Node 2: $\dfrac{e_2 - e_1}{R_2} + \dfrac{e_2}{R_3} + \dfrac{e_2 - e_3}{R_4} = 0$

Question. What does KCL at node 3 give?

Example 11.2: a voltage source to the ground

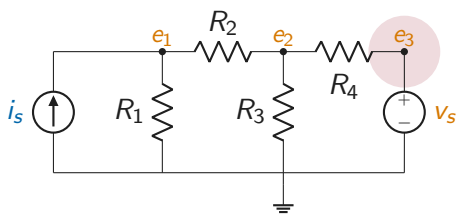

Unknowns e_1, e_2, e_3: three equations needed.


Node 1: $-i_s + \dfrac{e_1}{R_1} + \dfrac{e_1 - e_2}{R_2} = 0$

Node 2: $\dfrac{e_2 - e_1}{R_2} + \dfrac{e_2}{R_3} + \dfrac{e_2 - e_3}{R_4} = 0$

Question. What does KCL at node 3 give?

The current through v_s is unknown: KCL gives no useful equation in e_1, e_2, e_3.

Example 11.2: a voltage source to the ground

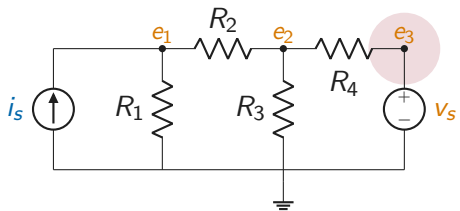

Unknowns e_1, e_2, e_3: three equations needed.

Node 1: $-i_s + \dfrac{e_1}{R_1} + \dfrac{e_1 - e_2}{R_2} = 0$

Node 2: $\dfrac{e_2 - e_1}{R_2} + \dfrac{e_2}{R_3} + \dfrac{e_2 - e_3}{R_4} = 0$

Question. What does KCL at node 3 give?

The current through v_s is unknown: KCL gives no useful equation in e_1, e_2, e_3.


But $e_3 = v_s$: this is the third equation.

A voltage source to the ground


Remark

If an independent voltage source v_s is connected between the ground and node k, then $e_k = v_s$ is known.

So e_k is not an unknown, and we do not write KCL at node k.

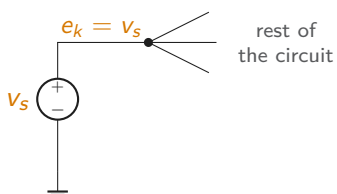

Example 11.2, revisited

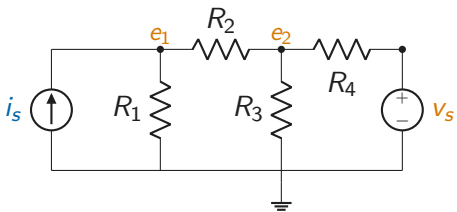


Unknowns e_1, e_2 only: two equations needed.

Node 1: $-i_s + \dfrac{e_1}{R_1} + \dfrac{e_1 - e_2}{R_2} = 0$

Node 2: $\dfrac{e_2 - e_1}{R_2} + \dfrac{e_2}{R_3} + \dfrac{e_2 - v_s}{R_4} = 0$

Example 11.2, revisited

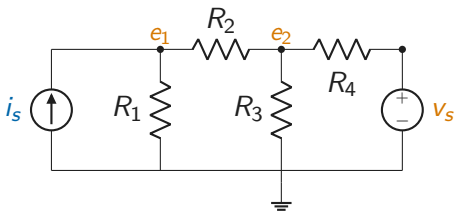


Unknowns e_1, e_2 only: two equations needed.

Node 1: $-i_s + \dfrac{e_1}{R_1} + \dfrac{e_1 - e_2}{R_2} = 0$

Node 2: $\dfrac{e_2 - e_1}{R_2} + \dfrac{e_2}{R_3} + \dfrac{e_2 - v_s}{R_4} = 0$

$$\begin{bmatrix} \frac{1}{R_1} + \frac{1}{R_2} & -\frac{1}{R_2} \\ -\frac{1}{R_2} & \frac{1}{R_2} + \frac{1}{R_3} + \frac{1}{R_4} \end{bmatrix} \begin{bmatrix} e_1 \\ e_2 \end{bmatrix} = \begin{bmatrix} i_s \\ v_s/R_4 \end{bmatrix}$$

Example 11.2, revisited

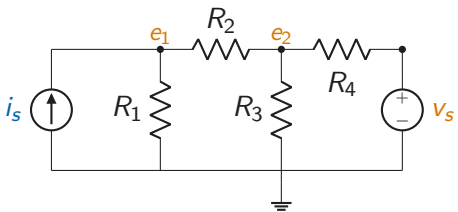

Unknowns e_1, e_2 only: two equations needed.

Node 1: $-i_s + \dfrac{e_1}{R_1} + \dfrac{e_1 - e_2}{R_2} = 0$

Node 2: $\dfrac{e_2 - e_1}{R_2} + \dfrac{e_2}{R_3} + \dfrac{e_2 - v_s}{R_4} = 0$

$$\begin{bmatrix} \frac{1}{R_1} + \frac{1}{R_2} & -\frac{1}{R_2} \\ -\frac{1}{R_2} & \frac{1}{R_2} + \frac{1}{R_3} + \frac{1}{R_4} \end{bmatrix} \begin{bmatrix} e_1 \\ e_2 \end{bmatrix} = \begin{bmatrix} i_s \\ v_s/R_4 \end{bmatrix}$$


The known v_s moves to the right side.

v_s/R_4 acts like a current source into node 2: a source transformation.

Roadmap


1. The idea of node voltage analysis ✓
2. Resistors and current sources ✓
3. A voltage source connected to the ground ✓
4. **A voltage source between two nodes: Method I**
5. A voltage source between two nodes: Method II, the supernode
6. Dependent sources
7. Choosing the ground

Example 11.3: a voltage source between two nodes

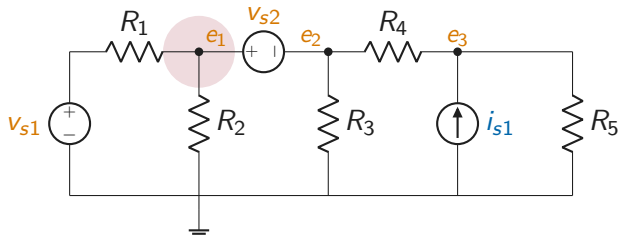


- **Question.** Write KCL at node 1: what is the current through v_{s2}?

Example 11.3: a voltage source between two nodes

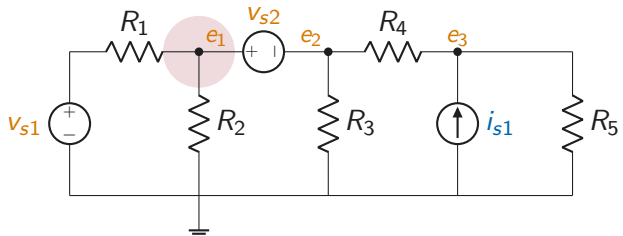


- **Question.** Write KCL at node 1: what is the current through v_{s2}?
- It cannot be written with e_1 and e_2: the law of a voltage source fixes its voltage, not its current.

Example 11.3: a voltage source between two nodes

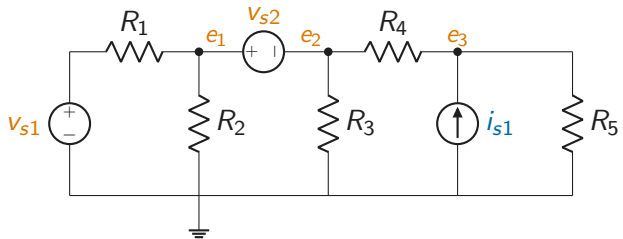

- **Question.** Write KCL at node 1: what is the current through v_{s2}?
- It cannot be written with e_1 and e_2: the law of a voltage source fixes its voltage, not its current.
- **Modified node voltage analysis** offers two ways out: Method I (its current is a new unknown) and Method II (a supernode).


Method I: the current as an unknown

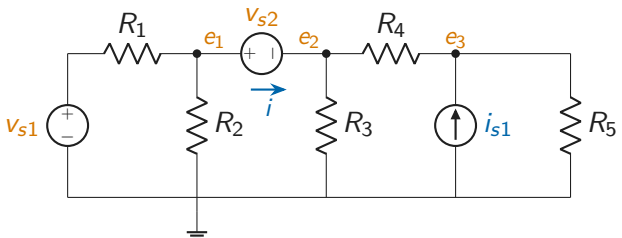

Node 1: $\dfrac{e_1 - v_{s1}}{R_1} + \dfrac{e_1}{R_2} + i = 0$

Unknowns: e_1, e_2, e_3 and the current i.

Method I: the current as an unknown

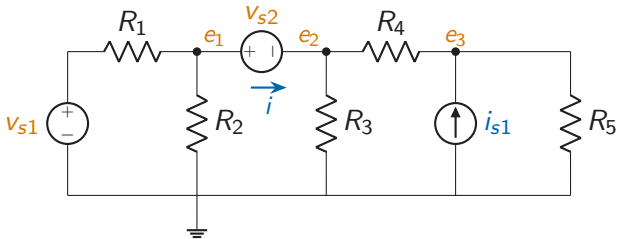


Node 1: $\dfrac{e_1 - v_{s1}}{R_1} + \dfrac{e_1}{R_2} + i = 0$

Node 2: $-i + \dfrac{e_2}{R_3} + \dfrac{e_2 - e_3}{R_4} = 0$

Unknowns: e_1, e_2, e_3 and the current i.

Method I: the current as an unknown

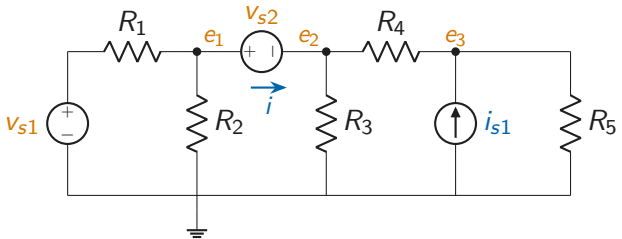


Node 1: $\dfrac{e_1 - v_{s1}}{R_1} + \dfrac{e_1}{R_2} + i = 0$

Node 2: $-i + \dfrac{e_2}{R_3} + \dfrac{e_2 - e_3}{R_4} = 0$

Node 3: $\dfrac{e_3 - e_2}{R_4} - i_{s1} + \dfrac{e_3}{R_5} = 0$

Unknowns: e_1, e_2, e_3 and the current i.

Method I: the current as an unknown

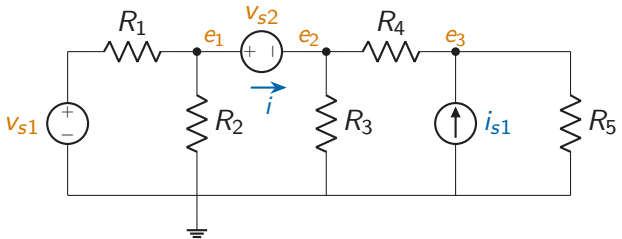

Node 1: $\dfrac{e_1 - v_{s1}}{R_1} + \dfrac{e_1}{R_2} + i = 0$


Node 2: $-i + \dfrac{e_2}{R_3} + \dfrac{e_2 - e_3}{R_4} = 0$

Node 3: $\dfrac{e_3 - e_2}{R_4} - i_{s1} + \dfrac{e_3}{R_5} = 0$

Unknowns: e_1, e_2, e_3 and the current i.

Four unknowns, three equations: one more is needed.

Method I: the current as an unknown

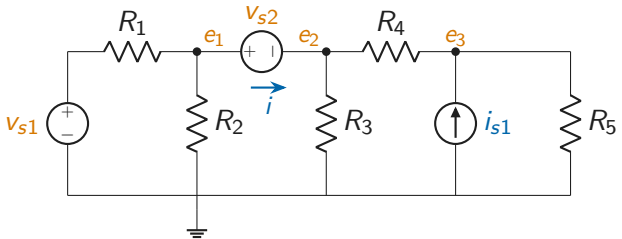

Node 1: $\dfrac{e_1 - v_{s1}}{R_1} + \dfrac{e_1}{R_2} + i = 0$

Node 2: $-i + \dfrac{e_2}{R_3} + \dfrac{e_2 - e_3}{R_4} = 0$

Node 3: $\dfrac{e_3 - e_2}{R_4} - i_{s1} + \dfrac{e_3}{R_5} = 0$

Unknowns: e_1, e_2, e_3 and the current i.

Four unknowns, three equations: one more is needed.

Constraint: $e_1 - e_2 = v_{s2}$, the law of the source.

Method I: matrix form

$$\begin{bmatrix} G_1+G_2 & 0 & 0 & 1 \\ 0 & G_3+G_4 & -G_4 & -1 \\ 0 & -G_4 & G_4+G_5 & 0 \\ 1 & -1 & 0 & 0 \end{bmatrix} \begin{bmatrix} e_1 \\ e_2 \\ e_3 \\ i \end{bmatrix} = \begin{bmatrix} G_1 v_{s1} \\ 0 \\ i_{s1} \\ v_{s2} \end{bmatrix}, \qquad G_k = \frac{1}{R_k}$$

Method I: matrix form

$$\begin{bmatrix} G_1+G_2 & 0 & 0 & 1 \\ 0 & G_3+G_4 & -G_4 & -1 \\ 0 & -G_4 & G_4+G_5 & 0 \\ 1 & -1 & 0 & 0 \end{bmatrix} \begin{bmatrix} e_1 \\ e_2 \\ e_3 \\ i \end{bmatrix} = \begin{bmatrix} G_1 v_{s1} \\ 0 \\ i_{s1} \\ v_{s2} \end{bmatrix}, \qquad G_k = \frac{1}{R_k}$$

- The first three rows are KCL; the last row is the constraint.

Method I: matrix form

$$\begin{bmatrix} G_1+G_2 & 0 & 0 & 1 \\ 0 & G_3+G_4 & -G_4 & -1 \\ 0 & -G_4 & G_4+G_5 & 0 \\ 1 & -1 & 0 & 0 \end{bmatrix} \begin{bmatrix} e_1 \\ e_2 \\ e_3 \\ i \end{bmatrix} = \begin{bmatrix} G_1 v_{s1} \\ 0 \\ i_{s1} \\ v_{s2} \end{bmatrix}, \qquad G_k = \frac{1}{R_k}$$

- The first three rows are KCL; the last row is the constraint.
- The unknown current i is part of the solution: we get it directly.

Method I: matrix form


$$\begin{bmatrix} G_1+G_2 & 0 & 0 & 1 \\ 0 & G_3+G_4 & -G_4 & -1 \\ 0 & -G_4 & G_4+G_5 & 0 \\ 1 & -1 & 0 & 0 \end{bmatrix} \begin{bmatrix} e_1 \\ e_2 \\ e_3 \\ i \end{bmatrix} = \begin{bmatrix} G_1 v_{s1} \\ 0 \\ i_{s1} \\ v_{s2} \end{bmatrix}, \qquad G_k = \frac{1}{R_k}$$

- The first three rows are KCL; the last row is the constraint.
- The unknown current i is part of the solution: we get it directly.
- The price: one more unknown and one more equation.

Roadmap


1. The idea of node voltage analysis ✓
2. Resistors and current sources ✓
3. A voltage source connected to the ground ✓
4. A voltage source between two nodes: Method I ✓
5. **A voltage source between two nodes: Method II, the supernode**
6. Dependent sources
7. Choosing the ground

Method II: the supernode

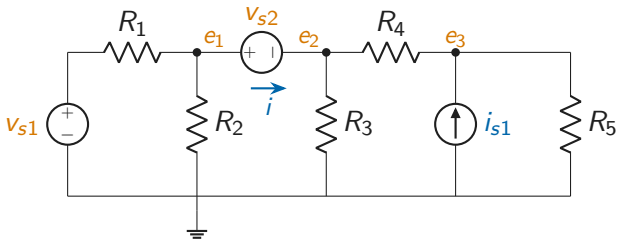

Question. Can we get rid of the unknown i?

Method II: the supernode

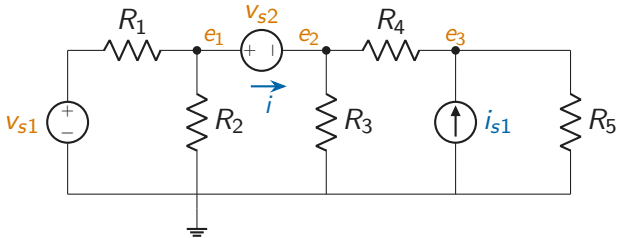


Question. Can we get rid of the unknown i?

Add the KCL equations of nodes 1 and 2.

i leaves node 1 and enters node 2, so it cancels.

Method II: the supernode

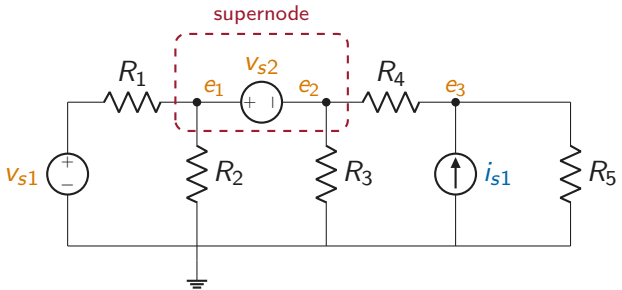


Question. Can we get rid of the unknown i?

Add the KCL equations of nodes 1 and 2.

i leaves node 1 and enters node 2, so it cancels.

This is KCL for a closed surface around both nodes and the source.

Method II: the supernode

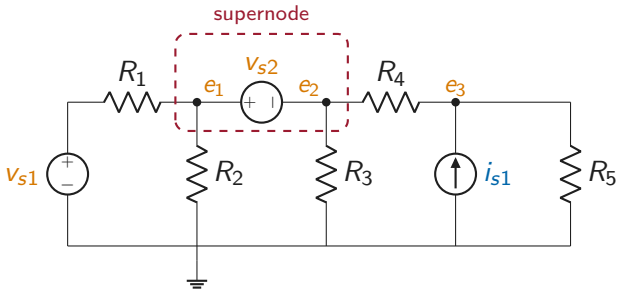

Question. Can we get rid of the unknown i?

Add the KCL equations of nodes 1 and 2.


i leaves node 1 and enters node 2, so it cancels.

This is KCL for a closed surface around both nodes and the source.

Supernode

Write KCL as if the two nodes of the voltage source were a single node.

Method II: the equations

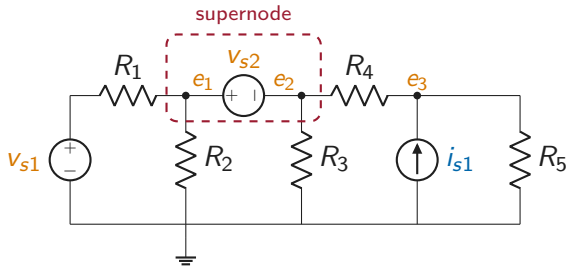


Supernode:

$$\frac{e_1 - v_{s1}}{R_1} + \frac{e_1}{R_2} + \frac{e_2}{R_3} + \frac{e_2 - e_3}{R_4} = 0$$

Node 3: $\dfrac{e_3 - e_2}{R_4} - i_{s1} + \dfrac{e_3}{R_5} = 0$

Constraint: $e_1 - e_2 = v_{s2}$

Method II: the equations

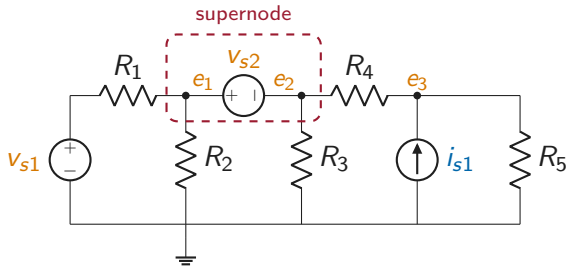

Supernode:


$$\frac{e_1 - v_{s1}}{R_1} + \frac{e_1}{R_2} + \frac{e_2}{R_3} + \frac{e_2 - e_3}{R_4} = 0$$

Node 3: $\dfrac{e_3 - e_2}{R_4} - i_{s1} + \dfrac{e_3}{R_5} = 0$

Constraint: $e_1 - e_2 = v_{s2}$

$$\begin{bmatrix} G_1 + G_2 & G_3 + G_4 & -G_4 \\ 0 & -G_4 & G_4 + G_5 \\ 1 & -1 & 0 \end{bmatrix} \begin{bmatrix} e_1 \\ e_2 \\ e_3 \end{bmatrix} = \begin{bmatrix} G_1 v_{s1} \\ i_{s1} \\ v_{s2} \end{bmatrix}$$

Method II: the equations

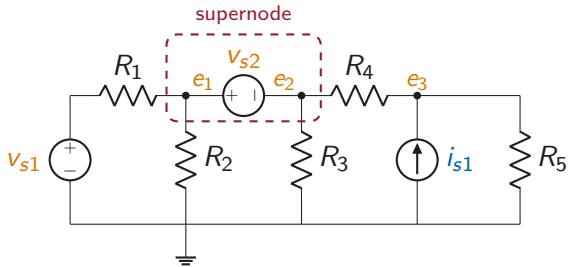

Supernode:

$$\frac{e_1 - v_{s1}}{R_1} + \frac{e_1}{R_2} + \frac{e_2}{R_3} + \frac{e_2 - e_3}{R_4} = 0$$

Node 3: $\dfrac{e_3 - e_2}{R_4} - i_{s1} + \dfrac{e_3}{R_5} = 0$

Constraint: $e_1 - e_2 = v_{s2}$

$$\begin{bmatrix} G_1 + G_2 & G_3 + G_4 & -G_4 \\ 0 & -G_4 & G_4 + G_5 \\ 1 & -1 & 0 \end{bmatrix} \begin{bmatrix} e_1 \\ e_2 \\ e_3 \end{bmatrix} = \begin{bmatrix} G_1 v_{s1} \\ i_{s1} \\ v_{s2} \end{bmatrix}$$

Three unknowns, three equations.

The matrix is not symmetric any more.

Method I or Method II?

	Method I	**Method II**
extra unknown	the current i of the source	none
KCL	at every non-ground node	at the supernode, and the others
extra equation	the constraint $e_1 - e_2 = v_{s2}$	the same constraint
size (this example)	4×4	3×3
the current i	part of the solution	from KCL afterwards

Method I or Method II?

	Method I	**Method II**
extra unknown	the current i of the source	none
KCL	at every non-ground node	at the supernode, and the others
extra equation	the constraint $e_1 - e_2 = v_{s2}$	the same constraint
size (this example)	4×4	3×3
the current i	part of the solution	from KCL afterwards


Both give the same node voltages.

The constraint is always the law of the voltage source.

Roadmap


1. The idea of node voltage analysis ✓
2. Resistors and current sources ✓
3. A voltage source connected to the ground ✓
4. A voltage source between two nodes: Method I ✓
5. A voltage source between two nodes: Method II, the supernode ✓
6. **Dependent sources**
7. Choosing the ground

Example 11.4: a dependent source

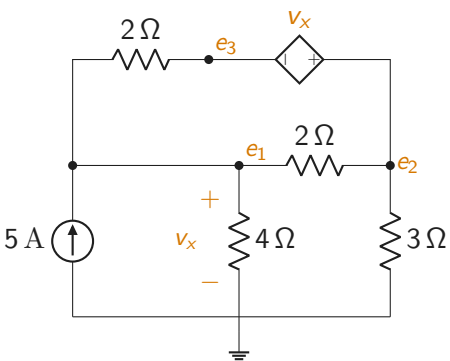

Question. Find the power absorbed by the 3 Ω resistor.


Example 11.4: a dependent source

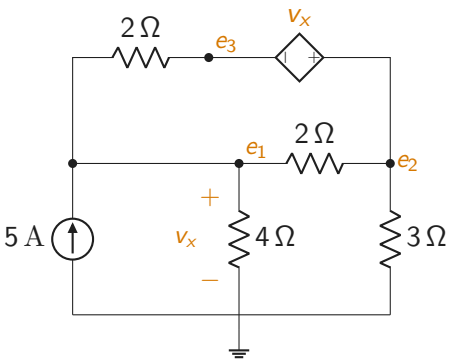

Question. Find the power absorbed by the 3 Ω resistor.

The voltage source v_x is between nodes 3 and 2; neither is the ground.

Example 11.4: a dependent source

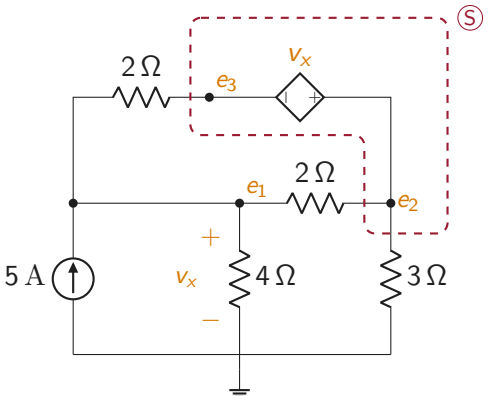


Question. Find the power absorbed by the 3 Ω resistor.

The voltage source v_x is between nodes 3 and 2; neither is the ground.

So use a supernode Ⓢ around nodes 2 and 3.

Example 11.4: a dependent source

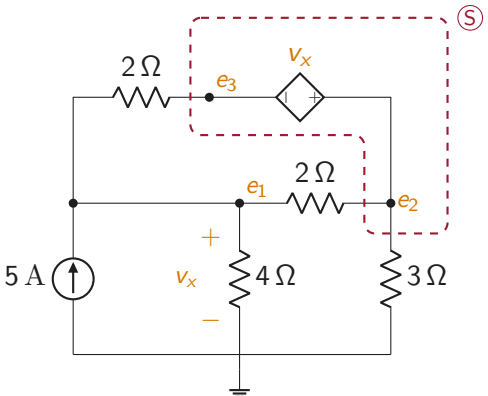

Question. Find the power absorbed by the 3 Ω resistor.


The voltage source v_x is between nodes 3 and 2; neither is the ground.

So use a supernode Ⓢ around nodes 2 and 3.

Unknowns: e_1, e_2, e_3.


Equations: KCL at node 1, KCL at Ⓢ, and a constraint.

Example 11.4: the equations

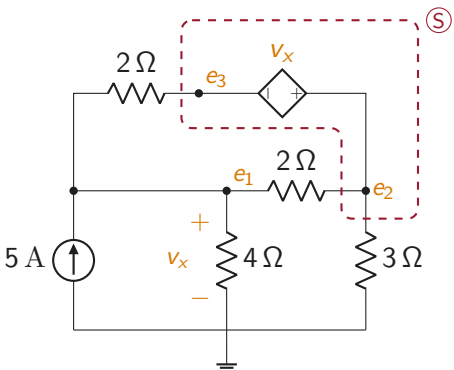

Node 1: $$-5 + \frac{e_1 - e_3}{2} + \frac{e_1}{4} + \frac{e_1 - e_2}{2} = 0 \quad (1)$$


Example 11.4: the equations

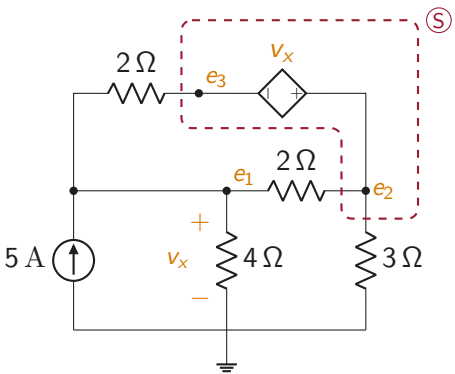

Node 1: $$-5 + \frac{e_1 - e_3}{2} + \frac{e_1}{4} + \frac{e_1 - e_2}{2} = 0 \quad (1)$$

Supernode Ⓢ: $$\frac{e_3 - e_1}{2} + \frac{e_2 - e_1}{2} + \frac{e_2}{3} = 0 \quad (2)$$

Example 11.4: the equations

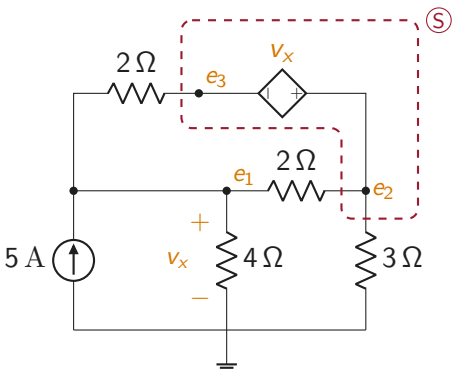


Node 1: $-5 + \dfrac{e_1 - e_3}{2} + \dfrac{e_1}{4} + \dfrac{e_1 - e_2}{2} = 0$ (1)

Supernode (S): $\dfrac{e_3 - e_1}{2} + \dfrac{e_2 - e_1}{2} + \dfrac{e_2}{3} = 0$ (2)

Question. What is the constraint?

Example 11.4: the equations

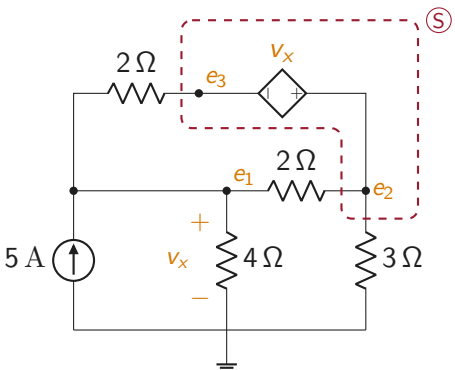


Node 1: $-5 + \dfrac{e_1 - e_3}{2} + \dfrac{e_1}{4} + \dfrac{e_1 - e_2}{2} = 0$ (1)

Supernode Ⓢ: $\dfrac{e_3 - e_1}{2} + \dfrac{e_2 - e_1}{2} + \dfrac{e_2}{3} = 0$ (2)

Question. What is the constraint?

The source: $e_2 - e_3 = v_x$.

Example 11.4: the equations

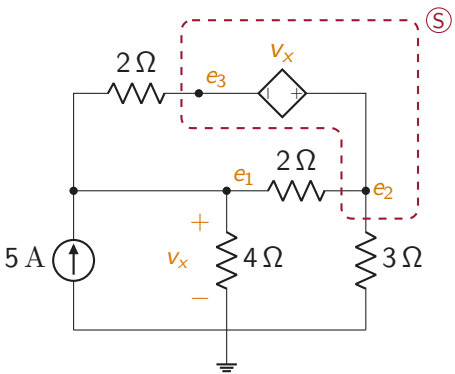

Node 1: $-5 + \dfrac{e_1 - e_3}{2} + \dfrac{e_1}{4} + \dfrac{e_1 - e_2}{2} = 0$ (1)


Supernode Ⓢ: $\dfrac{e_3 - e_1}{2} + \dfrac{e_2 - e_1}{2} + \dfrac{e_2}{3} = 0$ (2)

Question. What is the constraint?

The source: $e_2 - e_3 = v_x$.

Its control: $v_x = e_1$, the voltage of the 4 Ω.

Example 11.4: the equations

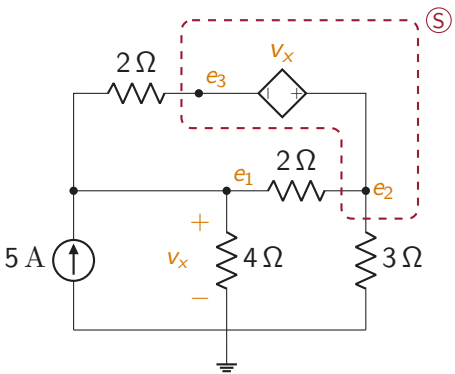

Node 1: $-5 + \dfrac{e_1 - e_3}{2} + \dfrac{e_1}{4} + \dfrac{e_1 - e_2}{2} = 0$ (1)

Supernode Ⓢ: $\dfrac{e_3 - e_1}{2} + \dfrac{e_2 - e_1}{2} + \dfrac{e_2}{3} = 0$ (2)

Question. What is the constraint?

The source: $e_2 - e_3 = v_x$.

Its control: $v_x = e_1$, the voltage of the 4 Ω.

Constraint: $e_2 - e_3 = e_1$ (3)

Three equations, three unknowns.

Example 11.4: solve

- (1): $\frac{5}{4}e_1 - \frac{1}{2}e_2 - \frac{1}{2}e_3 = 5$; put $e_1 = e_2 - e_3$ from (3): $\frac{3}{4}e_2 - \frac{7}{4}e_3 = 5$ (4)

Example 11.4: solve

- (1): $\frac{5}{4}e_1 - \frac{1}{2}e_2 - \frac{1}{2}e_3 = 5$; put $e_1 = e_2 - e_3$ from (3): $\frac{3}{4}e_2 - \frac{7}{4}e_3 = 5$ (4)
- (2): $-e_1 + \frac{5}{6}e_2 + \frac{1}{2}e_3 = 0$; put (3): $-\frac{1}{6}e_2 + \frac{3}{2}e_3 = 0 \Rightarrow e_3 = \frac{1}{9}e_2$ (5)

Example 11.4: solve

- (1): $\frac{5}{4}e_1 - \frac{1}{2}e_2 - \frac{1}{2}e_3 = 5$; put $e_1 = e_2 - e_3$ from (3): $\frac{3}{4}e_2 - \frac{7}{4}e_3 = 5$ (4)
- (2): $-e_1 + \frac{5}{6}e_2 + \frac{1}{2}e_3 = 0$; put (3): $-\frac{1}{6}e_2 + \frac{3}{2}e_3 = 0 \Rightarrow e_3 = \frac{1}{9}e_2$ (5)
- (4) and (5): $\frac{3}{4}e_2 - \frac{7}{36}e_2 = \frac{20}{36}e_2 = 5 \quad \Rightarrow \quad e_2 = 9\,\mathrm{V}$

Example 11.4: solve

- (1): $\frac{5}{4}e_1 - \frac{1}{2}e_2 - \frac{1}{2}e_3 = 5$; put $e_1 = e_2 - e_3$ from (3): $\frac{3}{4}e_2 - \frac{7}{4}e_3 = 5$ (4)
- (2): $-e_1 + \frac{5}{6}e_2 + \frac{1}{2}e_3 = 0$; put (3): $-\frac{1}{6}e_2 + \frac{3}{2}e_3 = 0 \Rightarrow e_3 = \frac{1}{9}e_2$ (5)
- (4) and (5): $\frac{3}{4}e_2 - \frac{7}{36}e_2 = \frac{20}{36}e_2 = 5 \quad \Rightarrow \quad e_2 = 9\,\mathrm{V}$
- Then $e_3 = 1\,\mathrm{V}$ and $e_1 = e_2 - e_3 = 8\,\mathrm{V}$.

Example 11.4: solve

- (1): $\frac{5}{4}e_1 - \frac{1}{2}e_2 - \frac{1}{2}e_3 = 5$; put $e_1 = e_2 - e_3$ from (3): $\frac{3}{4}e_2 - \frac{7}{4}e_3 = 5$ (4)
- (2): $-e_1 + \frac{5}{6}e_2 + \frac{1}{2}e_3 = 0$; put (3): $-\frac{1}{6}e_2 + \frac{3}{2}e_3 = 0 \Rightarrow e_3 = \frac{1}{9}e_2$ (5)
- (4) and (5): $\frac{3}{4}e_2 - \frac{7}{36}e_2 = \frac{20}{36}e_2 = 5 \quad \Rightarrow \quad e_2 = 9\,\mathrm{V}$
- Then $e_3 = 1\,\mathrm{V}$ and $e_1 = e_2 - e_3 = 8\,\mathrm{V}$.

$$P_{3\Omega} = \frac{{e_2}^2}{3} = \frac{9^2}{3} = 27\,\mathrm{W}$$

Dependent sources

- A dependent source is handled like an independent one of the same kind.

Dependent sources

- A dependent source is handled like an independent one of the same kind.
- Its control variable (v_x here) is written with node voltages: this gives the constraint equation.

Dependent sources

- A dependent source is handled like an independent one of the same kind.
- Its control variable (v_x here) is written with node voltages: this gives the constraint equation.

Remark


If a dependent voltage source is connected between node k and the ground, do not write KCL at node k: its current is not known.

Write the constraint that the dependent source gives instead.

Roadmap


1. The idea of node voltage analysis ✓
2. Resistors and current sources ✓
3. A voltage source connected to the ground ✓
4. A voltage source between two nodes: Method I ✓
5. A voltage source between two nodes: Method II, the supernode ✓
6. Dependent sources ✓
7. **Choosing the ground**

Exercise: choose node 3 as the ground

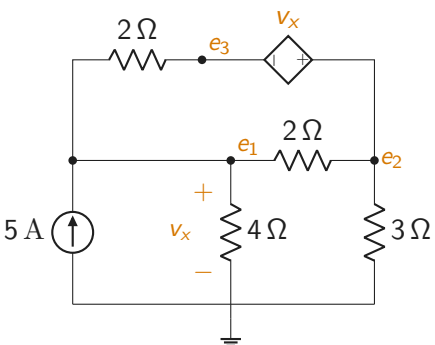

Question. Redo the example with node 3 as the ground. Does the answer change?


Exercise: choose node 3 as the ground

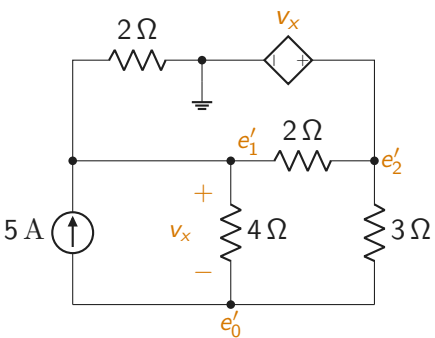

Question. Redo the example with node 3 as the ground. Does the answer change?

Now v_x is between node 2 and the ground: no supernode is needed.

Exercise: choose node 3 as the ground

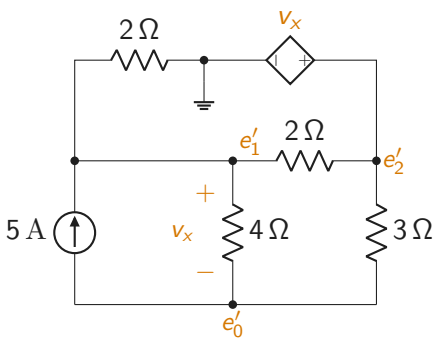


Question. Redo the example with node 3 as the ground. Does the answer change?

Now v_x is between node 2 and the ground: no supernode is needed.

Unknowns: e_1', e_2' and e_0', the old ground.

Exercise: choose node 3 as the ground

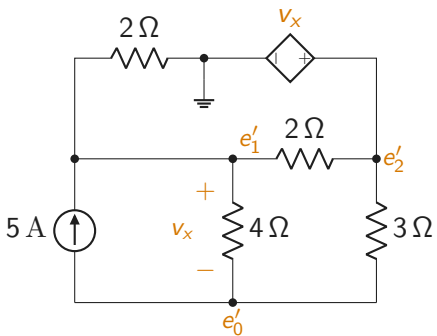

Question. Redo the example with node 3 as the ground. Does the answer change?


Now v_x is between node 2 and the ground: no supernode is needed.

Unknowns: e_1', e_2' and e_0', the old ground.

Node 1: $$-5 + \frac{e_1'}{2} + \frac{e_1' - e_0'}{4} + \frac{e_1' - e_2'}{2} = 0$$

Node 0: $$5 + \frac{e_0' - e_1'}{4} + \frac{e_0' - e_2'}{3} = 0$$

Exercise: choose node 3 as the ground

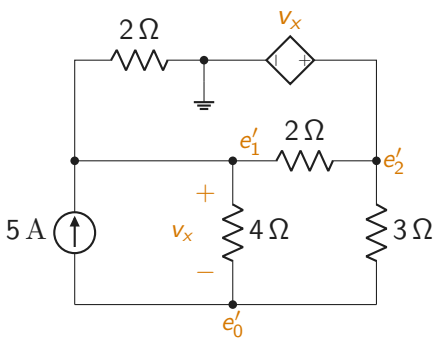

Question. Redo the example with node 3 as the ground. Does the answer change?

Now v_x is between node 2 and the ground: no supernode is needed.

Unknowns: e_1', e_2' and e_0', the old ground.

Node 1: $-5 + \dfrac{e_1'}{2} + \dfrac{e_1' - e_0'}{4} + \dfrac{e_1' - e_2'}{2} = 0$

Node 0: $5 + \dfrac{e_0' - e_1'}{4} + \dfrac{e_0' - e_2'}{3} = 0$

Constraint: $e_2' = v_x = e_1' - e_0'$; no KCL at node 2.

Exercise: the solution

- Put the constraint into both KCL equations:

$$3e_1' + e_0' = 20, \qquad -7e_1' + 11e_0' = -60.$$

Exercise: the solution

- Put the constraint into both KCL equations:

$$3e_1' + e_0' = 20, \qquad -7e_1' + 11e_0' = -60.$$

- So $e_1' = 7\,\mathrm{V}$, $e_0' = -1\,\mathrm{V}$, $e_2' = 8\,\mathrm{V}$.

Exercise: the solution

- Put the constraint into both KCL equations:

$$3e_1' + e_0' = 20, \qquad -7e_1' + 11e_0' = -60.$$

- So $e_1' = 7\,\mathrm{V}$, $e_0' = -1\,\mathrm{V}$, $e_2' = 8\,\mathrm{V}$.
- The $3\,\Omega$ is between nodes 2 and 0: $P_{3\Omega} = \dfrac{(e_2' - e_0')^2}{3} = \dfrac{9^2}{3} = 27\,\mathrm{W}$, the same.

Exercise: the solution

- Put the constraint into both KCL equations:

$$3e_1' + e_0' = 20, \qquad -7e_1' + 11e_0' = -60.$$

- So $e_1' = 7\,\mathrm{V}$, $e_0' = -1\,\mathrm{V}$, $e_2' = 8\,\mathrm{V}$.
- The $3\,\Omega$ is between nodes 2 and 0: $P_{3\Omega} = \dfrac{(e_2' - e_0')^2}{3} = \dfrac{9^2}{3} = 27\,\mathrm{W}$, the same.

Every node voltage drops by the same $e_3 = 1\,\mathrm{V}$: $8 \to 7$, $9 \to 8$, $0 \to -1$.

The branch voltages, so the currents and the powers, do not change.

Exercise: the solution

- Put the constraint into both KCL equations:

$$3e_1' + e_0' = 20, \qquad -7e_1' + 11e_0' = -60.$$

- So $e_1' = 7\,\mathrm{V}$, $e_0' = -1\,\mathrm{V}$, $e_2' = 8\,\mathrm{V}$.
- The $3\,\Omega$ is between nodes 2 and 0: $P_{3\Omega} = \dfrac{(e_2' - e_0')^2}{3} = \dfrac{9^2}{3} = 27\,\mathrm{W}$, the same.

Every node voltage drops by the same $e_3 = 1\,\mathrm{V}$: $8 \to 7$, $9 \to 8$, $0 \to -1$.

The branch voltages, so the currents and the powers, do not change.

Tip: put the ground at one end of a voltage source; this saves a supernode.

Summary

In the circuit	What to do
resistors and current sources	KCL at every non-ground node: $Y_n\mathbf{e} = \mathbf{i}_s$, by inspection; Y_n is symmetric
a voltage source from the ground to node k	$e_k = v_s$ is known; no KCL at node k
a voltage source between two nodes	Method I: its current as an unknown, plus the constraint Method II: KCL at the supernode, plus the constraint
a dependent source	write its control variable with node voltages: a constraint
the choice of ground	any node; the branch voltages and currents do not change

After the node voltages: $\mathbf{v} = A^T\mathbf{e}$, then the currents from the element laws.