


cross marks the case frame origin: X along the case, +Y toward the hinge wall; the plate is symmetric on both axes

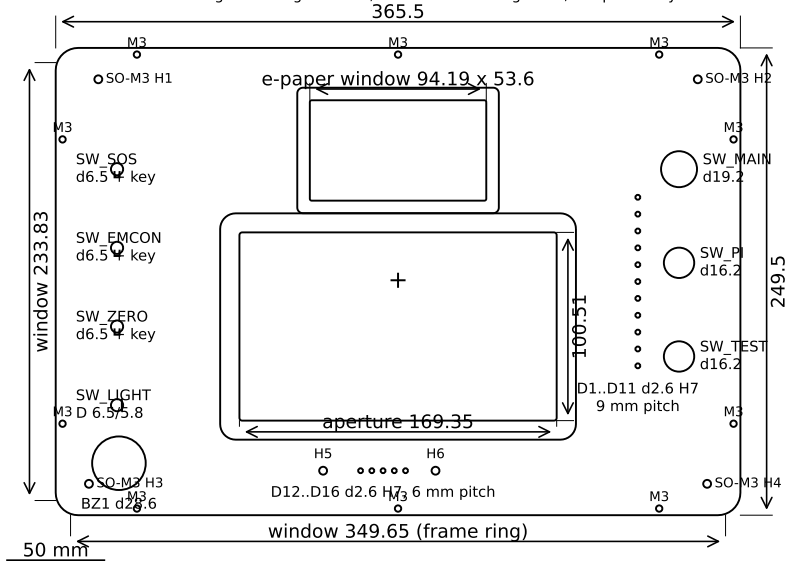

Plate

365.5 x 249.5 x 3.0, R12 corners, 5754 or 6061, black anodised

Frame screws

10 x M3 clearance 3.4 at the 1450PF inserts

Display

Touch Display 2: aperture 169.35 x 100.51 R1.5 at (0, -24); 1.0 pocket 189.32 x 120.24 from below for the glass and its tape frame

E-paper

WeAct 3.7: window 94.19 x 53.6 at (0, 70); 1.0 pocket 107.19 x 66.6 R3 from above for the 2 mm lens

Buttons

SW_MAIN d19.2 at (150, 60); SW_PI d16.2 at (150, 10); SW_TEST d16.2 at (150, -40) (C&K ATP19/ATP16, silicone washer under the bezel)

Toggles

SW_SOS at (-150, 60); SW_EMCON at (-150, 18); SW_ZERO at (-150, -24): d6.5 with the 2.70 x 1.10 keyway toward -Y (APEM 5636ADKB-2V, K seal)

Light switch

SW_LIGHT at (-150, -66): D hole 6.5 with the 5.8 flat toward +X (NKK M2044SD3A01, O-ring and AT401A boot)

Sounder

BZ1 d28.6 at (-149, -97) (Floyd Bell MC-09-530-Q, 61663 gasket)

Light guides

16 x d2.6 H7 reamed: Mentor 1282.5004 IP68 (2.5 shaft, 3.2 head, A 7.5) over the 3 mm LEDs of the backer C6

Standoffs

6 x PEM SO-M3-10 self-clinching from below at (-160, 108), (160, 108), (-165, -108), (165, -108), (-40, -101), (20, -101); hole 4.2

Marking

laser: legends, the battery bar, the nameplate 76 x 26 at (78, -101), the logo d36 at (-150, 96) (face-plate-marking.svg)

Seal

PORON gasket ring in the 8 mm band under the frame ring; every cut-out sealed by its part (32.34 construction, 32.42)