


SHEET 1: BACK WALL (hinge side, case +Y), seen from OUTSIDE: case +X (east) is on your LEFT

The connector plate (C3): footprint dashed, wall holes solid. Tape the sheet on the outer skin with its floor line at the cavity floor's height (transfer it from inside).

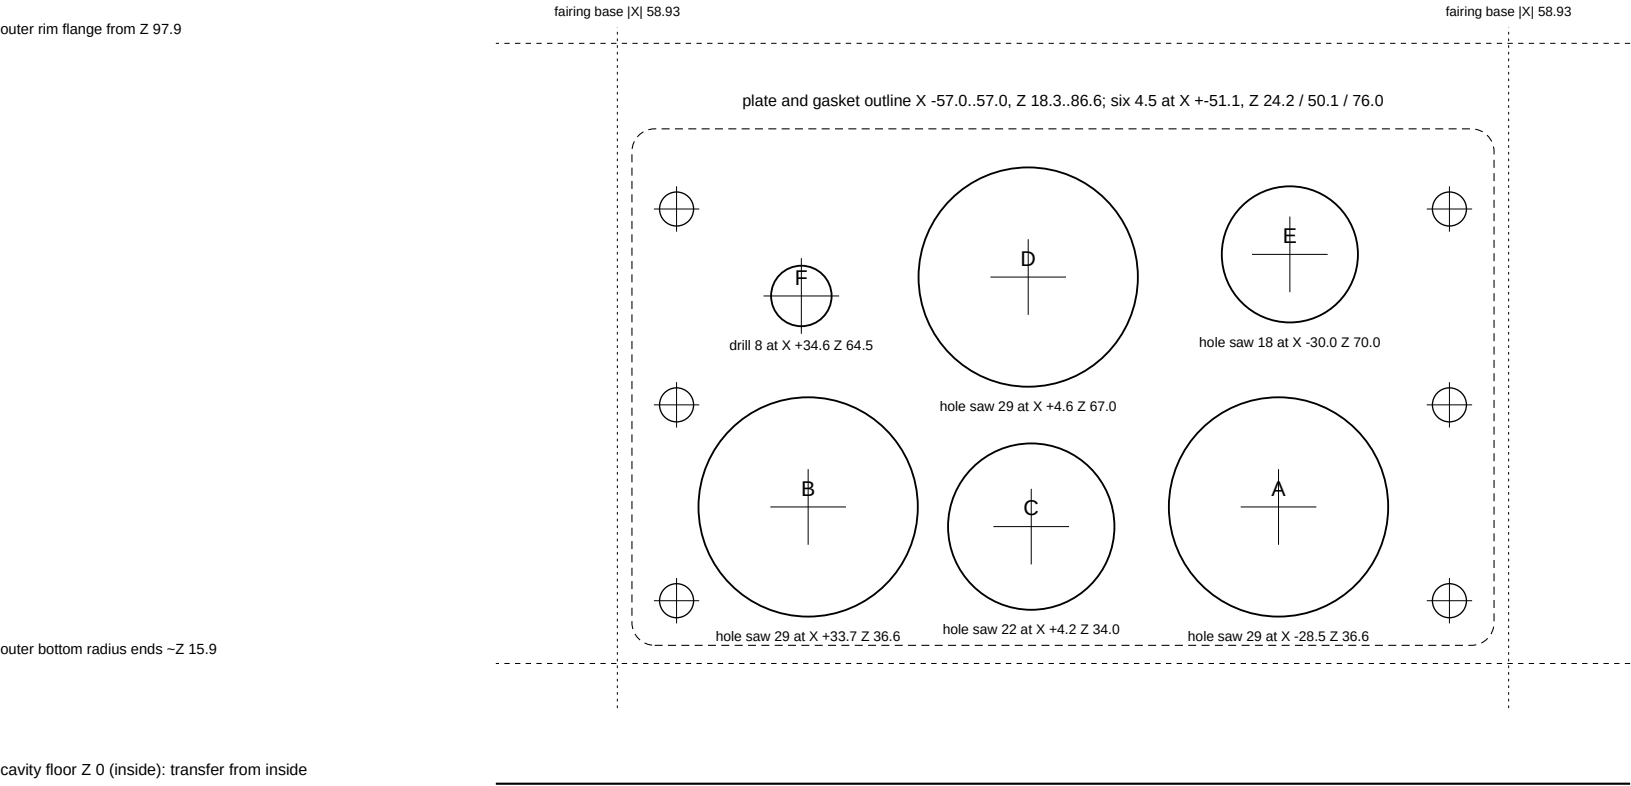


100 mm at 1:1: print at 100 percent, no fit to page; check with a rule

Items (panel1450.CONN_ITEMS): A sealed RJ45 (pick OPEN), C shore DC D38999/20 sh 13, B sealed USB-C (panel drawing OPEN), E the pod's M8 receptacle (OPEN), D USB host 233-370 sh 15, F ground stud M6 (OPEN). Cut: drill the six 4.5 and the 8 first, then the hole saws from outside; deburr both faces; dry-fit the plate and its gasket before any sealant. The X 0 rib (inside, 0.75 proud) may lie on this wall: holes C and D cross it; nothing bears on it (T1 photos tell).

Checks this sheet serves: T1 (the fairings' extent down the wall), T5 (read the wall's thickness from each hole, 4.58 to 6.10 assumed), T6 (the plate on plain skin all round, the open lid clear of the mated plugs). OPEN rows: M14a, M14b, M14i, M14m (CASE-MARGINS.md 3.2).

SHEET 2: EAST END WALL (case +X), seen from OUTSIDE: case +Y (the hinge wall) is on your RIGHT

The RF entry plate (C4): footprint dashed, wall holes solid. Tape the sheet on the outer skin with its floor line at the cavity floor's height (transfer it from inside).

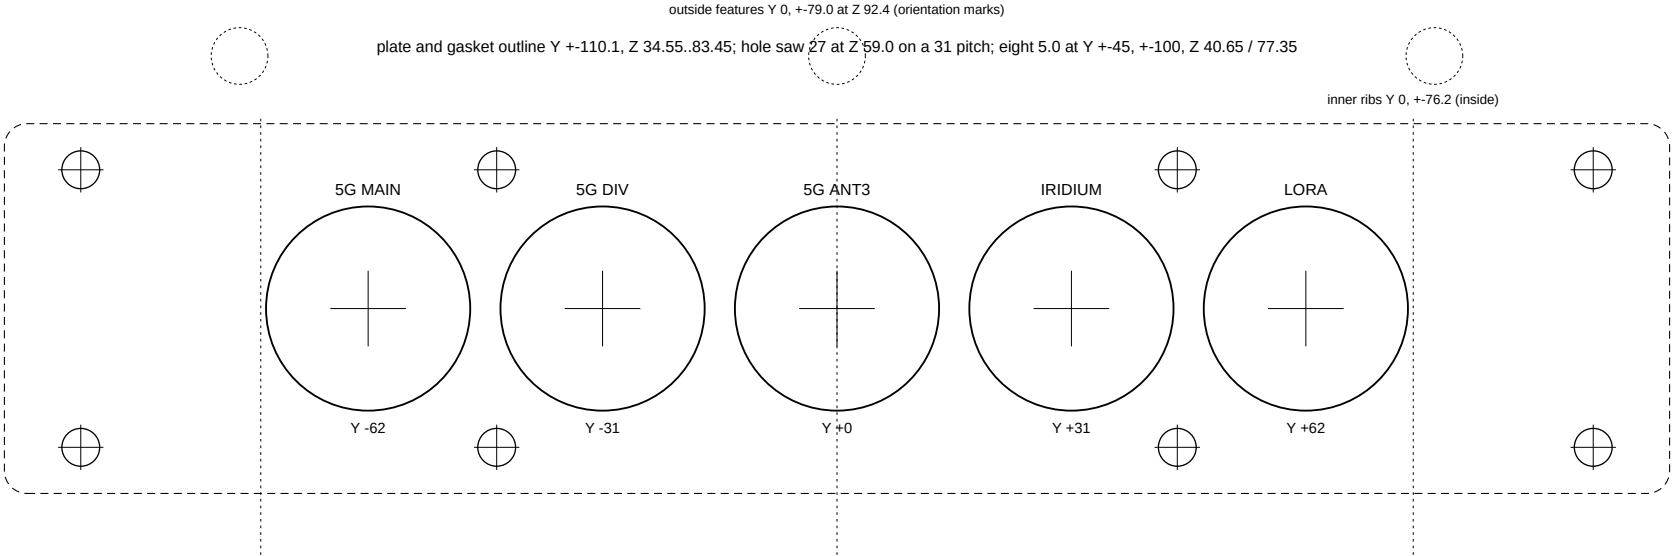

cavity floor Z 0 (inside): transfer from inside


100 mm at 1:1: print at 100 percent, no fit to page; check with a rule

Arrestors (panel1450.WALL_EAST): the ruled PolyPhaser GTH-SFF-AL, tightened on the RF entry plate on the bench, then the plate goes on its gasket with eight M4 x 12 A2 button heads from inside on rubber-faced sealing washers. Cut: drill the eight 5.0 first, then the 27 hole saws from outside; deburr; dry-fit.

Checks this sheet serves: T5 (wall thickness at each hole), T6 (the plate on plain skin all round), T11 (one arrestor on its plate). OPEN rows: M10, M11c, M11d, M11e, M11g, M13, M13c; inside, the jumpers (M17a to M17x, M18; M17g and M17x FAIL AS ASSUMED until the plug is picked).

SHEET 3: WEST END WALL (case -X), seen from OUTSIDE: case +Y (the hinge wall) is on your LEFT

The RF entry plate (C4): footprint dashed, wall holes solid. Tape the sheet on the outer skin with its floor line at the cavity floor's height (transfer it from inside).

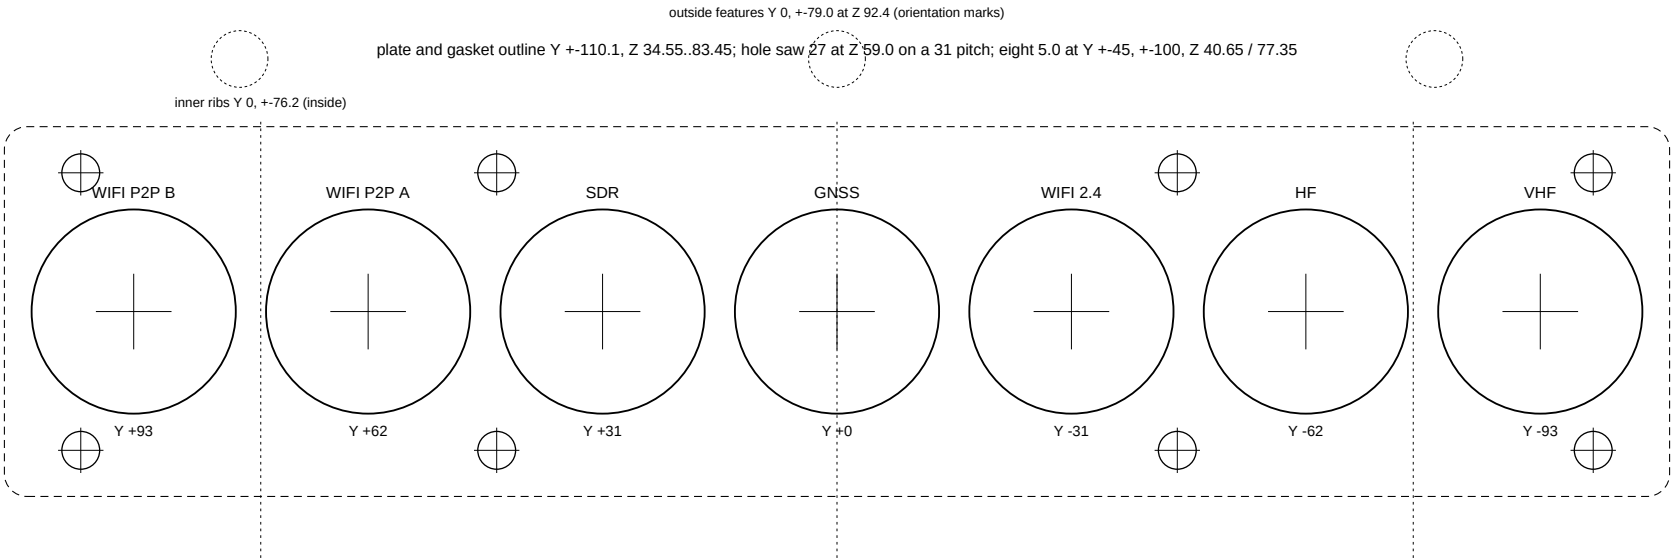

cavity floor Z 0 (inside): transfer from inside


100 mm at 1:1: print at 100 percent, no fit to page; check with a rule

Arrestors (panel1450.WALL_WEST): the ruled PolyPhaser GTH-SFF-AL, tightened on the RF entry plate on the bench, then the plate goes on its gasket with eight M4 x 12 A2 button heads from inside on rubber-faced sealing washers. Cut: drill the eight 5.0 first, then the 27 hole saws from outside; deburr; dry-fit.

Checks this sheet serves: T5 (wall thickness at each hole), T6 (the plate on plain skin all round), T11 (one arrestor on its plate). OPEN rows: M10, M11c, M11d, M11e, M11g, M13, M13c; inside, the jumpers (M17a to M17x, M18; M17g and M17x FAIL AS ASSUMED until the plug is picked).

SHEET 4: CONNECTOR PLATE check print, 1:1, seen from OUTSIDE (case +X on your LEFT)


5052-H32 or 6061-T6 aluminium, 5.0, 5.0 thick. Cut-outs solid; M3 tap centres (drill 2.5) small; 4.5 screw holes. Z is the case's (the plate spans Z 18.3..86.6).

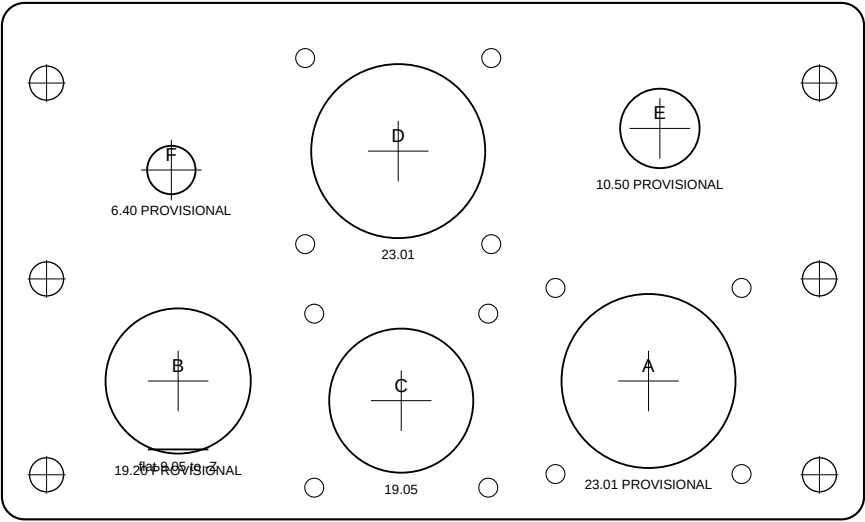

100 mm at 1:1: print at 100 percent, no fit to page; check with a rule
A cut-out marked PROVISIONAL is the class's; it is cut only after the picked part's own panel drawing confirms it (CASE-MARGINS.md section 6).

SHEET 5: RF ENTRY PLATE, EAST, check print 1:1, seen from OUTSIDE (case +Y on your RIGHT)

6061-T6 or 5052-H32 aluminium, 6.0 (EN 485 class). 16.3 through at each arrestor; the 26.0 spot-face 1.5 deep is on the BACK (dashed); M4 tapped through (tap centres, drill 3.3). Z is the case's.

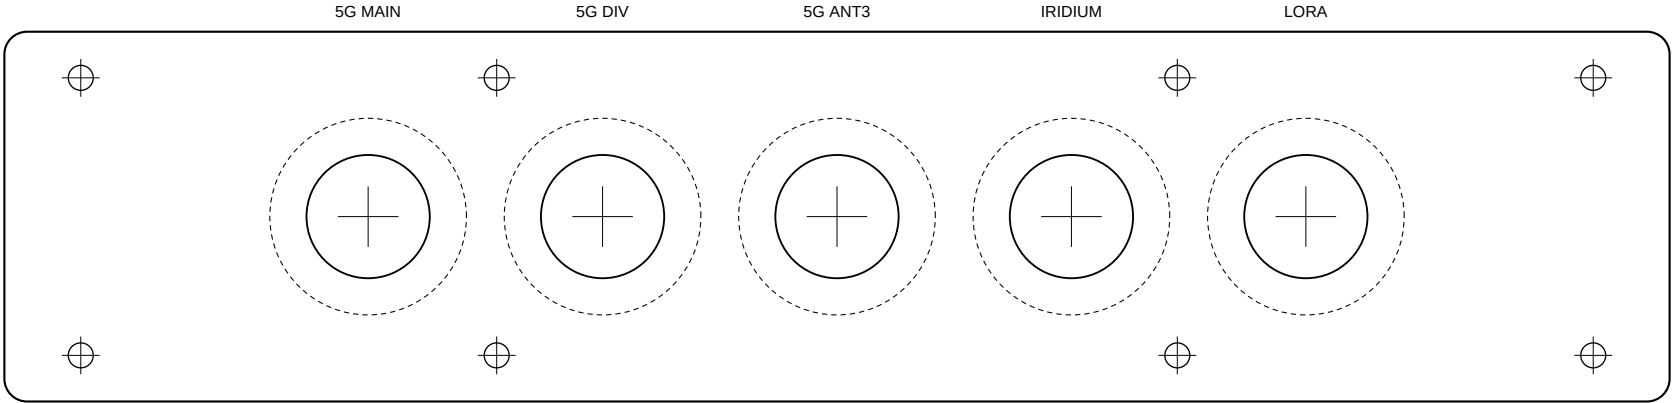

SHEET 6: RF ENTRY PLATE, WEST, check print 1:1, seen from OUTSIDE (case +Y on your LEFT)

6061-T6 or 5052-H32 aluminium, 6.0 (EN 485 class). 16.3 through at each arrestor; the 26.0 spot-face 1.5 deep is on the BACK (dashed); M4 tapped through (tap centres, drill 3.3). Z is the case's.

