




Zynq_2010_uZed_F_Prod.PcbDoc
Layer 1
10/29/2013

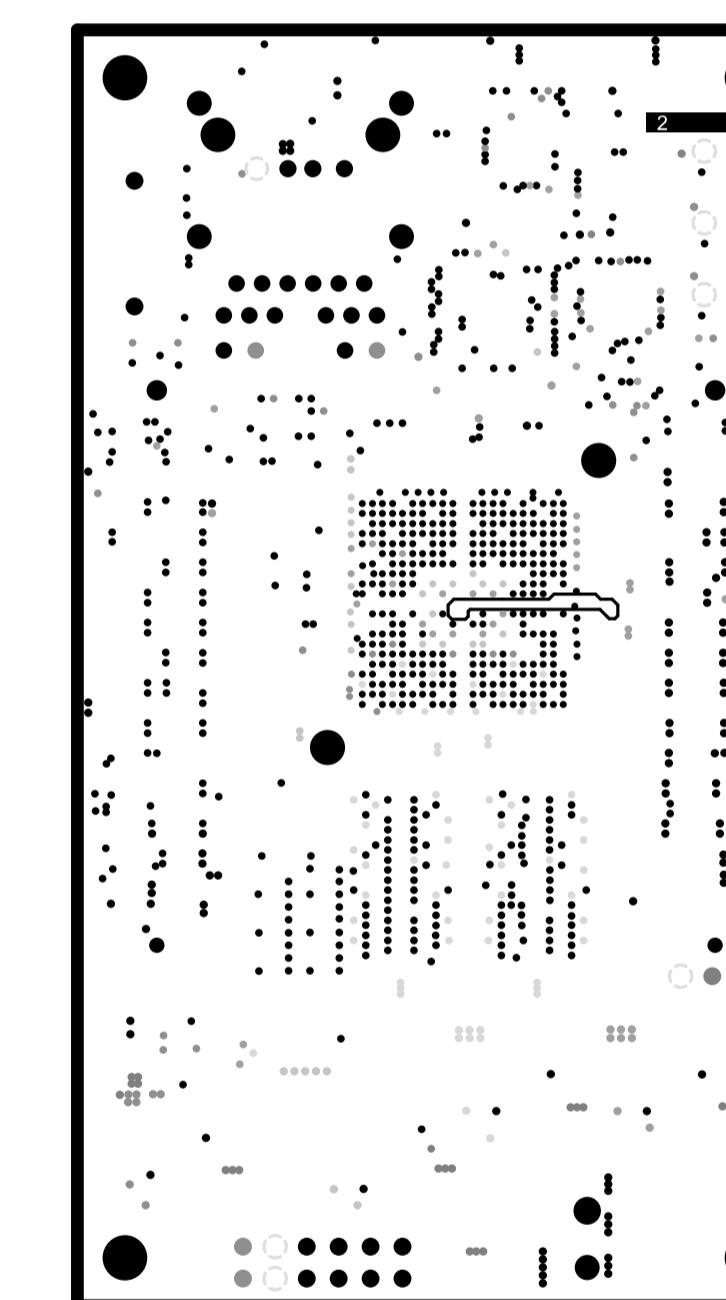


Zynq_2010_uZed_F_Prod_PcbDoc
Layer 2P
10/29/2013

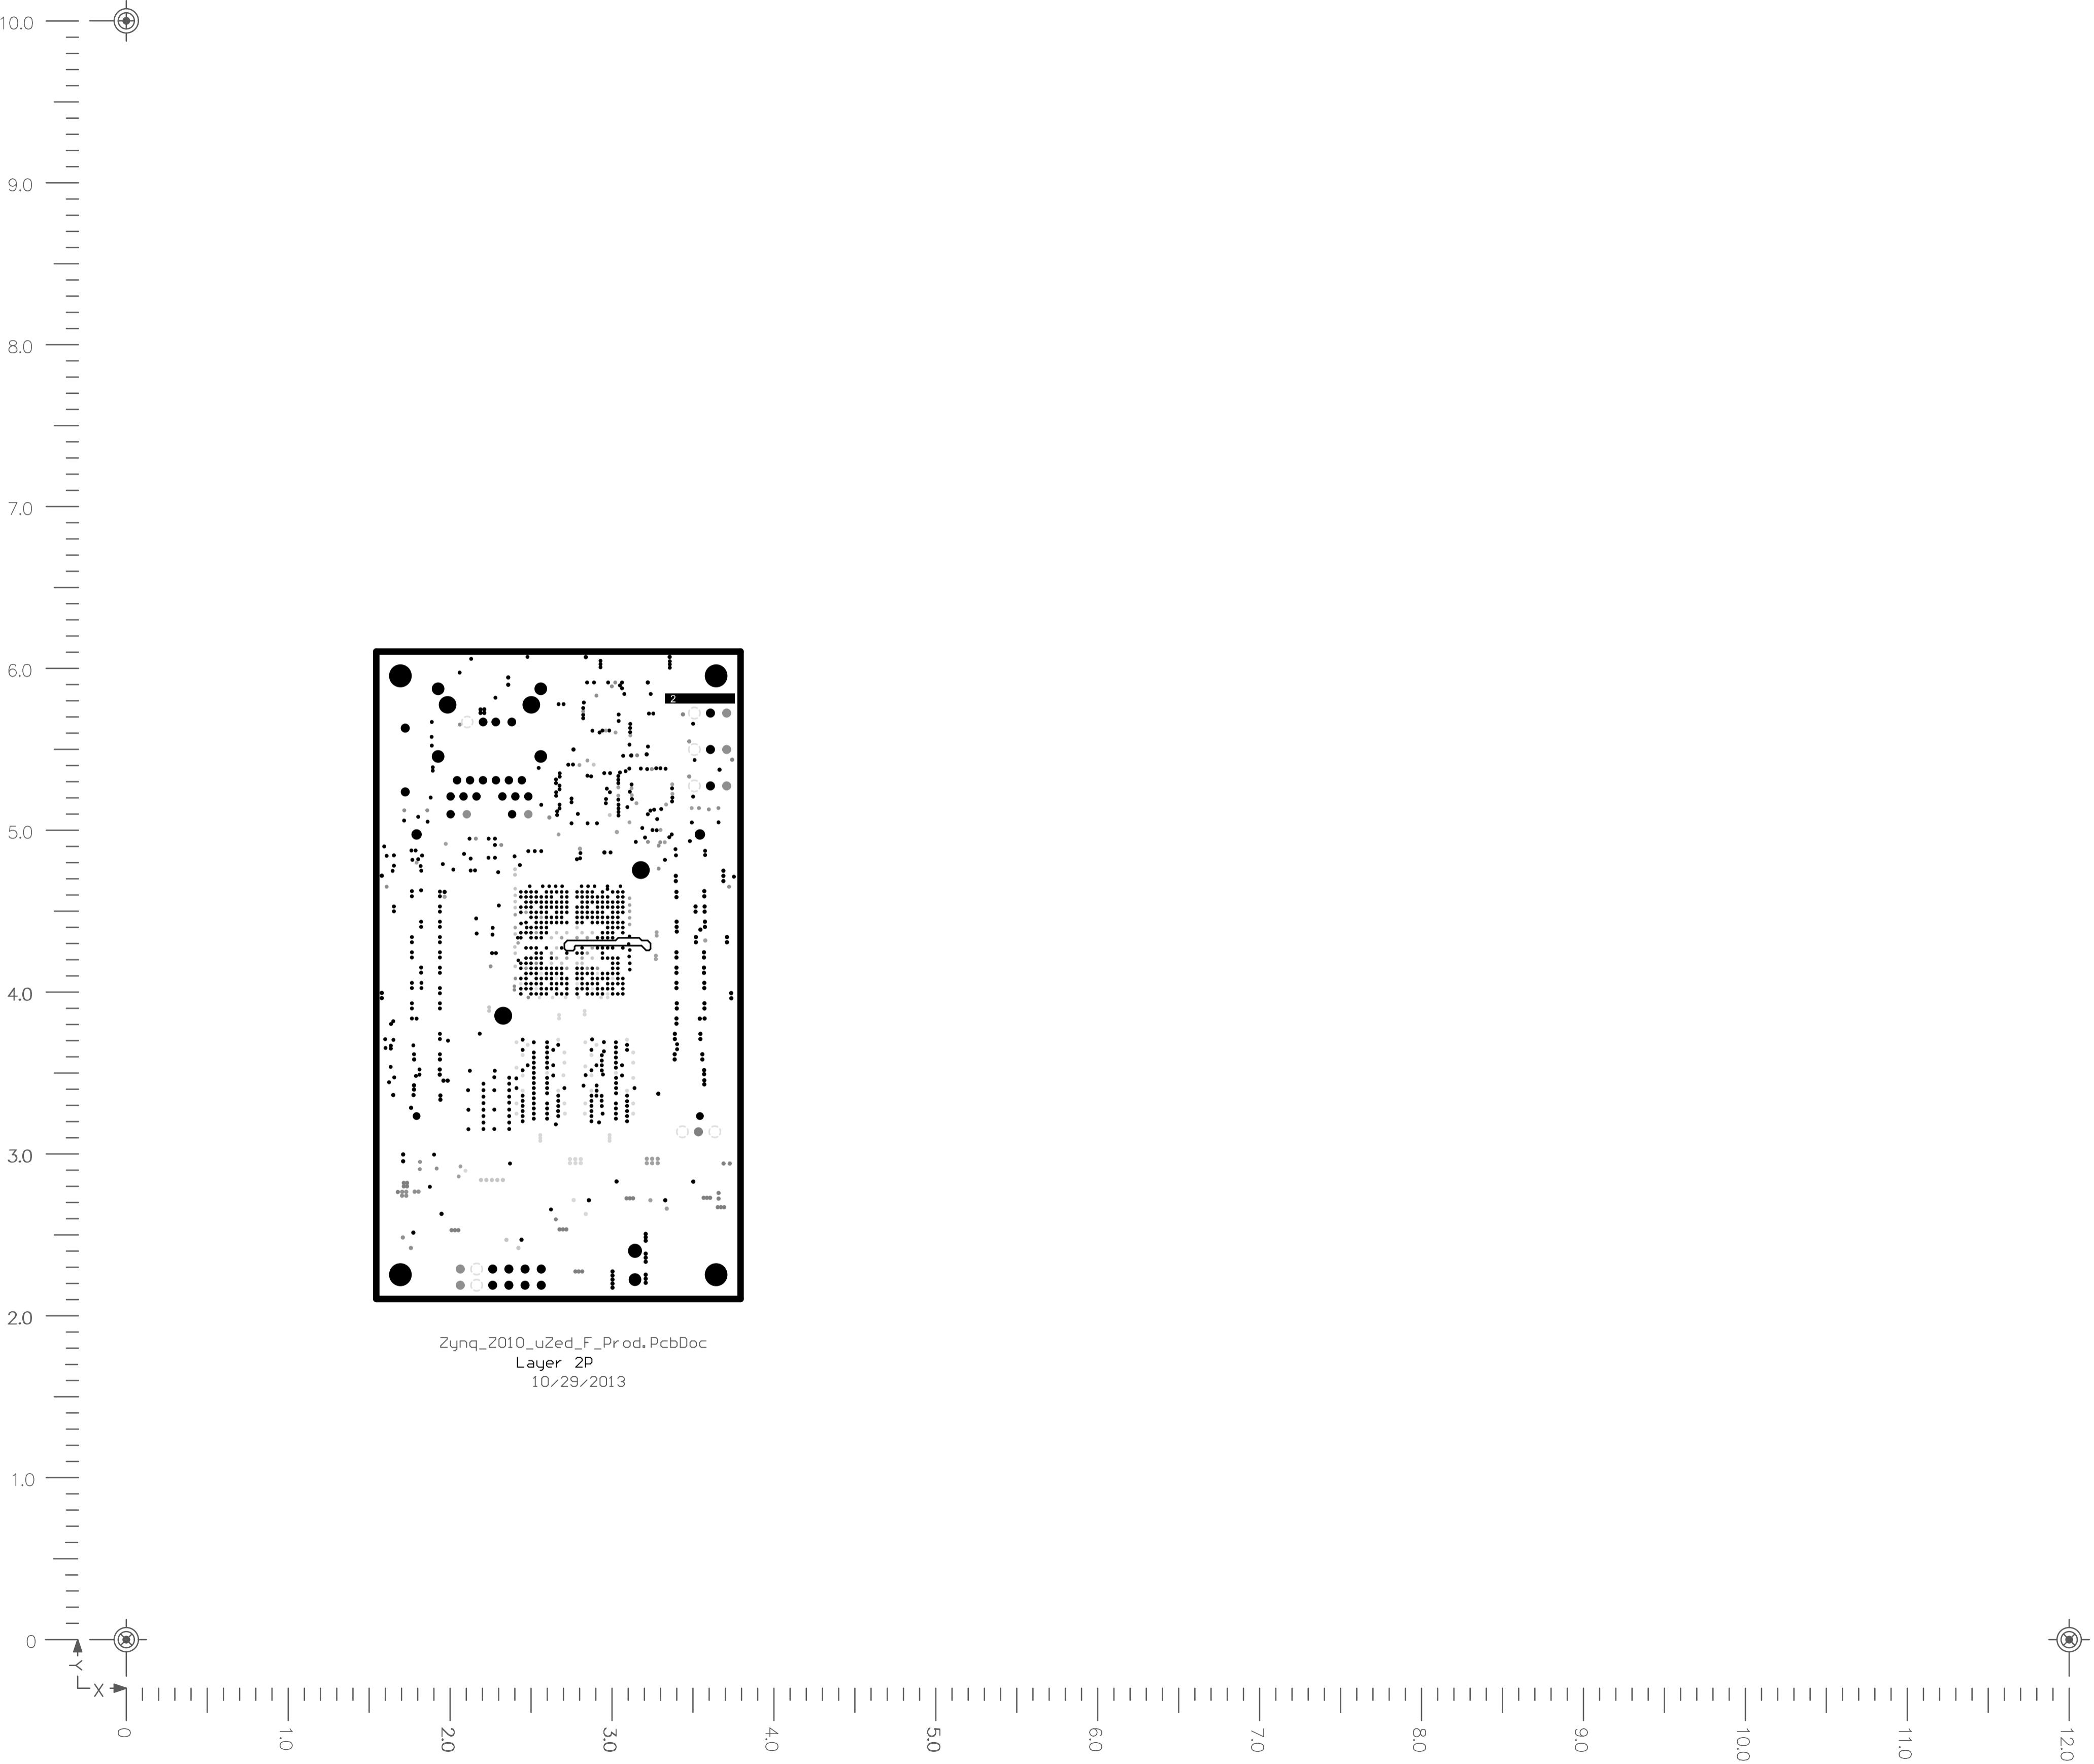


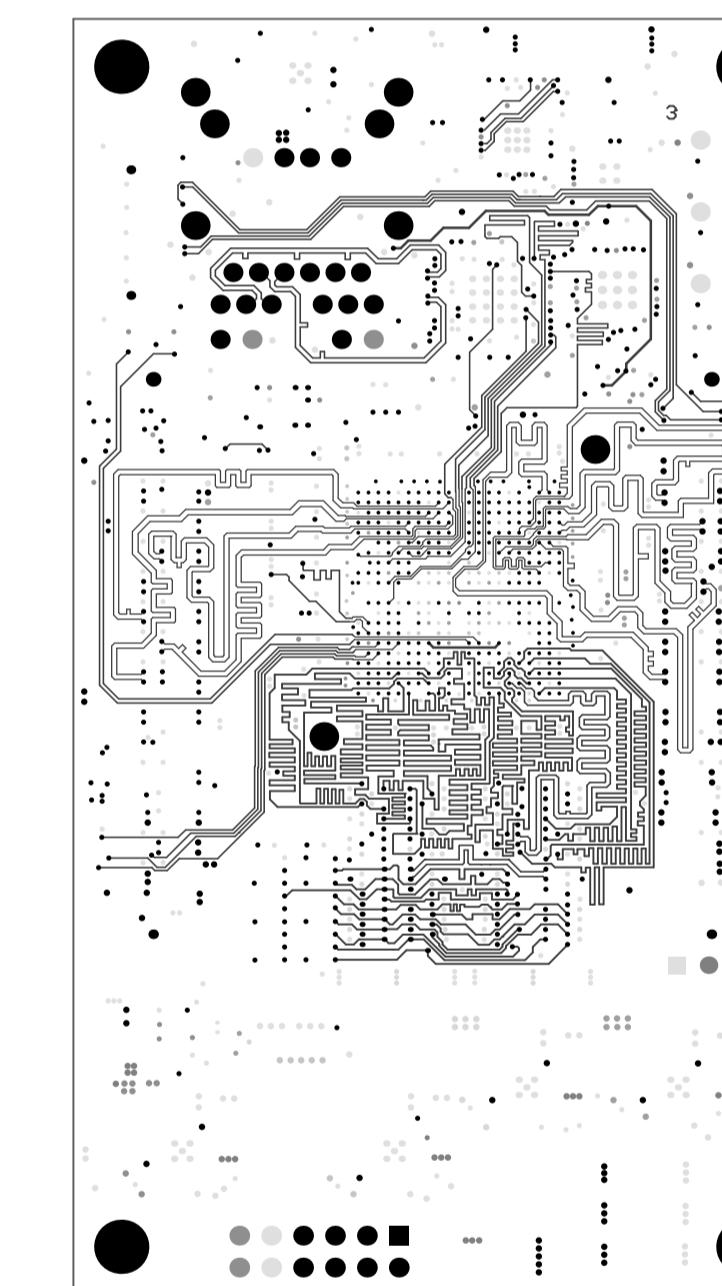


Zynq_2010_uZed_F_Prod.PcbDoc
Layer 3
10/29/2013

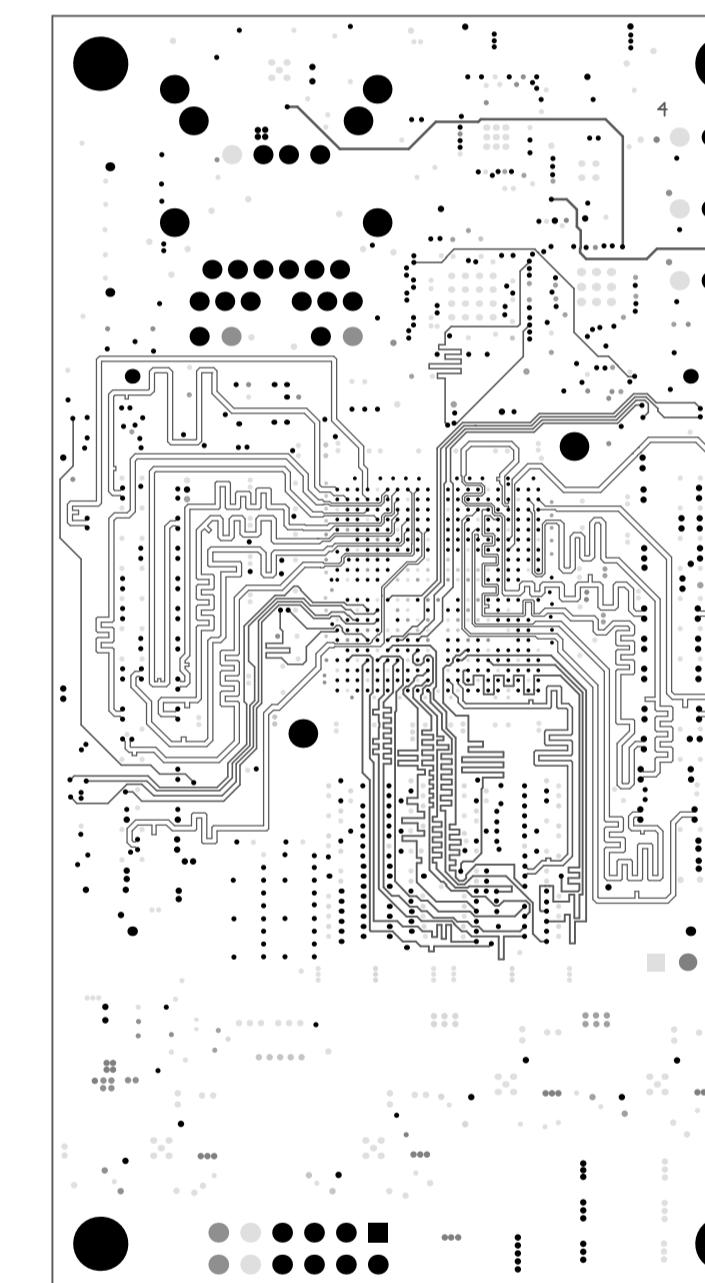


Zynq_2010_uZed_F_PcbDoc
Layer 4
10/29/2013

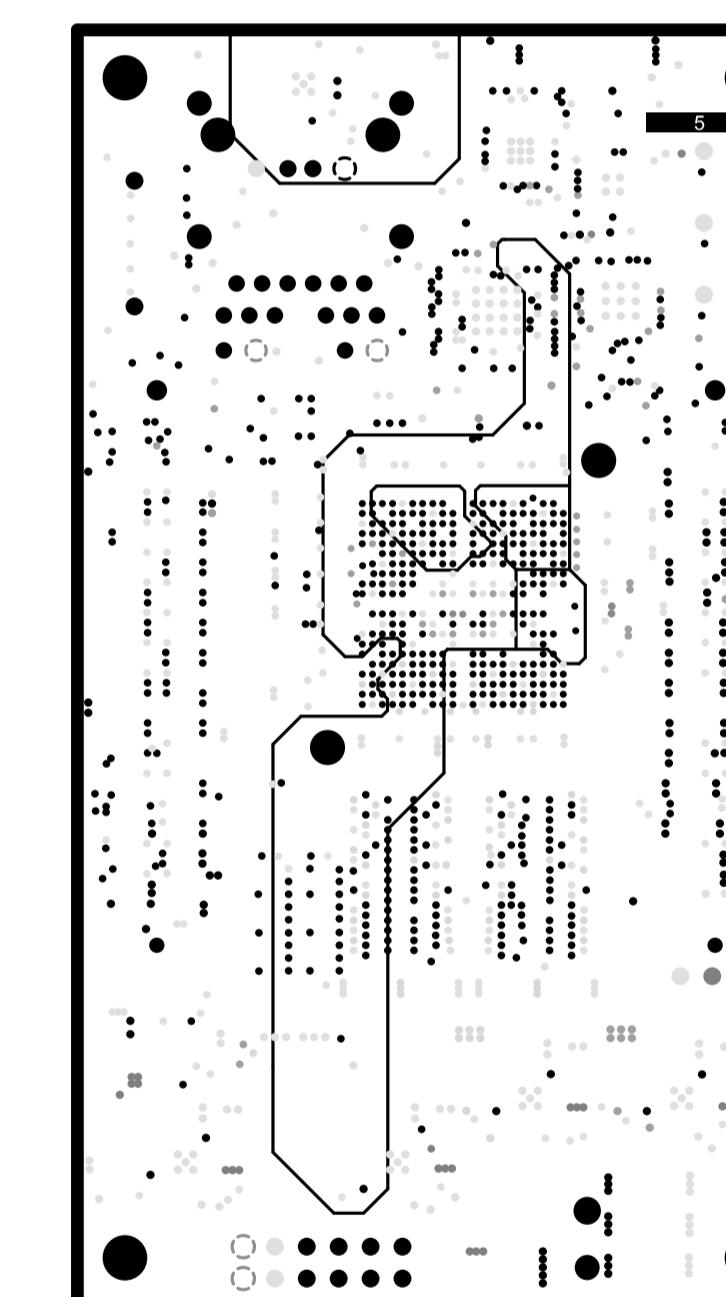


Zynq_2010_uZed_F_Prod_PcbDoc
Layer 5P
10/29/2013

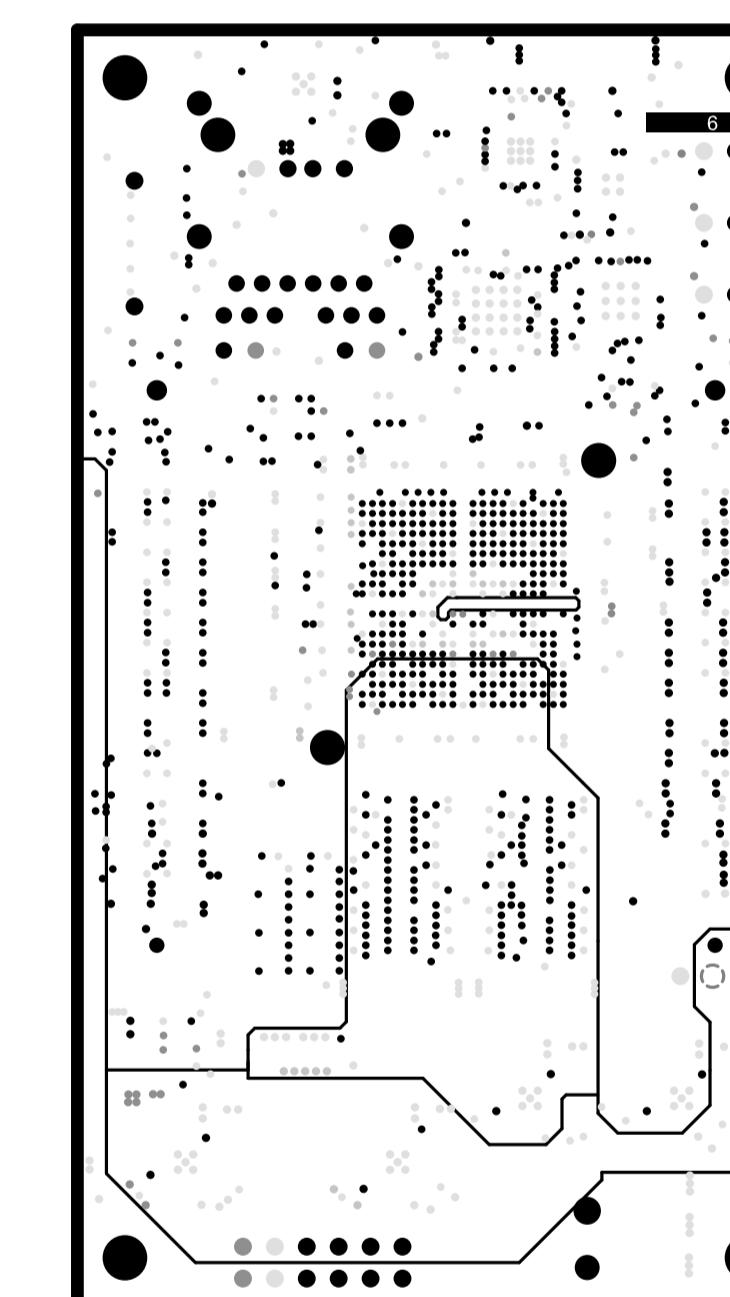


Zynq_2010_uZed_F_Prod.PcbDoc
Layer 6P
10/29/2013

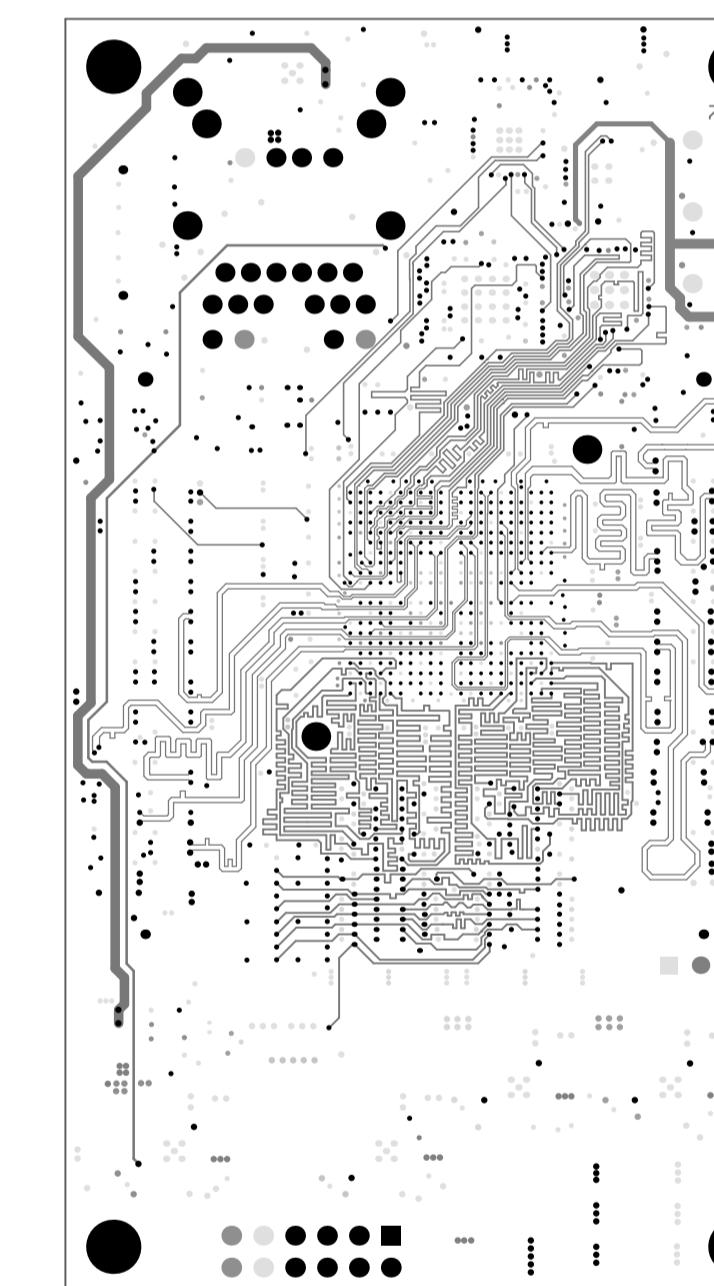


Zynq_2010_uZed_F_Prod.PcbDoc
Layer 7
10/29/2013

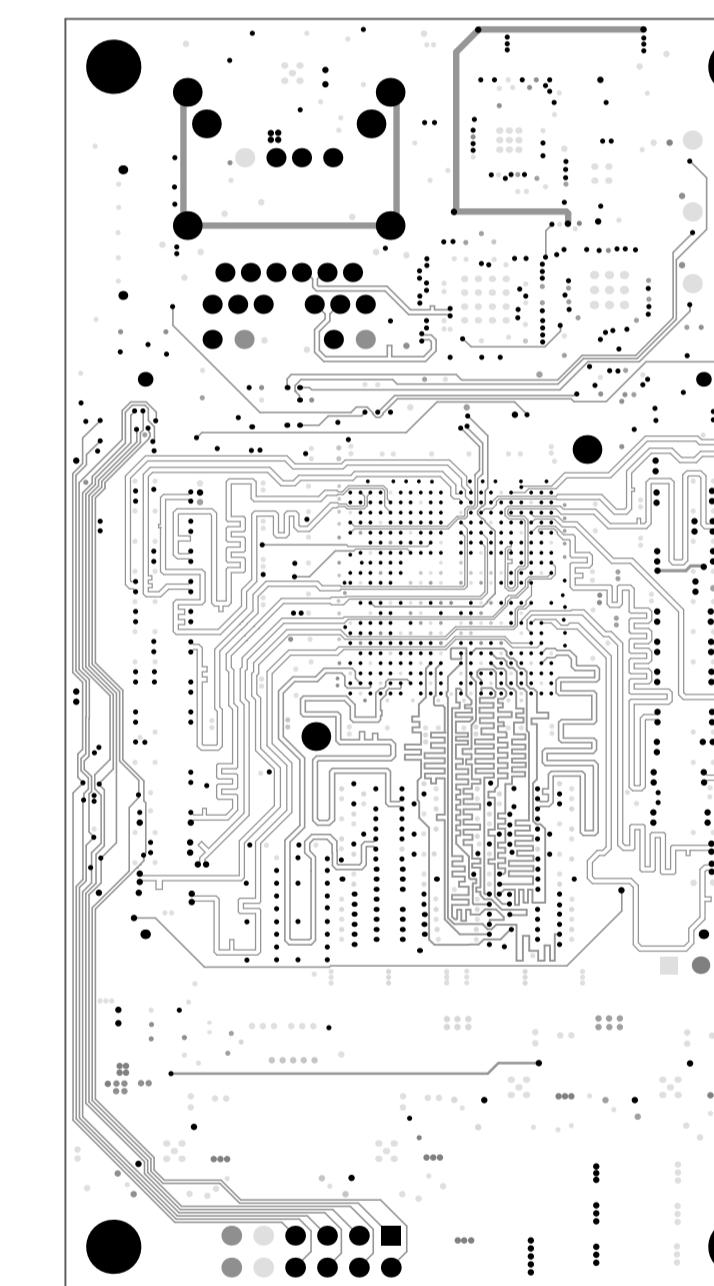


Zynq_2010_uZed_F_Prod.PcbDoc
Layer 8
10/29/2013

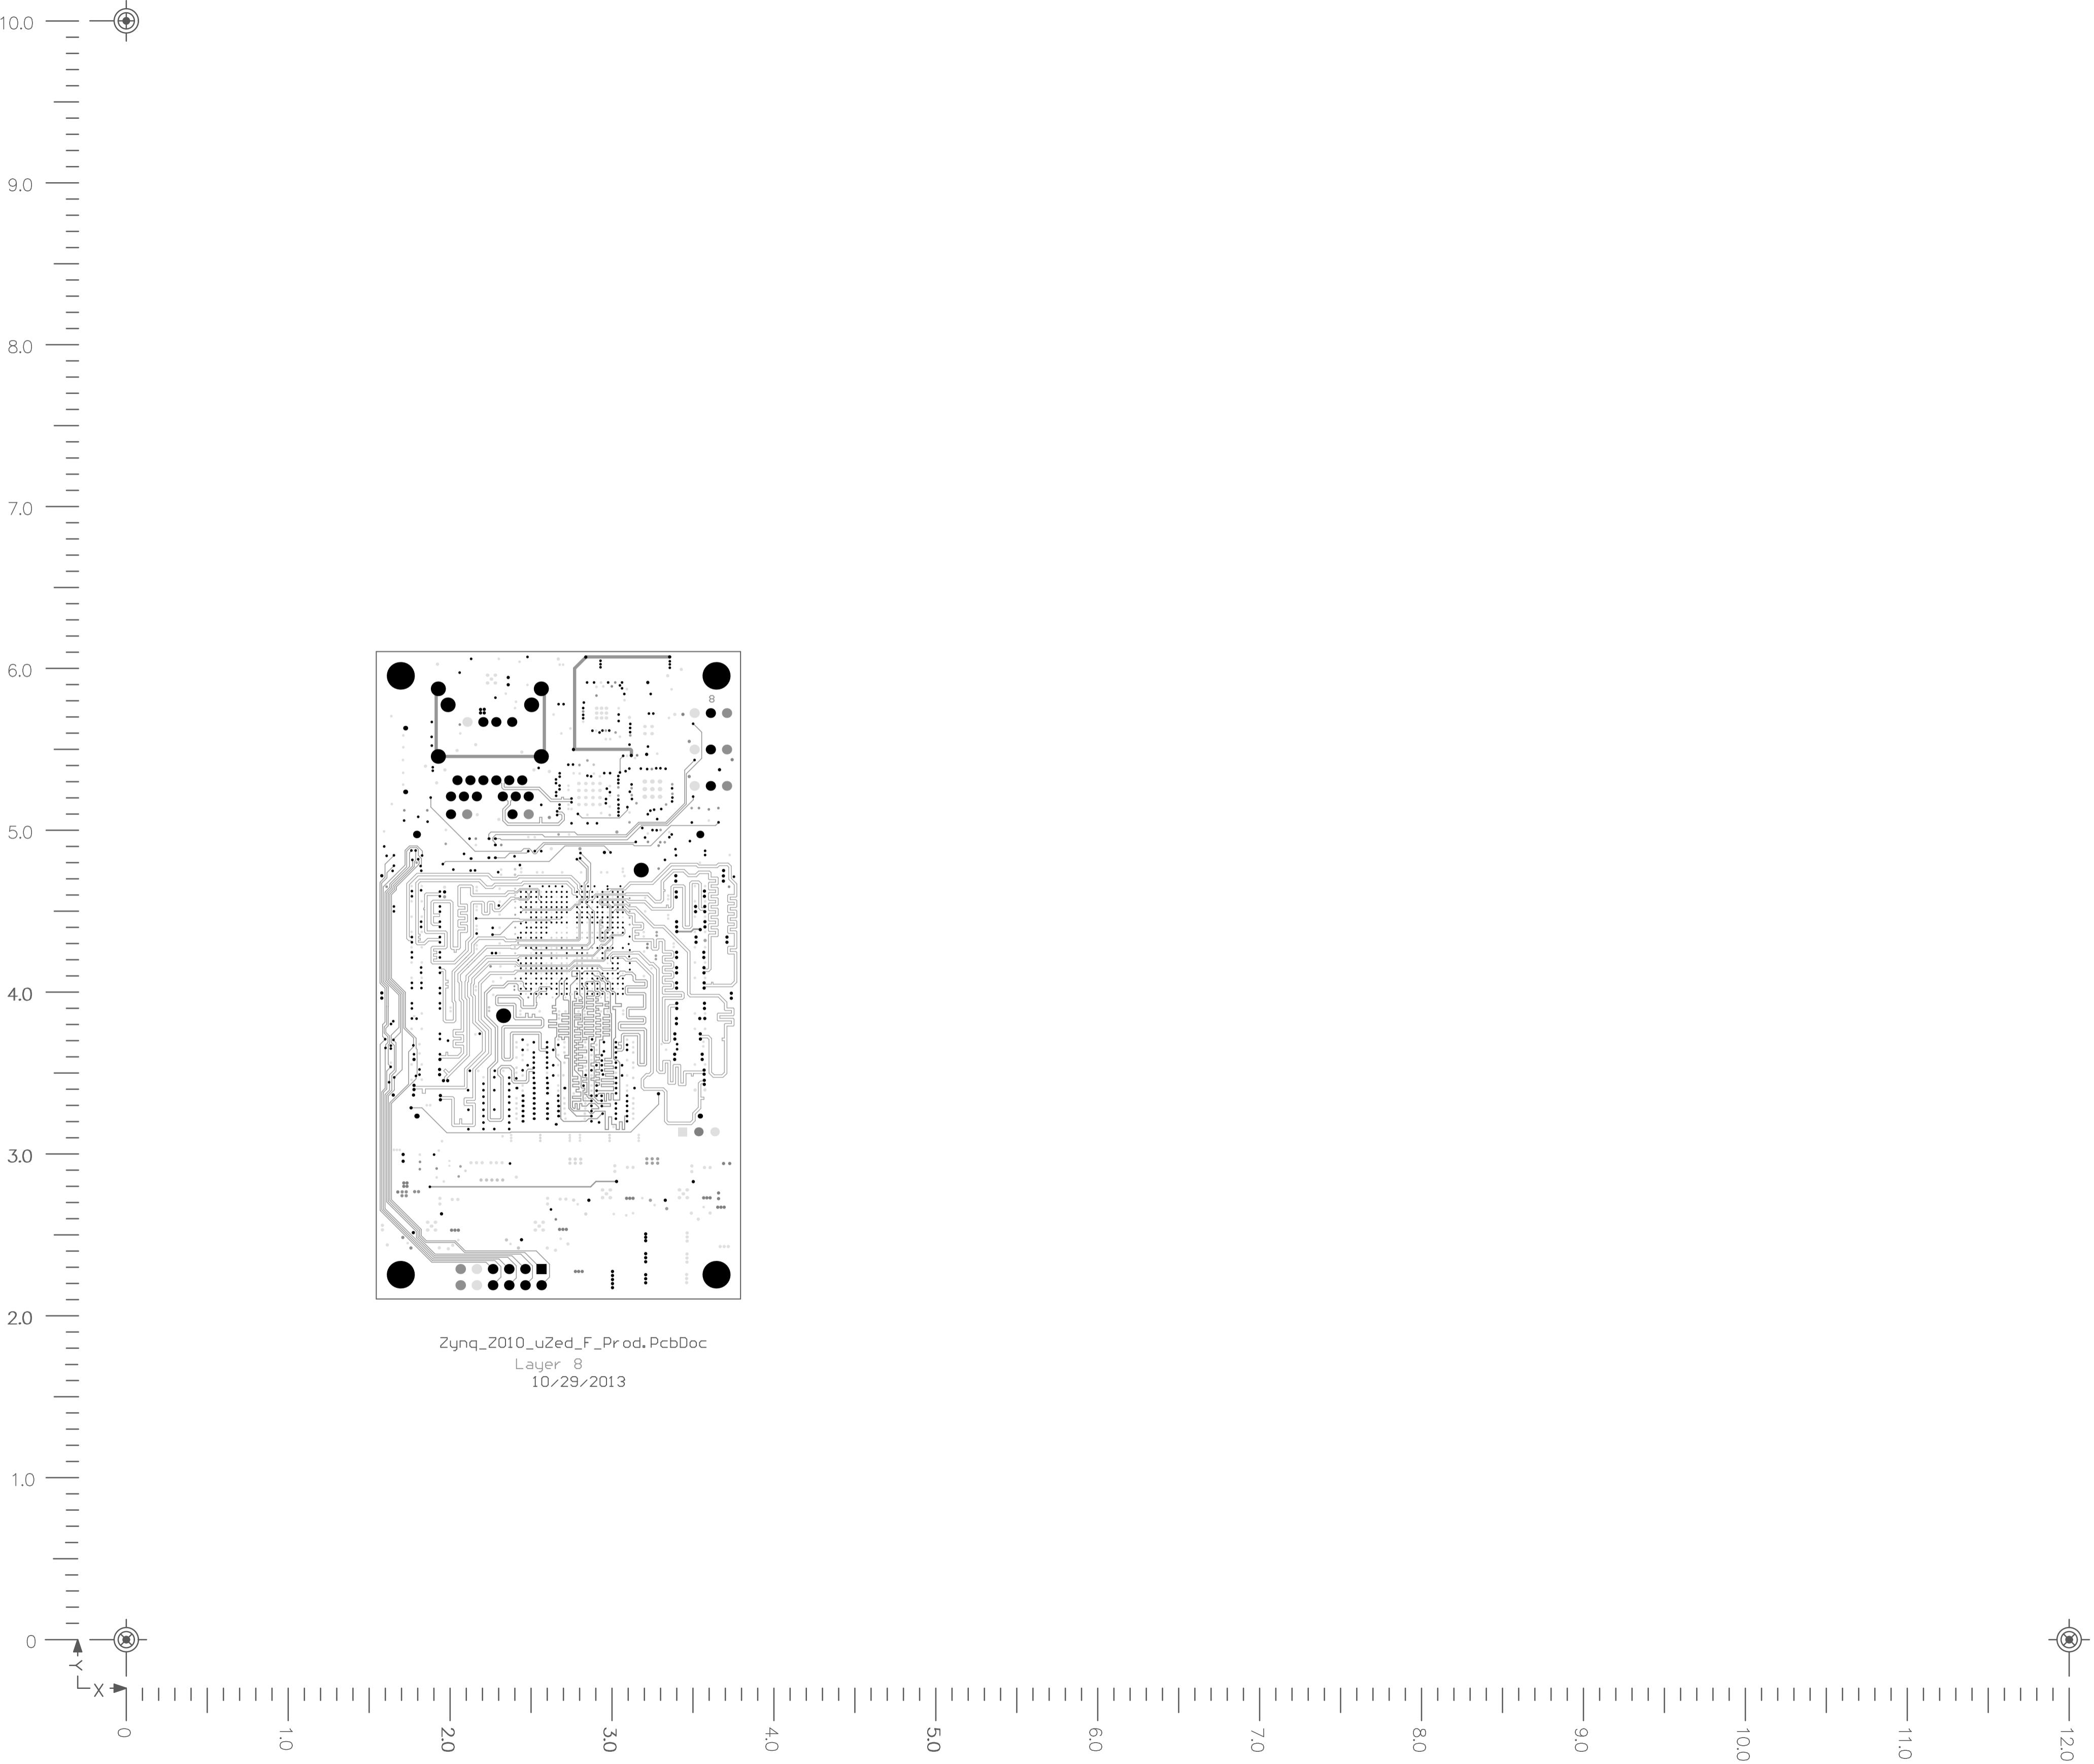


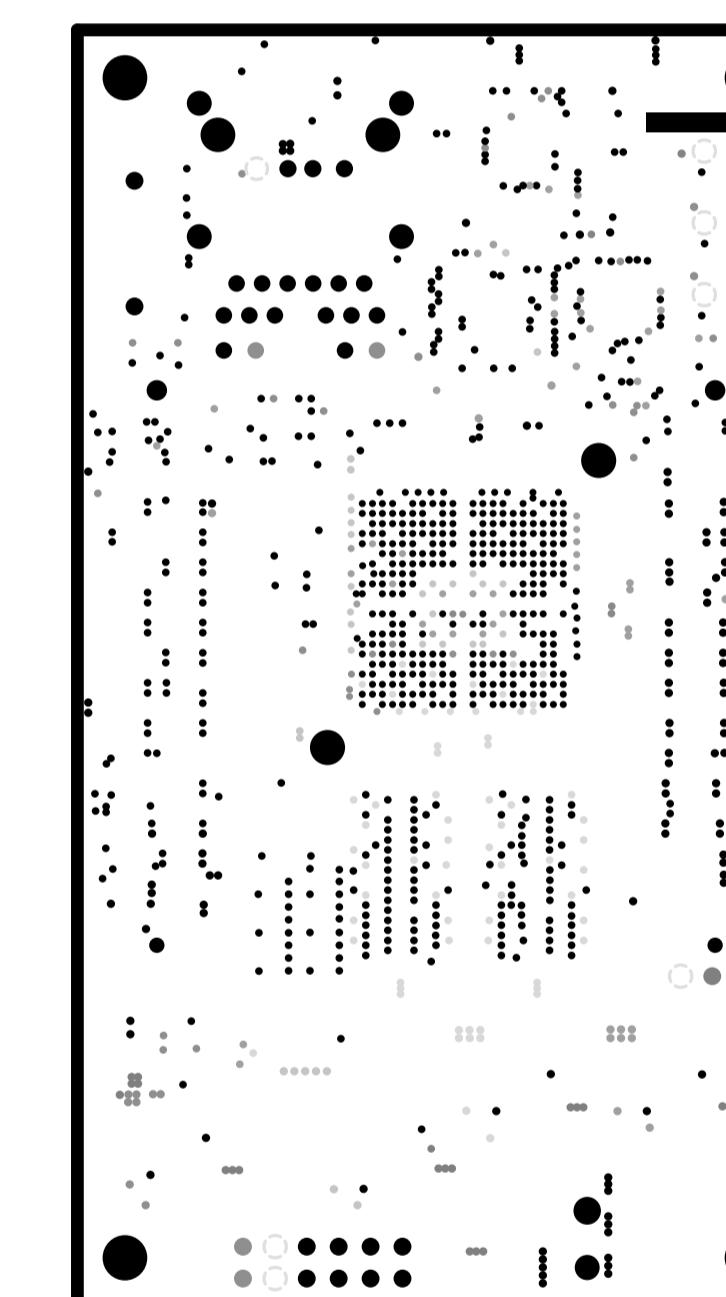


Zynq_2010_uZed_F_Prod_PcbDoc
Layer 9P
10/29/2013

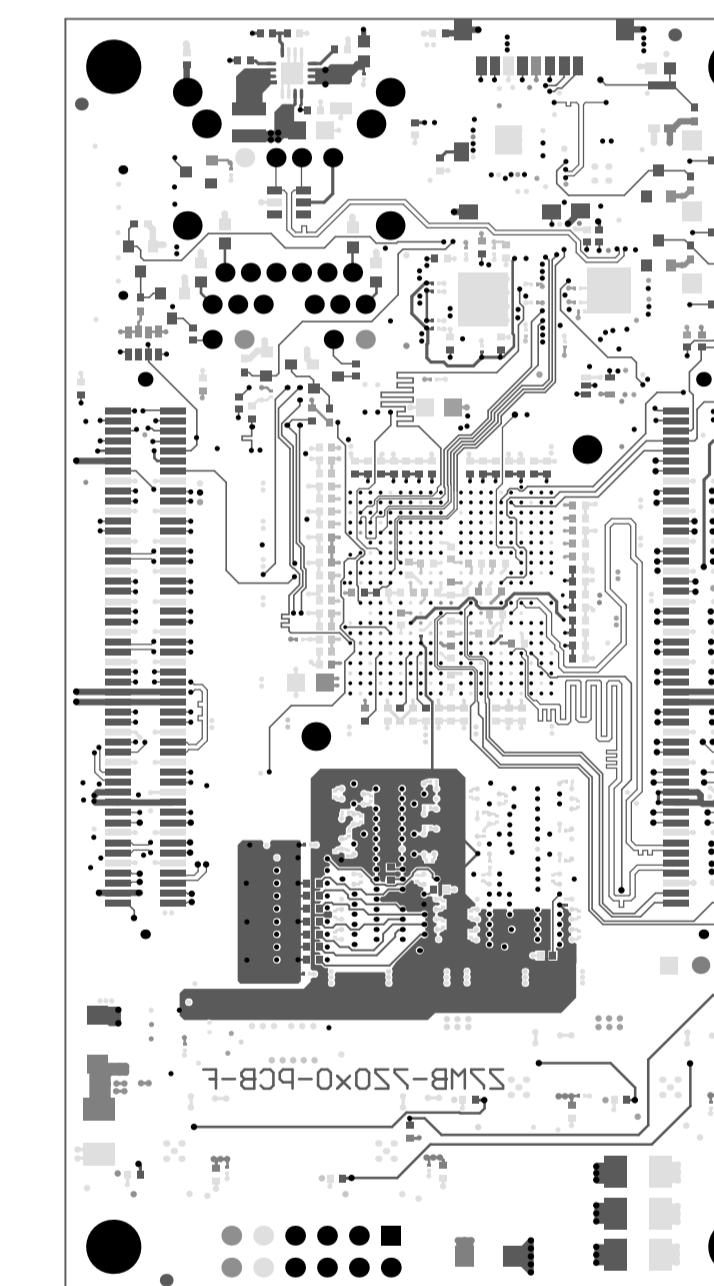


Zynq_2010_uZed_F_Prod.PcbDoc
Layer 10
10/29/2013

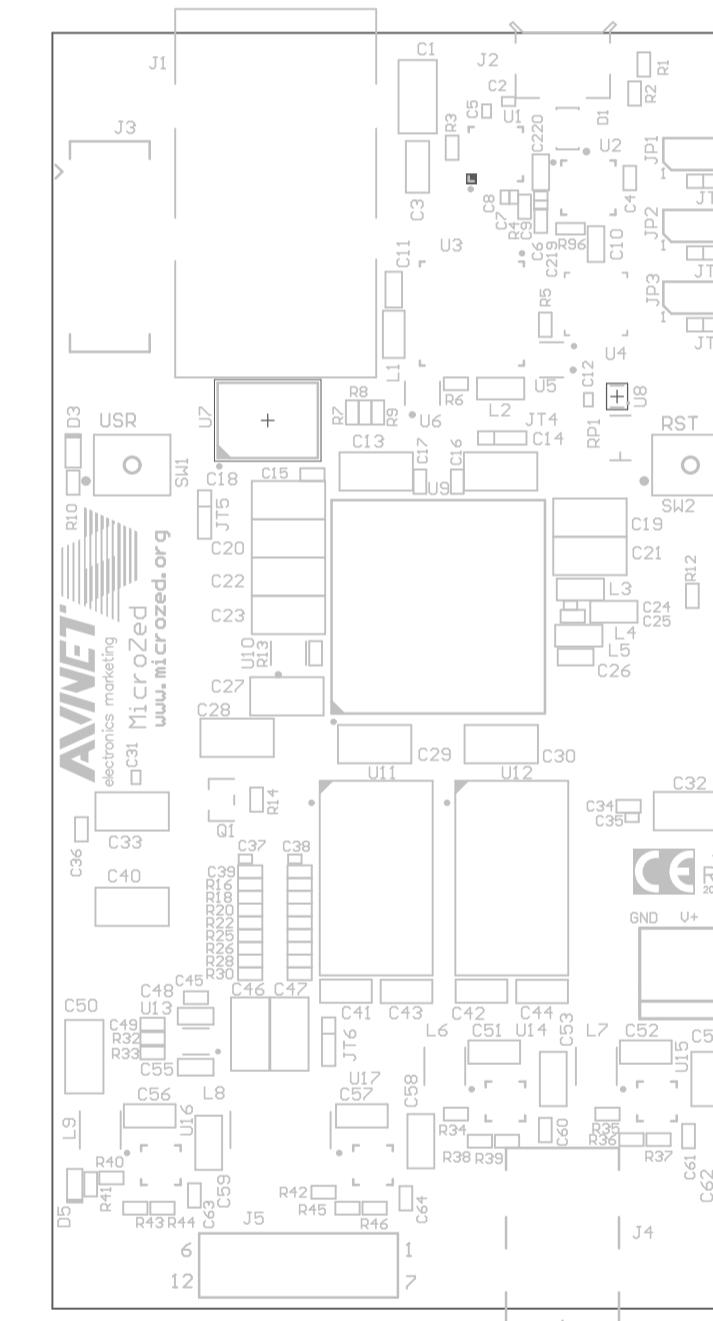



Zynq_2010_uZed_F_Prod_PcbDoc
Top Overlay
10/29/2013

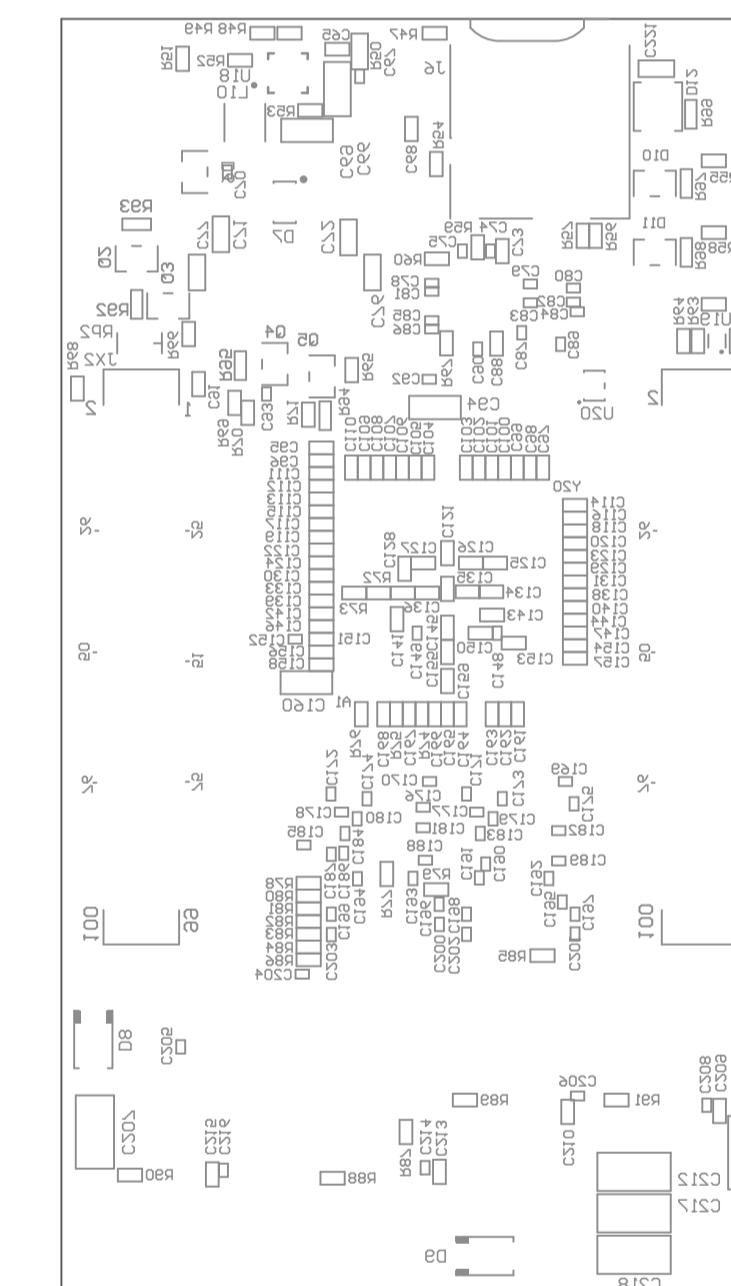


Zynq_2010_uZed_F_Prod_PcbD
Bottom Overlay
10/29/2013

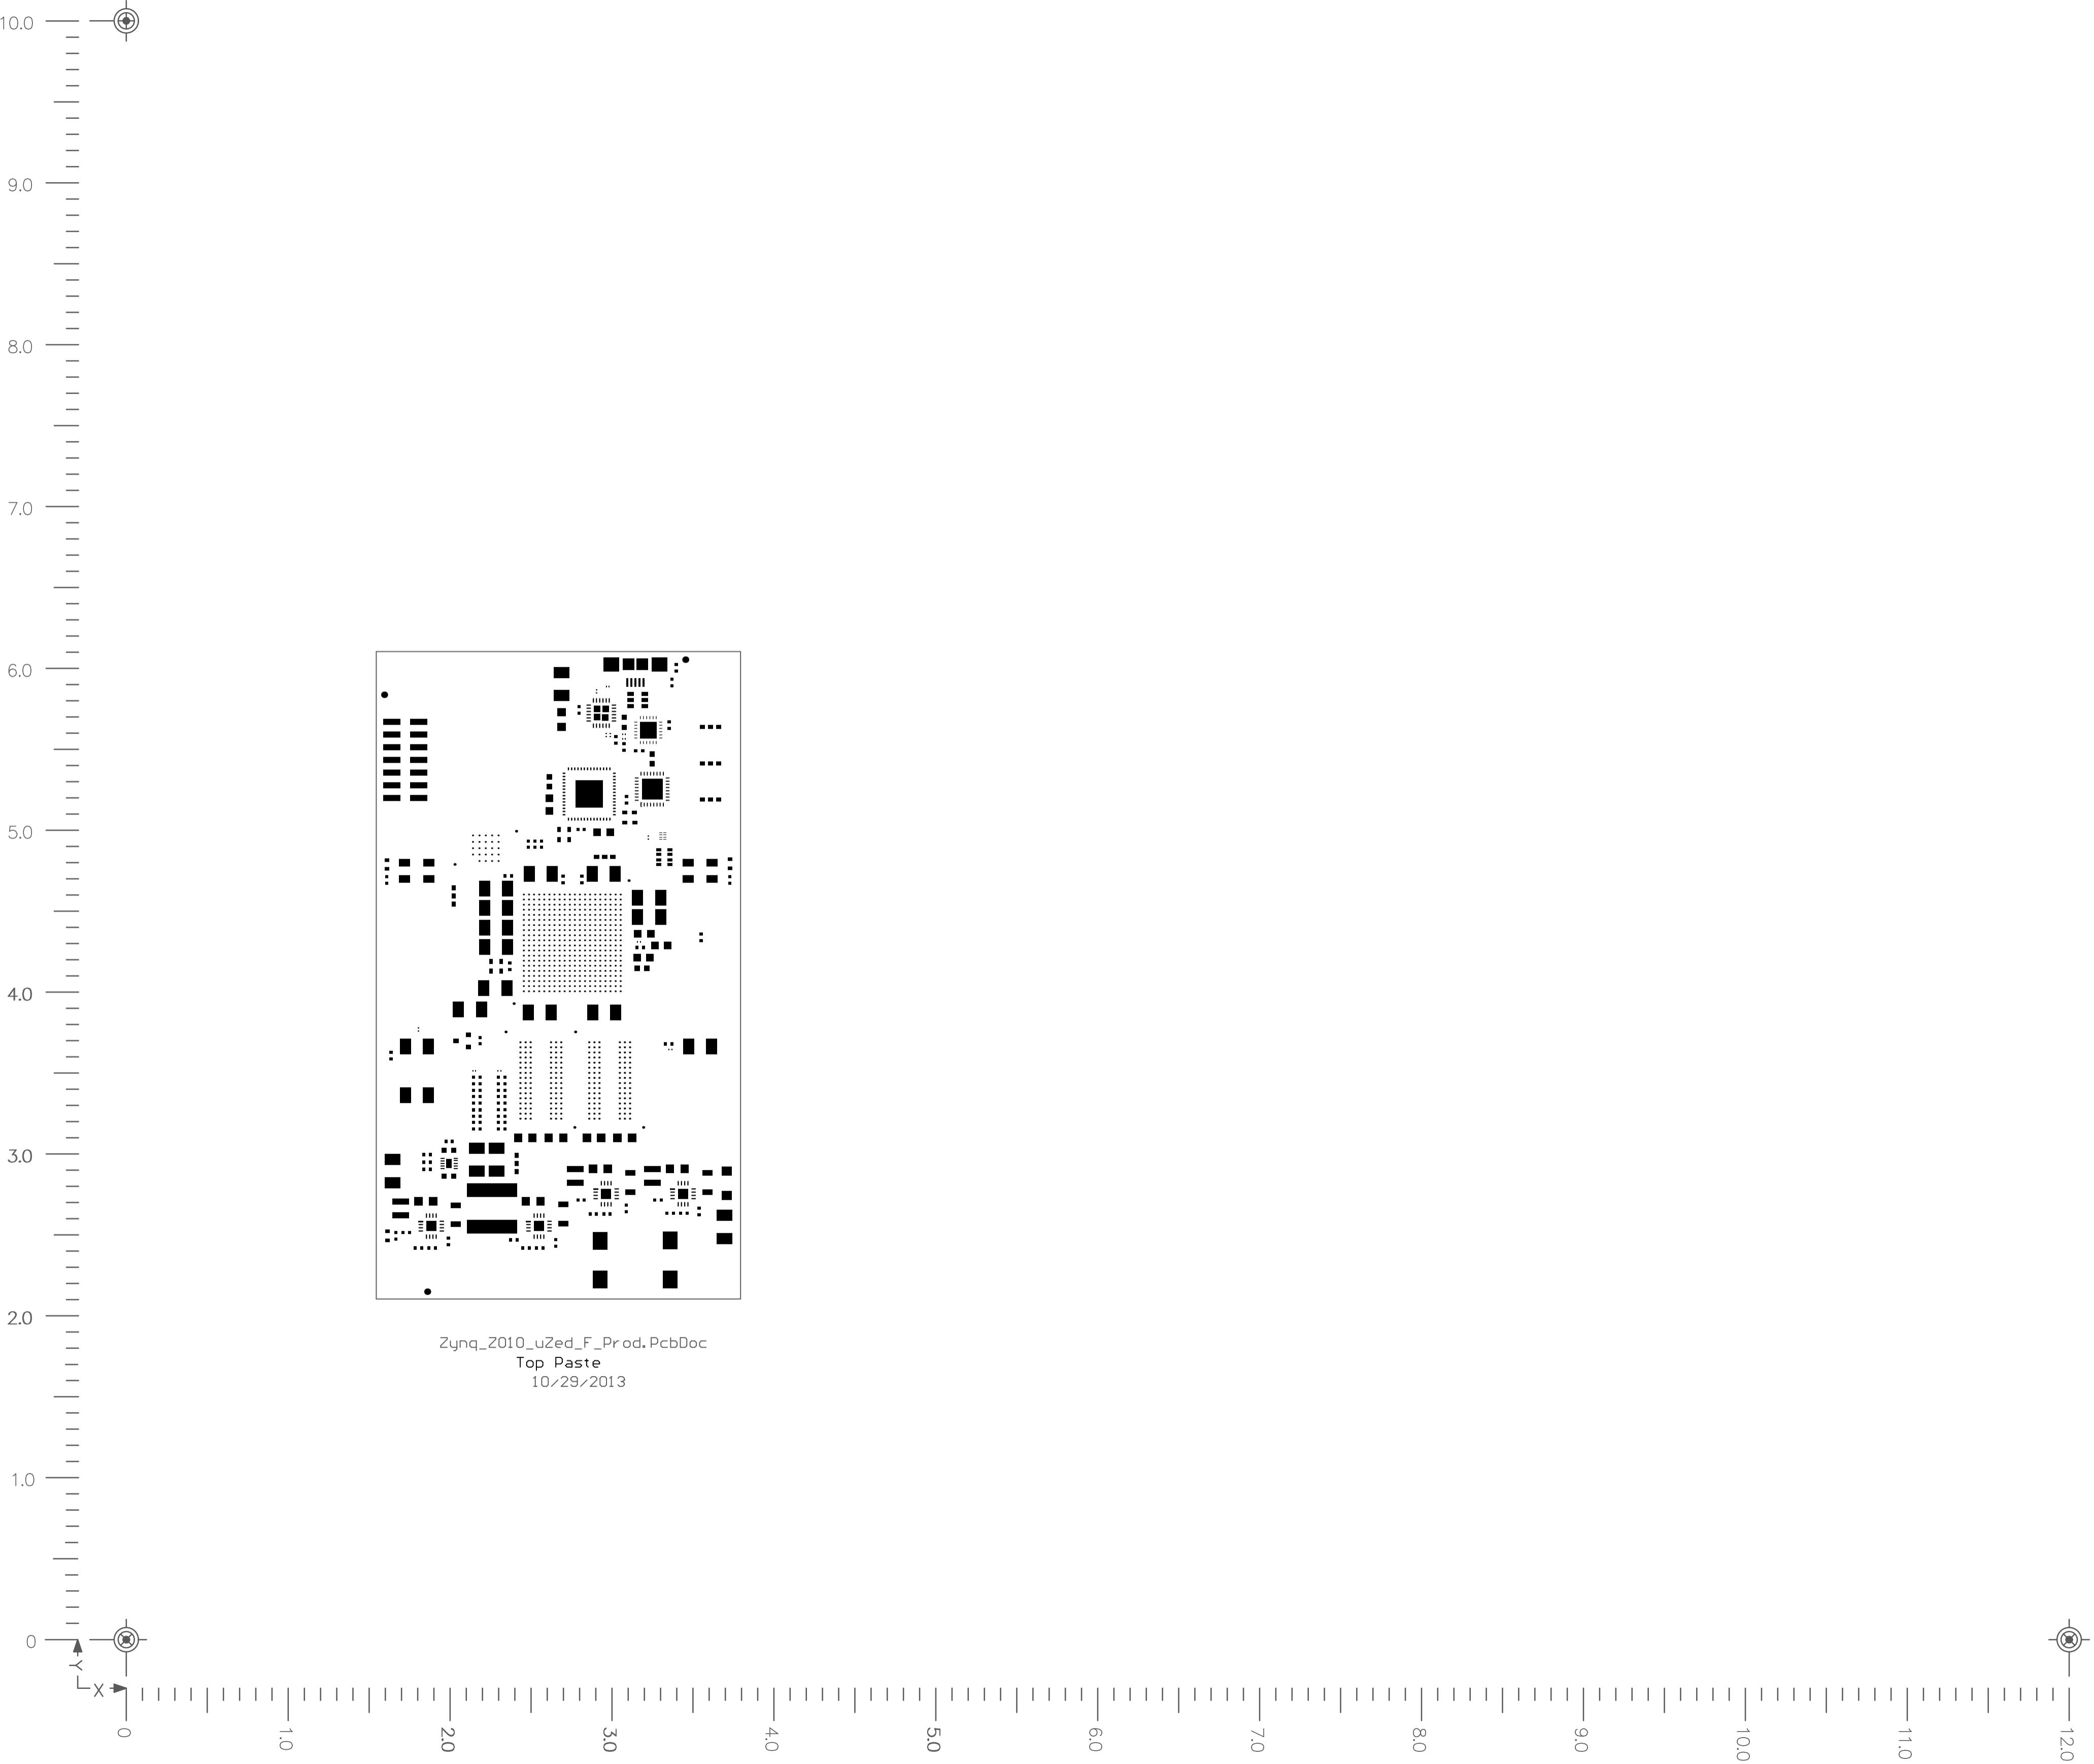


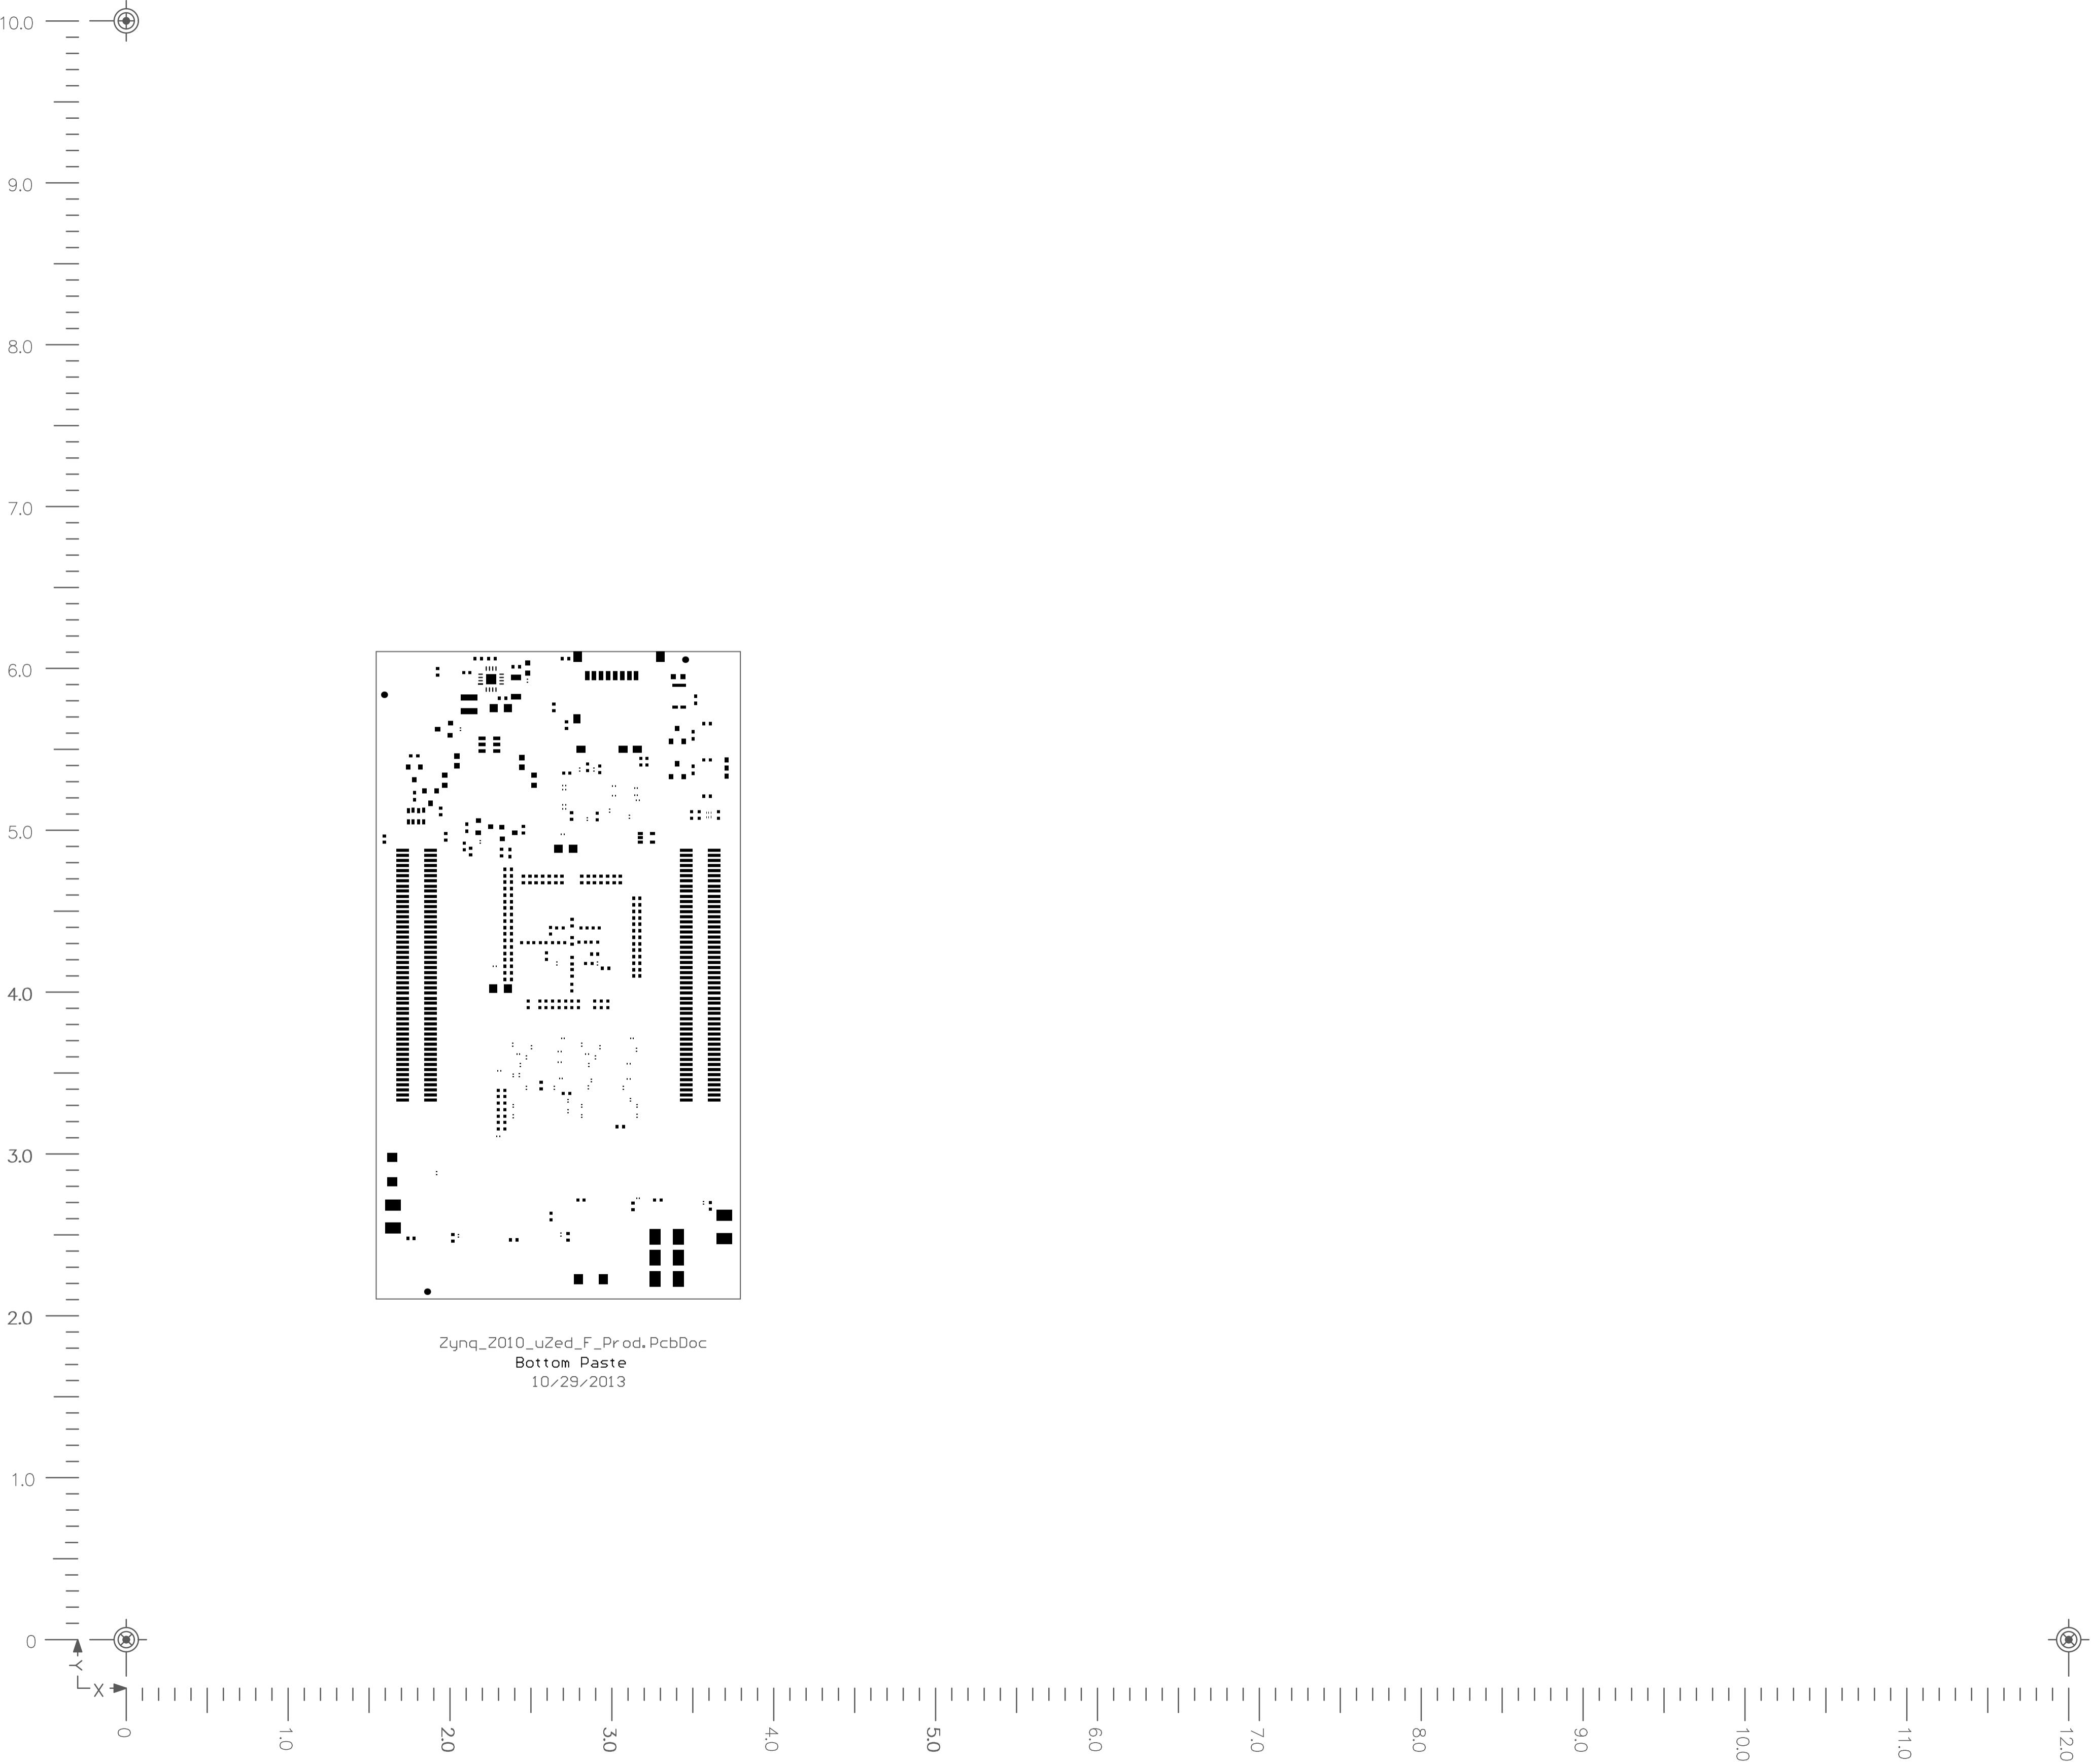

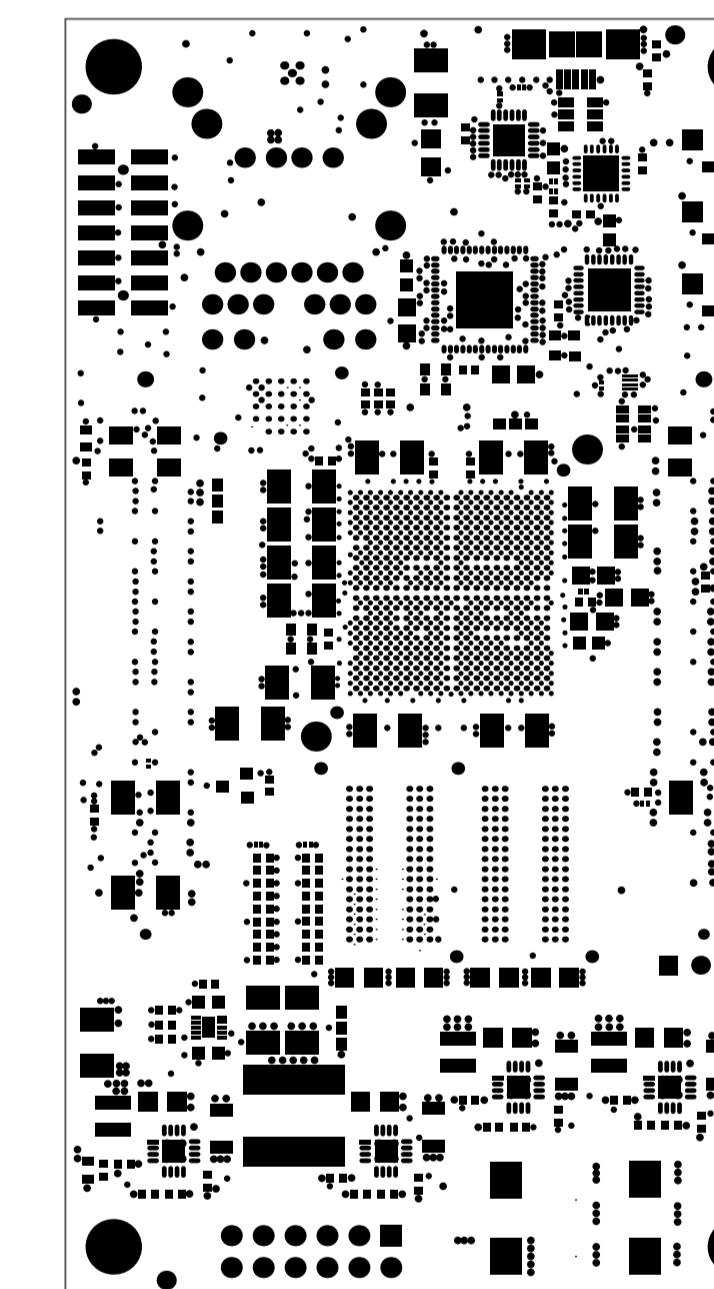


Zynq_2010_uZed_F_Prod_PcbDoc
Top Solder
10/29/2013

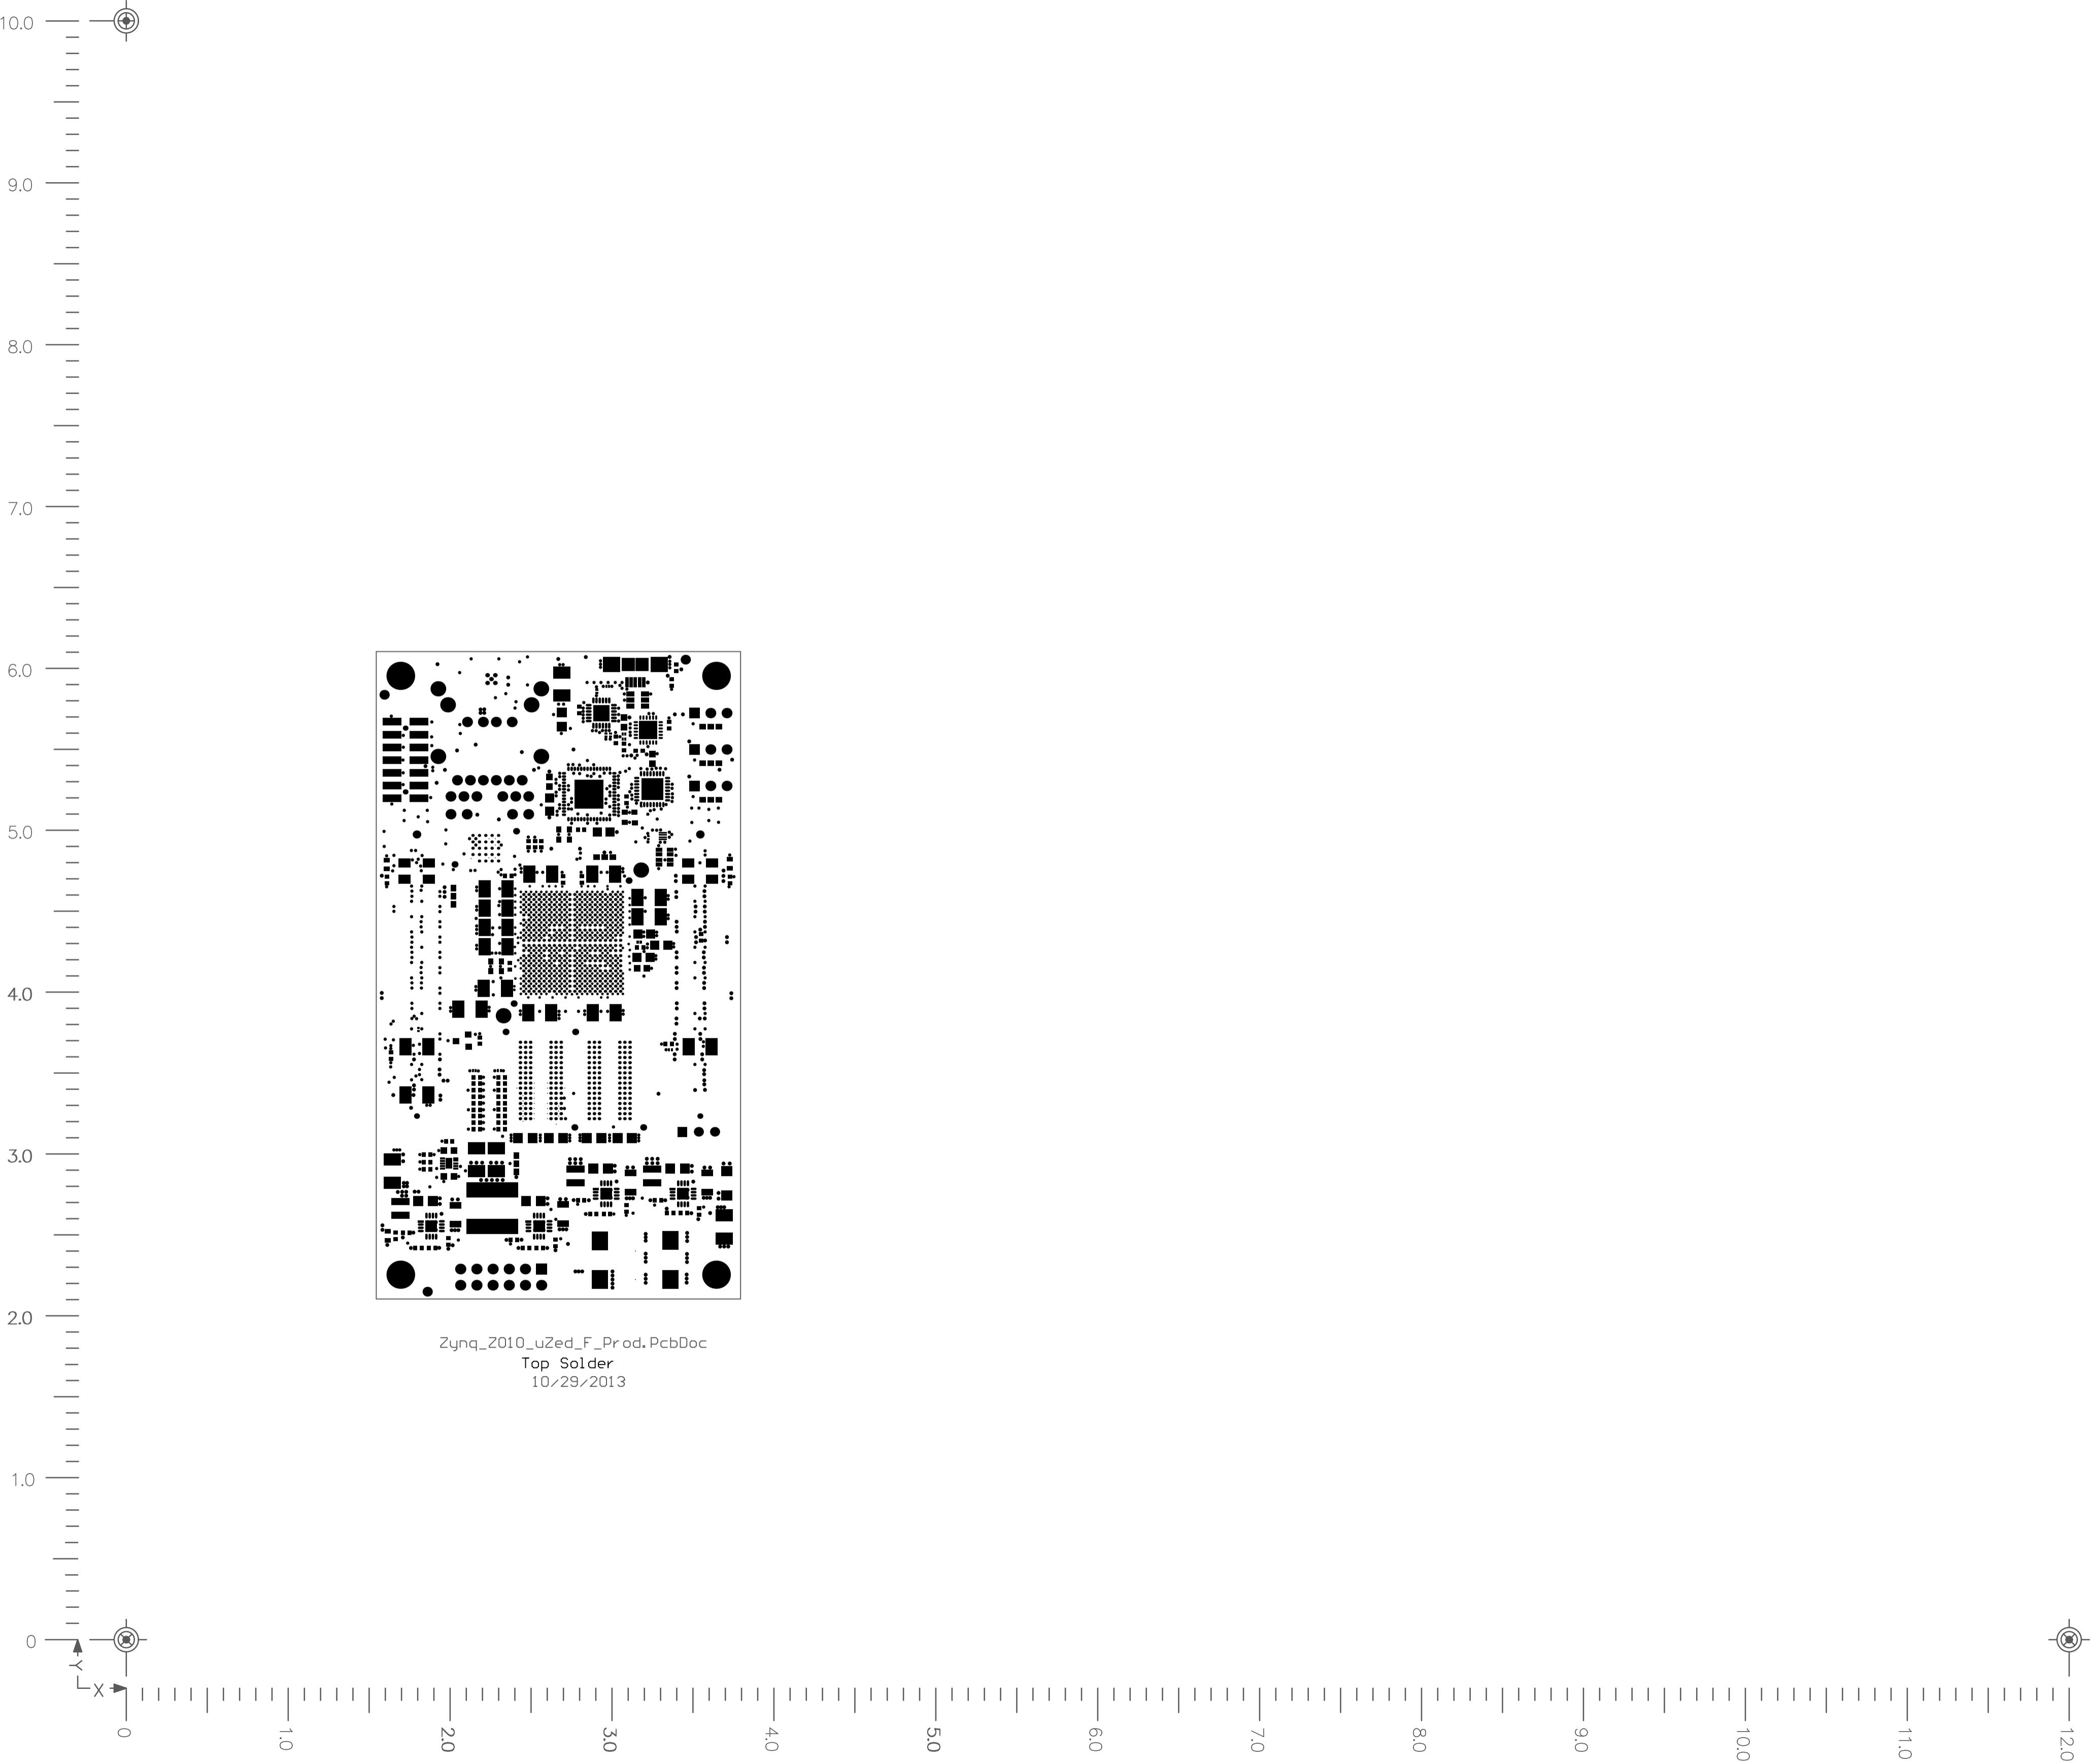

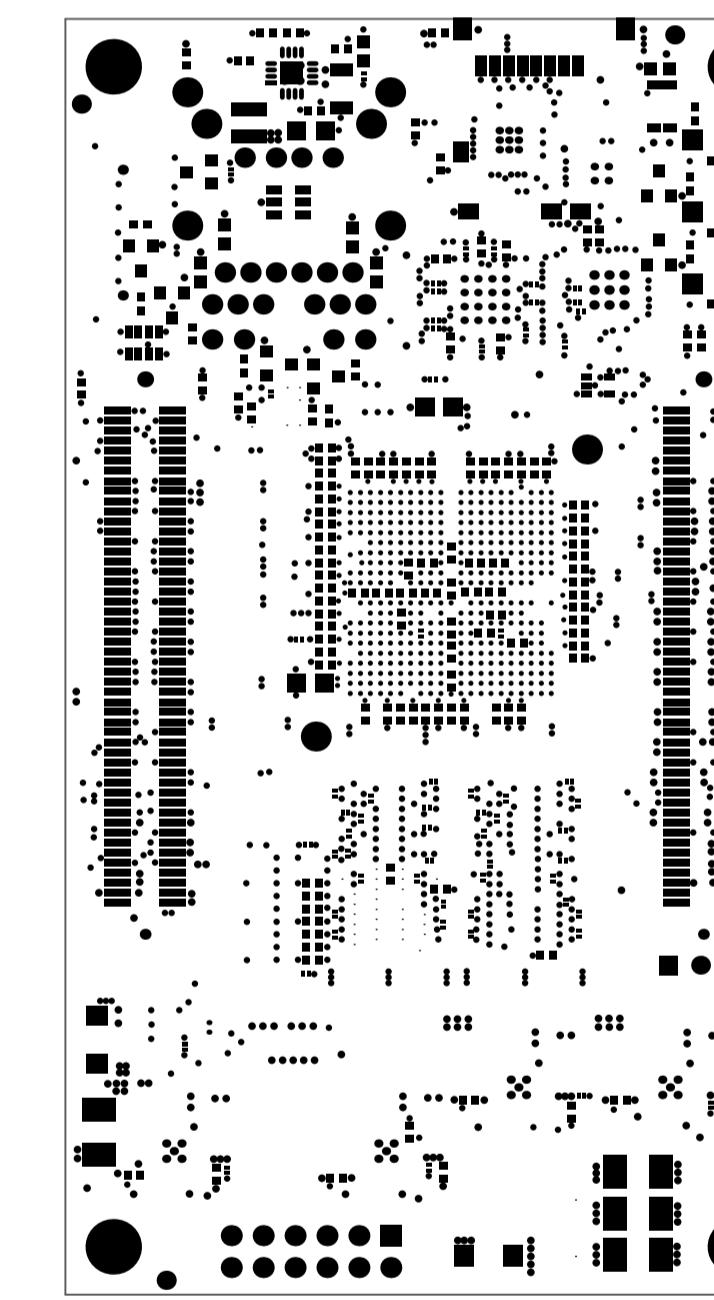

Zynq_2010_uZed_F_Prod_PcbDoc
Bottom Solder
10/29/2013

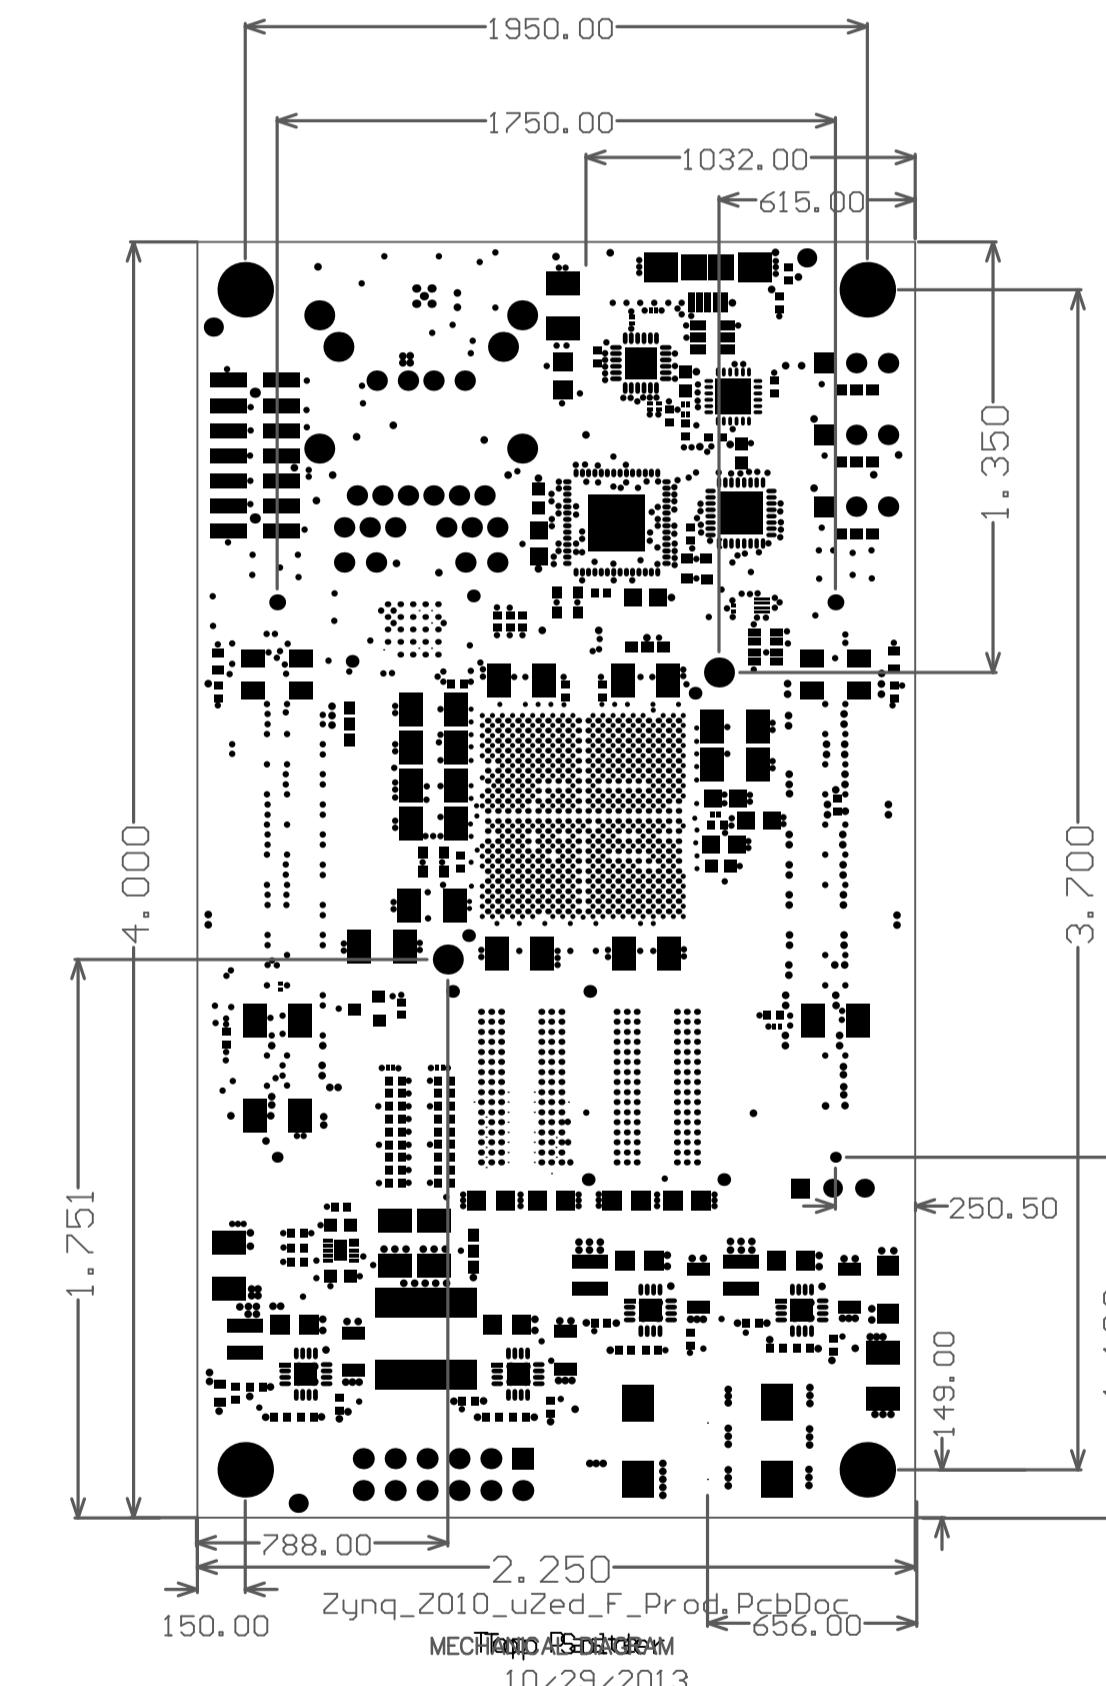

ALL DIMENSIONS = Inch