


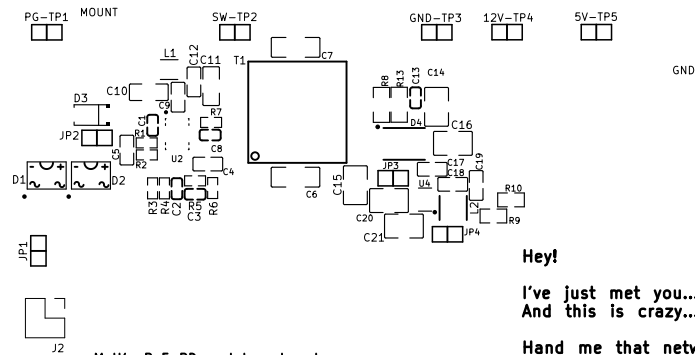

Matt's PoE PD prototype board
<https://github.com/mhardeman/matt-poe-prototype>

Notes:

PG-TP1 - PoE "PWRGND" / PoE VSS test point
 SW-TP2 - Test point for switch node of TPE15017
 should eliminate this & its trace in deployment for EMI sake
 GND-TP3 - Payload / board isolated "GND" test point
 12V-TP4 - Test point to access 12V rail
 5V-TP5 - Test point to access 5V rail

JP1 - Disconnect / current measurement point for PoE -> bridge rectifiers
 JP2 - Disconnect / current measurement point for BRs -> MP8017/TPE15017 input stage
 JP3 - Disconnect / current measurement point for 12V output stage prior to 5V stage
 JP4 - Disconnect / current measurement point for 5V output
 5V load would continue downline of right-hand-side of JP4.

Hey!

I've just met you...
 And this is crazy...

Hand me that network,
 for some power, maybe!



GND