
Hidden-TV coffee table

Hidden-TV coffee table


white_oak · white_oak_veneer · plywood_birch · tv · steel · hardboard

Overall: **1260x420x720** mm
Units: **mm**
Revision: **Rev B**
Date: **2026-11-08**

Drawings

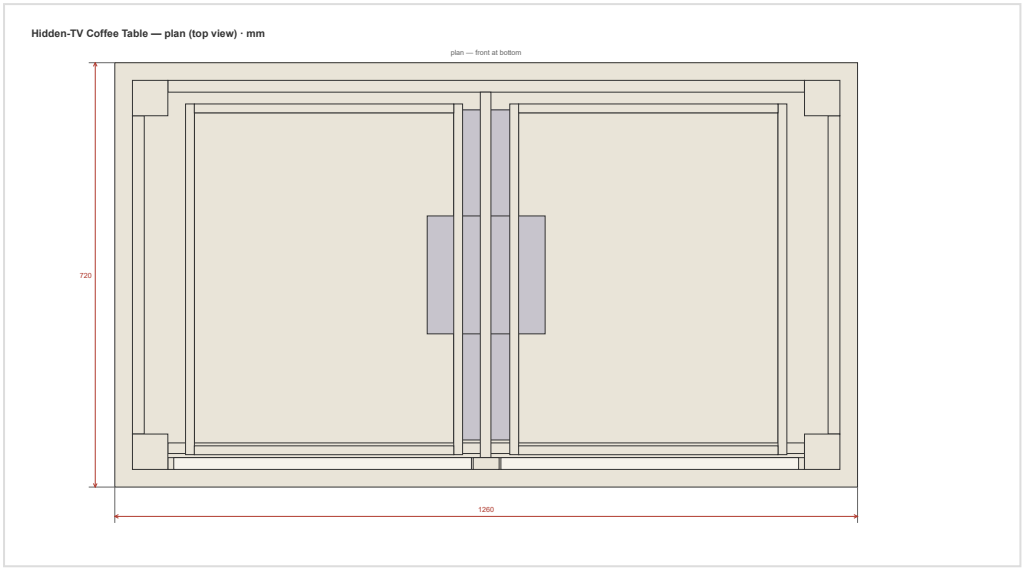

plan

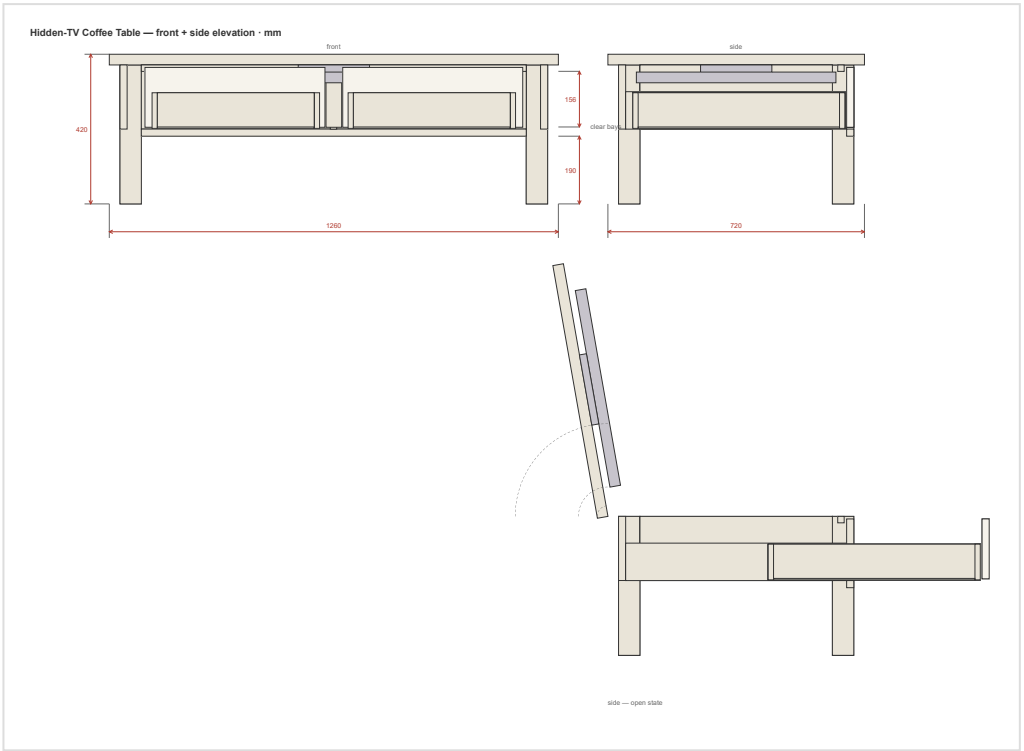

front

Cut list — Hidden-TV coffee table

Units: mm

Part	Qty	Length	Width	Thk	Material	Grain	Banding	Notes
Leg	4	390	60	60	white_oak 60mm / אלון לבן מלא (solid — edge-glue wide parts)	length		solid white oak — veneering a 60x60 leg is impractical
Lid	1	1260	720	30	white_oak_veneer 30mm / פורניר אלון לבן	length	all	30mm ply core, white-oak veneer BOTH faces, solid-oak lipping all round
BackApron	1	1080	180	20	white_oak_veneer 20mm / פורניר אלון לבן	length	l1	piano hinge mounts along its top edge
EndApron	2	540	180	20	white_oak_veneer 20mm / פורניר אלון לבן	length	l1	
FrontTopRail	1	1080	18	18	plywood_birch 18mm / דיקט בירץ'	length		hidden tie rail + lid bearing, set back to clear the TV
FrontBotRail	1	1080	20	20	white_oak_veneer 20mm / פורניר אלון לבן	length	front	exposed between the legs
CenterDivider	1	620	105	18	plywood_birch 18mm / דיקט בירץ'	length		internal drawer divider, stopped short to clear the TV
CenterStile	1	168	44	20	white_oak 20mm / אלון לבן מלא (solid — edge-glue wide parts)	length		solid oak; stub-tenoned to the bottom rail, cleated to the inner top rail — NOT to the lid
DrawerFront	2	505	168	20	white_oak_veneer 20mm / פורניר אלון לבן	length	all	APPLIED false front, screwed from inside the box; 3mm reveal either side of the centre stile
DrawerSide	4	595	100	15	plywood_birch 15mm / דיקט בירץ'	none		
DrawerFB	4	440	100	15	plywood_birch 15mm / דיקט בירץ'	none		
DrawerBottom	2	565	440	4	hardboard 4mm / מזונית	none		captured between the front and back panels

Material summary

Material	Parts	Area (m^2)	Banding (m)	Sheets (est.)
white_oak 60mm / אלון לבן מלא (solid — edge-glue wide parts)	4	0.094	0.0	1
white_oak_veneer 30mm / פורניר אלון לבן	1	0.907	3.96	1
white_oak_veneer 20mm / פורניר אלון לבן	6	0.58	5.93	1
plywood_birch 18mm / דיקט בירץ'	2	0.085	0.0	1
white_oak 20mm / אלון לבן מלא (solid — edge-glue wide parts)	1	0.007	0.0	1
plywood_birch 15mm / דיקט בירץ'	8	0.414	0.0	1
hardboard 4mm / מזונית	2	0.497	0.0	1

Sheet count is a heuristic estimate, not an optimised cut plan. For production nesting use OpenCutList or CutList Optimizer.

Assembly Plan — Hidden-TV Coffee Table

Overall: 1260 × 420 × 720 mm Construction style: traditional Joint method: glued_dowel

Mechanism & hardware notes

These joints are mounted per the hardware datasheet or a sizing procedure — no fixed drilling coordinates are emitted for them:

pocket_screw — בורג כיס (Kreg)

Pocket-hole joinery: an angled Ø9.5mm stepped pilot bored with a Kreg-class jig, screw driven into the mating part. Fast and strong for boxes and face frames; semi-visible holes (plug or hide inside the box).

- **Mounting**: clamp the joint, drive screws through the pockets into the mating part; no through-drilling on the show face
- **Spacing**: one screw ~50mm from each end, then every ~150mm along the joint
- [confidence: high] — verify against the actual product datasheet.

piano_hinge — ציר פסנתר (רצוף)

Continuous (piano) hinge running the full length of a lid/door. Distributes load along the whole edge — the right choice for a flip-top lid.

- **Mounting**: mount per the hinge datasheet: knuckle/barrel centred on the pivot line and sitting proud of the surface, leaf inset from the edge so the lid clears as it swings. Confirm leaf width against panel thickness before buying.
- **Spacing**: fasten EVERY pre-punched hole on a lid that bears weight
- [confidence: assumed] — verify against the actual product datasheet.

gas_strut — בוכנת גז (לדלת מתרוממת)

Gas spring / lid stay that holds a lifting lid open and eases its fall. Sizing is a torque calculation, NOT a drilling coordinate.

- **Procedure**: required strut force ≈ (lid mass M × g × d_cg) ÷ mounting-arm length, split across the number of struts, where d_cg is the hinge-to-centre-of-gravity distance. Mark the force ASSUMED and confirm with the supplier's lid-stay / gas-strut calculator (Blum Aventos, Häfele Free, or the strut maker's tool). Bracket geometry sets the open angle.
- **Mounting**: one strut per side for lids over ~5kg or ~600mm; end fittings per the strut's ball-stud brackets
- [confidence: assumed] — verify against the actual product datasheet.

Tools needed

- Brad-point Ø8mm with depth stop
- Carpenter's square / angle clamp
- Clamps
- Rubber mallet
- Pencil + tape measure

Hardware list

- 1× continuous piano hinge (cut to lid length)
- 8× fluted hardwood dowel Ø8×30mm
- 2× ball-stud end brackets
- 2× gas struts (force per supplier calc)
- 1× hinge screws (every hole)
- 12× pocket-hole screws (length per panel thickness)
- 8× wood glue

Pre-assembly drilling

Do ALL drilling before you start assembling. Once panels are joined, you can't reach the inside faces.

BackApron_5

glued_dowel (face) — connecting to Leg_0:

- **dowel_face**: Ø8mm × 15.0mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_face**: Ø8mm × 15.0mm deep, at 140mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (face) — connecting to Leg_2:

- **dowel_face**: Ø8mm × 15.0mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_face**: Ø8mm × 15.0mm deep, at 140mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

EndApron_6

glued_dowel (face) — connecting to Leg_0:

- **dowel_face**: Ø8mm × 15.0mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_face**: Ø8mm × 15.0mm deep, at 140mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (face) — connecting to Leg_1:

- **dowel_face**: Ø8mm × 15.0mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_face**: Ø8mm × 15.0mm deep, at 140mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

EndApron_7

glued_dowel (face) — connecting to Leg_2:

- **dowel_face**: Ø8mm × 15.0mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_face**: Ø8mm × 15.0mm deep, at 140mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (face) — connecting to Leg_3:

- **dowel_face**: Ø8mm × 15.0mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

- **dowel_face**: Ø8mm × 15.0mm deep, at 140mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

FrontBotRail_9

glued_dowel (face) — connecting to Leg_1:

- **dowel_face**: Ø8mm × 15.0mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_face**: Ø8mm × 15.0mm deep, at -20mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (face) — connecting to Leg_3:

- **dowel_face**: Ø8mm × 15.0mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_face**: Ø8mm × 15.0mm deep, at -20mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

Leg_0

glued_dowel (edge) — connecting to BackApron_5:

- **dowel_edge**: Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_edge**: Ø8mm × 19mm deep, at 140mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (edge) — connecting to EndApron_6:

- **dowel_edge**: Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_edge**: Ø8mm × 19mm deep, at 140mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

Leg_1

glued_dowel (edge) — connecting to EndApron_6:

- **dowel_edge**: Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_edge**: Ø8mm × 19mm deep, at 140mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (edge) — connecting to FrontBotRail_9:

- **dowel_edge**: Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_edge**: Ø8mm × 19mm deep, at -20mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

Leg_2

glued_dowel (edge) — connecting to BackApron_5:

- **dowel_edge**: Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_edge**: Ø8mm × 19mm deep, at 140mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (edge) — connecting to EndApron_7:

- **dowel_edge**: Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_edge**: Ø8mm × 19mm deep, at 140mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

Leg_3

glued_dowel (edge) — connecting to EndApron_7:

- **dowel_edge**: Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_edge**: Ø8mm × 19mm deep, at 140mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (edge) — connecting to FrontBotRail_9:

- **dowel_edge**: Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_edge**: Ø8mm × 19mm deep, at -20mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

Assembly steps

Step 1: Install Leg

Parts: Leg_0, Leg_1, Leg_2, Leg_3

1. Position and fix per the drilling schedule above.

Step 2: Install Lid

Parts: Lid_4

1. Position and fix per the drilling schedule above.

Step 3: Install BackApron

Parts: BackApron_5

1. Position and fix per the drilling schedule above.

Step 4: Install EndApron

Parts: EndApron_6, EndApron_7

1. Position and fix per the drilling schedule above.

Step 5: Install FrontTopRail

Parts: FrontTopRail_8

1. Position and fix per the drilling schedule above.

Step 6: Install FrontBotRail

Parts: FrontBotRail_9

1. Position and fix per the drilling schedule above.

Step 7: Install CenterDivider

Parts: CenterDivider_10

1. Position and fix per the drilling schedule above.

Step 8: Install CenterStile

Parts: CenterStile_11

1. Position and fix per the drilling schedule above.

Step 9: Install TV

Parts: TV_12

1. Position and fix per the drilling schedule above.

Step 10: Install VESAbracket

Parts: VESAbracket_13

1. Position and fix per the drilling schedule above.

Step 11: Install DrawerSide

Parts: DrawerSide_16, DrawerSide_17

1. Position and fix per the drilling schedule above.

Step 12: Install DrawerFB

Parts: DrawerFB_18, DrawerFB_19

1. Position and fix per the drilling schedule above.

Step 13: Install DrawerSide

Parts: DrawerSide_21, DrawerSide_22

1. Position and fix per the drilling schedule above.

Step 14: Install DrawerFB

Parts: DrawerFB_23, DrawerFB_24

1. Position and fix per the drilling schedule above.

Step 15: Assemble drawer boxes

Parts: DrawerBottom_20, DrawerBottom_25

1. Position and fix per the drilling schedule above.

Step 16: Hang doors

Parts: DrawerFront_14, DrawerFront_15

1. **v2 will add hinge-cup drilling coordinates here.**
2. Attach mounting plates to carcass sides at 37mm from front edge.

3. Click hinges into mounting plates; adjust overlay and alignment.

All drilling coordinates from joinery.json (verified sources). Confirm hardware-specific dimensions against the actual product you purchased.