
Oak dining table

Oak dining table


white_oak_veneer white_oak

Overall: **1600x750x900** mm
Units: **mm**
Date: **2026-11-08**

Drawings

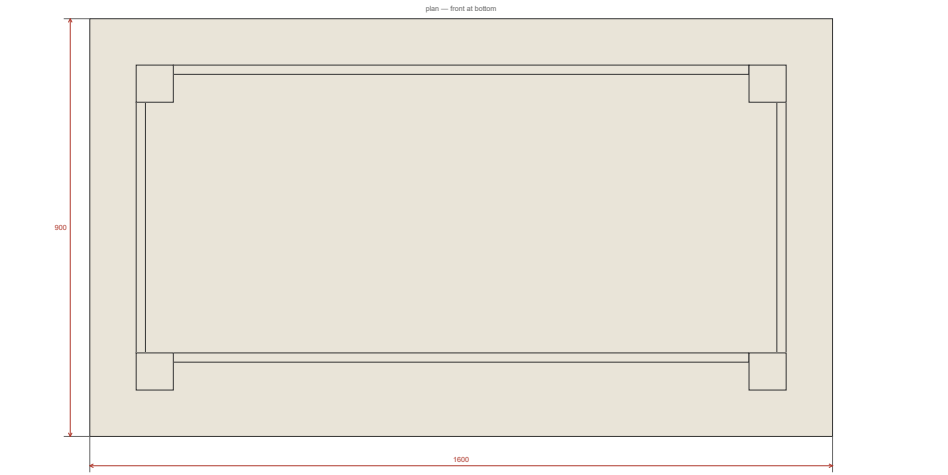

plan

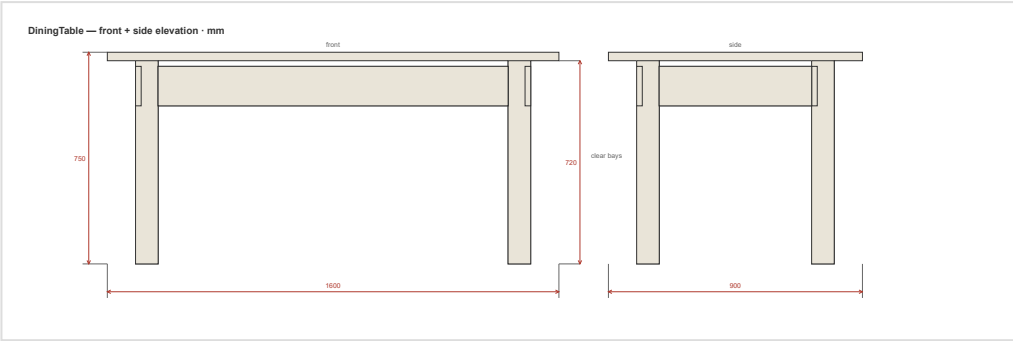

front

Cut list — Oak dining table

Units: mm

Part	Qty	Length	Width	Thk	Material	Grain	Banding	Notes
Top	1	1600	900	30	white_oak_veneer 30mm / פורניר אלון לבן	length	all	oak-veneered panel, solid-oak lipping all edges
Leg	4	720	80	80	white_oak 80mm / אלון לבן מלא (solid — edge-glue wide parts)	length		
ApronFront	1	1240	140	20	white_oak 20mm / אלון לבן מלא (solid — edge-glue wide parts)	length		
ApronBack	1	1240	140	20	white_oak 20mm / אלון לבן מלא (solid — edge-glue wide parts)	length		
ApronSide	2	540	140	20	white_oak 20mm / אלון לבן מלא (solid — edge-glue wide parts)	length		

Material summary

Material	Parts	Area (m^2)	Banding (m)	Sheets (est.)
white_oak_veneer 30mm / פורניר אלון לבן	1	1.44	5.0	1
white_oak 80mm / אלון לבן מלא (solid — edge-glue wide parts)	4	0.23	0.0	1
white_oak 20mm / אלון לבן מלא (solid — edge-glue wide parts)	4	0.498	0.0	1

> Sheet count is a heuristic estimate, not an optimised cut plan. For production nesting use OpenCutList or CutList Optimizer.

Assembly Plan — DiningTable

Overall: 1600 × 750 × 900 mm Construction style: traditional Joint method: glued_dowel

> ⚠️ **REVIEW REQUIRED — 12 joint(s) assigned by default, not verified.**
>
> These connections involve parts outside this script's carcass vocabulary (ApronBack, ApronFront, ApronSide, Leg, Top). Each was given the **style default** joint as a placeholder — that is a guess, not an engineered choice. **Review and set the real joint for each before building** (pass `joint=` on the part in the spec, or `joint_overrides` to the plan):
>
> - Top_0 ↔ Leg_1 → assigned `glued_dowel` (assumed)
> - Top_0 ↔ Leg_2 → assigned `glued_dowel` (assumed)
> - Top_0 ↔ Leg_3 → assigned `glued_dowel` (assumed)
> - Top_0 ↔ Leg_4 → assigned `glued_dowel` (assumed)
> - Leg_1 ↔ ApronFront_5 → assigned `glued_dowel` (assumed)
> - Leg_1 ↔ ApronSide_7 → assigned `glued_dowel` (assumed)
> - Leg_2 ↔ ApronBack_6 → assigned `glued_dowel` (assumed)
> - Leg_2 ↔ ApronSide_7 → assigned `glued_dowel` (assumed)
> - Leg_3 ↔ ApronFront_5 → assigned `glued_dowel` (assumed)
> - Leg_3 ↔ ApronSide_8 → assigned `glued_dowel` (assumed)
> - Leg_4 ↔ ApronBack_6 → assigned `glued_dowel` (assumed)
> - Leg_4 ↔ ApronSide_8 → assigned `glued_dowel` (assumed)

Tools needed

- Brad-point Ø8mm with depth stop
- Carpenter's square / angle clamp
- Clamps
- Rubber mallet
- Pencil + tape measure

Hardware list

- 12× fluted hardwood dowel Ø8×30mm
- 12× wood glue

Pre-assembly drilling

Do ALL drilling before you start assembling. Once panels are joined, you can't reach the inside faces.

ApronBack_6

glued_dowel (face) — connecting to Leg_2:

- **dowel_face**: Ø8mm × 15.0mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_face**: Ø8mm × 15.0mm deep, at 100mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (face) — connecting to Leg_4:

- **dowel_face**: Ø8mm × 15.0mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_face**: Ø8mm × 15.0mm deep, at 100mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

ApronFront_5

glued_dowel (face) — connecting to Leg_1:

- **dowel_face**: Ø8mm × 15.0mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_face**: Ø8mm × 15.0mm deep, at 100mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (face) — connecting to Leg_3:

- **dowel_face**: Ø8mm × 15.0mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_face**: Ø8mm × 15.0mm deep, at 100mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

ApronSide_7

glued_dowel (face) — connecting to Leg_1:

- **dowel_face**: Ø8mm × 15.0mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_face**: Ø8mm × 15.0mm deep, at 100mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (face) — connecting to Leg_2:

- **dowel_face**: Ø8mm × 15.0mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_face**: Ø8mm × 15.0mm deep, at 100mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

ApronSide_8

glued_dowel (face) — connecting to Leg_3:

- **dowel_face**: Ø8mm × 15.0mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_face**: Ø8mm × 15.0mm deep, at 100mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (face) — connecting to Leg_4:

- **dowel_face**: Ø8mm × 15.0mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_face**: Ø8mm × 15.0mm deep, at 100mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

Leg_1

glued_dowel (face) — connecting to Top_0:

- **dowel_face**: Ø8mm × 19mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_face**: Ø8mm × 19mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (edge) — connecting to ApronFront_5:

- **dowel_edge**: Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_edge**: Ø8mm × 19mm deep, at 100mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (edge) — connecting to ApronSide_7:

- **dowel_edge**: Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_edge**: Ø8mm × 19mm deep, at 100mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

Leg_2

glued_dowel (face) — connecting to Top_0:

- **dowel_face**: Ø8mm × 19mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_face**: Ø8mm × 19mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (edge) — connecting to ApronBack_6:

- **dowel_edge**: Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_edge**: Ø8mm × 19mm deep, at 100mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (edge) — connecting to ApronSide_7:

- **dowel_edge**: Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_edge**: Ø8mm × 19mm deep, at 100mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

Leg_3

glued_dowel (face) — connecting to Top_0:

- **dowel_face**: Ø8mm × 19mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_face**: Ø8mm × 19mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (edge) — connecting to ApronFront_5:

- **dowel_edge**: Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_edge**: Ø8mm × 19mm deep, at 100mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (edge) — connecting to ApronSide_8:

- **dowel_edge**: Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_edge**: Ø8mm × 19mm deep, at 100mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

Leg_4

glued_dowel (face) — connecting to Top_0:

- **dowel_face**: Ø8mm × 19mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_face**: Ø8mm × 19mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (edge) — connecting to ApronBack_6:

- **dowel_edge**: Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_edge**: Ø8mm × 19mm deep, at 100mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (edge) — connecting to ApronSide_8:

- **dowel_edge**: Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_edge**: Ø8mm × 19mm deep, at 100mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

Top_0

glued_dowel (edge) — connecting to Leg_1:

- **dowel_edge**: Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_edge**: Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (edge) — connecting to Leg_2:

- **dowel_edge**: Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_edge**: Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (edge) — connecting to Leg_3:

- **dowel_edge**: Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_edge**: Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (edge) — connecting to Leg_4:

- **dowel_edge**: Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_edge**: Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

Assembly steps

Step 1: Attach top panel

Parts: Top_0

1. Same procedure as the bottom panel.
2. After locking, measure diagonals to verify the carcass is square.

Step 2: Install Leg

Parts: Leg_1, Leg_2, Leg_3, Leg_4

1. Position and fix per the drilling schedule above.

Step 3: Install ApronFront

Parts: ApronFront_5

1. Position and fix per the drilling schedule above.

Step 4: Install ApronBack

Parts: ApronBack_6

1. Position and fix per the drilling schedule above.

Step 5: Install ApronSide

Parts: ApronSide_7, ApronSide_8

1. Position and fix per the drilling schedule above.

All drilling coordinates from joinery.json (verified sources). Confirm hardware-specific dimensions against the actual product you purchased.