

Melamine wardrobe

Melamine wardrobe

 melamine  hardboard  steel


Overall: **1200x2400x600** mm

Units: **mm**

Date: **2026-07-08**


Drawings

Wardrobe — plan (top view) · mm

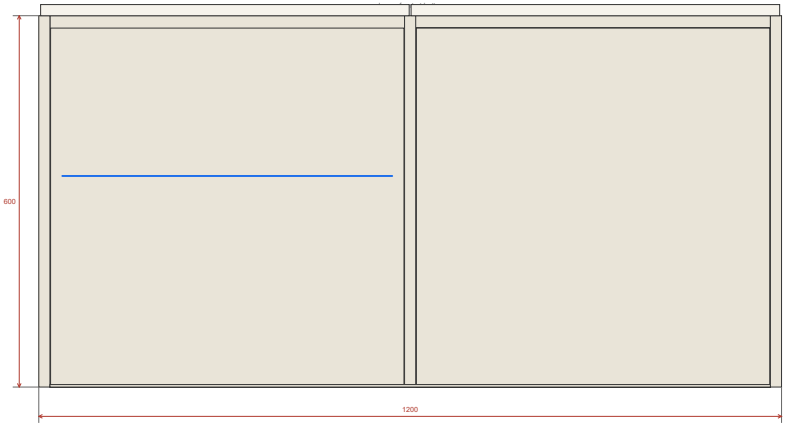

plan

Wardrobe — front + side elevation · mm

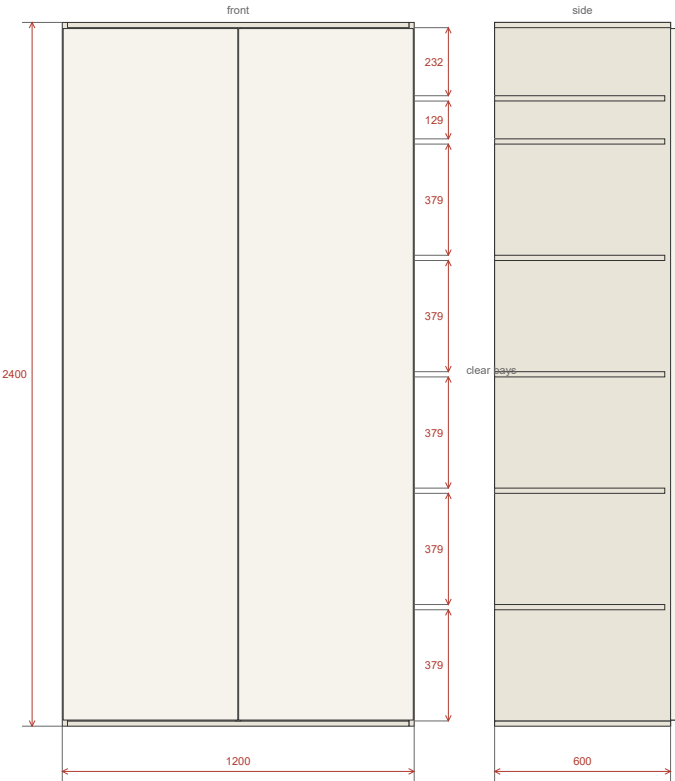

front

Cut list — Melamine wardrobe

Units: mm

Part	Qty	Length	Width	Thk	Material	Grain	Banding	Notes
Side	2	2400	600	18	melamine 18mm / סיבית מלמין	length		
Bottom	1	1164	600	18	melamine 18mm / סיבית מלמין	length		
Top	1	1164	600	18	melamine 18mm / סיבית מלמין	length		
Back	1	2364	1164	4	hardboard 4mm / מזונית	none		
Divider	1	2364	600	18	melamine 18mm / סיבית מלמין	length		
FixedPanel	1	580	571	18	melamine 18mm / סיבית מלמין	length	front	
Shelf	5	580	571	18	melamine 18mm / סיבית מלמין	length	front	
Door	2	2358	596	18	melamine 18mm / סיבית מלמין	length	all	

Material summary

Material	Parts	Area (m²)	Banding (m)	Sheets (est.)
melamine 18mm / סיבית מלמין	13	10.493	15.3	5
hardboard 4mm / מזונית	1	2.752	0.0	1

Sheet count is a heuristic estimate, not an optimised cut plan. For production nesting use OpenCutList or CutList Optimizer.

Assembly Plan — Wardrobe

Overall: 1200 × 2400 × 600 mm Construction style: frameless_kd Joint method: cam_and_dowel

Tools needed

- Brad-point Ø8mm
- Brad-point Ø8mm with depth stop
- Forstner Ø15mm
- Ø5mm with depth stop at 10mm
- Carpenter's square / angle clamp
- Clamps
- Rubber mallet
- Pencil + tape measure

Hardware list

- 8× Minifix connecting bolt Ø8×24mm
- 8× Minifix Ø15 cam housing
- 8× cover cap Ø15mm
- 10× fluted hardwood dowel Ø8×30mm
- 10× wood glue

Pre-assembly drilling

Do ALL drilling before you start assembling. Once panels are joined, you can't reach the inside faces.

Bottom_2

cam_and_dowel (face) — connecting to Side_0:

- **cam_housing:** Ø15mm × 13.5mm deep, at 50mm along panel, 34mm from edge. Bit: Forstner Ø15mm. [confidence: high]
- **cam_housing:** Ø15mm × 13.5mm deep, at 550mm along panel, 34mm from edge. Bit: Forstner Ø15mm. [confidence: high]

cam_and_dowel (face) — connecting to Side_1:

- **cam_housing:** Ø15mm × 13.5mm deep, at 50mm along panel, 34mm from edge. Bit: Forstner Ø15mm. [confidence: high]
- **cam_housing:** Ø15mm × 13.5mm deep, at 550mm along panel, 34mm from edge. Bit: Forstner Ø15mm. [confidence: high]

cam_and_dowel (edge) — connecting to Divider_5:

- **bolt_hole:** Ø8mm × 24mm deep, at 50mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm. [confidence: high]
- **bolt_hole:** Ø8mm × 24mm deep, at 550mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm. [confidence: high]

Divider_5

cam_and_dowel (face) — connecting to Bottom_2:

- **cam_housing:** Ø15mm × 13.5mm deep, at 50mm along panel, 34mm from edge. Bit: Forstner Ø15mm. [confidence: high]
- **cam_housing:** Ø15mm × 13.5mm deep, at 550mm along panel, 34mm from edge. Bit: Forstner Ø15mm. [confidence: high]

cam_and_dowel (face) — connecting to Top_3:

- **cam_housing:** Ø15mm × 13.5mm deep, at 50mm along panel, 34mm from edge. Bit: Forstner Ø15mm. [confidence: high]
- **cam_housing:** Ø15mm × 13.5mm deep, at 550mm along panel, 34mm from edge. Bit: Forstner Ø15mm. [confidence: high]

cam_and_dowel (edge) — connecting to FixedPanel_6:

- **bolt_hole:** Ø8mm × 24mm deep, at 50mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm. [confidence: high]
- **bolt_hole:** Ø8mm × 24mm deep, at 530mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm. [confidence: high]

glued_dowel (edge) — connecting to Shelf_8:

- **dowel_edge:** Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_edge:** Ø8mm × 19mm deep, at 540mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (edge) — connecting to Shelf_9:

- **dowel_edge:** Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_edge:** Ø8mm × 19mm deep, at 540mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (edge) — connecting to Shelf_10:

- **dowel_edge:** Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_edge:** Ø8mm × 19mm deep, at 540mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (edge) — connecting to Shelf_11:

- **dowel_edge:** Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_edge:** Ø8mm × 19mm deep, at 540mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (edge) — connecting to Shelf_12:

- **dowel_edge:** Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_edge:** Ø8mm × 19mm deep, at 540mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

FixedPanel_6

cam_and_dowel (face) — connecting to Side_0:

- **cam_housing:** Ø15mm × 13.5mm deep, at 50mm along panel, 34mm from edge. Bit: Forstner Ø15mm. [confidence: high]
- **cam_housing:** Ø15mm × 13.5mm deep, at 530mm along panel, 34mm from edge. Bit: Forstner Ø15mm. [confidence: high]

cam_and_dowel (face) — connecting to Divider_5:

- **cam_housing:** Ø15mm × 13.5mm deep, at 50mm along panel, 34mm from edge. Bit: Forstner Ø15mm. [confidence: high]
- **cam_housing:** Ø15mm × 13.5mm deep, at 530mm along panel, 34mm from edge. Bit: Forstner Ø15mm. [confidence: high]

Shelf_10

glued_dowel (face) — connecting to Side_1:

- **dowel_face**: Ø8mm × 13.5mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_face**: Ø8mm × 13.5mm deep, at 540mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (face) — connecting to Divider_5:

- **dowel_face**: Ø8mm × 13.5mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_face**: Ø8mm × 13.5mm deep, at 540mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

Shelf_11

glued_dowel (face) — connecting to Side_1:

- **dowel_face**: Ø8mm × 13.5mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_face**: Ø8mm × 13.5mm deep, at 540mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (face) — connecting to Divider_5:

- **dowel_face**: Ø8mm × 13.5mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_face**: Ø8mm × 13.5mm deep, at 540mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

Shelf_12

glued_dowel (face) — connecting to Side_1:

- **dowel_face**: Ø8mm × 13.5mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_face**: Ø8mm × 13.5mm deep, at 540mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (face) — connecting to Divider_5:

- **dowel_face:** Ø8mm × 13.5mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_face:** Ø8mm × 13.5mm deep, at 540mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

Shelf_8

glued_dowel (face) — connecting to Side_1:

- **dowel_face:** Ø8mm × 13.5mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_face:** Ø8mm × 13.5mm deep, at 540mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (face) — connecting to Divider_5:

- **dowel_face:** Ø8mm × 13.5mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_face:** Ø8mm × 13.5mm deep, at 540mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

Shelf_9

glued_dowel (face) — connecting to Side_1:

- **dowel_face:** Ø8mm × 13.5mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

- **dowel_face:** Ø8mm × 13.5mm deep, at 540mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (face) — connecting to Divider_5:

- **dowel_face:** Ø8mm × 13.5mm deep, at 40mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_face:** Ø8mm × 13.5mm deep, at 540mm along panel, panel_centermm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

Side_0

cam_and_dowel (edge) — connecting to Bottom_2:

- **bolt_hole:** Ø8mm × 24mm deep, at 50mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm. [confidence: high]
- **bolt_hole:** Ø8mm × 24mm deep, at 550mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm. [confidence: high]

cam_and_dowel (edge) — connecting to Top_3:

- **bolt_hole:** Ø8mm × 24mm deep, at 50mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm. [confidence: high]
- **bolt_hole:** Ø8mm × 24mm deep, at 550mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm. [confidence: high]

cam_and_dowel (edge) — connecting to FixedPanel_6:

- **bolt_hole:** Ø8mm × 24mm deep, at 50mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm. [confidence: high]
- **bolt_hole:** Ø8mm × 24mm deep, at 530mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm. [confidence: high]

shelf_pin (face (inner)) — connecting to adjustable_shelves:

- **System-32 shelf pin rows:** 2 rows × 73 holes each
- front_row: 37mm from front edge
- rear_row: 563mm from front edge
- Hole spacing: every 32mm, starting at 37mm from bottom
- Ø5mm × 10mm deep
- Bit: Ø5mm with depth stop at 10mm
- [confidence: high]

Side_1

cam_and_dowel (edge) — connecting to Bottom_2:

- **bolt_hole:** Ø8mm × 24mm deep, at 50mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm. [confidence: high]
- **bolt_hole:** Ø8mm × 24mm deep, at 550mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm. [confidence: high]

cam_and_dowel (edge) — connecting to Top_3:

- **bolt_hole:** Ø8mm × 24mm deep, at 50mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm. [confidence: high]
- **bolt_hole:** Ø8mm × 24mm deep, at 550mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm. [confidence: high]

glued_dowel (edge) — connecting to Shelf_8:

- **dowel_edge:** Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_edge:** Ø8mm × 19mm deep, at 540mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (edge) — connecting to Shelf_9:

- **dowel_edge:** Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_edge:** Ø8mm × 19mm deep, at 540mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (edge) — connecting to Shelf_10:

- **dowel_edge:** Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_edge:** Ø8mm × 19mm deep, at 540mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (edge) — connecting to Shelf_11:

- **dowel_edge:** Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_edge:** Ø8mm × 19mm deep, at 540mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

glued_dowel (edge) — connecting to Shelf_12:

- **dowel_edge:** Ø8mm × 19mm deep, at 40mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]
- **dowel_edge:** Ø8mm × 19mm deep, at 540mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm with depth stop. [confidence: high]

shelf_pin (face (inner)) — connecting to adjustable_shelves:

- **System-32 shelf pin rows:** 2 rows × 73 holes each
- front_row: 37mm from front edge
- rear_row: 563mm from front edge
- Hole spacing: every 32mm, starting at 37mm from bottom
- Ø5mm × 10mm deep
- Bit: Ø5mm with depth stop at 10mm
- [confidence: high]

Top_3

cam_and_dowel (face) — connecting to Side_0:

- **cam_housing:** Ø15mm × 13.5mm deep, at 50mm along panel, 34mm from edge. Bit: Forstner Ø15mm. [confidence: high]
- **cam_housing:** Ø15mm × 13.5mm deep, at 550mm along panel, 34mm from edge. Bit: Forstner Ø15mm. [confidence: high]

cam_and_dowel (face) — connecting to Side_1:

- **cam_housing:** Ø15mm × 13.5mm deep, at 50mm along panel, 34mm from edge. Bit: Forstner Ø15mm. [confidence: high]
- **cam_housing:** Ø15mm × 13.5mm deep, at 550mm along panel, 34mm from edge. Bit: Forstner Ø15mm. [confidence: high]

cam_and_dowel (edge) — connecting to Divider_5:

- **bolt_hole:** Ø8mm × 24mm deep, at 50mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm. [confidence: high]
- **bolt_hole:** Ø8mm × 24mm deep, at 550mm along panel, panel_thickness / 2mm from edge. Bit: Brad-point Ø8mm. [confidence: high]

Assembly steps

Step 1: Lay down first side panel

Parts: Side_0, Side_1

1. Lay the **first** side panel flat on a clean surface, inside face up.
2. All cam housings and shelf-pin rows should already be drilled (see above).
3. The second side panel is attached **last** in this group — after bottom, dividers, and top are in place.

Step 2: Attach bottom panel

Parts: Bottom_2

1. Insert connecting bolts into the bottom panel's edge (pre-drilled holes).
2. Lower the bottom into the first side's cam housings.
3. Turn each cam 90° clockwise to lock.
4. Check square with a carpenter's square before the joint sets.

Step 3: Install fixed horizontal panels

Parts: FixedPanel_6

1. Insert bolts/dowels into the panel's edges.
2. Position into the cam housings / dowel holes in the side.
3. Lock cams or let dowels seat. Check square.

Step 4: Install vertical divider(s)

Parts: Divider_5

1. Insert bolts/dowels into the panel's edges.
2. Position into the cam housings / dowel holes in the side.
3. Lock cams or let dowels seat. Check square.

Step 5: Attach top panel

Parts: Top_3

1. Same procedure as the bottom panel.
2. After locking, measure diagonals to verify the carcass is square.

Step 6: Install back panel

Parts: Back_4

1. With the carcass lying face-down, slide the back panel into place.
2. Pin or staple at ~200mm intervals around the perimeter.

3. The back squares the carcass — measure diagonals before pinning.

Step 7: Insert adjustable shelves

Parts: Shelf_8, Shelf_9, Shelf_10, Shelf_11, Shelf_12

1. Insert shelf pins at the desired heights in the System-32 rows.
2. Lower each shelf onto its four pins.

Step 8: Install hanging rod(s)

Parts: Rod_7

1. Mark rod support bracket positions on both side panels.
2. Screw brackets into place, set rod into brackets.

Step 9: Hang doors

Parts: Door_13, Door_14

1. **v2 will add hinge-cup drilling coordinates here.**
2. Attach mounting plates to carcass sides at 37mm from front edge.
3. Click hinges into mounting plates; adjust overlay and alignment.

Final step: Wall anchoring

This unit is 2400mm tall — anchor it to the wall. any tall unit in a child's room must be anchored to the wall

All drilling coordinates from joinery.json (verified sources). Confirm hardware-specific dimensions against the actual product you purchased.