
FRONT ELEVATION

1:12 — all dimensions keyed to the table on the right

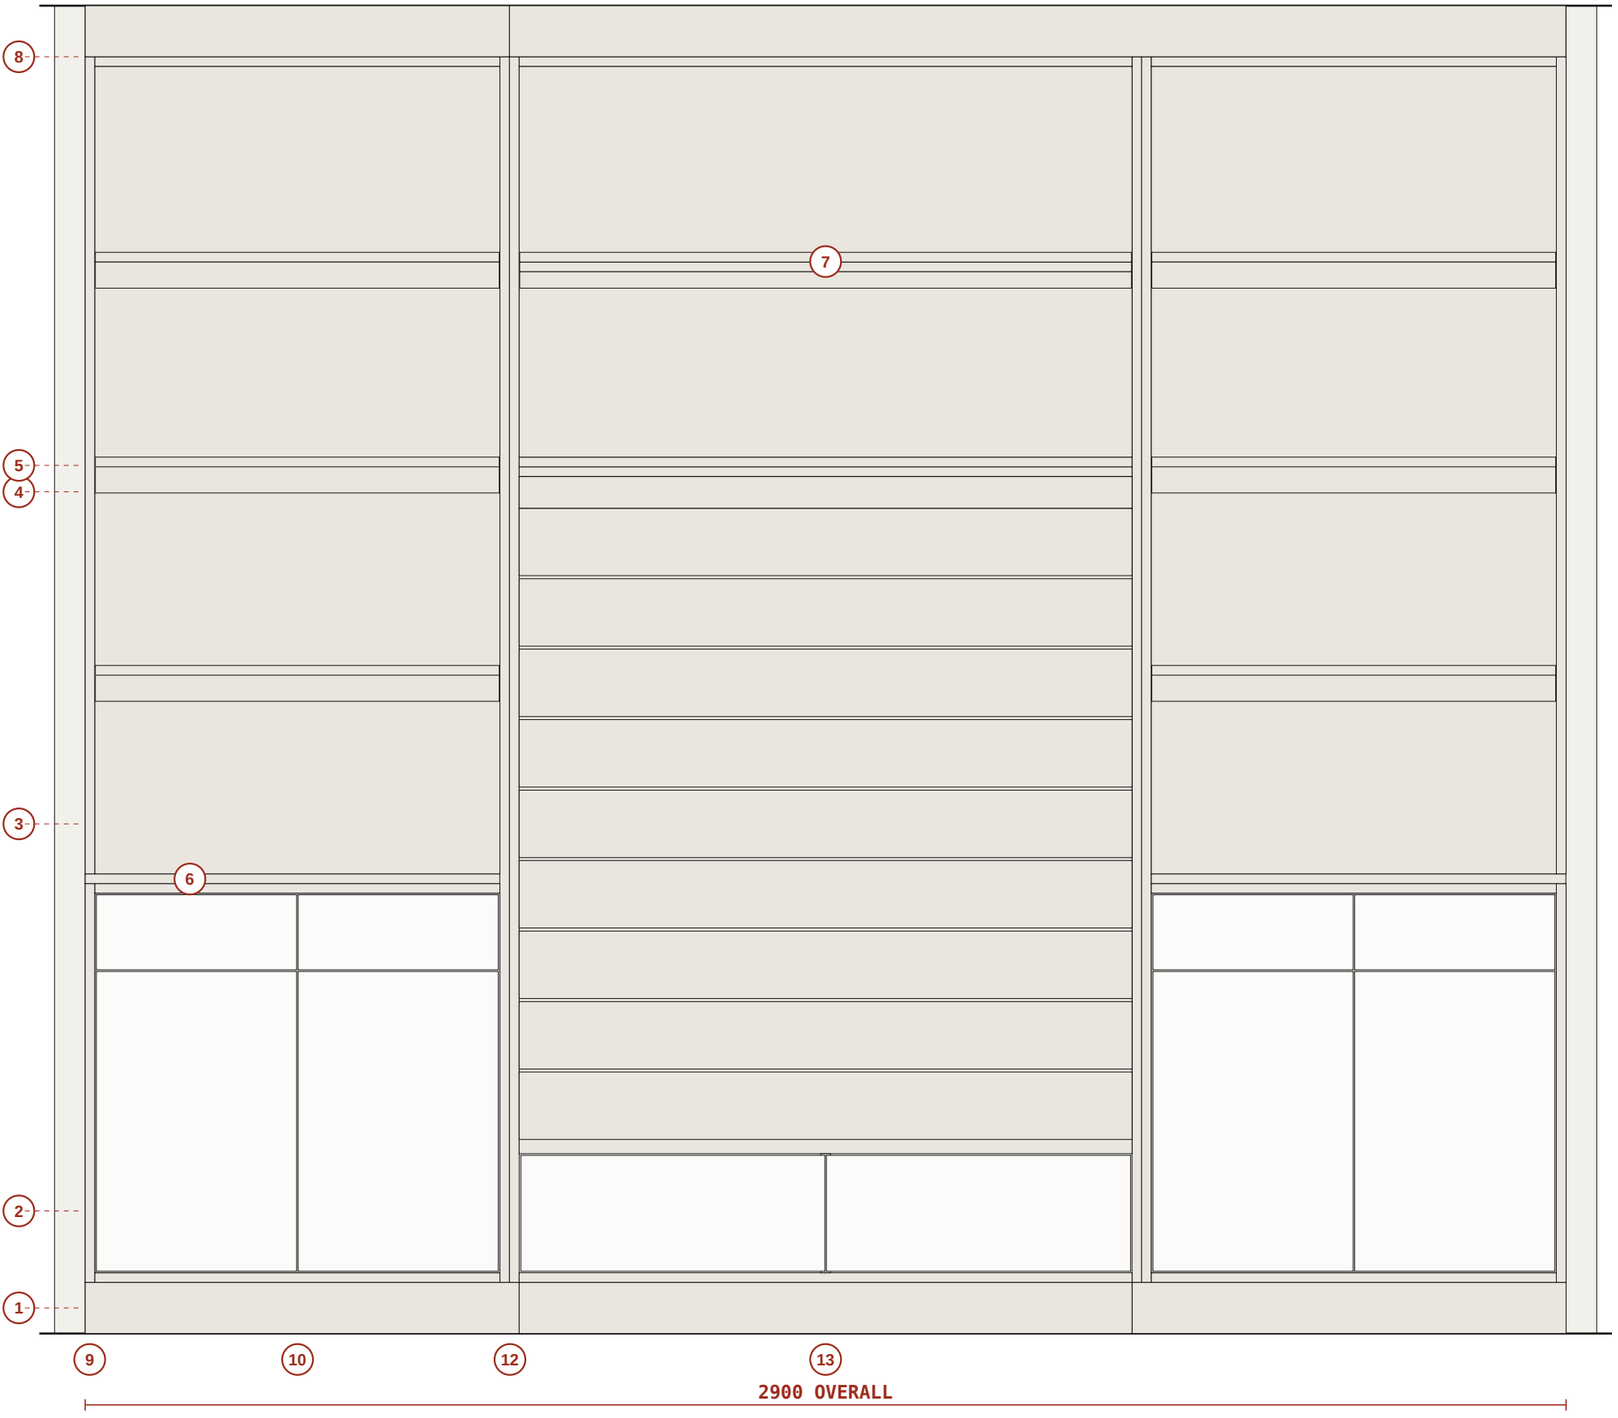

DIMENSION KEY

HEIGHTS — from finished floor

1	**Plinth**	0 → 100	recessed 60, cap moulding on top
2	**Bench zone**	100 → 380	two drawers; deck is 28mm
3	**Nook clear**	380 → 1616	1236 high × 1200 wide
4	**Header fascia**	1616 → 1678	62 drop; 100 band. L-beam + hides the LED
5	**Header deck**	1678 → 1716	38mm, 2×19 laminated
6	**Counter**	881 → 900	19mm; the line runs right across
7	**Centre shelf**	2079 → 2117	38mm deck + 32 nosing
8	**Carcass top**	2500	crown to 2600, scribed

WIDTHS — left to right

9	**End panel**	19	exposed return beside the door
10	**Side bay**	793 × 2	no dividers; shelves run right across
12	**Nook pier**	38 × 2	2×19 laminated, full height
13	**NOOK**	1200	clear between piers
	Shelf band	70	every shelf, side and centre alike


DEPTHS — from the wall face

Upper shelves	320	books read properly at this depth
Base + door	431	412 carcass + 19 shaker front
Bench deck	500	70 proud of the base run
Service void	28	LED feed only — see sheet 3

Build to the SMALLEST measured width and height, minus a 15–20 scribe at the right-hand end. The 2900 and 2600 above are plan dimensions.


SECTION A–A

1:9 — cut through the centre of the nook, looking left

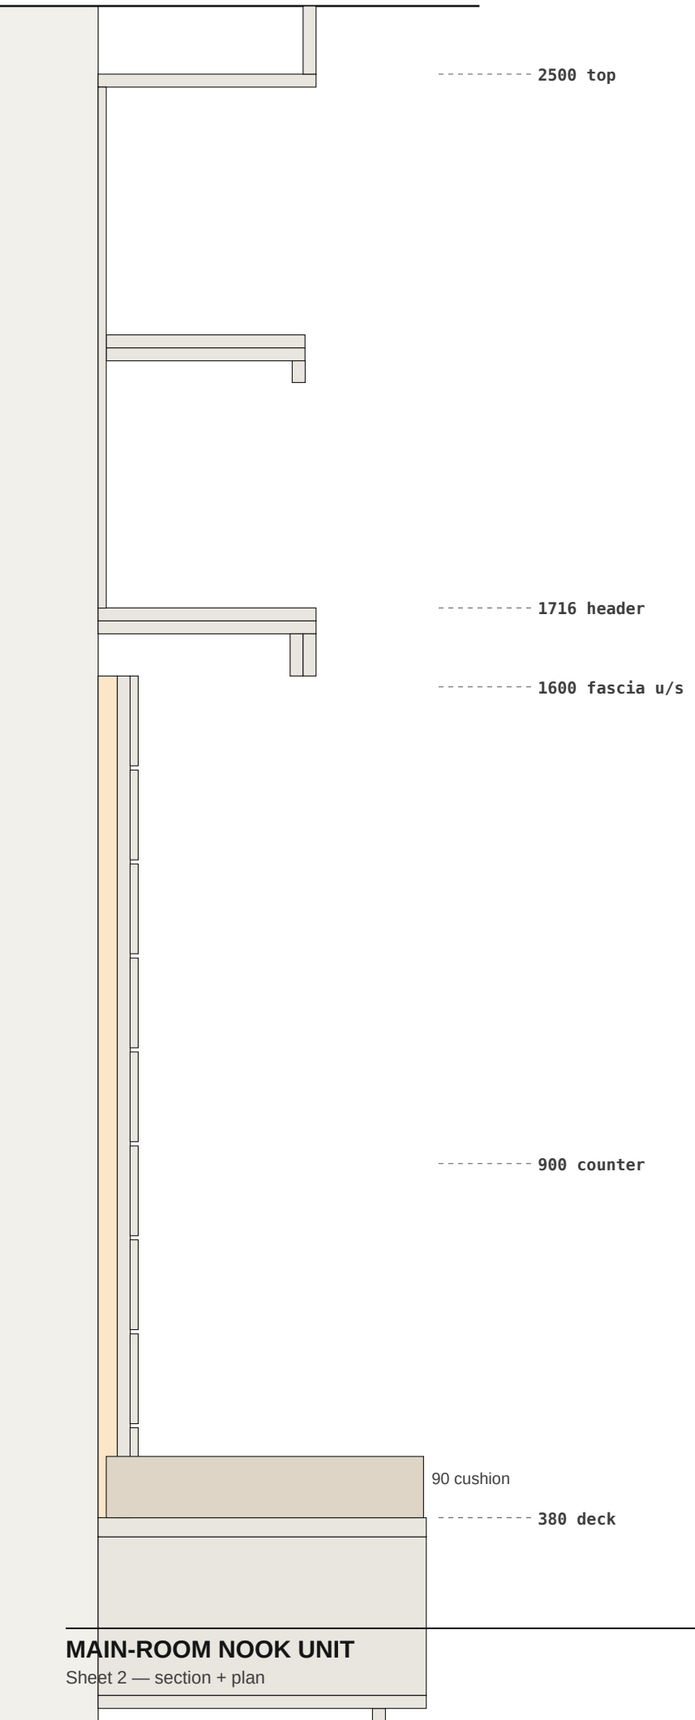

PLAN at +600

1:9 — base level; upper carcas

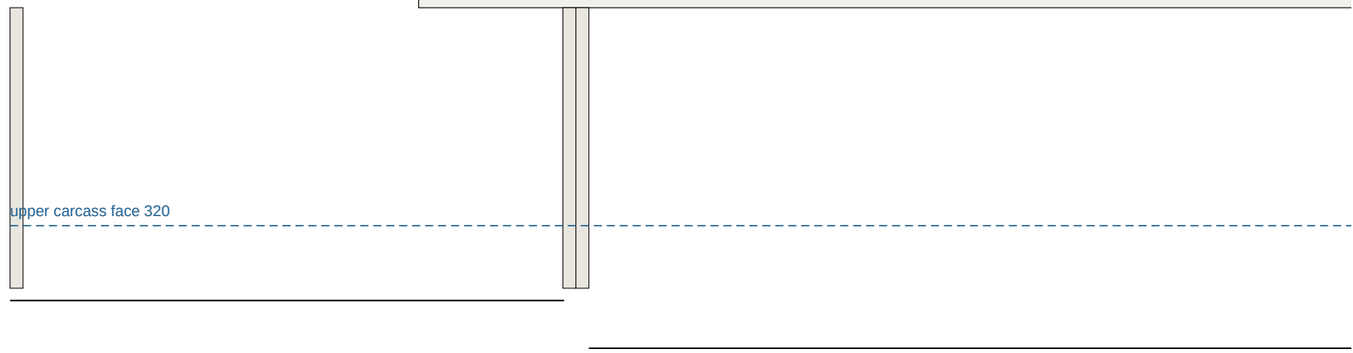

MAIN-ROOM NOOK UNIT

Sheet 2 — section + plan

v1.0 DESIGN LOCKED · NOT site-measured — do not cut


mm · A3 · sheet 2 of 3

ELECTRICAL — SOCKET IN THE BENCH, LED BEHIND THE HEADER

Your existing outlet is low and central — right where the bench is. Rather than fight that, it feeds a socket INSIDE the right-hand bench drawer: a charging drawer. Sconces are gone. The only thing still going up the wall is the low-voltage LED run, so the 30mm service void behind the nook back now carries one cable.

A NOOK BACK — only one device now

1:12

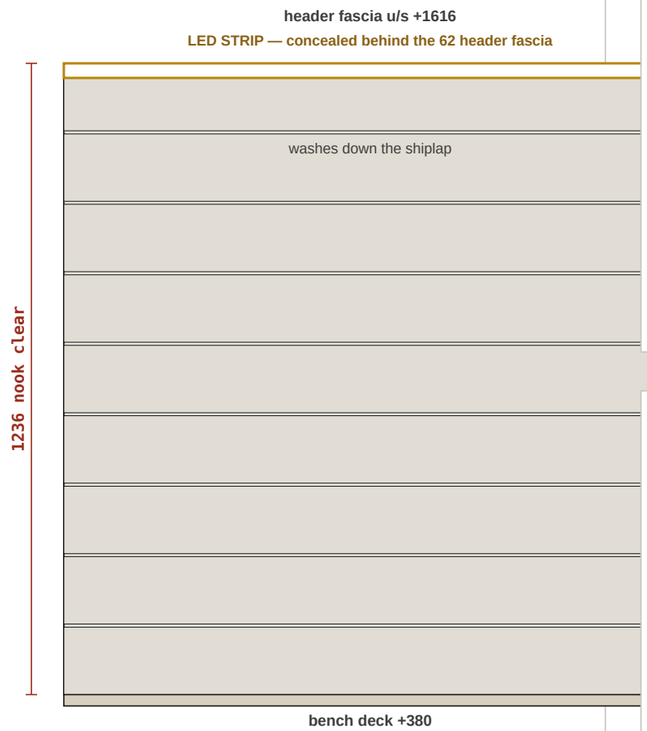


NO boxes are cut into the nook back at all. The shiplap runs unbroken from the bench deck up to the fascia.

That is the whole point of putting the socket in a drawer.

B HORIZONTAL SECTION through the nook back

1:2

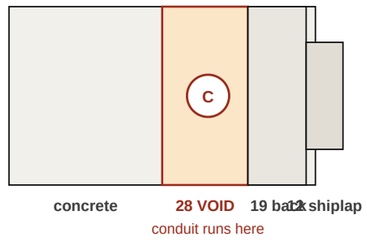


Five 45-wide furring strips hold the back panel off the concrete. The gaps between them are the chase for ONE low-voltage cable.

Nothing is cut into the wall: no dust, no rebar, no risk to the 4" drain stack.

Keep the void even though only one cable uses it — it costs five strips of MDF.

C VERTICAL ROUTE — existing box to drawer socket and LED

1:14

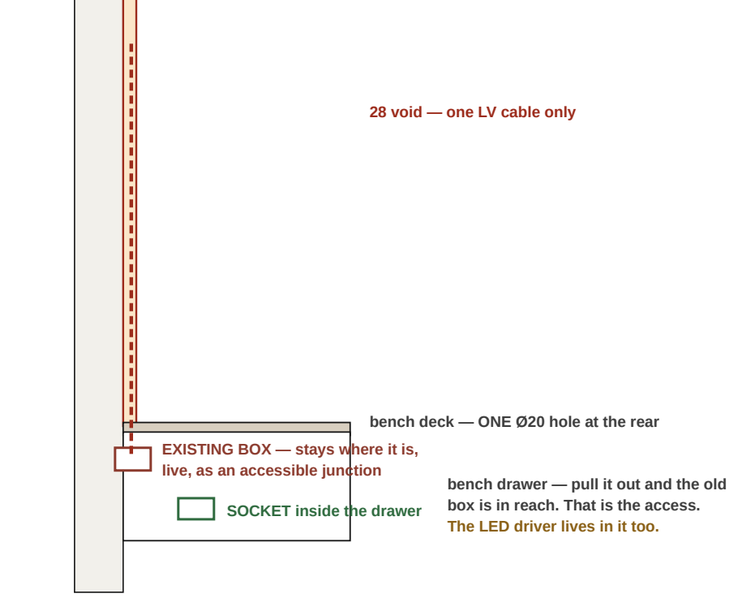

WHAT THE ELECTRICIAN ACTUALLY DOES

1. Leaves the existing box where it is, live. It ends up behind the right-hand bench drawer, which pulls out — that is the access.
2. Takes a spur from it to a socket mounted INSIDE that drawer. Charging drawer: phones and the LED driver live in there, nothing on show.
3. Runs ONE low-voltage cable from the driver, through a Ø20 hole at the rear of the bench deck, up inside the 30mm void to the header.
4. Terminates at the LED strip behind the 62mm header fascia, washing down the shiplap. No sconces, no boxes in the nook back.
5. Nothing is chased into the concrete. No core drilling, no rebar scanning, no risk to the 4" drain stack in this wall.

SEQUENCE MATTERS

Conduit and boxes go in while the nook back is off. Once the battens are glued on and the unit is sprayed, changing a box position means taking the back panel out again.

STILL UNKNOWN: the exact height and offset of your existing outlet. Measure it and I will put it on the drawing properly.