
FRONT ELEVATION

1:13 — all dimensions keyed to the table on the right

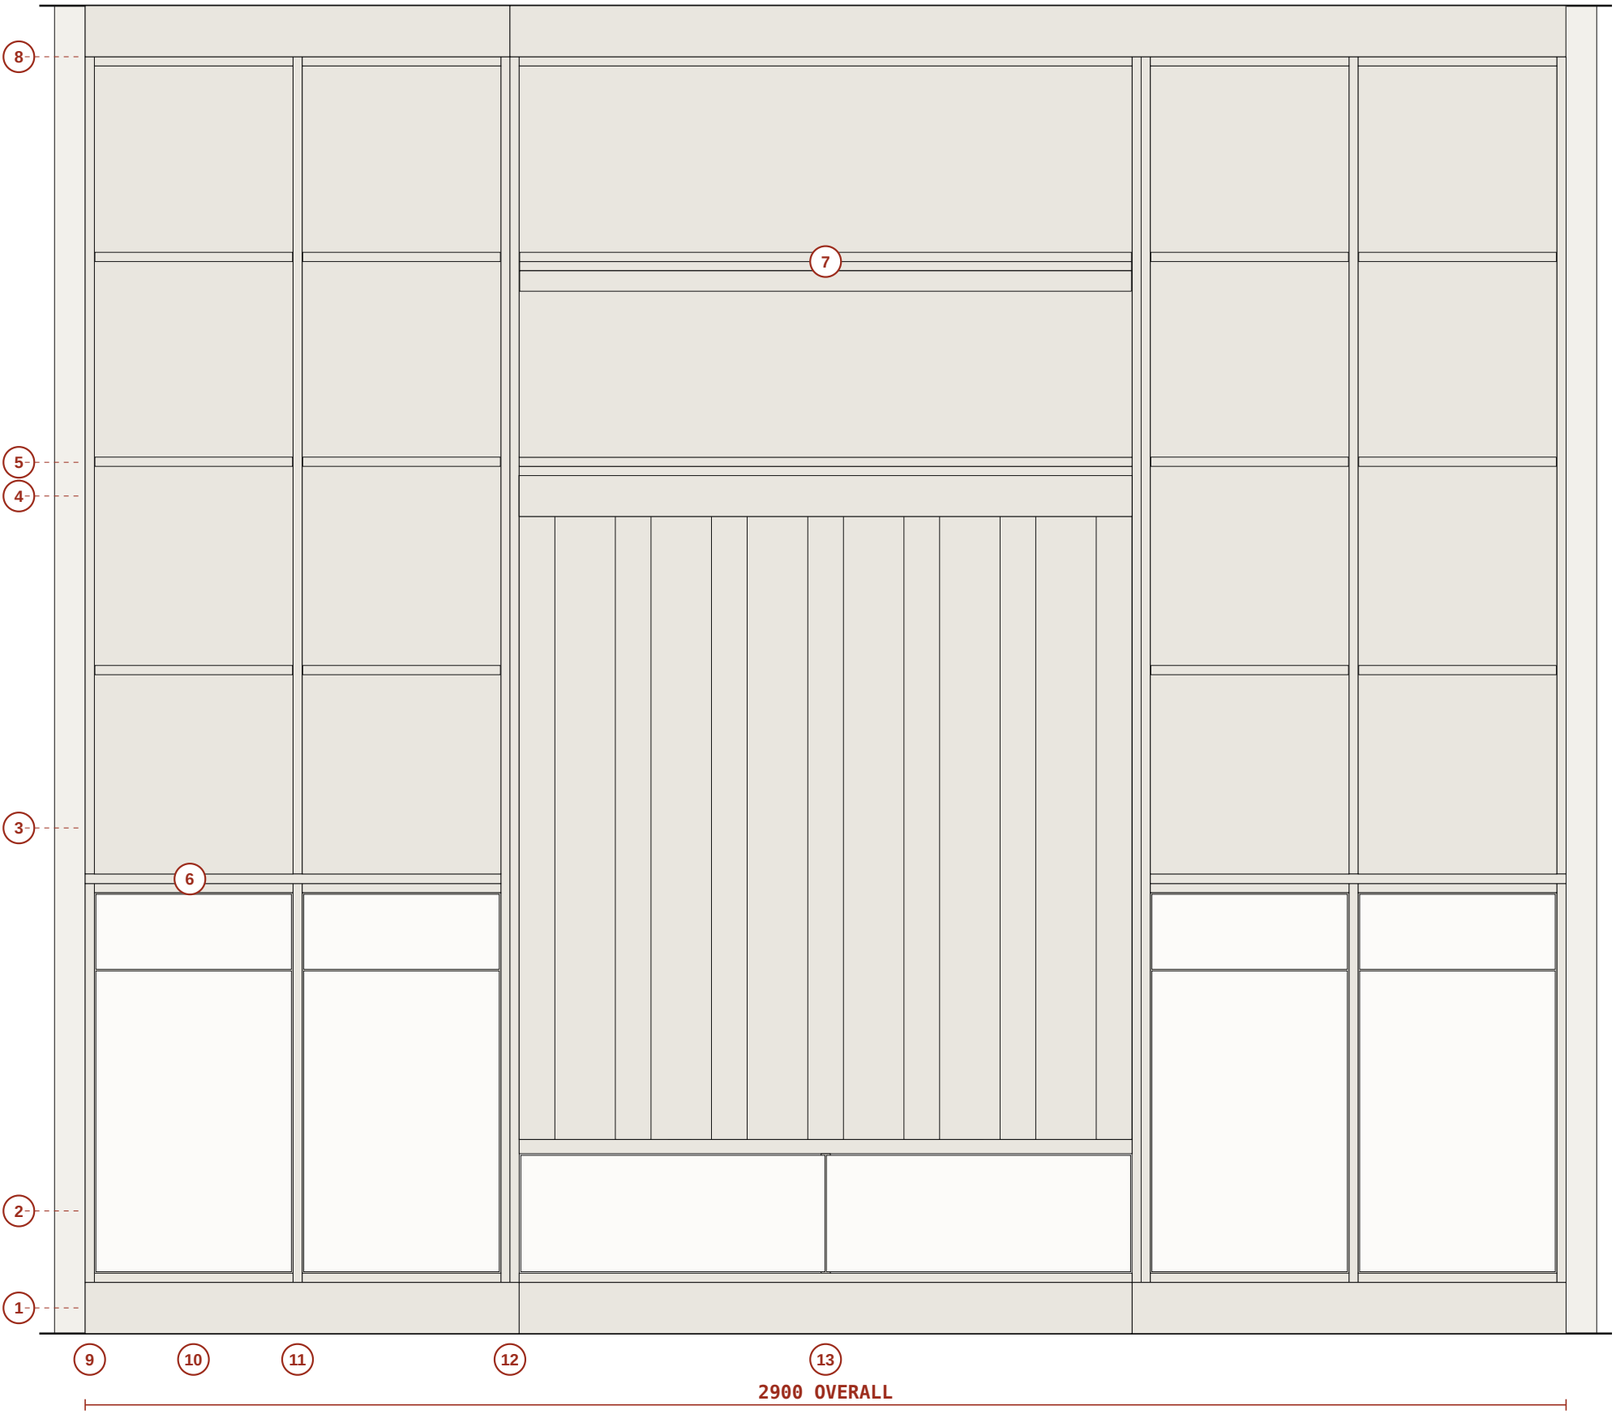

DIMENSION KEY

HEIGHTS — from finished floor

1	**Plinth**	`0 → 100`	recessed 60, cap moulding on top
2	**Bench zone**	`100 → 380`	two drawers; deck is 28mm
3	**Nook clear**	`380 → 1600`	1220 high × 1200 wide, no divider
4	**Header fascia**	`1600 → 1680`	80 downstand — the L-beam
5	**Header deck**	`1680 → 1716`	36mm, 2×18 laminated
6	**Counter**	`881 → 900`	19mm; the line runs right across
7	**Centre shelf**	`2081 → 2117`	36mm + 40 nosing, full 1200 span
8	**Carcass top**	`2500`	crown to 2600, scribed

WIDTHS — left to right

9	**End panel**	`18`	exposed return beside the door
10	**Shelf column**	`389 × 4`	15 shelves, all 386–389
11	**Inner divider**	`18 × 2`	
12	**Nook pier**	`36 × 2`	2×18 laminated, full height
13	**NOOK**	`1200`	clear between piers


DEPTHS — from the wall face

Upper shelves	`320`	books read properly at this depth
Base + door	`430`	412 carcass + 19 shaker front
Bench deck	`500`	70 proud of the base run
Service void	`30`	behind the nook back — see sheet 3

Build to the SMALLEST measured width and height, minus a 15–20 scribe at the right-hand end. The 2900 and 2600 above are plan dimensions.


SECTION A–A

1:9 — cut through the centre of the nook, looking left

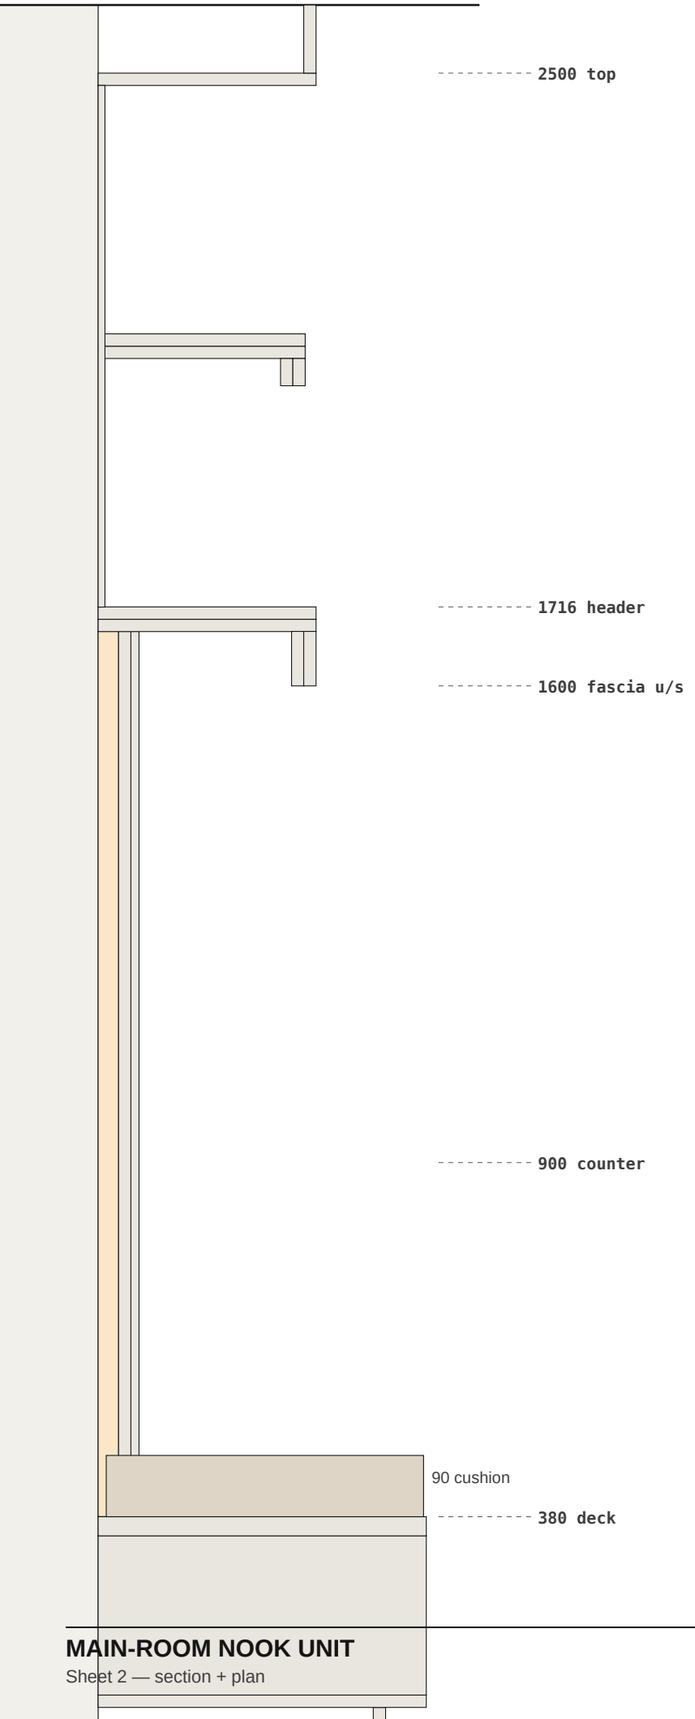

PLAN at +600

1:9 — base level; upper carcas

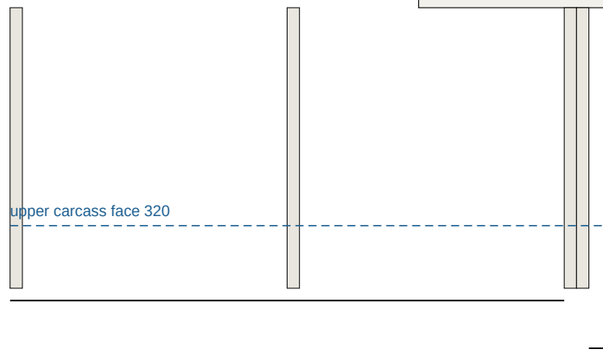

200 concrete — ends at x=600

MAIN-ROOM NOOK UNIT

Sheet 2 — section + plan


DRAFT — 13 decisions open · NOT site-measured

mm · A3 · sheet 2 of 3

ELECTRICAL — WHY THE SOCKET MOVES


Your existing outlet is low and central, so it lands directly behind the bench drawers. A live box may not be buried behind fixed joinery with no access. Instead of chasing three new boxes into 200mm concrete, the nook back is held 30mm off the wall. That gap is the chase. Everything wires inside it.

A NOOK BACK, seen from the room 1:12

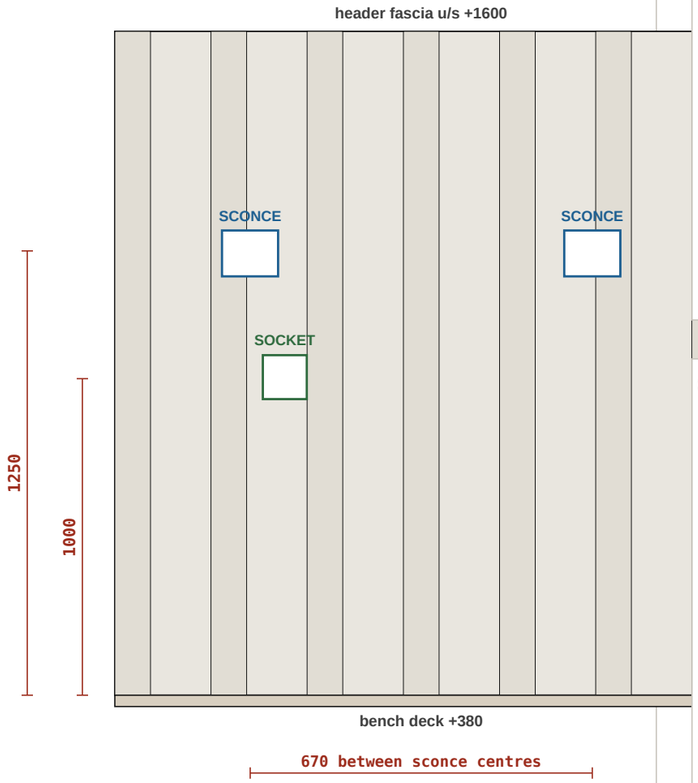

Heights from finished floor. Final positions are the חשמלאי's call — cut the boxes in the back panel AFTER he marks them on site.

B HORIZONTAL SECTION through the nook back 1:2

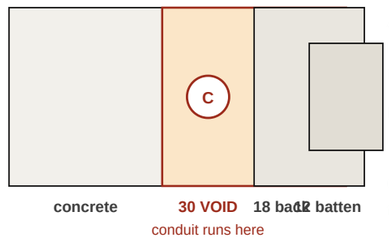


A 45-wide furring strip every ~300 holds the back panel off the concrete. The gaps between them are the chase.

Nothing is cut into the wall: no dust, no rebar, no risk to the 4" drain stack.

Cost of the whole change: five strips of 30mm MDF.

C VERTICAL ROUTE — existing box to the new outlets 1:14

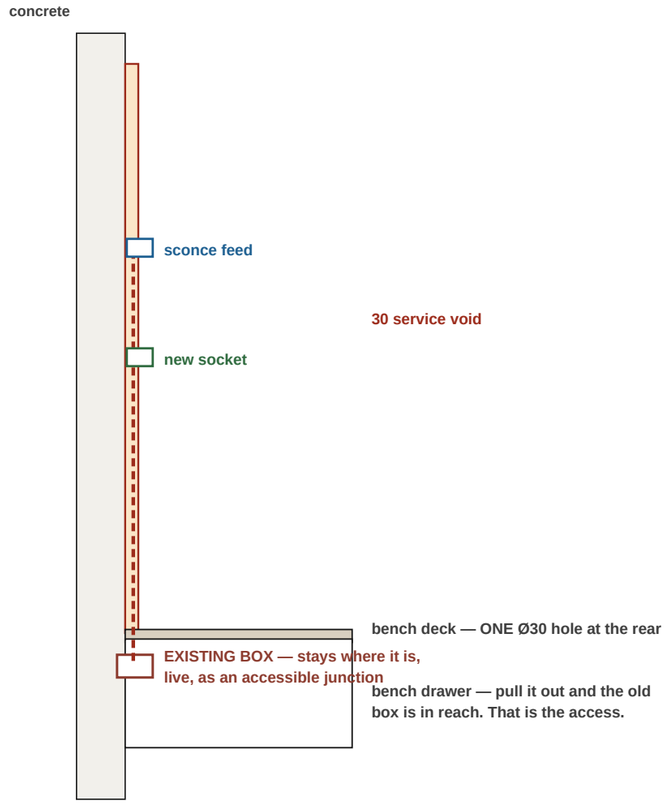

WHAT THE ELECTRICIAN ACTUALLY DOES

1. Leaves the existing box exactly where it is, live, as a junction. It ends up behind the centre bench drawer, which pulls out — that satisfies the access requirement.
2. Drills one Ø30 hole through the rear of the bench deck, in line with the void.
3. Runs flexible conduit up inside the 30mm void to a new socket at 1000 and two sconce boxes at 1250.
4. Nothing is chased into the concrete. No core drilling, no rebar scanning, no risk to the 4" drain stack in this wall.
5. Marks the three box positions on the back panel before it is sprayed. The נגר cuts them, not the electrician.

SEQUENCE MATTERS

Conduit and boxes go in while the nook back is off. Once the battens are glued on and the unit is sprayed, changing a box position means taking the back panel out again.

STILL UNKNOWN: the exact height and offset of your existing outlet. Measure it and I will put it on the drawing properly.