

OWI ROBOTIC ARM SETUP
PLAESE INSERT ROBOTIC ARM USB PORT AND POWER ON SW

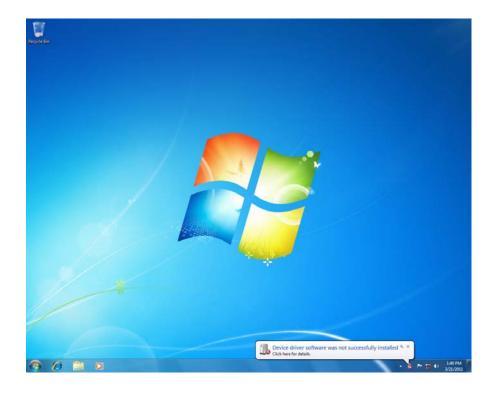


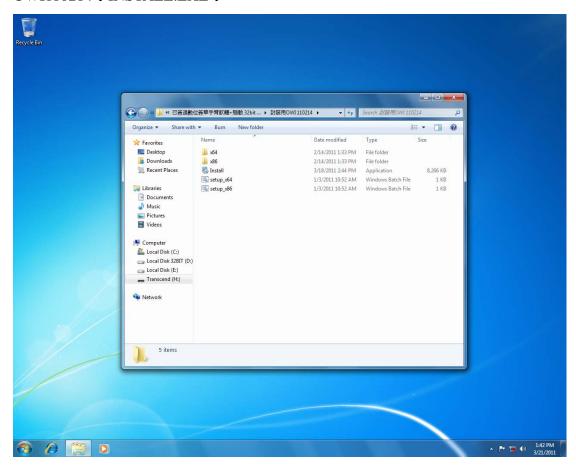


#### OWI110214→INSTALL.EXE→





YES

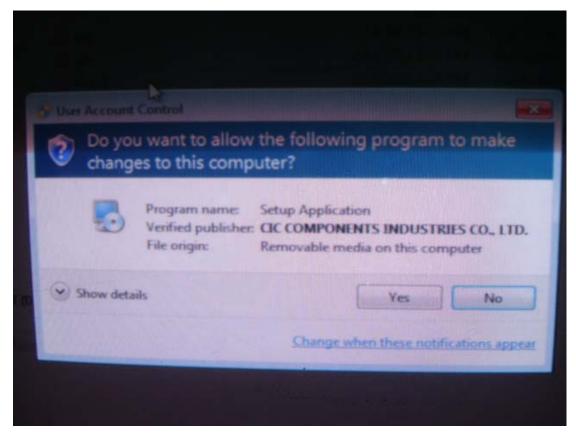

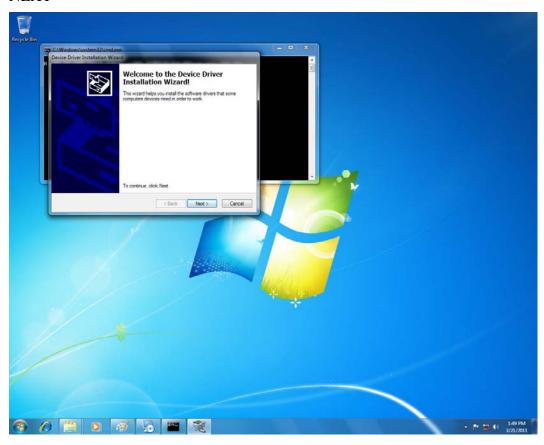



INSTALL THIS DRIVERS SOFTWARE ANYWAY

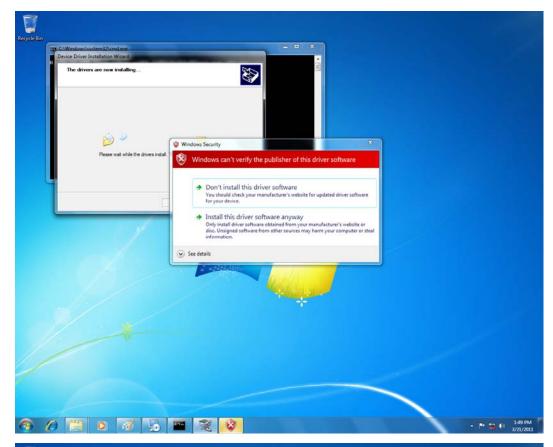


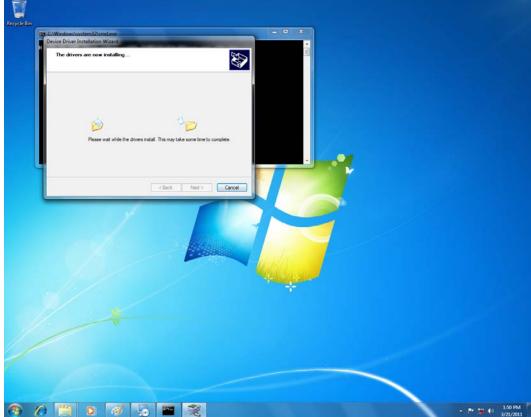



**FINISH** 

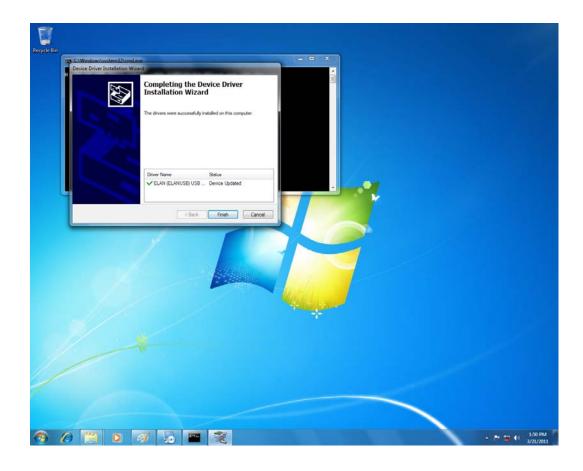


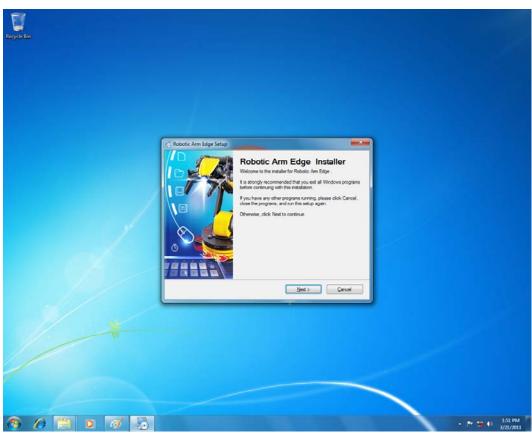


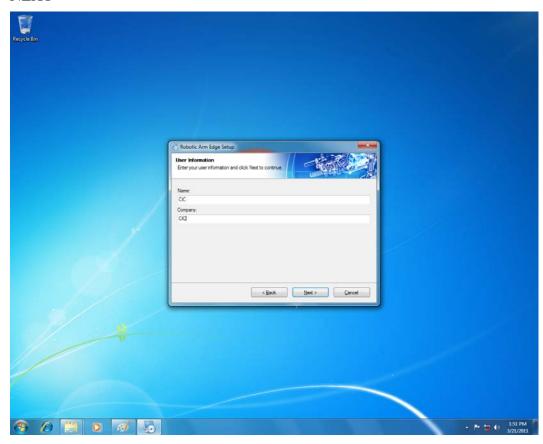

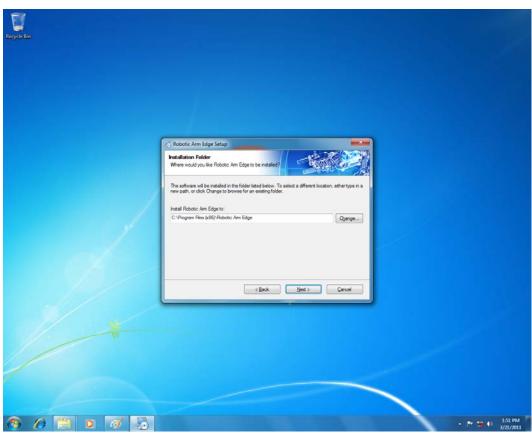


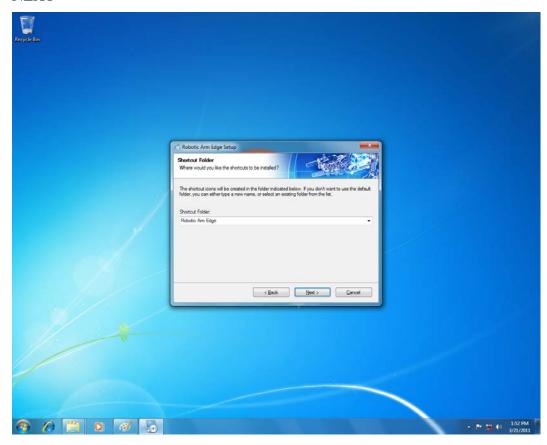

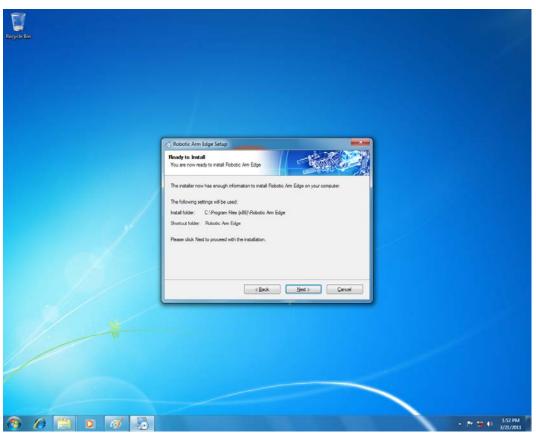


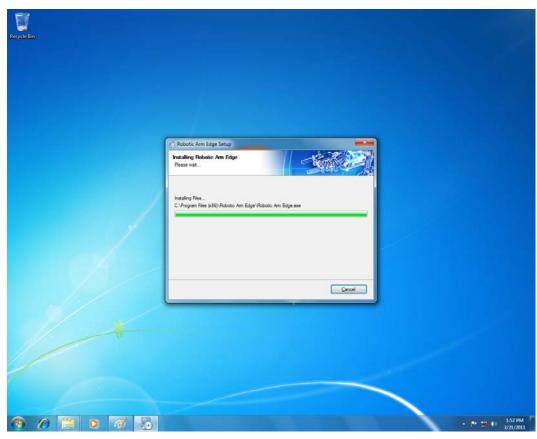




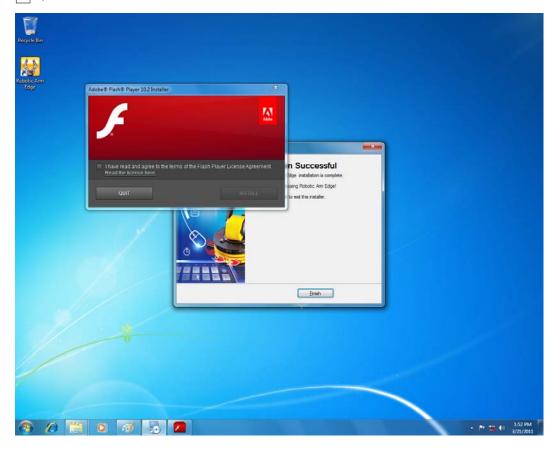


### INSTALL

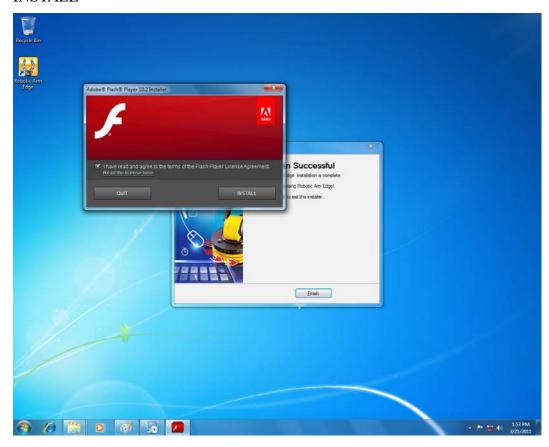


# DONE

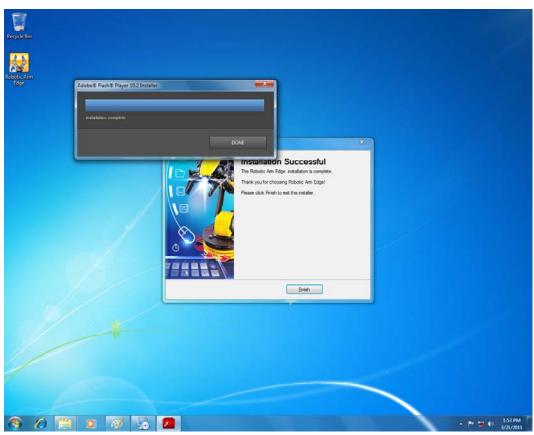

# FINISH

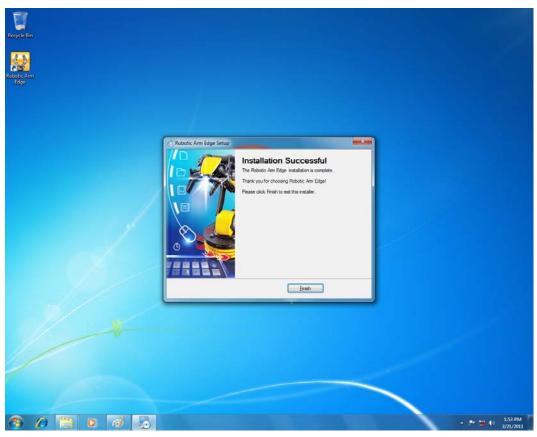

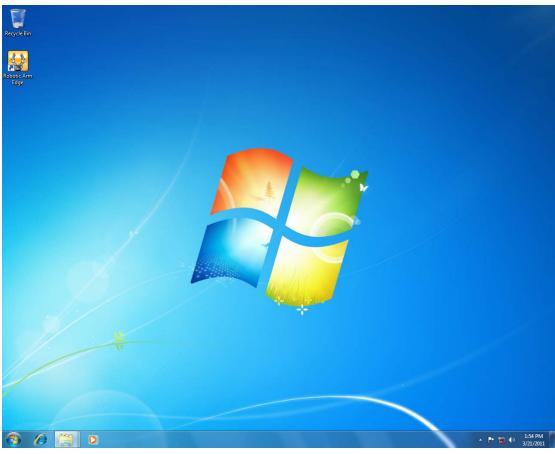

# OK PLEASE TRY THANK YOU