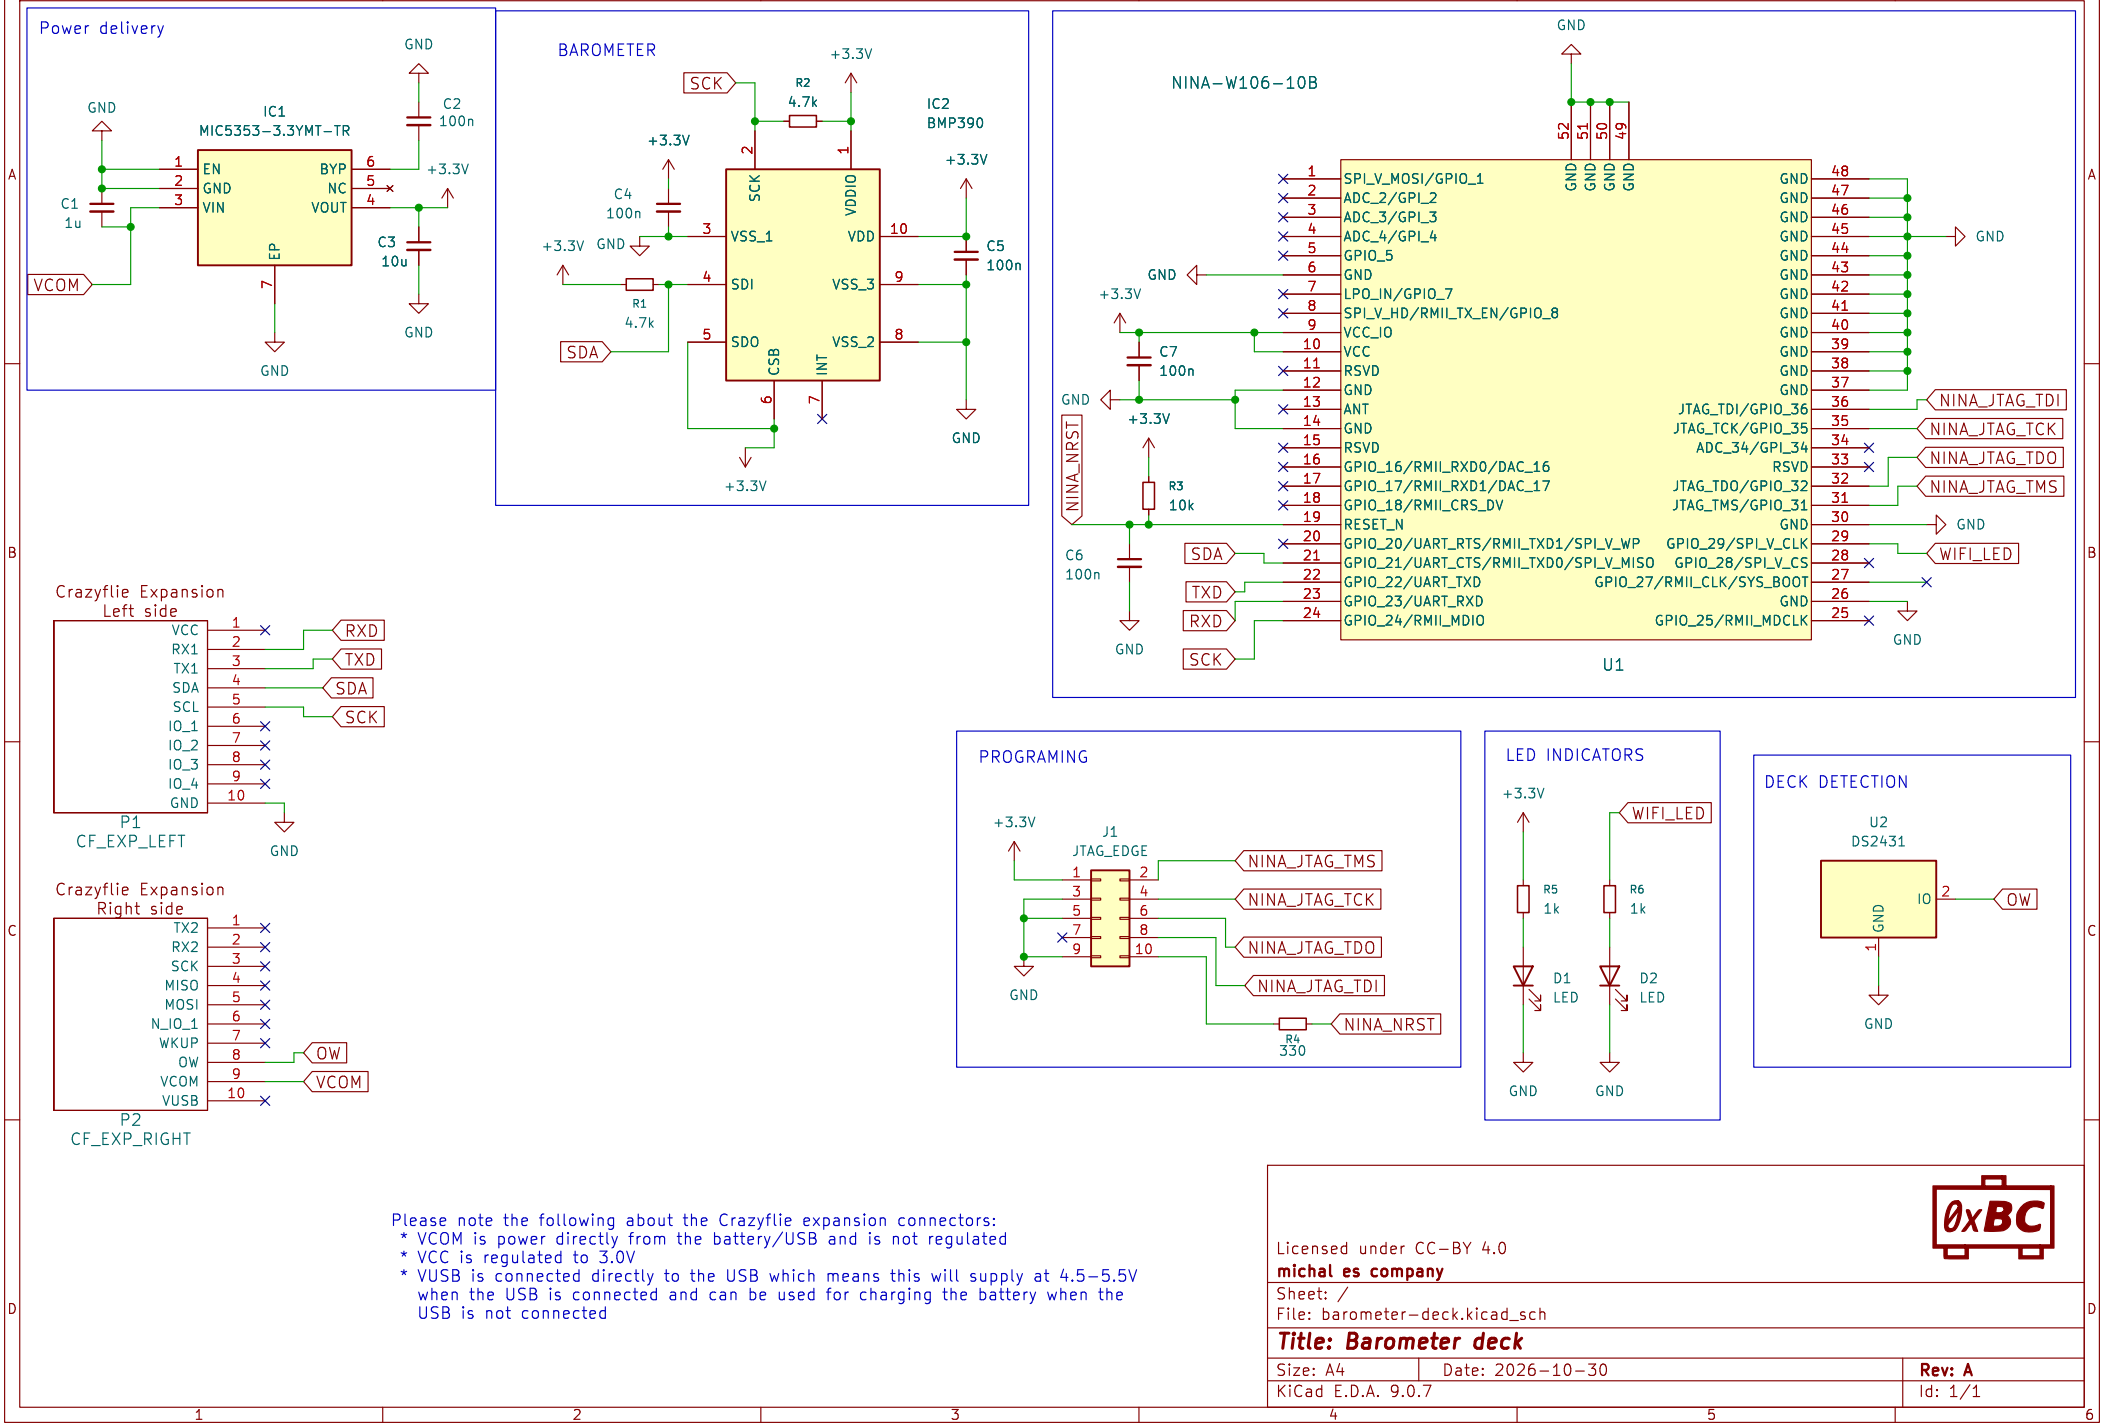

Power delivery
IC1
MIC5353-3.3YMT-TR
EN
GND
VIN
BYP
NC
VOUT
EP
C1
1u
C2
100n
C3
10u
+3.3V
GND
VCOM
BAROMETER
IC2
BMP390
SCK
SDA
SDI
SDO
CSB
INT
VDDIO
VDD
VSS_1
VSS_2
VSS_3
R1
4.7k
R2
4.7k
C4
100n
C5
100n
NINA-W106-10B
U1
SPI_V_MOSI/GPIO_1
ADC_2/GPI_2
ADC_3/GPI_3
ADC_4/GPI_4
GPIO_5
LPO_IN/GPIO_7
SPI_V_HD/RMII_TX_EN/GPIO_8
VCC_IO
VCC
RSVD
ANT
RESET_N
GPIO_16/RMII_RXD0/DAC_16
GPIO_17/RMII_RXD1/DAC_17
GPIO_18/RMII_CRS_DV
GPIO_20/UART_RTS/RMII_TXD1/SPI_V_WP
GPIO_21/UART_CTS/RMII_TXD0/SPI_V_MISO
GPIO_22/UART_TXD
GPIO_23/UART_RXD
GPIO_24/RMII_MDIO
JTAG_TDI/GPIO_36
JTAG_TCK/GPIO_35
ADC_34/GPI_34
JTAG_TDO/GPIO_32
JTAG_TMS/GPIO_31
GPIO_29/SPI_V_CLK
GPIO_28/SPI_V_CS
GPIO_27/RMII_CLK/SYS_BOOT
GPIO_25/RMII_MDCLK
NINA_NRST
R3
10k
C6
100n
C7
100n
NINA_JTAG_TDI
NINA_JTAG_TCK
NINA_JTAG_TDO
NINA_JTAG_TMS
WIFI_LED
Crazyflie Expansion
Left side
P1
CF_EXP_LEFT
VCC
RX1
TX1
SDA
SCL
IO_1
IO_2
IO_3
IO_4
RXD
TXD
SCK
Crazyflie Expansion
Right side
P2
CF_EXP_RIGHT
TX2
RX2
SCK
MISO
MOSI
N_IO_1
WKUP
OW
VUSB
VCOM
PROGRAMING
J1
JTAG_EDGE
R4
330
LED INDICATORS
R5
1k
R6
1k
D1
LED
D2
LED
DECK DETECTION
U2
DS2431
IO
Please note the following about the Crazyflie expansion connectors:
* VCOM is power directly from the battery/USB and is not regulated
* VCC is regulated to 3.0V
* VUSB is connected directly to the USB which means this will supply at 4.5-5.5V when the USB is connected and can be used for charging the battery when the USB is not connected
Licensed under CC-BY 4.0
michal es company
Sheet: /
File: barometer-deck.kicad_sch
Title: Barometer deck
Size: A4
Date: 2026-10-30
Rev: A
KiCad E.D.A. 9.0.7
Id: 1/1