


PCB-01 J7 -> USB-UART

Solder the five board leads with all power OFF. Board power stays separate.

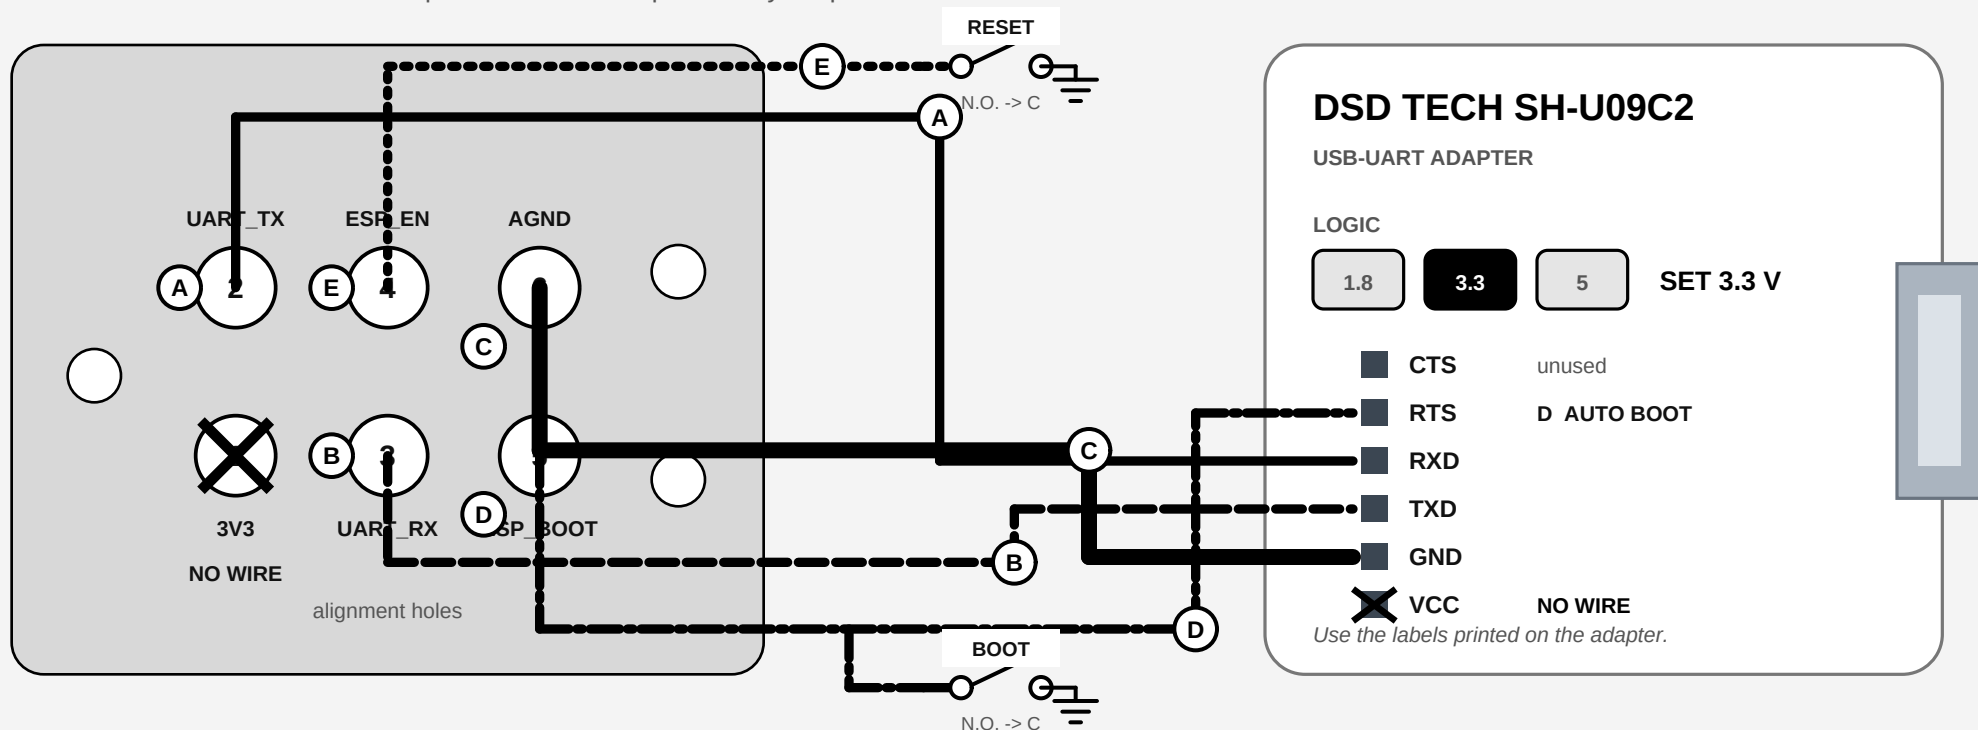

NO CONNECTION: J7.1 3V3 + adapter VCC

PCB-01 J7 / component side / 2026-08-29