

Smarter technology for all

Servicing the ThinkEdge SE350 V2 and ThinkEdge SE360 V2

ES72507B

November 2023

Lenovo

© Copyright Lenovo 2023

Lenovo

8001 Development Drive

Morrisville, North Carolina, 27560

Lenovo reserves the right to change product information and specifications at any time without notice. This publication might include technical inaccuracies or typographical errors. References herein to Lenovo products and services do not imply that Lenovo intends to make them available in all countries. Lenovo provides this publication as is, without warranty of any kind, either expressed or implied, including the implied warranties of merchantability or fitness for a particular purpose. Some jurisdictions do not allow disclaimer of expressed or implied warranties. Therefore, this disclaimer may not apply to you.

Data on competitive products is obtained from publicly obtained information and is subject to change without notice. Contact the manufacturer for the most recent information.

Lenovo and the Lenovo logo is a trademark or registered trademark of Lenovo Corporation or its subsidiaries in the United States, other countries, or both. Intel and the Intel logo is a trademark or registered trademark of Intel Corporation or its subsidiaries in the United States, other countries, or both. Other names and brands are the property of their respective owners.

The following terms are trademarks, registered trademarks, or service marks of Lenovo:

Access Connections, Active Protection System, Automated Solutions, Easy Eject Utility, Easy-Open Cover, IdeaCentre, IdeaPad, ImageUltra, Lenovo Care, Lenovo (logo), Lenovo, MaxBright, NetVista, New World. New Thinking, OneKey, PC As A Service, Rapid Restore, Remote Deployment Manager, Rescue and Recovery, ScrollPoint, Secure Data Disposal, Skylight, Software Delivery Center, System Information Gatherer, System Information Reporter, System Migration Assistant, System x, ThinkAccessories, ThinkAgile, ThinkCentre, ThinkDisk, ThinkDrive, ThinkLight, ThinkPad, ThinkPlus, ThinkScribe, ThinkServer, ThinkStation, ThinkStore, ThinkSystem, ThinkVantage, ThinkVision, ThinkWorld, TopSeller, TrackPoint, TransNote, UltraBase, UltraBay, UltraConnect, UltraNav, VeriFace.

For more information, go to: <https://www.lenovo.com/us/en/legal/copytrade/>.

The terms listed for the following partners are the property of their respective owners:

AMD Intel IBM Microsoft NVIDIA

The content in this document is subject to the existing non-disclosure agreement held between Lenovo and its Authorized Service Providers.

Preface

This document may not be copied or sold, either in part or in whole, without permission from the Lenovo ISG Services Education team.

Current release date: November 2023

Current release level: 2.0

The information in this publication is current as of the date of the latest revision and is subject to change at any time without notice.

To provide feedback or receive more information about this course, send an email to:

ServicesEdu@Lenovo.com

Prerequisites

- [ES51757B – Introducing ThinkSystem tools](#)
- [ES41759C – ThinkSystem problem determination](#)
- [ES51780C – Servicing the ThinkSystem storage controllers](#)
- [ES71911C – Servicing the ThinkSystem SE350 edge server](#)

Objectives

After completing the course, you will be able to:

- Describe the ThinkEdge SE350 V2 and ThinkEdge SE360 V2 and their components
- Describe the features and specifications of the SE350 V2 and SE360 V2
- Describe the different SE350 V2 and SE360 V2 mounting options and explain how to install them
- Describe the SE350 V2 and SE360 V2 security mechanism and explain how to activate the servers
- Describe the problem determination steps and explain how to troubleshoot issues with the SE350 V2 and SE360 V2

What's new

New configuration options, mounting options, and ThinkEdge security 2.0

The Lenovo logo is positioned in the top right corner of the slide. It consists of the word "Lenovo" in white, sans-serif font, oriented vertically within a solid red rectangular background.

Lenovo

What's new in the November 2023 update

The following new features have been added:

- AC power input for the SE350 V2 and SE360 V2
- Additional SE360 V2 network configurations:
 - A wireless network module
 - Wired 25 GbE SFP 28 ports
 - Bluetooth
 - X86 WLAN
 - XCC WLAN
 - Geotracking
- WLAN problem determination and troubleshooting
- New SE360 V2 riser configuration options
- New SE350 V2 and SE360 V2 mounting options
- System board replacement field service action
- Implementation of ThinkEdge security 2.0
- LXCE UpdateXpress system lockdown control and server security features

What's new

SE350 V2 rear view – AC power input


The AC to DC converter is embedded within the system and has a single AC input.



What's new

SE360 V2 rear view – AC power input

The AC to DC converter is embedded within the system and has a single AC input.

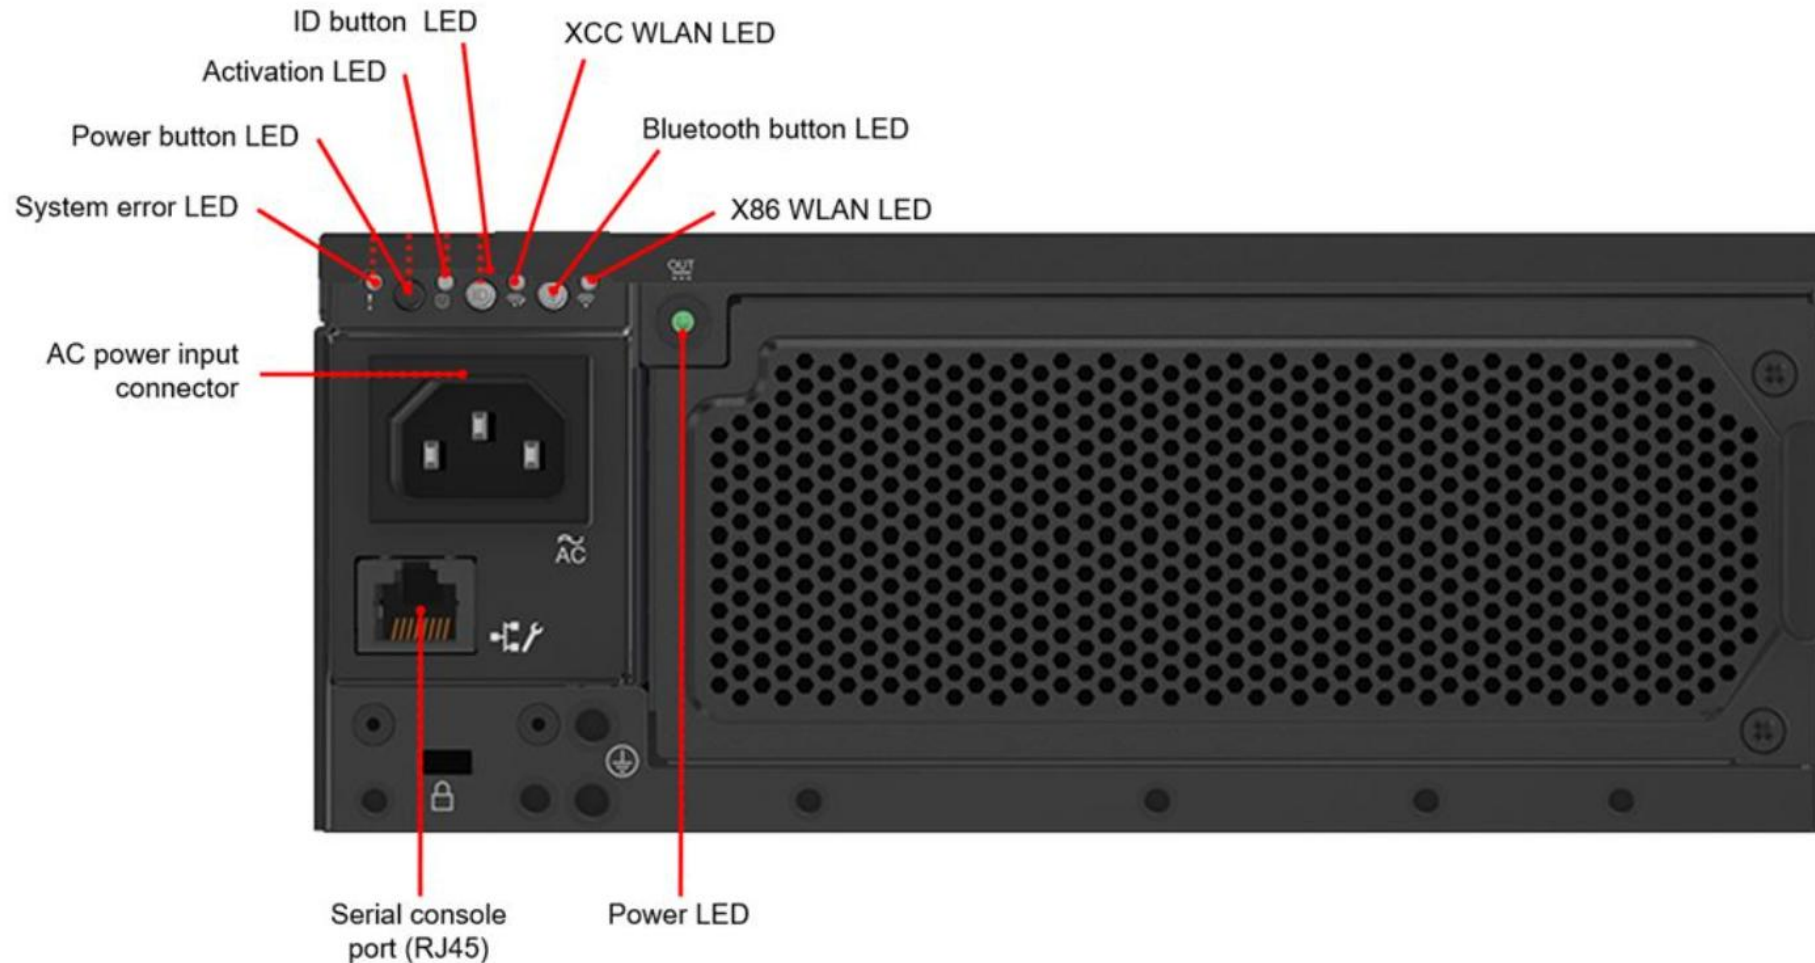

Additional network configurations for the SE360 V2

The following network configuration options are now available.



Network interfaces (wired) • Four 10 GbE / 25 GbE SFP+/SFP28 ports • Two 2.5 GbE TSN ports • 1 GbE RJ45 management port or • Four 1 GbE ports • Two 2.5 GbE TSN ports • 1 GbE RJ45 management port	Network interfaces (wireless) • Four wireless SMA connectors for WLAN • One wireless SMA connector for Bluetooth • WLAN 128/192-bits encrypted WPA2, WPA3 802.11 a/b/g/n/ac/ax • Geotracking Detailed use case for each component • XCC Bluetooth is used for wireless security activation • XCC WLAN is used for wireless remote management • X86 WLAN device and connectivity can be managed by the operating system • For example, the device can be discovered within the device manager in a Windows environment after driver installation
---	--

Important: The geotracking module is a third-party option. Third-party options are not included in the Lenovo statement of limited warranty.

WLAN problem determination and troubleshooting

If the wireless signal strength is weak or unstable:

1. Check the antennas to ensure they are installed correctly.
2. Ensure that the SMA connectors are fully extended outside the chassis.
3. Rotate the antennas and adjust their positions.
4. Move the system closer to the access point or router.

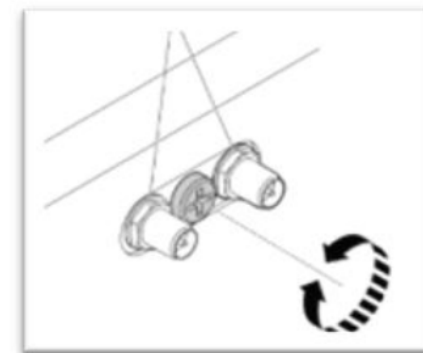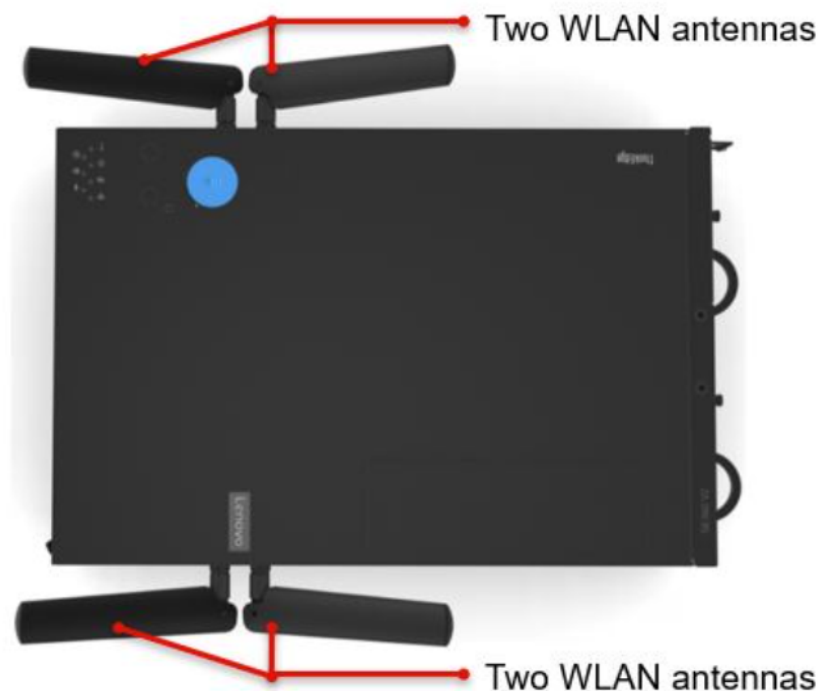

What's new

SE360 V2 front views




Click the buttons to see front views of the enclosures


**Wireless network module
configuration**

**Wired 25 GbE ports
configuration**

SE360 V2 front views

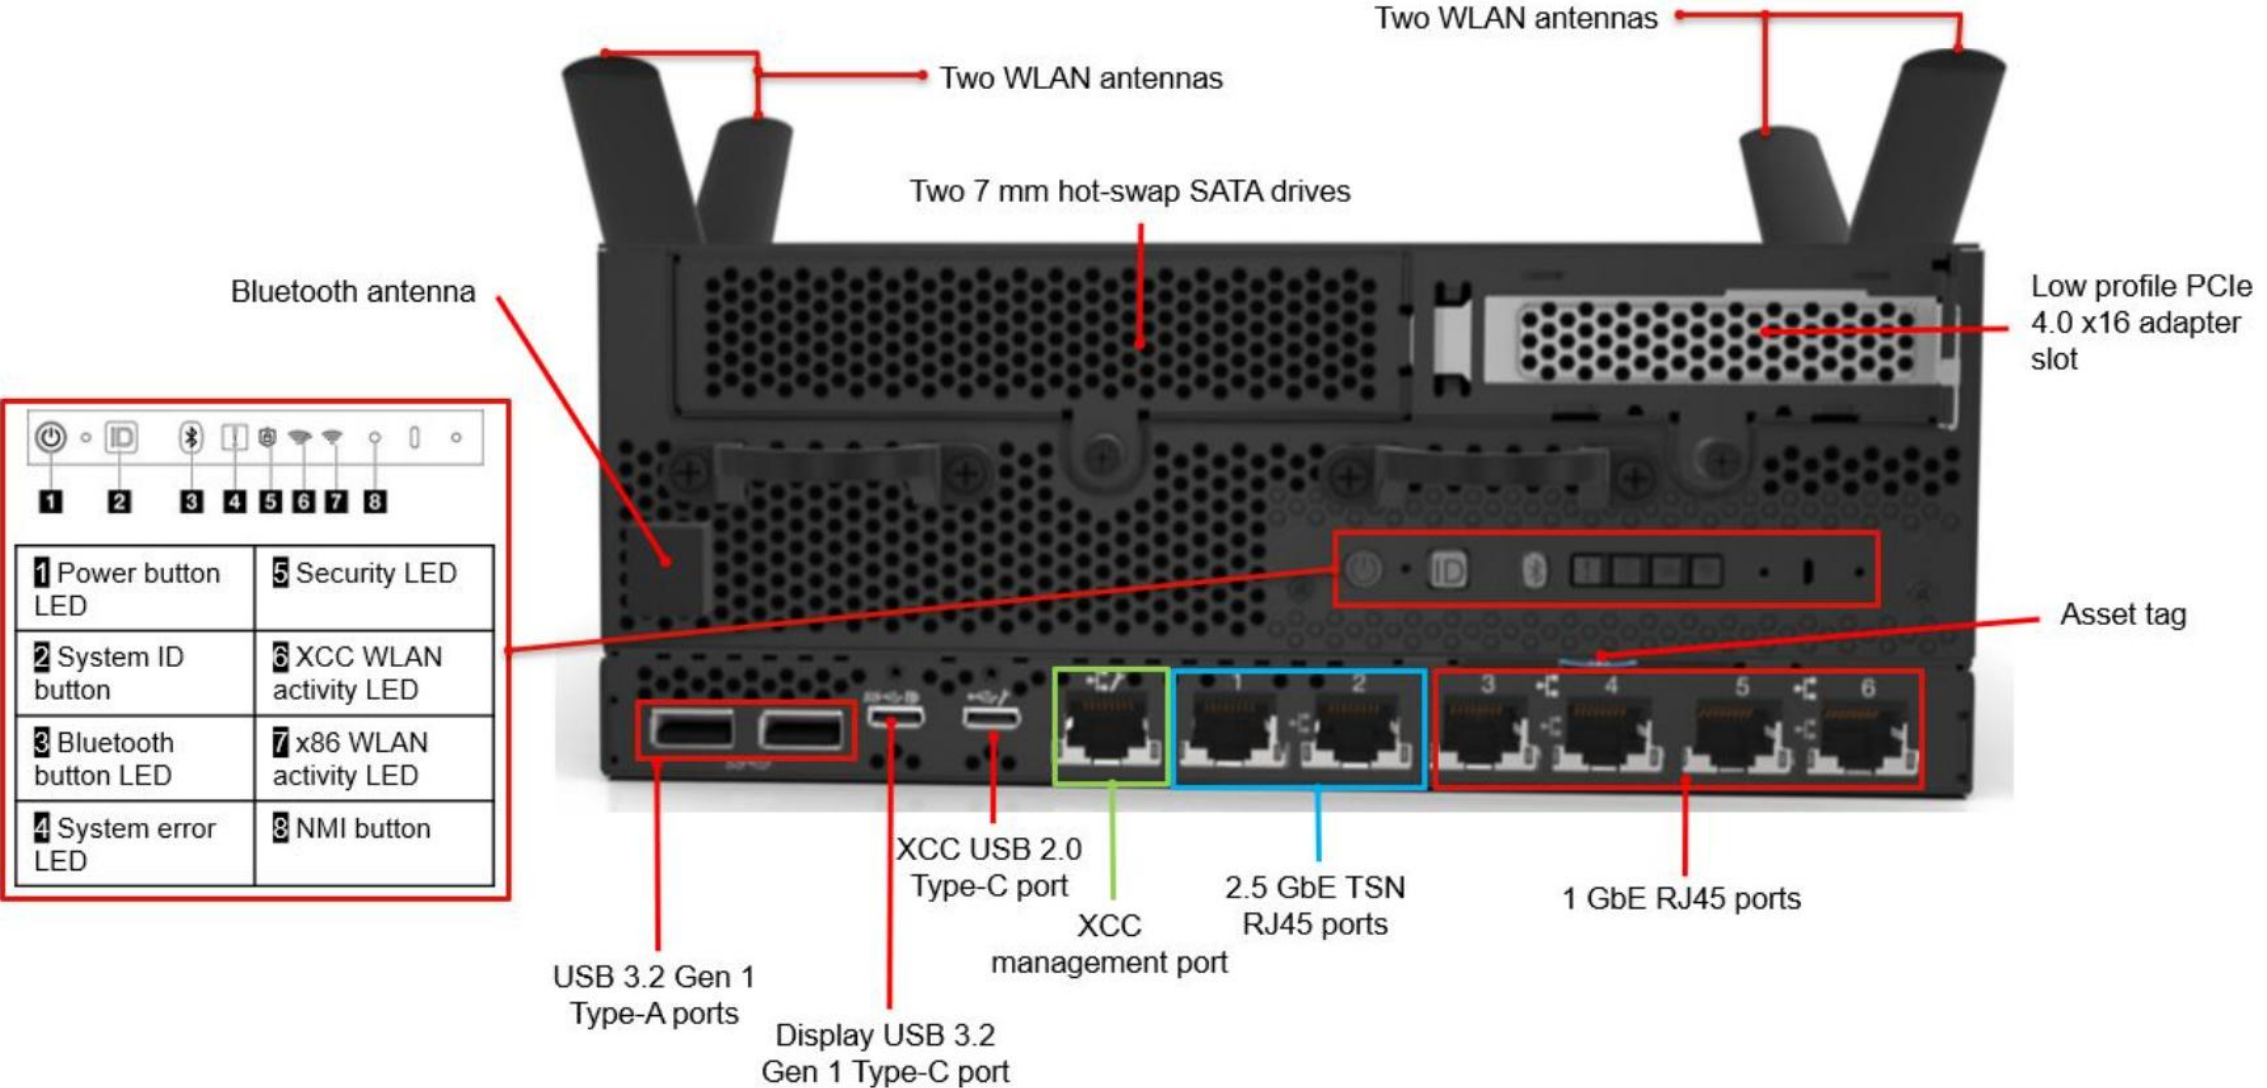


SE360 V2 front views

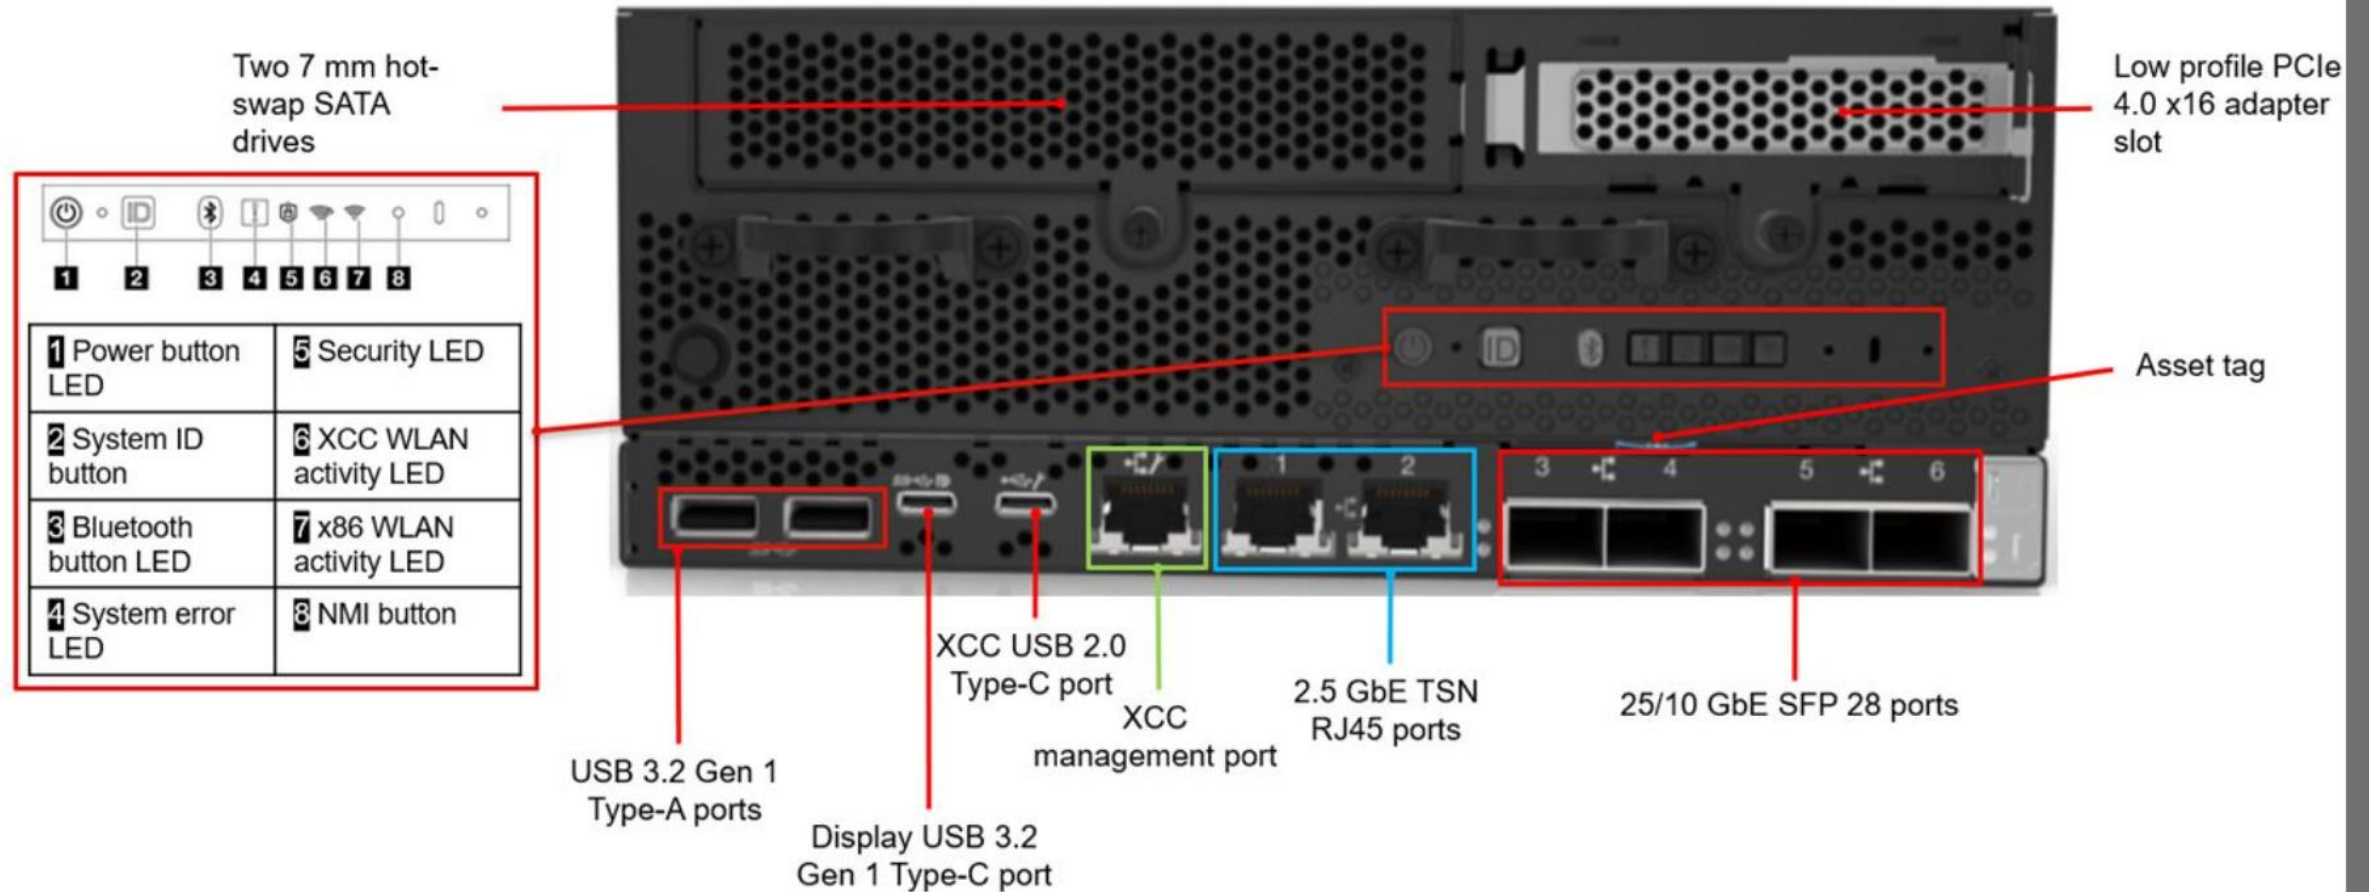

What's new

SE360 V2 bottom I/O board view


1 Bottom intrusion switch	4 Bottom air baffle
2 I/O module board	5 System security keylock
3 Bottom M.2 cabled adapter	

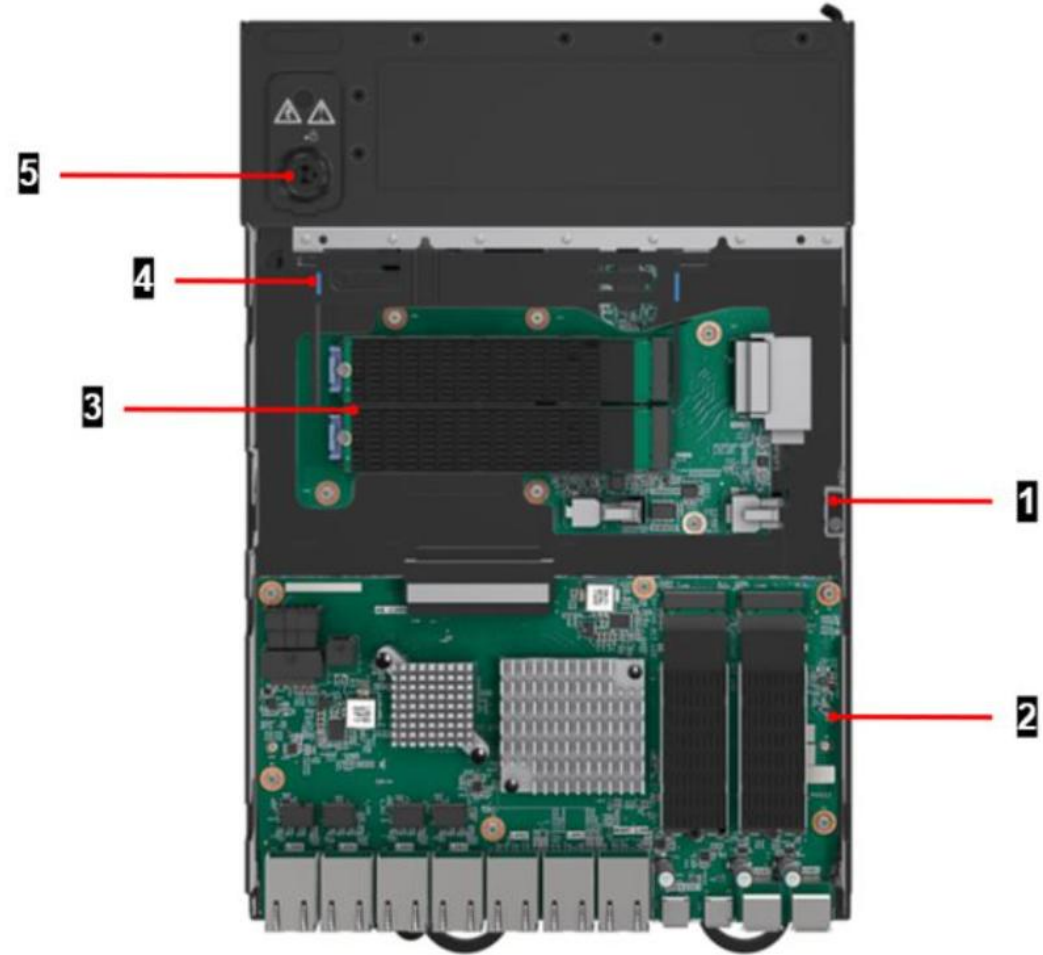

SE360 V2 riser configuration options

Depending on the model, the riser assembly supports one of the following seven configurations:

	Left-wing riser assembly	Right-wing riser assembly
1	One PCIe 4.0 x16 FH/HL adapter	Four NVMe Gen4 x4 M.2 storage drives
2	Two 7 mm hot-swap SATA/NVMe drives	Four NVMe Gen4 x4 M.2 storage drives
3	Four NVMe Gen4 x4 M.2 storage drives	Four NVMe Gen4 x4 M.2 storage drives
4	One PCIe 4.0 x16 FH/HL adapter	One PCIe 4.0 x16 HH/HL adapter
5	Two 7 mm hot-swap SATA/NVMe drives	One PCIe 4.0 x16 HH/HL adapter
6	One PCIe 4.0 x16 HH/HL adapter + geotracking module	One PCIe 4.0 x16 HH/HL adapter
7	One PCIe 4.0 x16 HH/HL adapter + geotracking module	Four NVMe Gen4 x4 M.2 storage drives

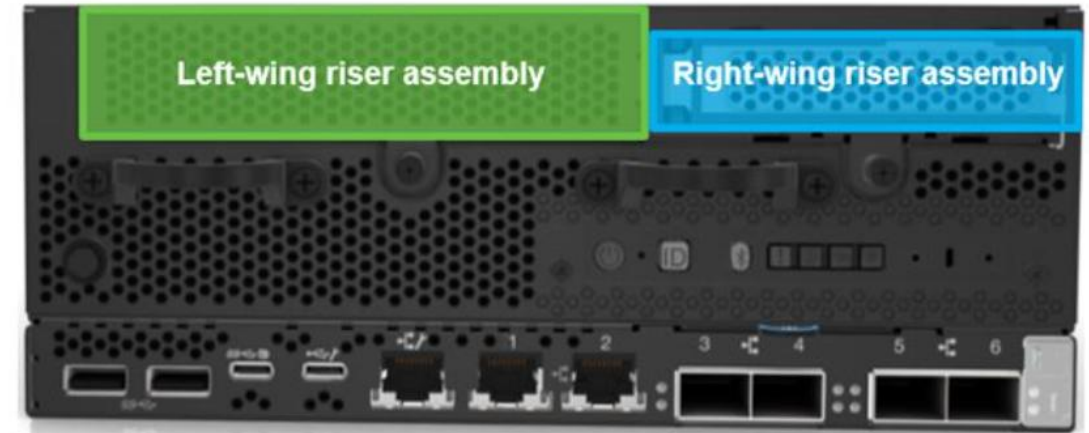

Note: For riser configuration options, refer to the SE360 V2 user guide on [Lenovo Docs](#).

What's new

Mounting options for the SE350 V2



DIN mount



1U short rack

Mounting options for the SE350 V2

Mounting options - DIN mount

- VESA mount with a node sleeve and latches for wall or ceiling rail mounting
- For mounting options and procedures, refer to the SE350 V2 user guide on [Lenovo Docs](#).




Mounting options for the SE350 V2

Mounting options - 1U short rack

This E1 enclosure is a 1U short rack enclosure

- 1U with side-by-side nodes
- For mounting options and procedures, refer to the SE350 V2 user guide on [Lenovo Docs](#).

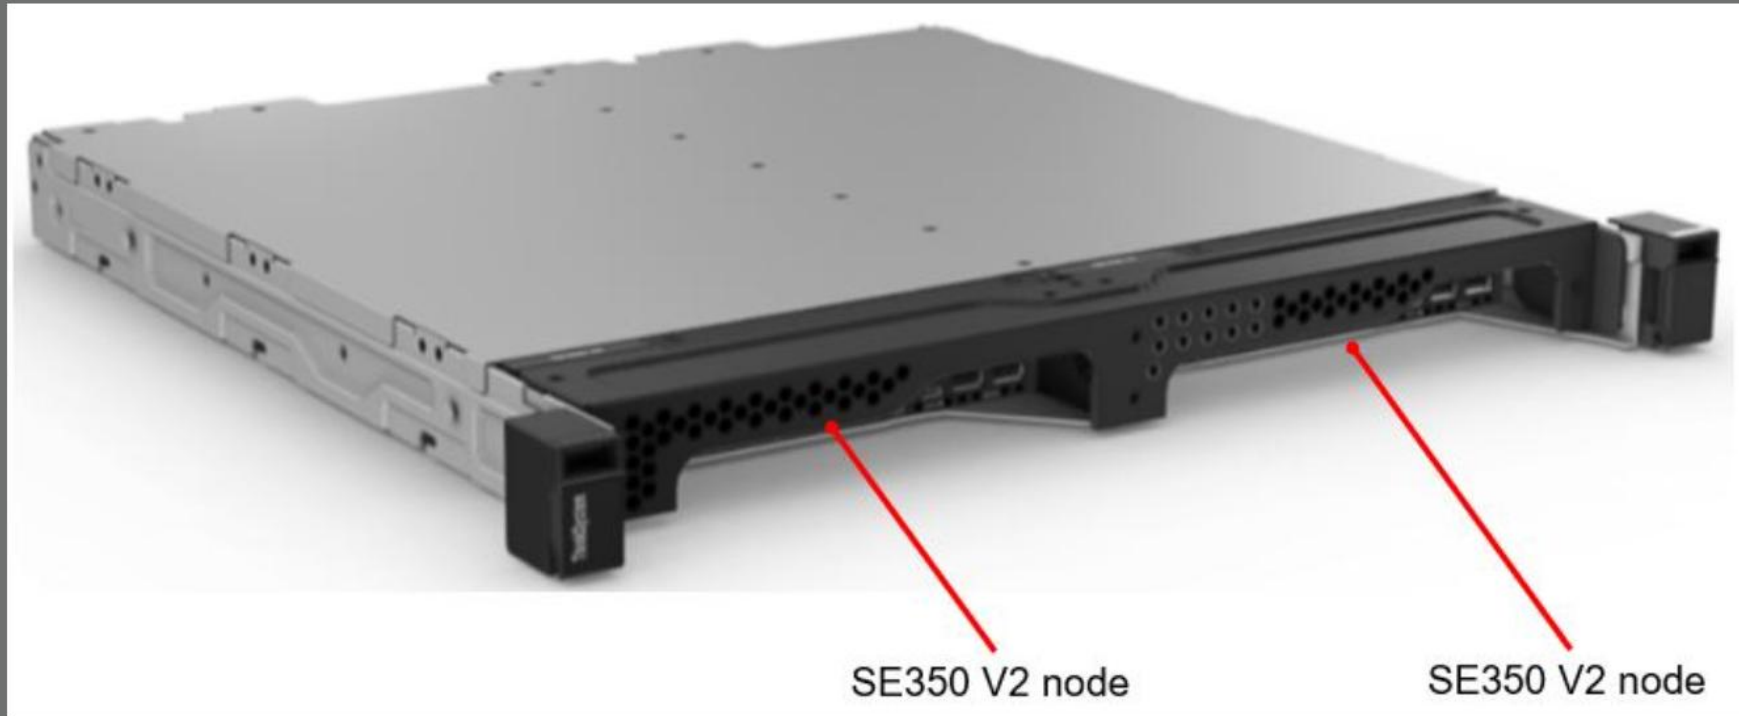

What's new

Mounting options for the SE360 V2



DIN mount



2U short rack

Mounting options for the SE360 V2

Mounting options - DIN mount

- VESA mount with a node sleeve and latches for wall or ceiling DIN rail mounting
- For mounting options and procedures, refer to the SE360 V2 user guide on [Lenovo Docs](#).



Mounting options for the SE360 V2

Mounting options - 2U short rack

- 2U with side-by-side nodes
- For mounting options and procedures, refer to the SE360 V2 user guide on [Lenovo Docs](#).

