

AN8280G-TK Fan Replacement Procedure

FAN REPLACEMENT

Step 1: Preparation

- Turn AC power OFF at service panel.
- Remove rear door.
- Turn power OFF at PSU.
- Wait 5 minutes.
- Verify all LEDs are OFF on front of PSU.

LOCKOUT/TAGOUT PROCEDURE


DANGER!!

This material is to be applied to all replacement procedures that involve the Scaleable Gradient Cabinet modules.


FATAL ELECTRIC SHOCK HAZARD! TO PREVENT FATAL ELECTRIC SHOCK, DISCONNECT POWER FROM THE PDU BEFORE YOU PERFORM THE FOLLOWING PROCEDURES. PERFORM LOCKOUT/TAGOUT PROCEDURE PER GE OSHA LOCKOUT/TAGOUT REQUIREMENTS 29 CFR 1910.147. DO THIS BY SECURING THE PDU CIRCUIT BREAKER FOR THE SCALEABLE GRADIENT CABINET.

1. Turn off the SGD Cabinet Breaker at the Power Distribution Unit. Lock out the Breaker and tag it.
2. After power to the SGD Cabinet has had sufficient time to dissipate, take a Digital Multimeter and set it to its highest AC voltage range.
3. Verify that all energy has been dissipated by measuring incoming power to all components of the Scaleable Gradient Cabinet.
 - Place the reference probe (black) on the SGD Cabinet Ground.
 - Locate L1, L2, and L3. These are the 208V, 3 Phase inputs to the SGD Base SR-20 Cabinet.
4. Measure voltage at each of three 208 volt input terminals. The meter should read 0 volts AC at each of the three measuring points. See below.

Measure Incoming
Power Here
(L1, L2, L3)

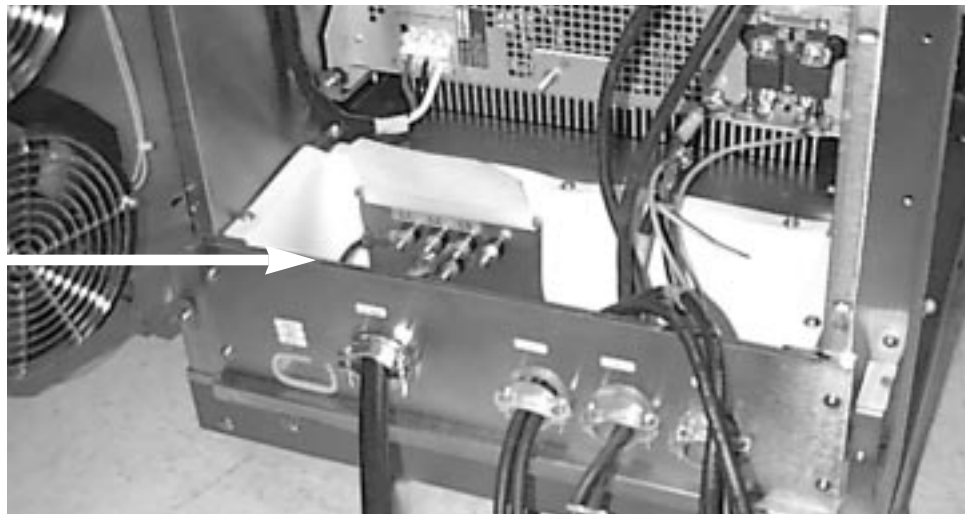


Step 2: At Rear of Rack, Remove 8 Screws and Open Fan Panel.

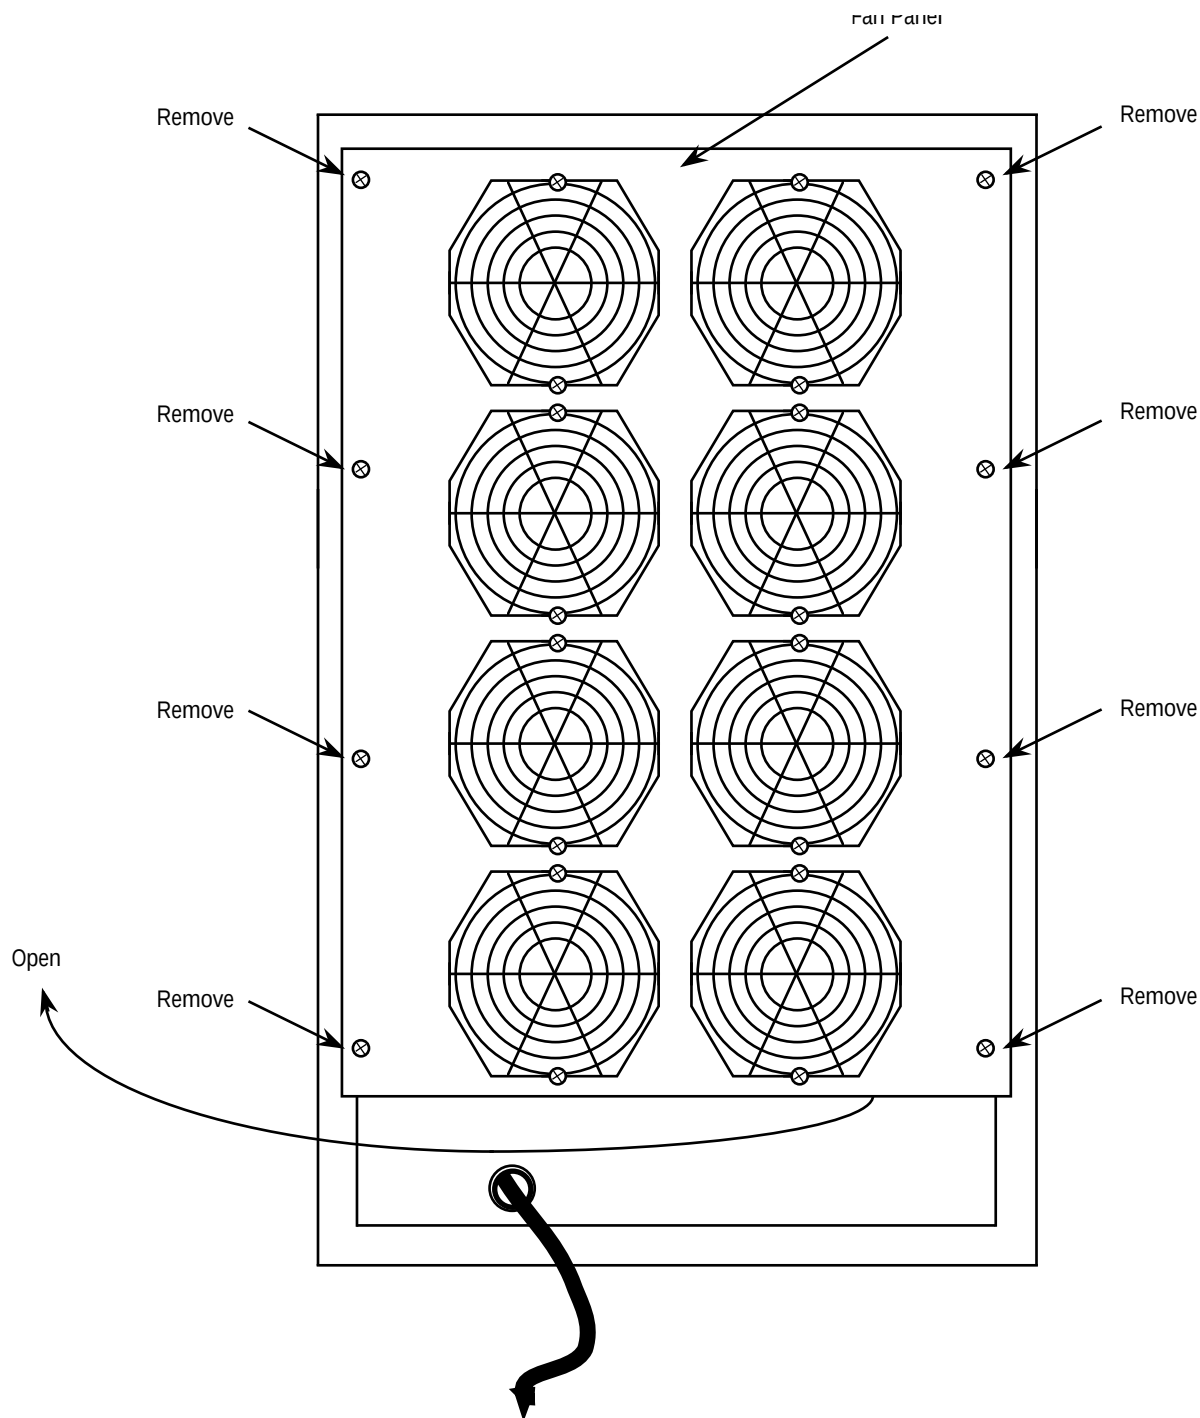

Step 3: Option A: Disconnect 48V Fan Panel Connector. Release Hinge Pin by Pulling on the Knob and Remove Fan Panel.


Option B: Locate Non-operating Fan, Remove Hardware (2 nuts, 2 bolts) and 48V Plug, Remove Fan.

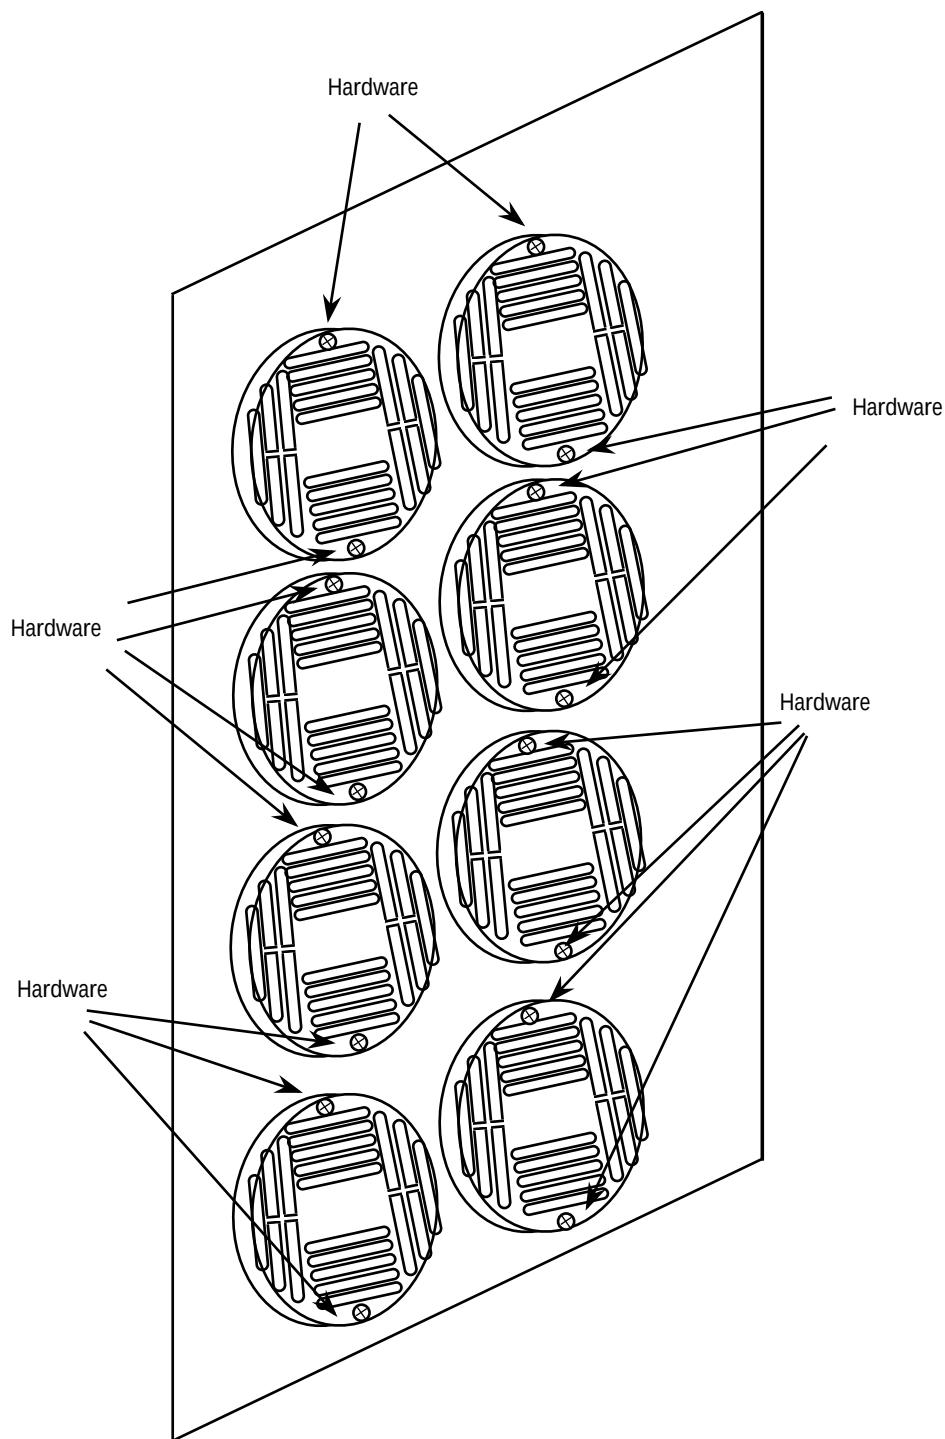

Step 4: Option A: Install Replacement Fan Panel on Hinges. Reconnect 48V Fan Panel Connector.

Option B: Replace 48V Plug in New Fan. Re-install Hardware.

Step 5: Close Fan Panel and Install 8 Screws.

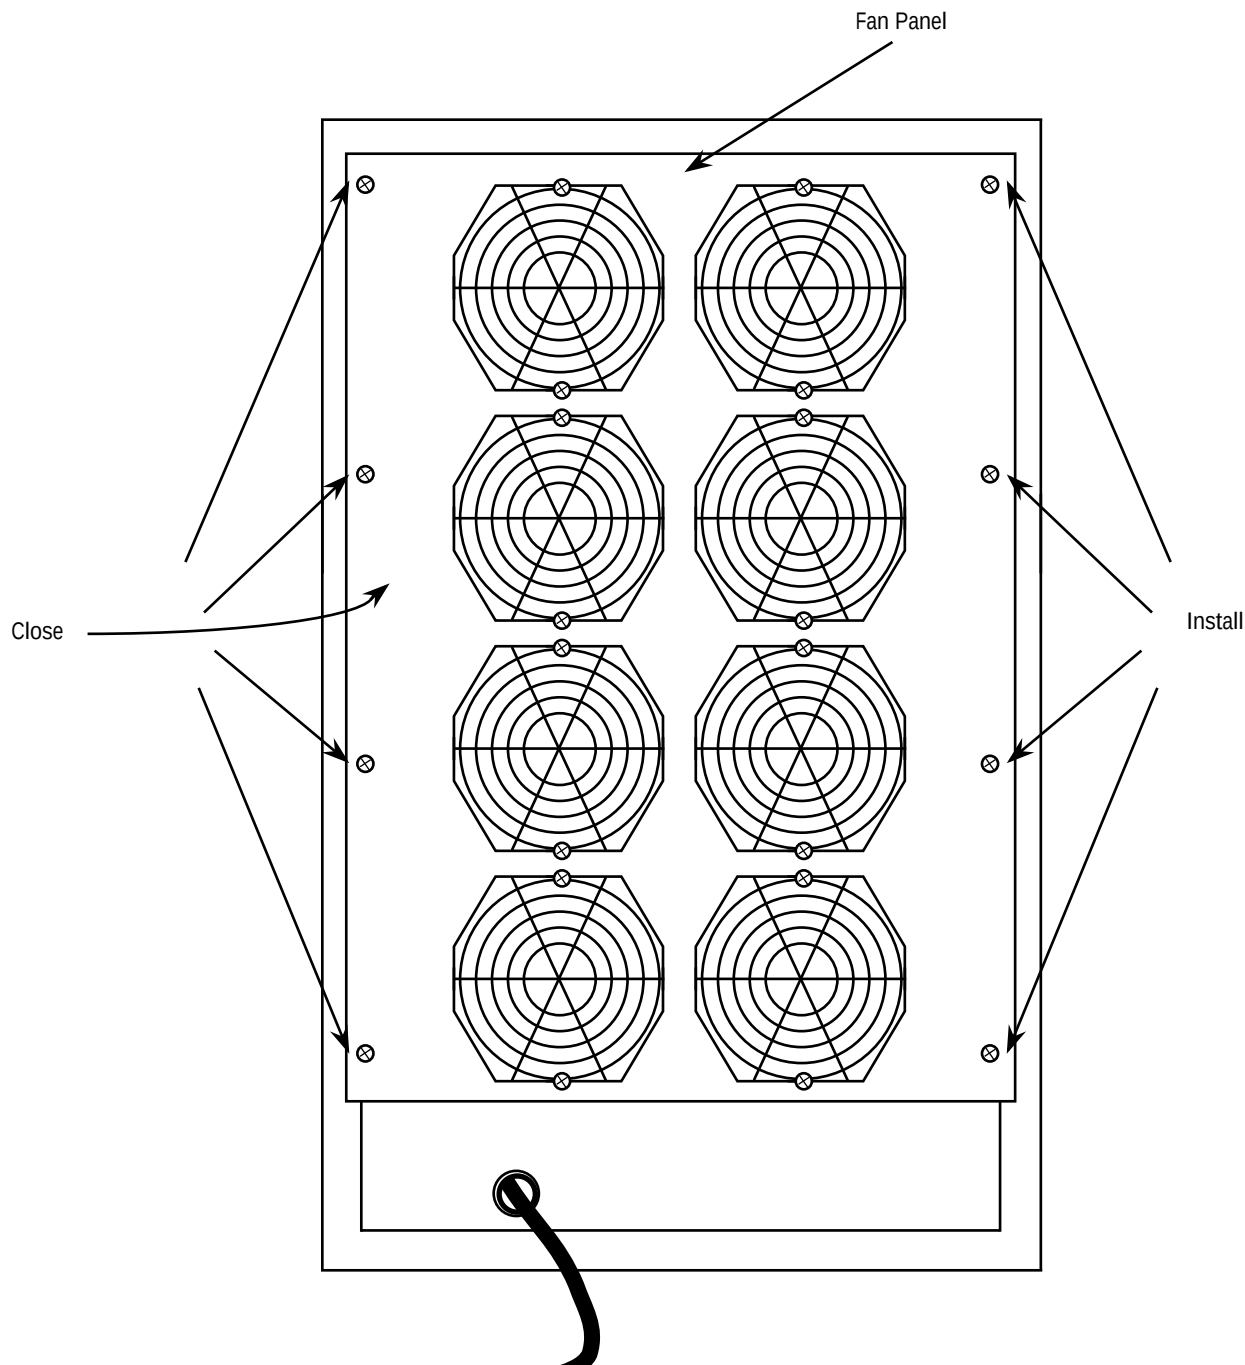

Step 6: Inspect Unit Prior to Turn-on.

- Install rear door.
- Turn AC power ON at service panel.
- Verify proper power-up sequence.

FUNCTIONAL CHECKS REQUIRED

No calibrations required; power up the cabinet and perform a scan to verify functionality.