

TABLE OF CONTENTS

TABLE OF CONTENTS 1

1 REPLACEMENT OF SRI (SCAN ROOM INTERFACE)..... 2

 1-1 Removal of SRI..... 2

 1-2 Installation of New SRI 4

REVISION HISTORY 6

Description - Procedure for replacement of the SRI (Scan Room Interface) assembly on a fixed site system.

1 REPLACEMENT OF SRI (SCAN ROOM INTERFACE)

1-1 Removal of SRI

1. Lock out and tag out circuit breaker MR1 A14 CB6 at rear of RF/Pen Cabinet (MR1) on magnet enclosure power supply (MEPS) module.


For **RF/Pen II** and **RF/PDU Cabinet**: Lock out and tag out circuit breaker MR1 A20 CB4 at rear of RF/Pen II and RF/PDU Cabinet on System Support Module (SSM).

(Refer to CD-ROM *Dir. 2187583-3 [or -2], MR Release Signa 5x/8x Service Methods, Renewal Parts and Service Tools*, Procedure for Safety, Section 6, OSHA LOCKOUT/TAGOUT REQUIREMENTS.)


2. Verify that voltage between MR1 A14 TP4 (+) and TP13 (–) is 0 Vdc.

For **RF/Pen II** and **RF/PDU Cabinet**, verify that voltage between MR1 A20 TP4 (+) (SRI+24V) and TP13 (–) (SRI RTN) is 0 Vdc.

1. The SRI can be located under either the right or left side of the magnet enclosure. Identify which side the SRI is on by locating the patient leads, the SRI will be on that side.
2. Remove the lower enclosure trim covers to expose the tray that holds the PAC and SRI. See Illustration 1-1 and 1-2.

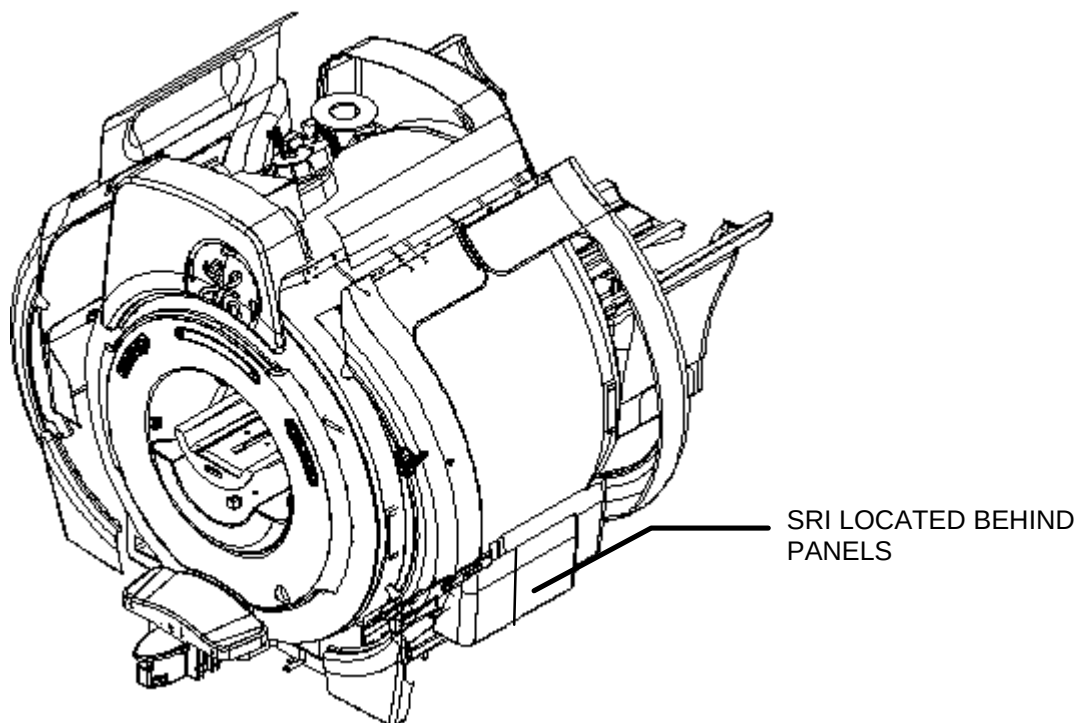


ACCESS TO MAGNET ENCLOSURE FRONT VIEW
ILLUSTRATION 1-1

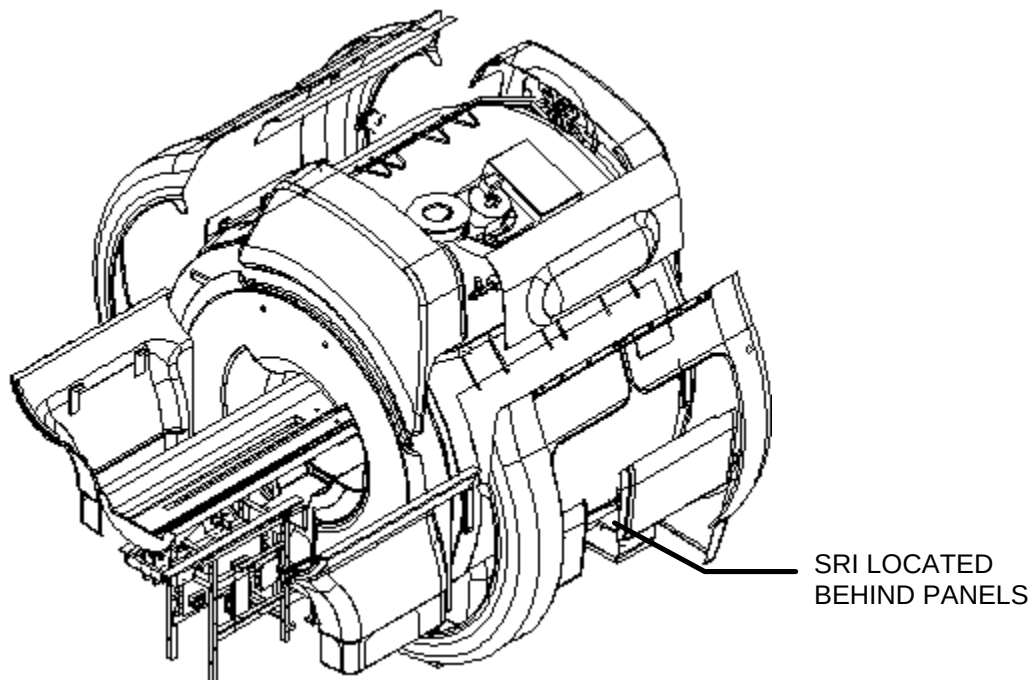

ACCESS TO MAGNET ENCLOSURE REAR VIEW
ILLUSTRATION 1-2

3. Turn latches in holding tray in place. Slide tray out far enough to gain access to the SRI cables. See Illustration 1-3.
4. Disconnect the thirteen (13) cable attached to the SRI. See Illustration 1-3.
5. Remove four (4) screws holding SRI to tray. See Illustration 1-3.
6. Lift SRI off tray and remove.

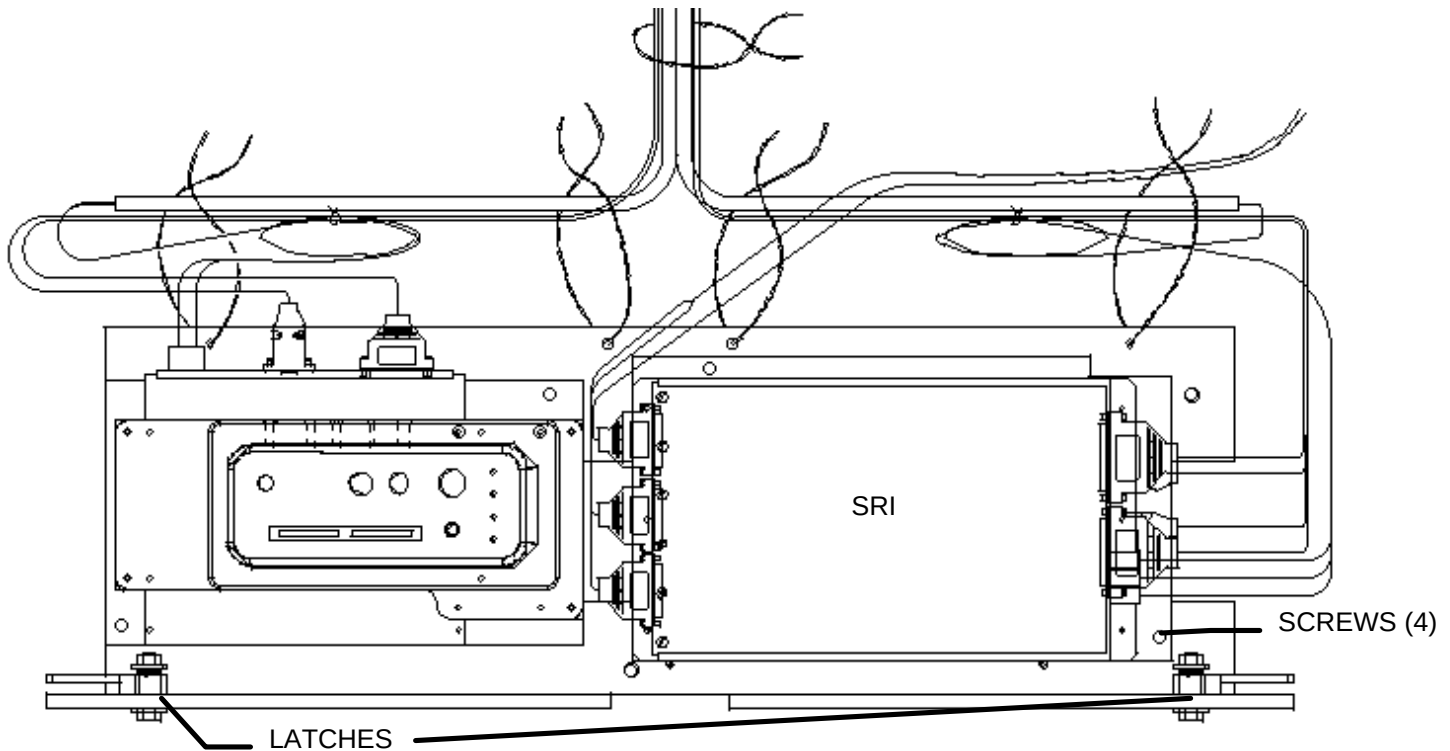

PAC/SRI TRAY
ILLUSTRATION 1-4

1-2 Installation of New SRI

1. Place new SRI on tray.
2. Install four (4) screws. See Illustration 1-3.
3. Connect thirteen (13) cables. See Illustration 1-3.
4. Slide tray under magnet and secure latches.
6. Replace enclosure trim panels.

7. Remove tag-out tag from circuit breaker MR1 A14 CB6 or MR1 A20 CB4.
8. Restore power to operator button panel and display assemblies by switching on circuit breaker MR1 A14 CB6 at rear of RF/Pen Cabinet (MR1) on MEPS module.

RF/Pen II and RF/PDU Cabinet: Switch on circuit breaker MR1 A20 CB4 on the SSM at rear of RF/Pen II Cabinet or RF/PDU.

REVISION HISTORY

REV	DATE	AUTHOR	PRIMARY REASONS FOR CHANGE
A	Nov 1, 1998	W. Pasciak	Initial release
0	Feb 4, 1999	W. Pasciak	Final release