

TABLE OF CONTENTS

TABLE OF CONTENTS	1
1- MODE CONTROL / MODE SEQUENCING	2
REVISION HISTORY	4

Description - The Full-Size PDU is a two-bay cabinet, and the Compact PDU is a single-bay cabinet. Procedures for the Full-Size PDU do not apply to the Compact PDU.

During this procedure, you will select different Full-Size PDU modes at the PDU Remote Power Panel (RPP), and verify that correct contactors are energizing at the PDU. Only Emergency Off can be selected at the RPP for systems that have a two-button panel.


1- MODE CONTROL / MODE SEQUENCING

1. At PDU, ensure that all circuit breakers are off, and that the left door assembly is closed.

Note

The door interlock switch must be activated in order for the RPP circuit to work.

2. Set PDU POWER circuit breaker (PD1A5CB10) to On position.
3. Verify that FULL OFF button is illuminated at the RPP located in the system cabinet (there is no FULL OFF button on the two-button panel).
4. Verify that correct indicator lights and relay contactors energize for each of the following modes (see Illustration L2702A below):

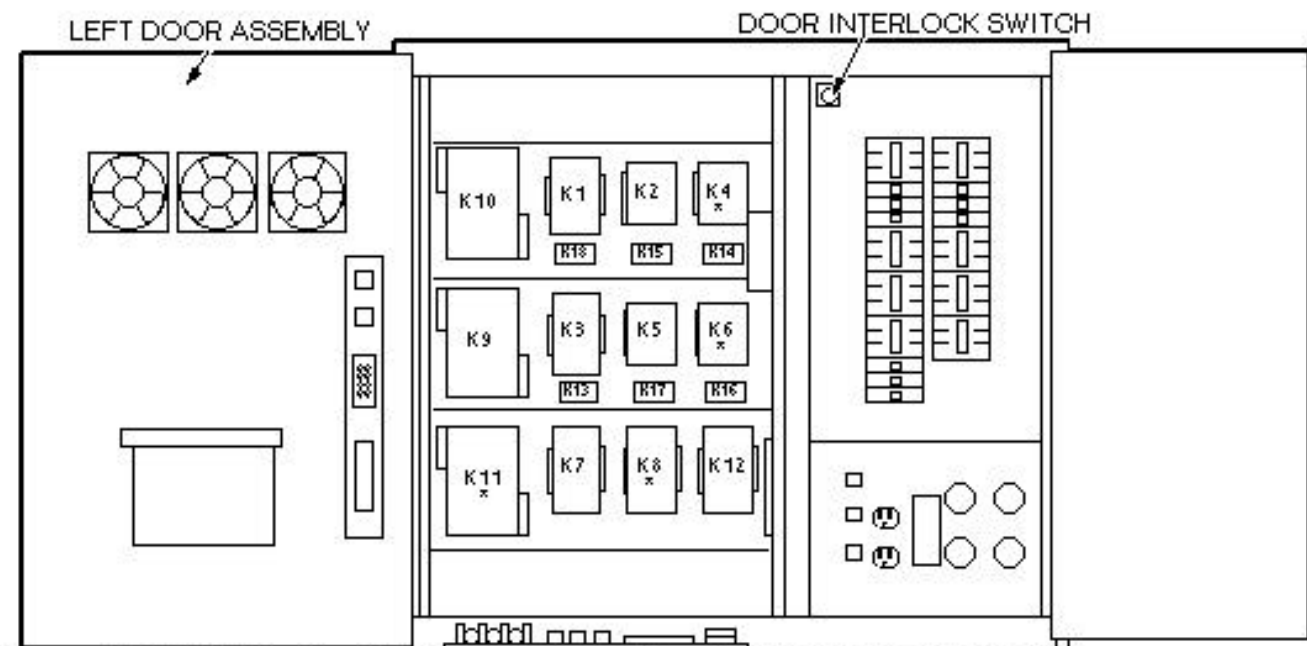

Note *...RELAYS K4, K6, AND K11 ARE REMOVED ON PDU MODEL 46-224847G2.
.....RELAYS K4, K6, K8 AND K 11 ARE REMOVED ON PDU MODEL 46-282368G1, G2, G3, G4.2
K8 MAY BE ADDED IF SYSTEM HAS RESISTIVE SHIM COIL.2
K11 MAY BE ADDED IF IS SYSTEM HAS BEEN UPGRADED TO SIGNA HORIZON.

L27X

ILLUSTRATION L2702A
CONTACTOR LOCATIONS

- Overnight - K1 through K8 energized
 - Full On - K1 through K12 energized
 - Emergency Stop - K1 through K5 energized
5. Verify that all power cables are connected to cabinets and console, and that all circuit breakers at cabinets and console are off.
 6. Set all PDU circuit breakers to on.

REVISION HISTORY

REV	DATE	AUTHOR	PRIMARY REASONS FOR CHANGE
0	June 17, 1998	M. Whitlow	Initial Conversion from Toolbook to Word.