

TABLE OF CONTENTS

TABLE OF CONTENTS 1

1- PDU INTERCONNECTS 2

2- PDU COMPONENTS LOCATIONS..... 4

3- POWERTECH COMPONENTS LOCATIONS 6

REVISION HISTORY 9

Description - The Full-Size PDU is a two-bay cabinet, and the Compact PDU is a single-bay cabinet. Procedures for the Full-Size PDU do not apply to the Compact PDU.

1- PDU INTERCONNECTS

This section contains the interconnect diagram for power cable connections to feeders within the PDU, the interconnect diagram for the PDU mode control and emergency stop circuit.

For PDU interconnects, refer to *Direction 2153389, Signa (Release 8.x) Block Diagrams and Supplemental Schematics*, PDU tab.

For connections to/from the PDU, you can also refer to the system interconnect map (provided with your system installation manual).

PDU Feeder Connections: see Table 1 below for Signa Horizon.

TABLE 1
SIGNA HORIZON PDU FEEDER CONNECTIONS

Run #	Feeder #	TS1 (A1)	GND (A2)	NEU (A3)	To Subsystem Cabinet	Remarks
041	4	1, 2, 3	Y	Y	Gradient Driver (Lo PM + GAP) Cab (MR3)	
042	5	4, 5, 6	Y	Y	Gradient Driver (Hi PM) (MR3)	Note 1
	2	22, 23, 246	Y	Y	GRAM Cabinet (MR7)	Note 2
011	6	7, 8, 9	Y	N	R-Shim Cab (MG4 / MM4 / MS3) (Oxford)	Option for GE
009	1	10, 11, 12	Y	Y	RF / Pen (Spectro) Cab (MR1)	
050	9	13, 14, 15	Y	Y	Operator Workspace (OW1) PC	
030	10	16, 17, 18	Y	Y	System Control Cab (MR2)	
019	8	19	Y	Y	MFU or Laser Camera (LC1)	Option
020	7	28, 29, 30	Y	N	Main Magnet PS Cab (MG5 / MM5 / MS2)/S/C Shim PS Cab (MS7)	
046	11	20	Y	Y	Heat Exchanger (HE1)	
?	15	31	Y	Y	Currently Not Used	
	13	26	Y	Y	B0 for Mobiles	
	17	--			PDU Power (PD1)	
	16	32	N	Y	Service Outlets (Service Receptacle)	
023	3	25	Y	Y	Operator Workspace (OW1) HOST	Note 3
024	--	--	Y	--	MFU or Laser Camera	Note 3
037	--	--	Y	--	System Cab (MR2)	Note 3
038	--	--	Y	--	RF / Pen Cab (MR1)	Note 3
----	12	21	Y	Y	Currently Not Used	
	14	27	Y	Y	Currently Not Used	

Note: Wire Color Code

BLACK A (Phase)
RED B (Phase)
ORANGE C (Phase)


BLUE Neutral
GREEN Ground

Note 1: Horizon Base & ES

Note 2: Horizon HS & Horizon ES

Note 3: Cabinet Ground

See Illustration L2709A below, PDU Overtemperature Monitoring Interconnect.

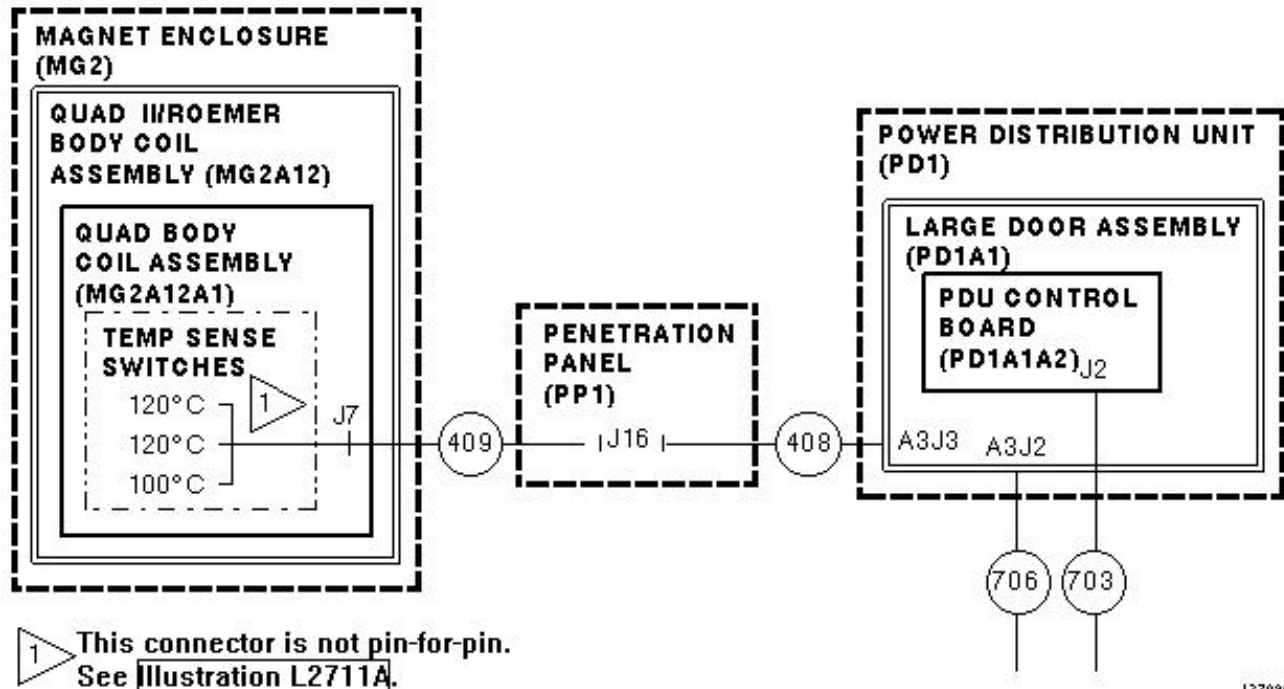

L2709A

ILLUSTRATION L2709A
PDU OVERTEMPERATURE MONITORING INTERCONNECT

See Illustration L2711A below, Coil and System Cabinet Temperature Switches.

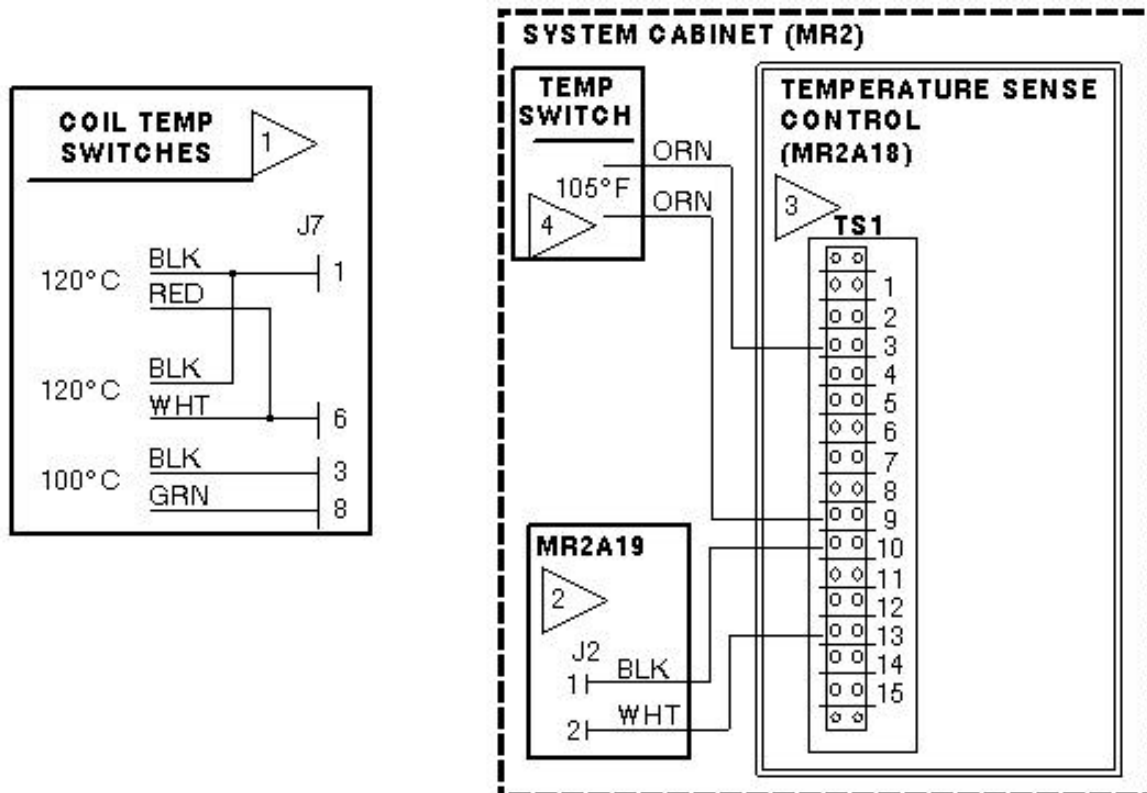


ILLUSTRATION L2711A
COIL AND SYSTEM CABINET TEMPERATURE SWITCHES

PDU Emergency Stop Interconnect: see Illustration L2712B below for Signa Horizon .


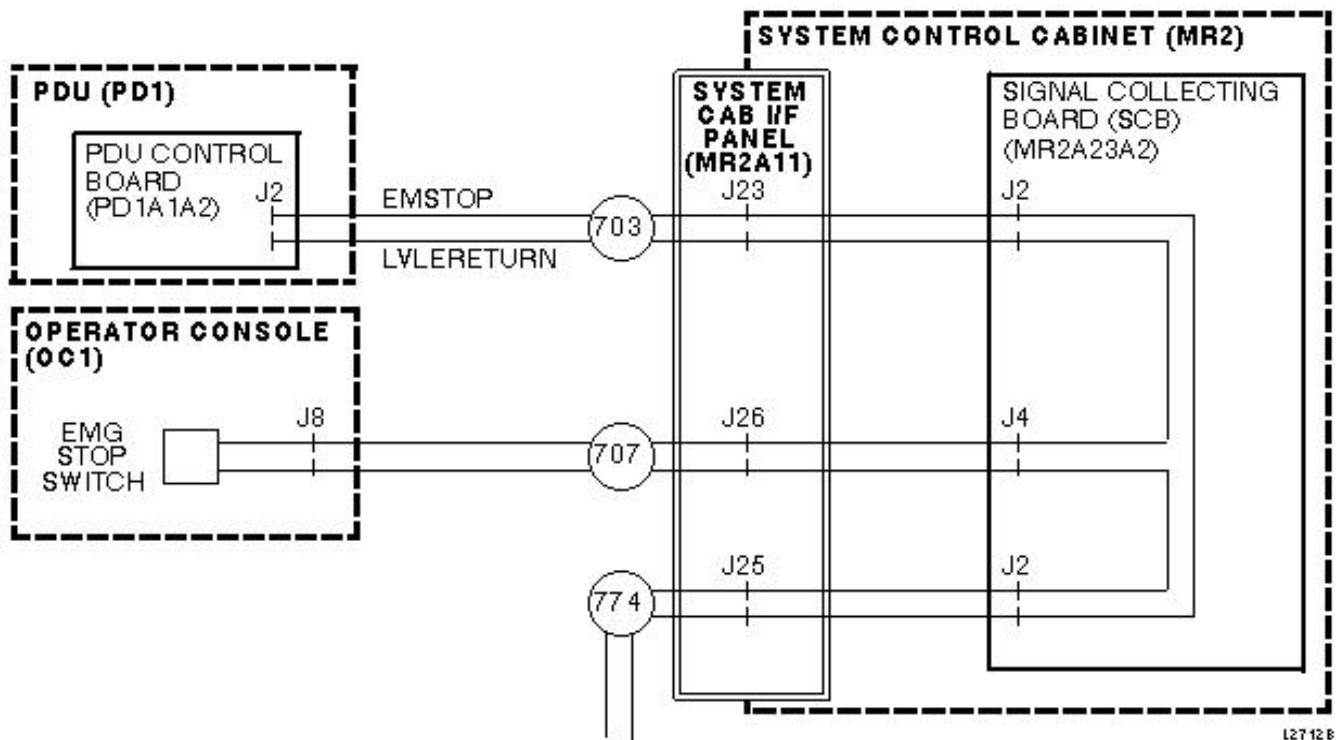


ILLUSTRATION L2712B
SIGNA HORIZON PDU EMERGENCY STOP INTERCONNECT

2- PDU COMPONENTS LOCATIONS

See illustration L2714A, Standard PDU Component Locations.

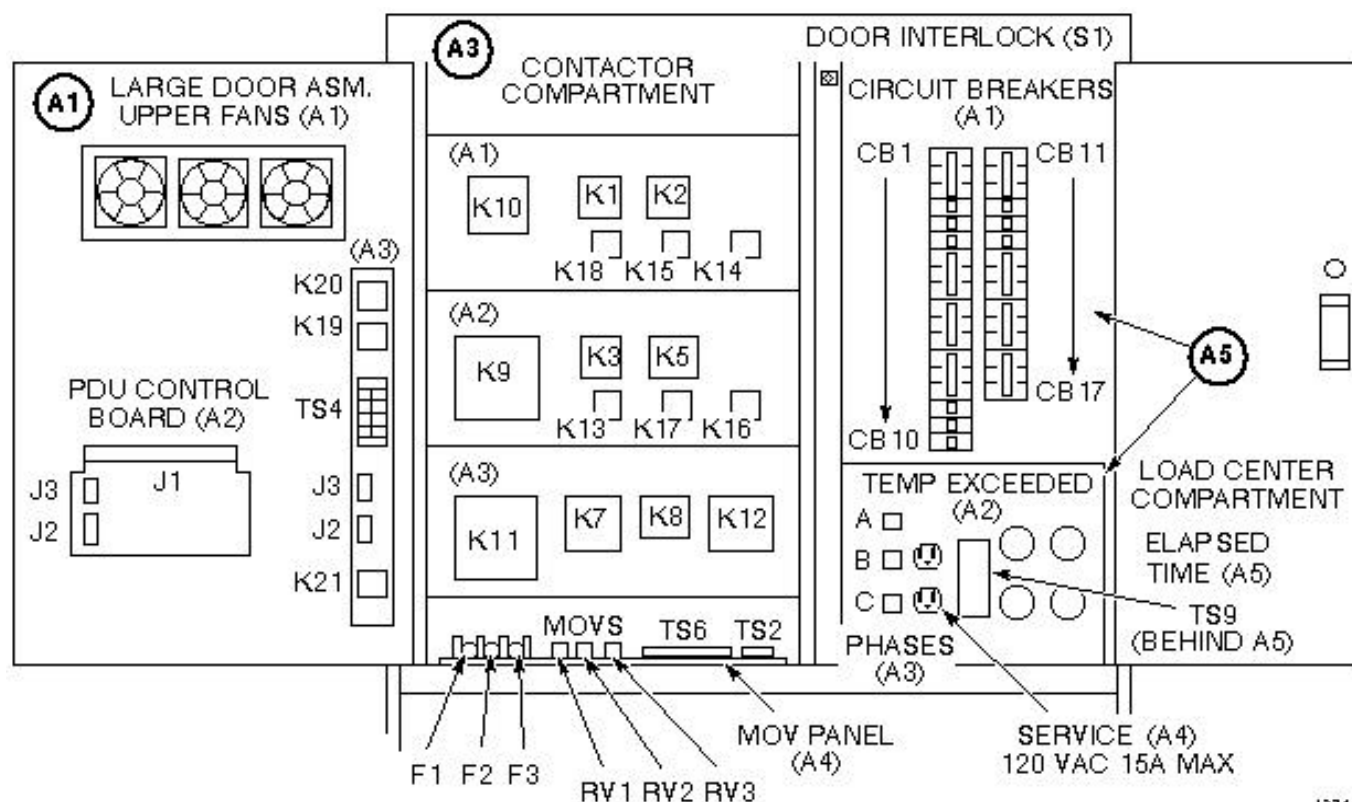

LILUSTRATION L2714A
STANDARD PDU COMPONENT LOCATIONS

See Illustration L2717A below, PDU With PowerTECH Component Locations.

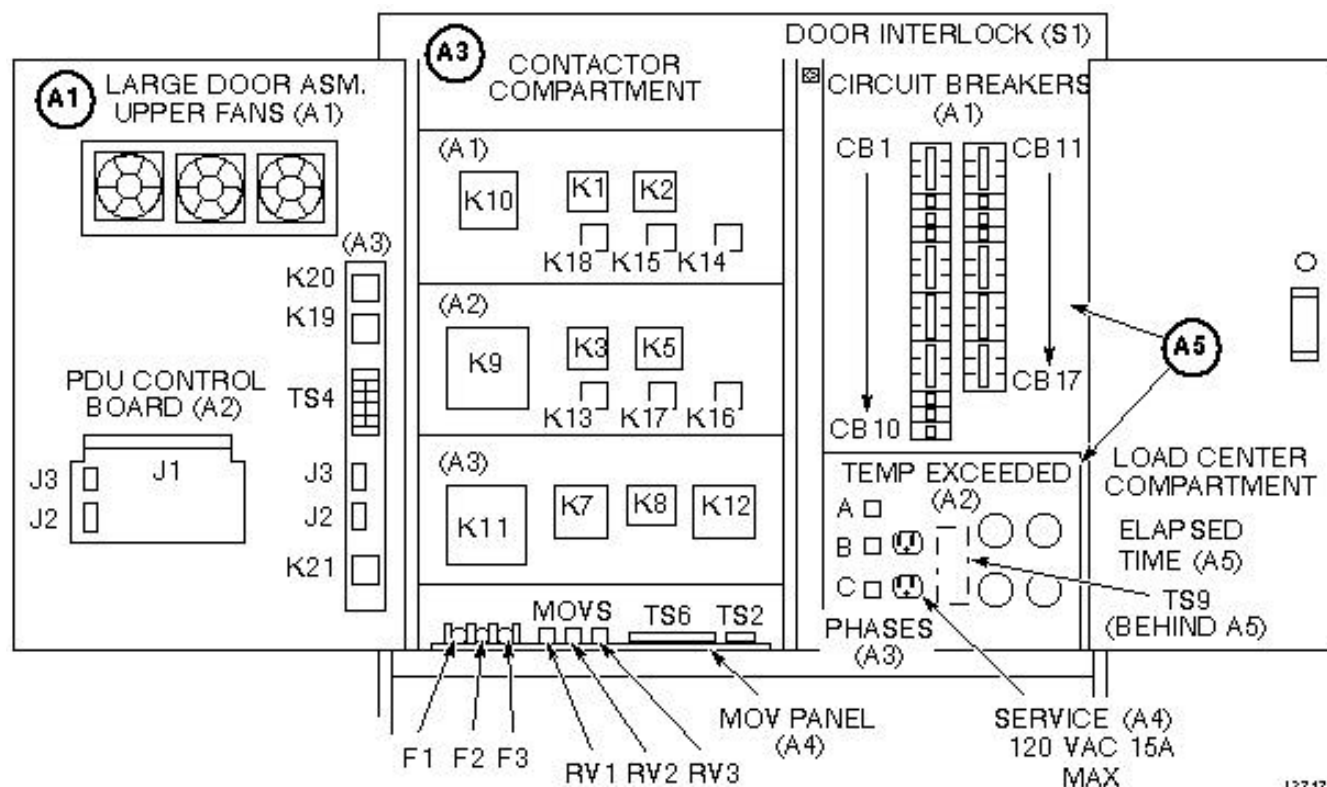


ILLUSTRATION L2717A
PDU WITH POWERTECH COMPONENT LOCATIONS

3- POWERTECH COMPONENTS LOCATIONS

See Illustration L2719A below, PowerTECH Regulator Overall Component Locations.

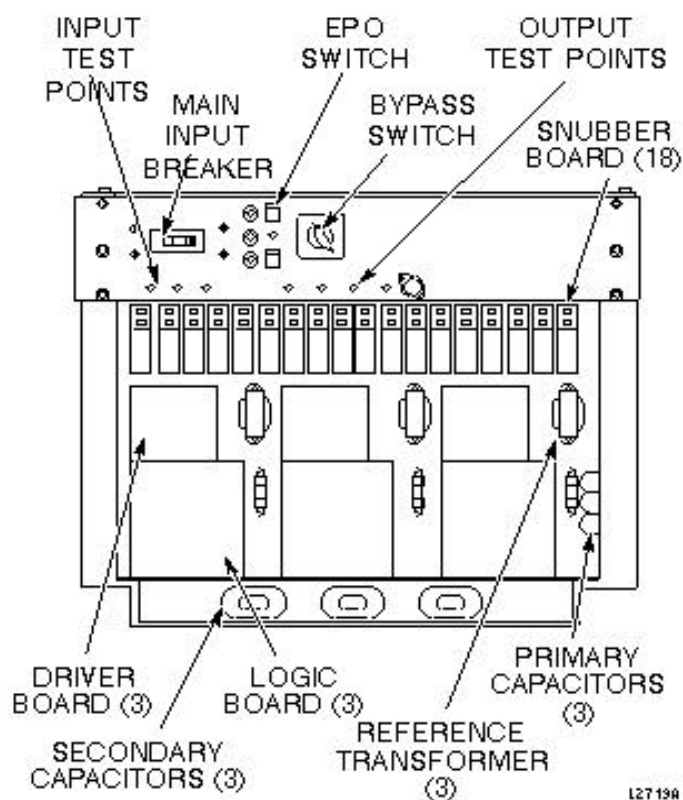


ILLUSTRATION L2719A
POWERTECH REGULATOR OVERALL COMPONENT LOCATIONS

See Illustration L2720A below, SCR Bank Component Locations.

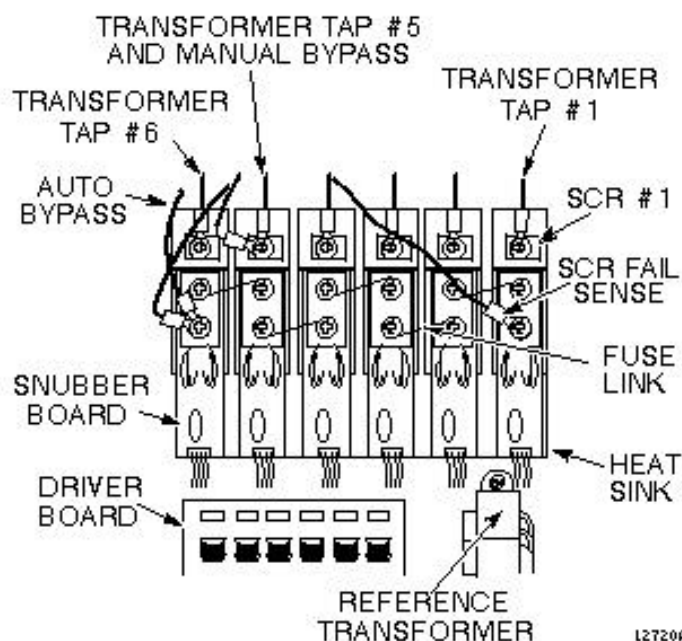


ILLUSTRATION L2720A
SCR BANK COMPONENT

See Illustration L2721A below, Logic Board Component Locations.

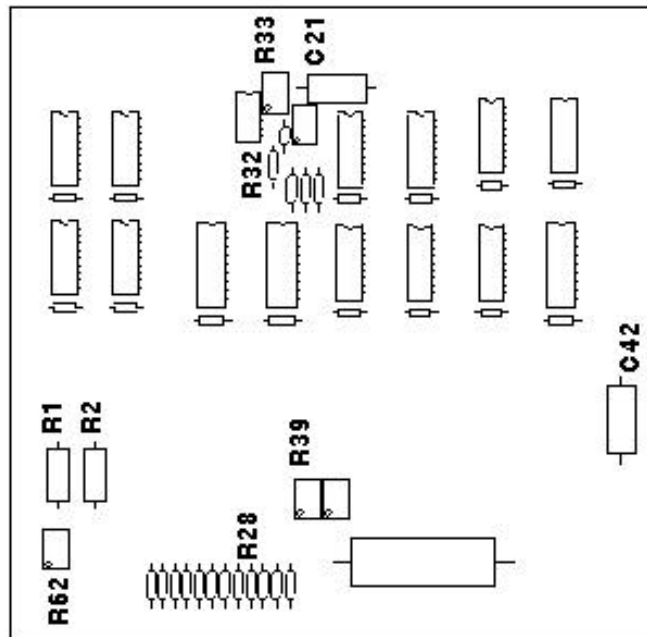


ILLUSTRATION L2721A
LOGIC BD COMPONENT LOCATIONS

REVISION HISTORY

REV	DATE	AUTHOR	PRIMARY REASONS FOR CHANGE
0	June17, 1998	M. Whitlow	Initial Conversion from Toolbook to Word.