

TABLE OF CONTENTS

TABLE OF CONTENTS	1
1- REMOVAL OF FAILED HEAD T/R SWITCH AND PREAMP	2
2- INSTALLATION OF NEW HEAD T/R SWITCH AND PREAMP.....	4
3- FUNCTIONAL CHECKS REQUIRED	5
REVISION HISTORY	6


Description - Procedure for replacing hardware on Low Profile Carriage Cover (LPCC).

1- REMOVAL OF FAILED HEAD T/R SWITCH AND PREAMP



Possible equipment damage. Verify that power is removed from RF cabinet before removing or disconnecting exam room RF components. Verify that the breaker on rear of cabinet is off before starting work. The RF amplifier or TR driver could be damaged by operating into improperly terminated loads.

1. Turn off RF Cabinet power circuit breaker, CB1, on rear of RF Cabinet, or RF/PDU, or RF/PEN Cabinet. Lock out and/or tag out the RF Cabinet, or RF/PDU, or RF/PEN Cabinet. (Refer to appropriate Service Methods - RF/PDU, or RF/PEN Cabinet, "System", "Safety Procedure", OSHA Lockout/Tagout Requirements.)
2. Verify that power to the RF/Pen II Cabinet is off by checking the fans and LEDs on both the RF amplifier and the System Support Module (SSM).
3. Dock and raise table, select new patient, and move the head carriage assembly to the rear of the magnetic bridge.
4. Remove four screws holding carriage cover to carriage assembly. See Illustration 1-1.
5. Slide carriage cover forward over actuators, lift, move back, and lift. See Illustration 1-1.
6. Remove input and output cables to Preamp and T/R Switch. See Illustration 1-1.
7. Remove (2) 6-32 screw adjacent to the banana plugs in the Bezel that mount the T/R Switch. See Illustration 1-1.
8. Remove (2) 6-32 screws that mount Preamp. See Illustration 1-1.

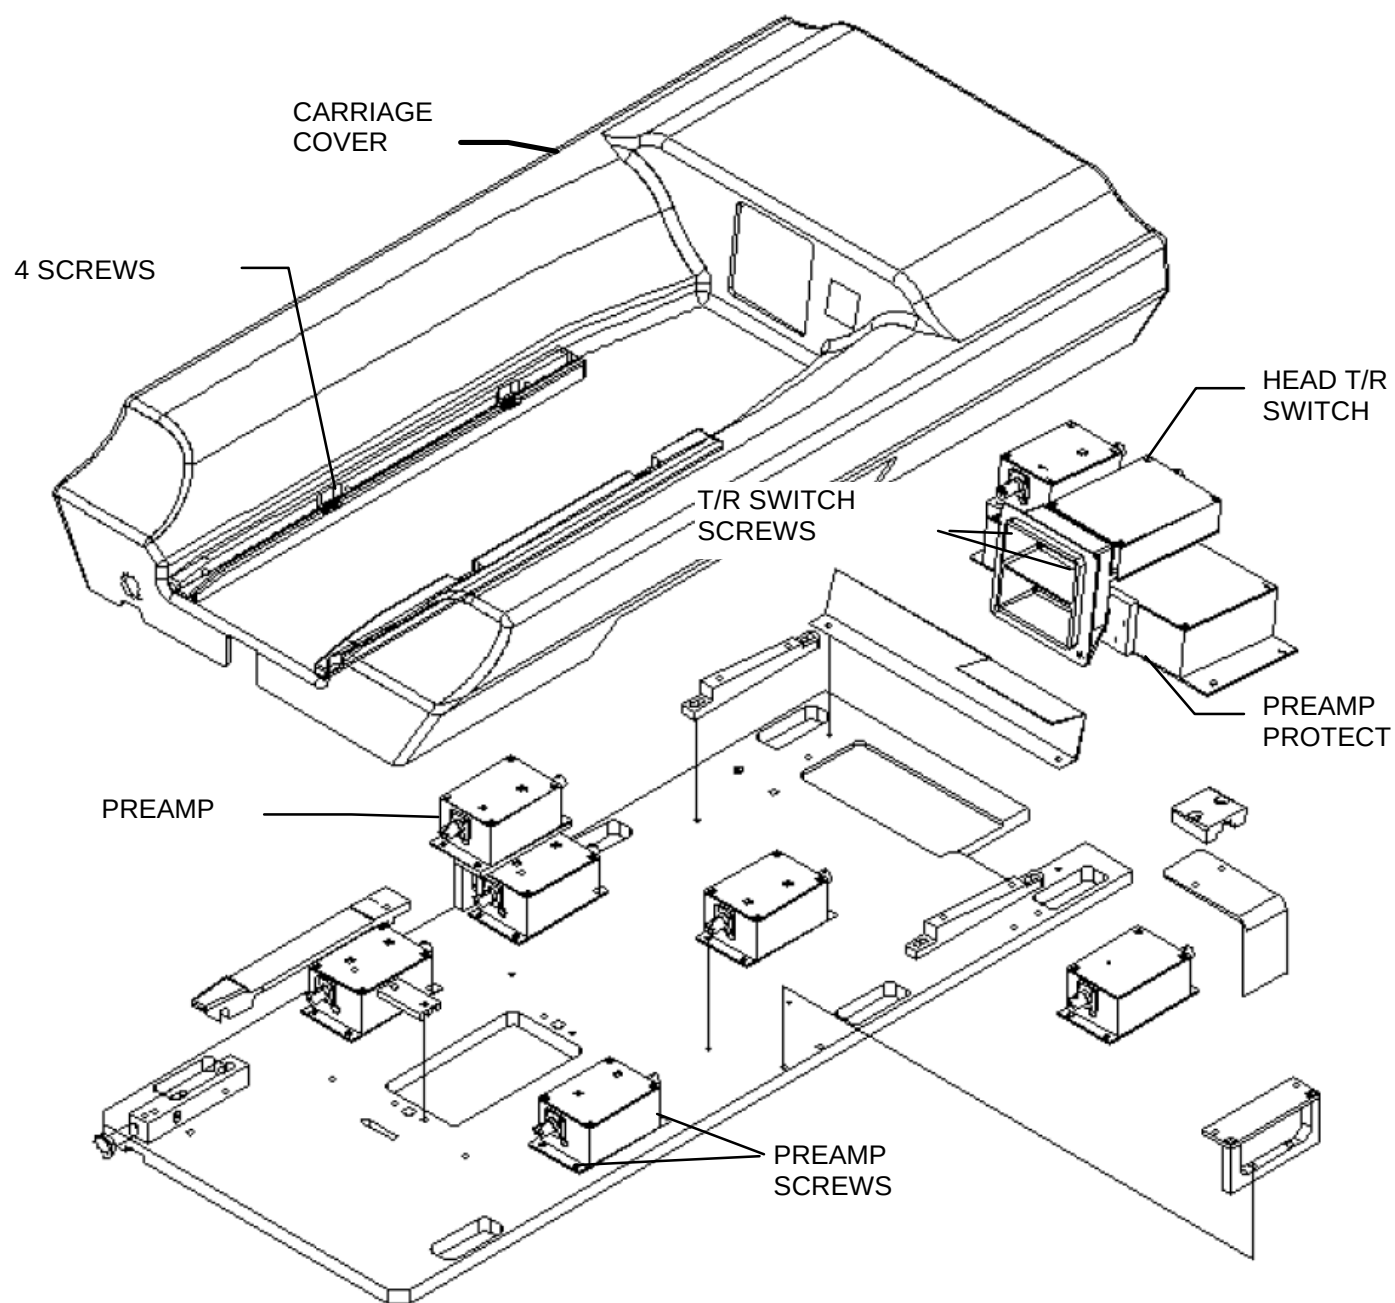


LOW PROFILE CARRIAGE COVER ASSEMBLY
ILLUSTRATION 1-1

2- INSTALLATION OF NEW HEAD T/R SWITCH AND PREAMP

CAUTION

Possible equipment damage. Verify that power is removed from RF cabinet before removing or disconnecting exam room RF components. Verify that the breaker on rear of cabinet is off before starting work. The RF amplifier or TR driver could be damaged by operating into improperly terminated loads.

1. Install the T/R Switch by inserting (2) 6-32 screws through Bezel into T/R Switch. See Illustration 1-1.
2. Connect input and output cables. See Illustration 2-1.
3. Install Preamp by inserting (2) 6-32 screws.
4. Connect input and output cables. See Illustration 2-1.

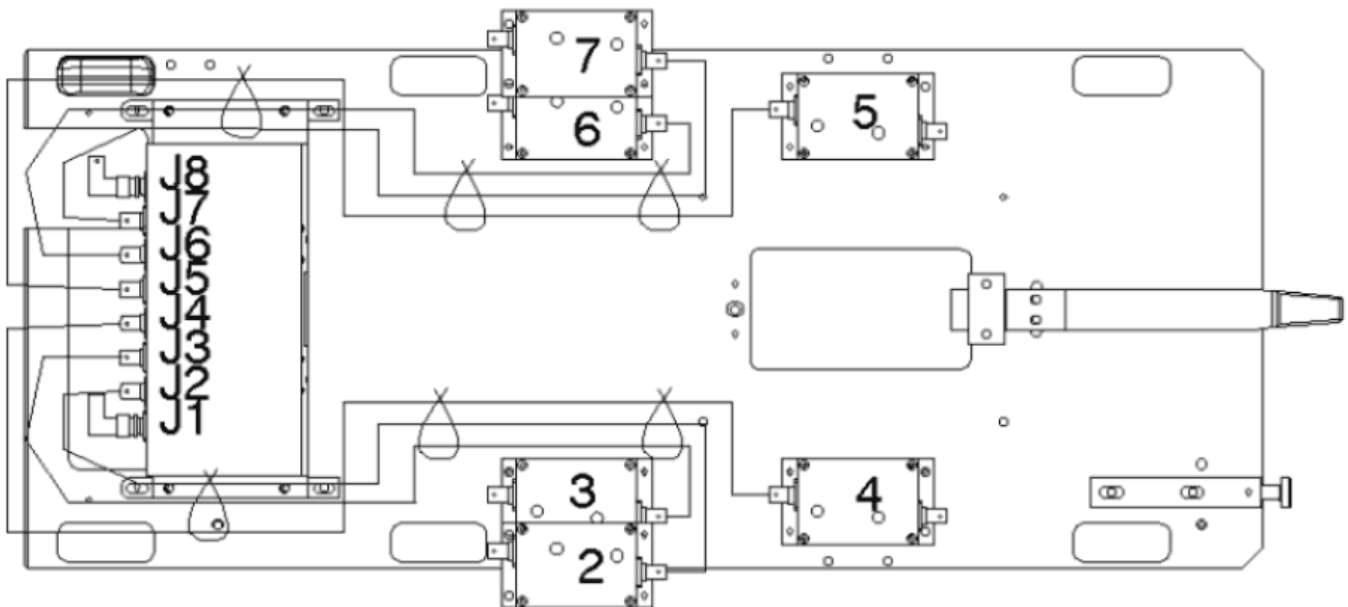

CABLE ROUTING
ILLUSTRATION 2-1

5. Install cover on carriage assembly.
6. Install 4 screws to hold carriage cover to carriage assembly.
7. Remove lock out and/or tag out from appropriate Cabinet. Turn on RF Cabinet, or RF/PEN, or RF/PDU power circuit breaker, CB1, on rear of cabinet.

3- FUNCTIONAL CHECKS REQUIRED

1. From the Service Methods menu, select “ Functional Checks”, then DD/TR Driver And Pin Diodes Procedure.
2. Check Head SNR. Refer to procedure for Signal To Noise Check.

REVISION HISTORY

REV	DATE	AUTHOR	PRIMARY REASONS FOR CHANGE
A	June 11, 1998	W. Pasciak	Initial release of procedure