


TABLE OF CONTENTS

TABLE OF CONTENTS	1
1- REMOVAL OF FAILED ISE/TPS FAN/POWER MODULE	2
2- REMOVAL OF FAN.....	4
3- REMOVAL OF THE FRONT CIRCUIT BREAKERS.....	5
4- REMOVAL OF THE POWER MODULE POWER SUPPLY	5
5- INSTALLATION OF THE POWER MODULE POWER SUPPLY.....	5
6- INSTALLATION OF THE FRONT CIRCUIT BREAKERS	6
7- INSTALLATION OF FAN	6
8- INSTALLATION OF FAN/POWER MODULE.....	6
9- CALIBRATION REQUIRED.....	7
10- FUNCTIONAL CHECKS REQUIRED	7
REVISION HISTORY	8

Description - Procedure for replacing the ISE/TPS Fan/Power Module FRUs, Fan, Power Module, and circuit breaker, located in the front of the ISE/TPS Chassis.


1- REMOVAL OF FAILED ISE/TPS FAN/POWER MODULE

1. Shut down Signa Horizon (8.x) software.
2. Remove front and rear covers from System Cabinet.
3. Turn off the main (CB1) circuit breaker. (see Illustration L4601A).

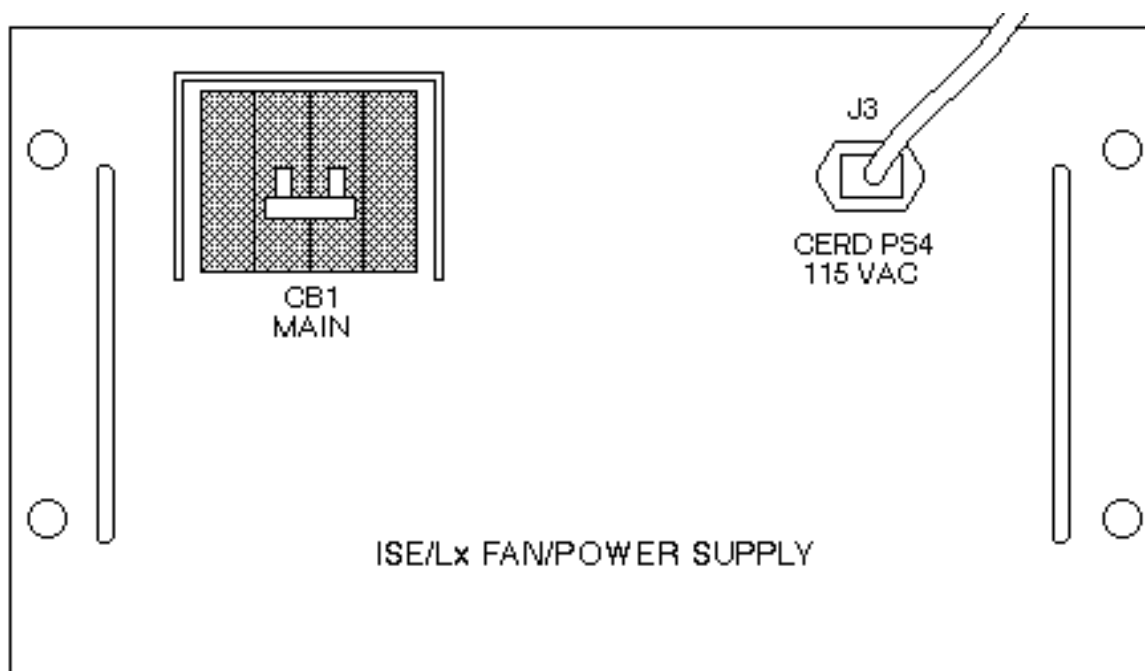


ISE/TPS FAN/POWER ASSEMBLY - FRONT VIEW
ILLUSTRATION L4601A

4. Disconnect all cables from rear of Fan/Power Module. See Illustration L4602A.

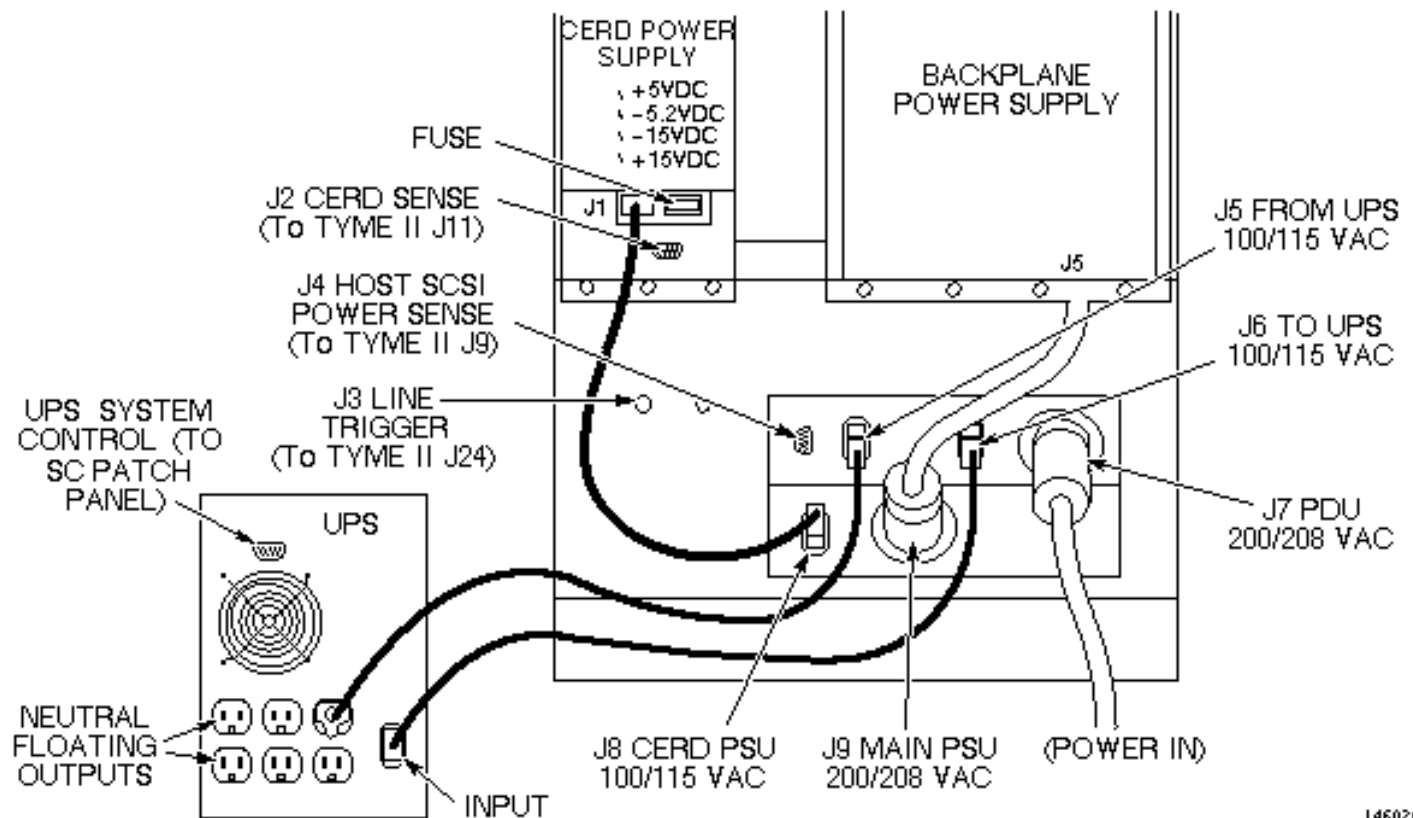

REAR OF ISE/TPS FAN/POWER MODULE
ILLUSTRATION L4602A

- Remove the four panel screws in front of ISE/TPS Fan/Power Module. See Illustration L4601B.

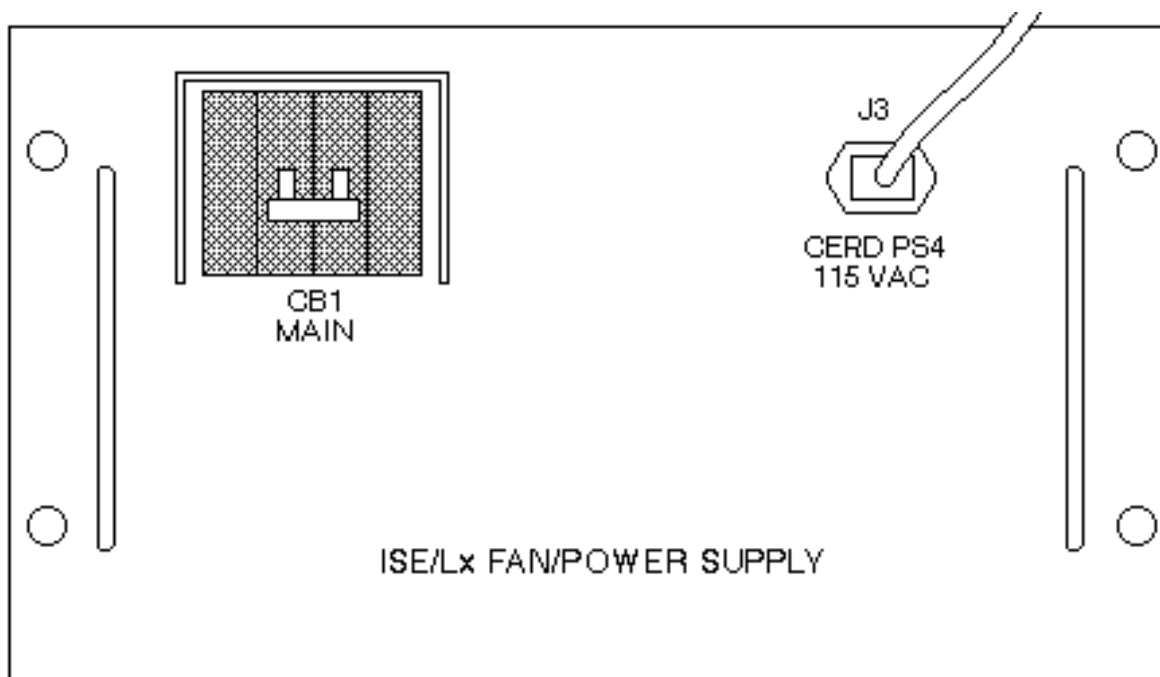

FAN/POWER MODULE - MODULE REMOVAL
ILLUSTRATION L4601B

6. Slowly remove the module to the first mechanical stop (approximately 6 inches). Release mechanical stop on left rail by pushing stop in.




Possible personal injury. Remove this module slowly to avoid injury from unbalanced weight.

7. Slowly remove the module to second mechanical stop (approximately 6 inches). Release mechanical stop on left rail by pushing stop in. Slowly remove the module completely from the cabinet.

2- REMOVAL OF FAN

1. Remove six screws and remove fan cover plate. See Illustration L4762A.

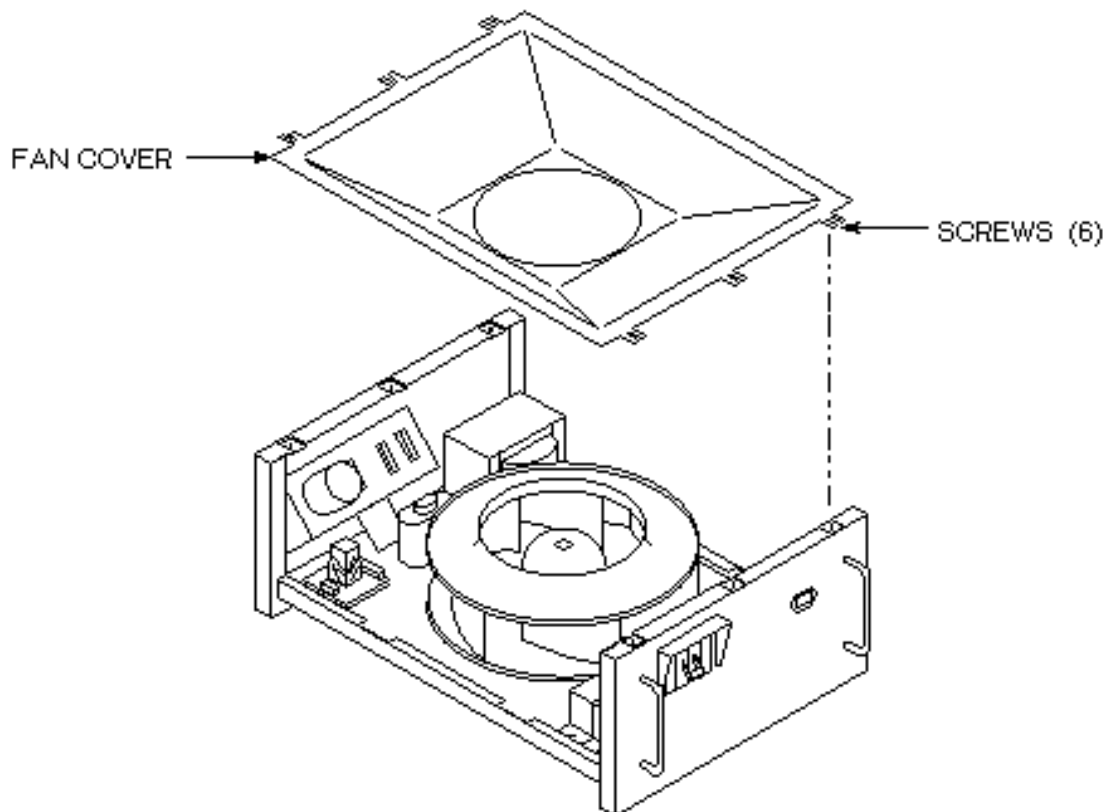


FAN COVER PLATE REMOVAL
ILLUSTRATION L4762A

2. Remove four screws from below the module in the center which holds the fan in place.
3. Disconnect and remove the AC power cable from the module.
4. Remove the fan.

3- REMOVAL OF THE FRONT CIRCUIT BREAKERS

1. Remove six screws and remove fan cover plate. See Illustration L4762A in Section 2.
2. Disconnect wires from rear of the circuit breaker. See Illustration L4763A.

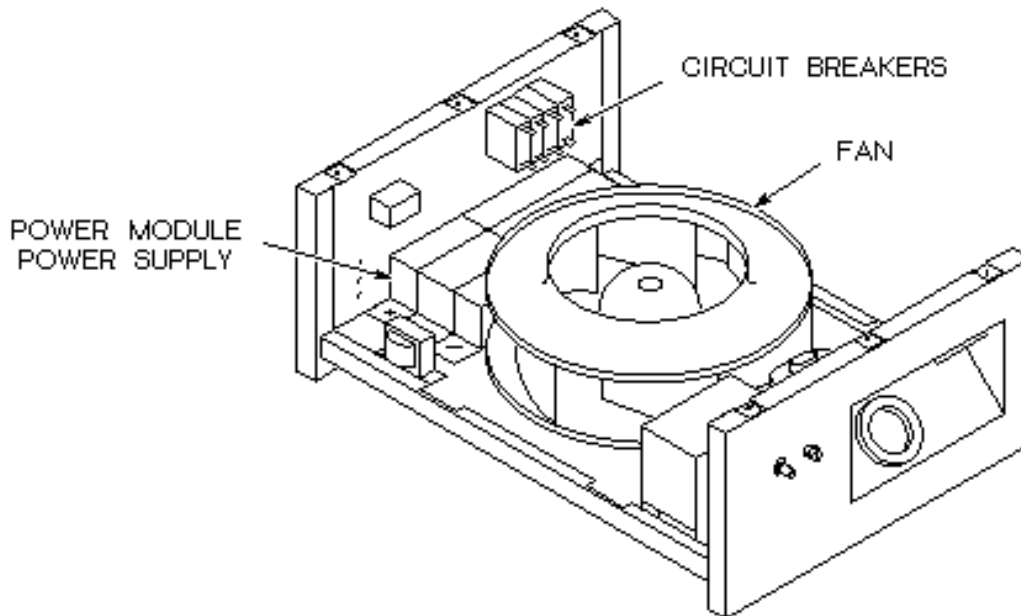

ISE/TPS FAN/POWER MODULE FRU REMOVAL
ILLUSTRATION L4763A

3. Release the circuit breaker from the front panel and remove.

4- REMOVAL OF THE POWER MODULE POWER SUPPLY

1. Remove six screws and remove fan cover plate. See Illustration L4762A in Section 2.
2. Disconnect wires from the Power Supply Module. See Illustration L4763A in Section 3.
3. Remove four screws from bottom of Power Module under the Fan Module.
4. Remove the module.

5- INSTALLATION OF THE POWER MODULE POWER SUPPLY

1. Install the Power Module. See Illustration L4763A in Section 3.
2. Install four screws through bottom of Power Module under the Fan Module.
3. Reconnect wires to the Power Supply Module.

4. Install fan cover plate and install six screws to secure plate. See Illustration L4762A in Section 2. Continue with Section 8 - Installation Of Fan/Power Module.

6- INSTALLATION OF THE FRONT CIRCUIT BREAKERS

1. Install the circuit breaker into the front panel.
2. Reconnect wires to rear of the circuit breaker.
3. Install fan cover plate and install six screws to secure plate. See Illustration L4762A in Section 2. Continue with Section 8 - Installation Of Fan/Power Module.

7- INSTALLATION OF FAN

1. Install the fan into Fan Module. See Illustration L4763A in Section 3.
2. Install four screws below the module in the center which holds the fan in place.
3. Reconnect and tywrap the AC power cable to the module.
4. Install fan cover plate and install six screws to secure plate. See Illustration L4762A in Section 2. Continue with Section 8 - Installation Of Fan/Power Module.

8- INSTALLATION OF FAN/POWER MODULE

1. Slowly install the ISE/TPS Fan/Power Module into the cabinet.
2. Install the four panel screws in front of ISE/TPS Fan/Power Module. See Illustration L4601B in Section 1.
3. Reconnect all cables to rear of Fan/Power Module. See Illustration L4602A in Section 1.
4. Turn on the main (CB1)circuit breaker (see Illustration L4601A in Section 1).
5. Install System Cabinet front and rear covers.
6. Bring up Signa Horizon (8.0) software.

9- CALIBRATION REQUIRED

Refer to ISE/TPS Fan/Power Module Adjustments.

10- FUNCTIONAL CHECKS REQUIRED

1. Perform one head or body scan.

REVISION HISTORY

REV	DATE	AUTHOR	PRIMARY REASONS FOR CHANGE
0	June 1, 1998	J. Saperstein	Initial Conversion from Toolbook to Word.