

	TEAL Electronics Corporation 10350 Sorrento Valley Road San Diego, CA 92121 (800) 888-TEAL (8325)
Technical Service Bulletin 102109-1	
Author: Robert Gregg	Date Issued: 10/21/2009
Filename & Path: G:\GROUP\SALES\Product Support\Technical Service Bulletins\TSB102109-1.pdf	

Purpose: To replace power supply mounting screws that are too long that could possibly cause the internal shorting to ground of PS1 and/or PS2 .

Scope: All XGD PDU's (TEAL P/N 6600003, GE P/N 5140621) manufactured between 12/14/2007 & 8/7/2008. 25 PDU's are affected by this TSB.

PDU Serial Numbers Affected:

97679	97680	99326	99327	100972
101501	101502	101503	112951	114986
114987	114988	114990	114992	115349
115350	115351	115401	115402	115403
115404	115405	115406	115506	115507


Tools Required: Phillips head torque screwdriver (16 in-lbs.)
Loc-tite # 242

Parts Required: Qty (1) screw mounting kit, (P/N 4990913) consisting of:

- Qty (8) 8-32x1/4" 100° countersink Phillips head screws (P/N 0110091)
- Qty (2) screw torque labels (P/N 1181431)


Procedure:

1. Disconnect and lock-out/tag-out facility power from the PDU
2. Remove the front panel of the PDU
3. Remove the twist-lock receptacle panel at the bottom right of the PDU front and set aside

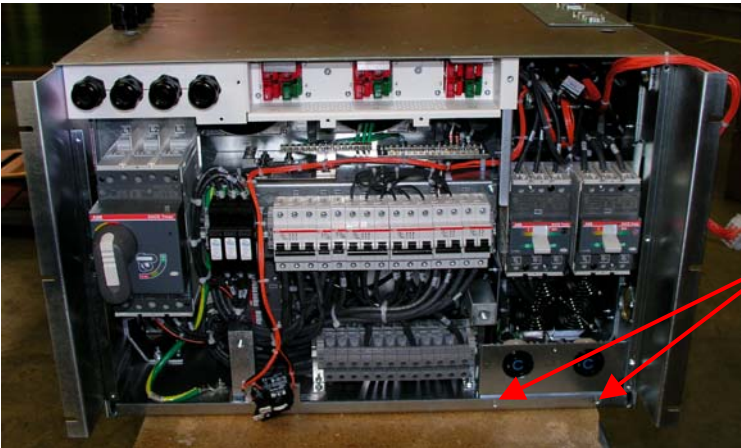

Remove Twist-Lock Panel via 2 screws

4. Disconnect and remove the power supply assembly from the PDU

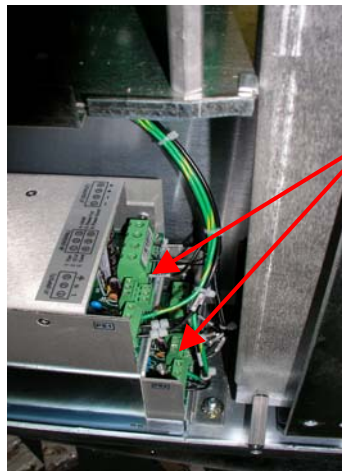

Disconnect electrical connections

5. Disassemble the power supply mounting brackets and remove the power supplies from the mounting brackets (Discard the existing screws (8-32x3/8") used to mount the power supplies to the mounting brackets)

6. Mount the power supplies to the two mounting brackets using a small drop of Loc-tite applied to the supplied 8-32x1/4" screws. Torque to 16 in-lbs. Make sure the power supply labeled PS1 is mounted to the upper mounting bracket (P/N 0590905) and the power supply marked PS2 is mounted to the lower bracket (P/N 0590902)



Use 8-32x1/4" screws


Caution: Do not use the 8-32x3/8" screws to mount the power supplies to the mounting bracket



Use 8-32x1/4" screws

7. Apply the screw torque labels (1 each) to the bottom center of each of the power supply mounting brackets

8. Re-assemble the mounting brackets together using a small drop of Loc-tite to the existing 8-32x3/8" screws. Torque to 16 in-lbs.

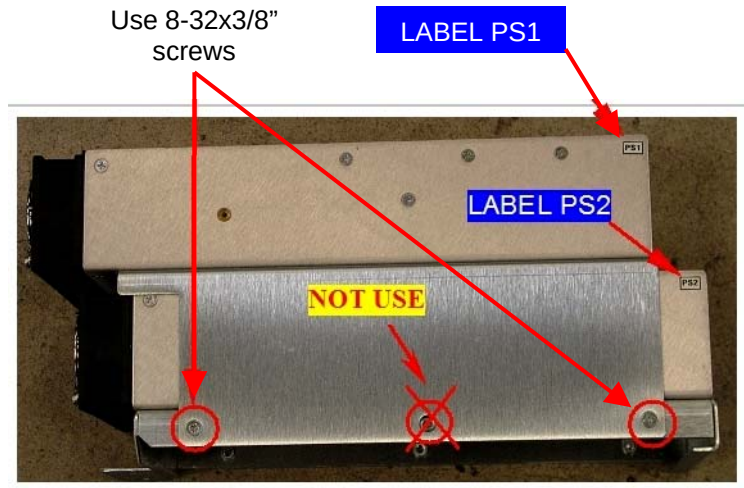

9. Install the power supply assembly to the PDU and secure using the existing screws

10. Re-connect the power connections to the power supplies

11. Install the front panel to the PDU

12. Return the PDU to service