


How to clone a system hard drive on an Octane

Conditions for this cloning procedure:

The Octane is using just one hard drive (no hard drive in the middle bay)

An additional hard drive with IRIX 6.5 is needed just for this process (so the master/source is not mounted and no files are open during the cloning procedure).

The target or new hard drive size is the same as the master/source or larger.

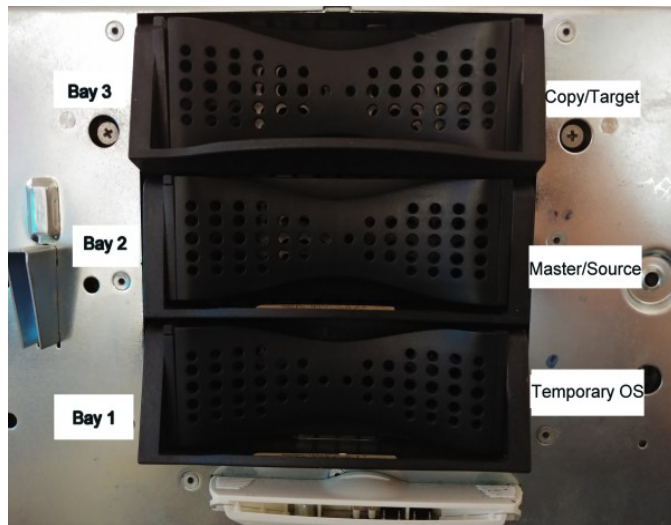

1. Turn off the Octane computer and remove the Octane's front cover.
2. Pull the ONLY hard drive from bay1 and move it to bay 2 (middle bay)
3. Insert the new/blank hard drive (**copy/target**) in the bay 3 (top Bay)
4. Insert the **temporary** hard drive with IRIX 6.5 in the first bay (bottom)
5. Turn on the Octane, let it boot and log in as root.
6. If you get the message to open guided install say no (when MRI software is installed).
7. Open a shell and type:

```
dd bs=1000k if=/dev/rdisk/dks0d2vol of=/dev/rdisk/dks0d3vol
```

8. **WAIT** for output on the screen that says *records -in records-out* which indicates the end of the cloning process, do not touch the keyboard before this shows up, this could take more than 10 minutes depending on the size being copied.
9. With the *records-in records-out* on the screen type the command `halt` which will bring down the OS.
10. Turn off the Octane.
11. Pull the bottom hard drive and set aside, you wont need this anymore.
12. You'll decide what to do with the two other hard drives counting that the **top drive is the new copy** and **the middle is the original drive** so place the hard drive you want to use in the bottom bay and pull the back up drive or failing disk.

Luis Santos