

TABLE OF CONTENTS

TABLE OF CONTENTS	1
1- REPLACING HEAD T/R SWITCH	2
1-1 Removal of Head T/R Switch	2
1-1-2 Removal of LPCA Cover	3
1-2-1 Installation of New Head T/R Switch	4
1-2-2 Installation of the LPCA Cover	4

Description - Procedure for replacing the head T/R Switch.

1- REPLACING HEAD T/R SWITCH

1-1 Removal of Head T/R Switch

1. Lock out and tag out circuit breaker MR1 A14 CB6 at rear of RF/Pen Cabinet (MR1) on magnet enclosure power supply (MEPS) module.

For **RF/Pen II** and **RF/PDU Cabinet**: Lock out and tag out circuit breaker MR1 A20 CB4 at rear of RF/Pen II and RF/PDU Cabinet on System Support Module (SSM).

(Refer to CD-ROM *Dir. 2187583-3 [or -2], MR Release Signa 5x/3.0T Eclipse Service Methods, Renewal Parts and Service Tools*, Procedure for Safety, Section 6, OSHA LOCKOUT/TAGOUT REQUIREMENTS.)

2. Verify that voltage between MR1 A14 TP1 (+) and TP14 (–) is 0 Vdc.


For RF/Pen II and RF/PDU Cabinet, Verify voltage between MR1 A20 TP1 (+) (Dock) and TP14 (–) (Dock RTN) is 0 Vdc.

1-1-2 Removal of LPCA Cover

1. Refer to procedure for Rear End Bell Removal Open Enclosure ME2REA9.


REAR VIEW OF MAGNET
ILLUSTRATION 1-1

4. Drop speaker/microphone assembly down and remove microphone from plate.
See Illustration 1-2.

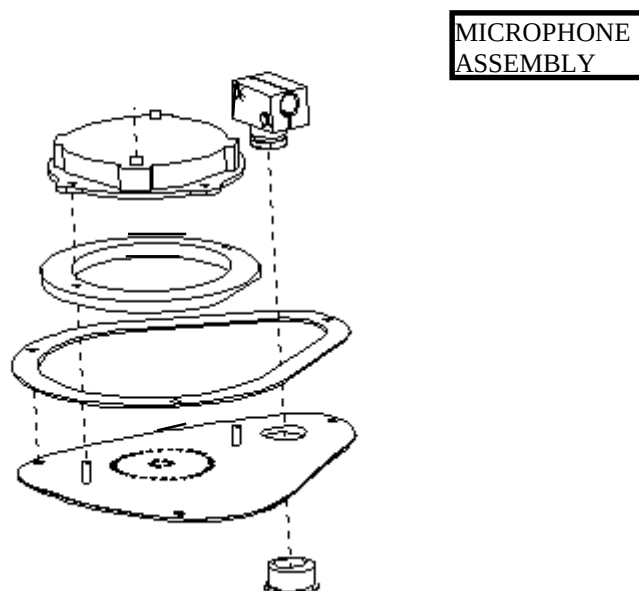

SPEAKER/MICROPHONE ASSEMBLY DETAIL
ILLUSTRATION 1-2

4. Remove microphone clamp by removing (2) two screws. See Illustration 1-3.
5. Lift Microphone and cable out of End Bell assembly paying careful attention to cable routing. See Illustration 1-3.

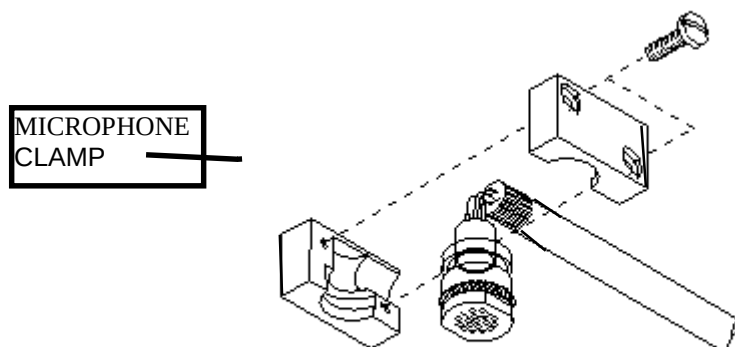

MICROPHONE REMOVAL
ILLUSTRATION 1-3

6. Locate and disconnect microphone cable on intercom board J7 or J9, located on the right side of the rear pedestal facing the magnet from the rear.

1-2-1 Installation of New Head T/R Switch

1. Re-assemble microphone mount and re-install in speaker/microphone plate.
2. Connect other end of cable to intercom box J7 or J9 on rear pedestal.
3. Install speaker/microphone plate using (3) three screws removed in step 1-1-2-1.
4. Remove lock out tag out. turn on RF/PEN circuit breaker.

1-2-2 Installation of the LPCA Cover

1. place new microphone in end bell and re-tape thermal blanket with tape provided with new microphone.
2. Re-tywrap microphone cable to end bell.
3. Replace front end bell.
4. Push in plastic plug removed in step 1-1-3-1.
5. Connect other end of cable to intercom box J7 or J9.

6. Remove tag-out tag from circuit breaker MR1 A14 CB6 or MR1 A20 CB4.
7. Restore power to operator button panel and display assemblies by switching on circuit breaker MR1 A14 CB6 at rear of RF/Pen Cabinet (MR1) on MEPS module.

RF/Pen II and RF/PDU Cabinet: Switch on circuit breaker MR1 A20 CB4 on the SSM at rear of RF/Pen II Cabinet or RF/PDU.

REVISION HISTORY

REV	DATE	AUTHOR	PRIMARY REASONS FOR CHANGE
0	Sept. 25, 2002	C. MacDonald	Initial version.