


PPG CABLE REPLACEMENT INSTRUCTION

INSTALLATION STEPS SUMMARY


- ☐ A – Separate PAC Front Panel from Module Box
- ☐ B – Remove 17 Inch Front Display Cable (MR/i or CV/i Upgrades Only)
- ☐ C – PPG Cable Replacement
- ☐ D – Attach PAC Front Panel to Module Box

Note: Procedure **B** below is to be performed only when upgrading an LCC Horizon Magnet Enclosure to a new MR/i or CV/i Magnet Enclosure. The PAC assembly is transferred from the front cover to the PAC/SRI Platform and the Front Display Cable is not used. Procedure **C** is required to install the new PPG Cable. Procedures **A** and **D** are required for both of the above Procedures.

☐ A – SEPARATE PAC FRONT PANEL FROM MODULE BOX

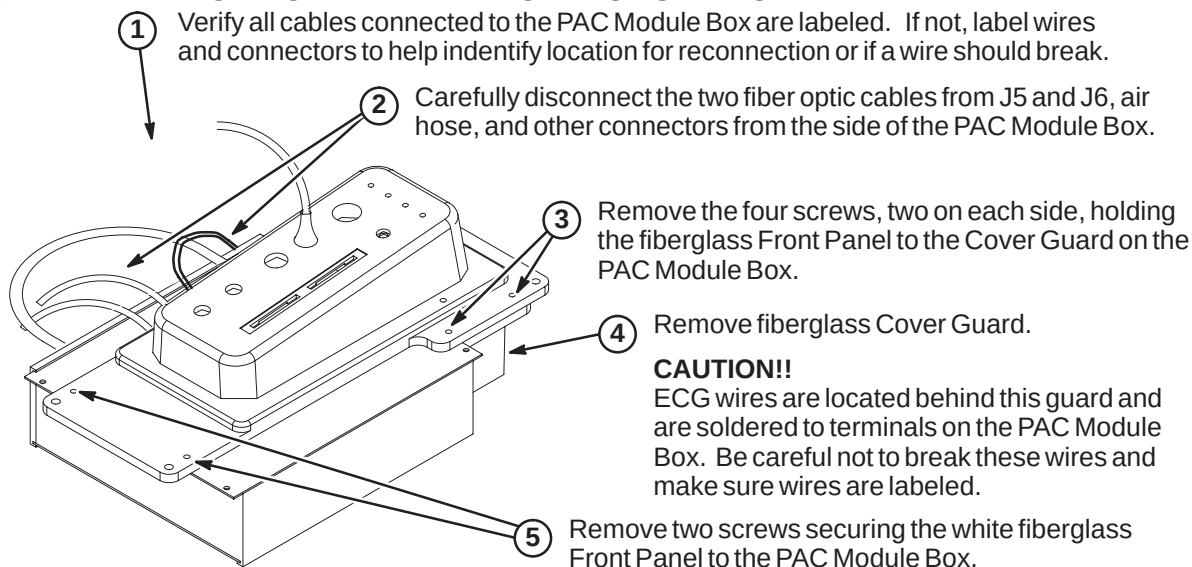


☐ B – REMOVE 17 INCH FRONT DISPLAY CABLE (MR/i or CV/i UPGRADES ONLY)

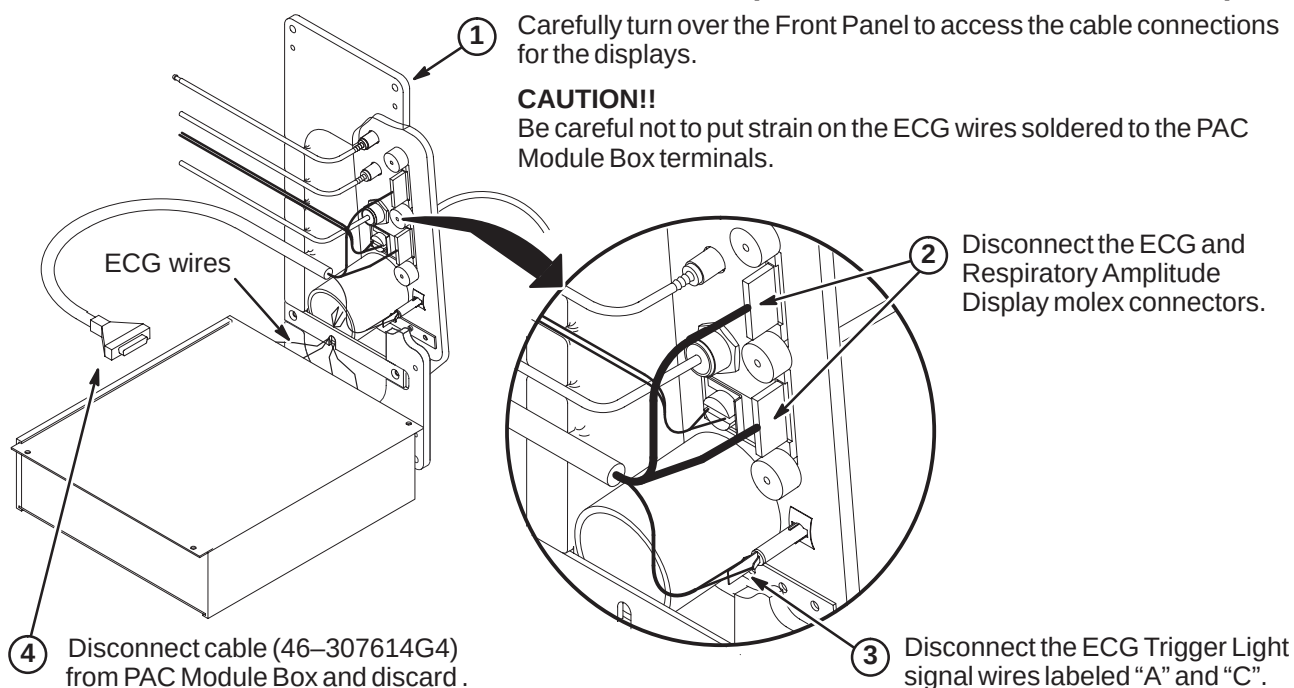

PPG CABLE REPLACEMENT INSTRUCTION

– C – PPG CABLE REPLACEMENT

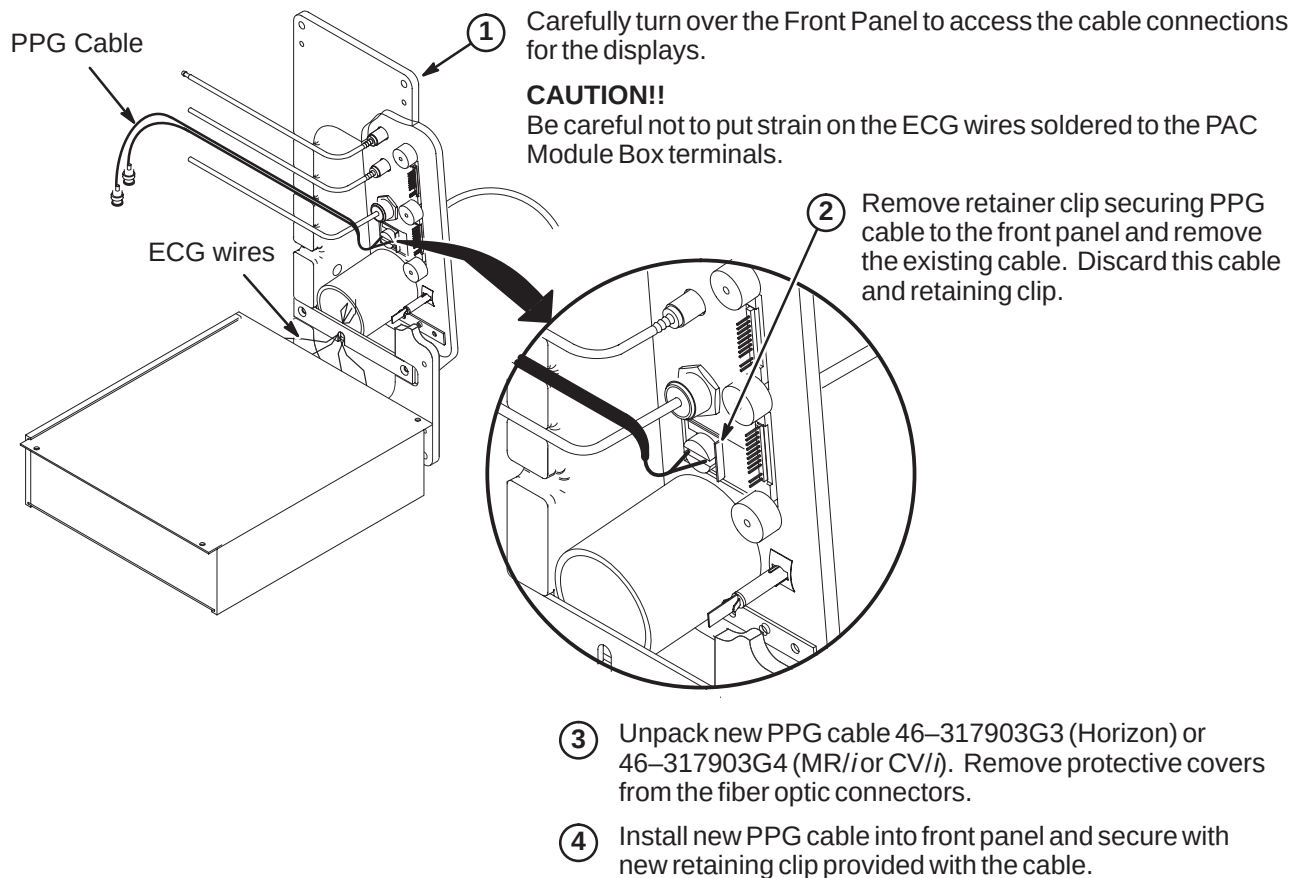

– D – ATTACH PAC FRONT PANEL TO MODULE BOX

