

TABLE OF CONTENTS

TABLE OF CONTENTS	1
1- OVERVIEW	2
2- BRIDGE REMOVAL	2
3- FRONT END BELL REMOVAL	5
4- SYSTEM RESTORATION.....	10
REVISION HISTORY	11

1- OVERVIEW

This procedure describes the replacement of the Temperature Sensor located in the front end bell of the open enclosure for Signa systems with the LCC Wide Open Magnet.

FRU

Part Number

Temperature Sensor Cable Kit

46-328326G1

Kit Contents:

Run 749, MG2-A33-J10 TO MG2-A36, 35'

46-328354P1

Adhesive-Backed Fastener, 2" x 3"

46-328325P1

Self-Locking, Cable Tie 7.31" x .184"

46-208758P3

Tools Required:

Digital Volt Meter (DVM)

Standard Screwdriver

Philips Screwdriver

Adjustable Hex Wrench or Socket Set

Allen Wrench Set


2" x 4" piece of wood (approximately 18 - 20 inches long)

Manpower Requirements:

Two to three people required for removing end bells.

2- BRIDGE REMOVAL

1. Undock Patient Transport. Move Patient Transport out of the way of the front cover of the magnet.
2. Remove covers on Rear Pedestal.
3. While holding in the patient transport dock plunger (see Illustration 2-1), move the carriage to the rear of the magnet by pressing the **[In Fast]** button on the enclosure.

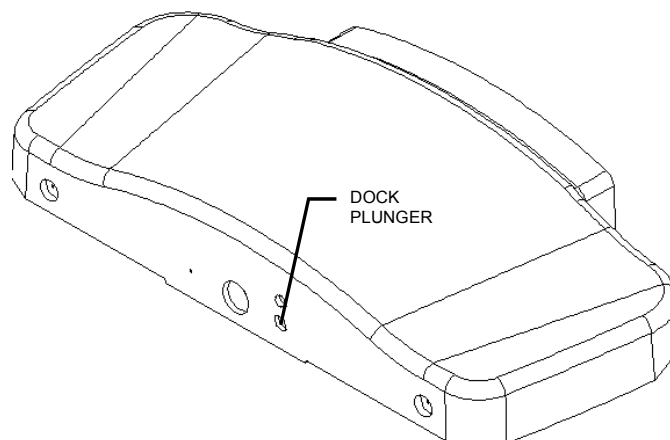

HOLDING DOCK PLUNGER
ILLUSTRATION 2-1


4. Lock out and tag out circuit breaker MR1 A14 CB6 at rear of RF/Pen Cabinet (MR1) on magnet enclosure power supply (MEPS) module.

For **RF/Pen II** and **RF/PDU Cabinet**: Lock out and tag out circuit breaker MR1 A20 CB4 at rear of RF/Pen II and RF/PDU Cabinet on System Support Module (SSM).

5. Using the DVM, verify that voltage between MR1 A14 TP1 (+) and TP14 (–) is 0 Vdc.


For **RF/Pen II** and **RF/PDU Cabinet**, Verify voltage between MR1 A20 TP1 (+) (Dock) and TP14 (–) (Dock RTN) is 0 Vdc.

6. Using an allen wrench, remove (4) four M6 bolts holding down bridge. Two of the bolts are in the front of the bore and two bolts are in the back of the bore. Lift front of bridge off front bridge pin (see Illustration 2-2).

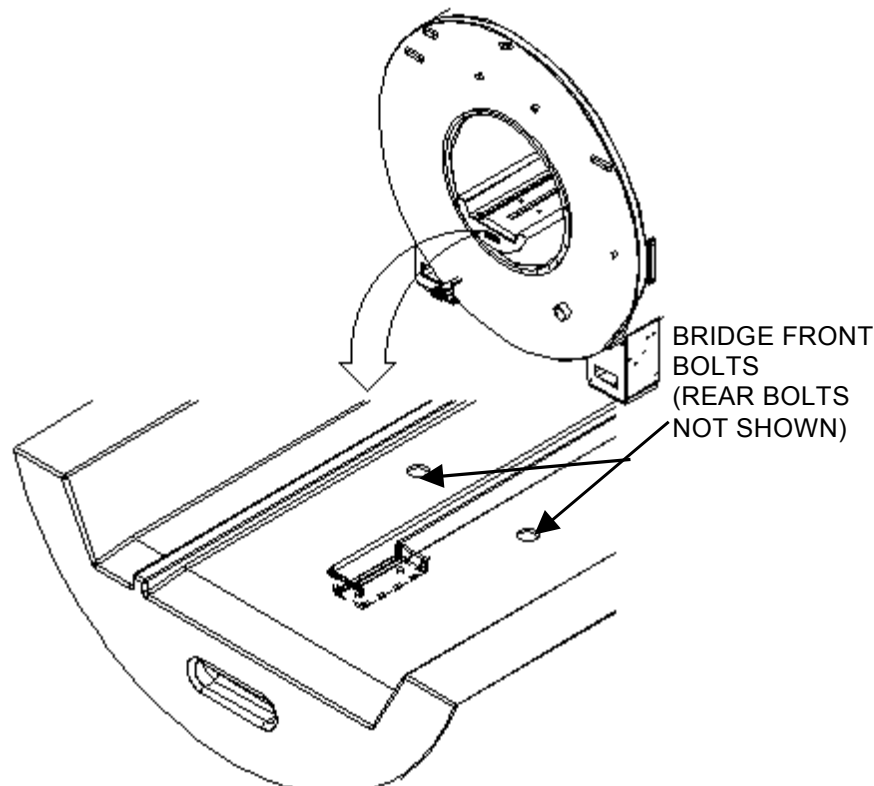

FRONT BRIDGE PIN
ILLUSTRATION 2-2

7. Carefully lift and slide wood under bridge. See Illustration 2-3.

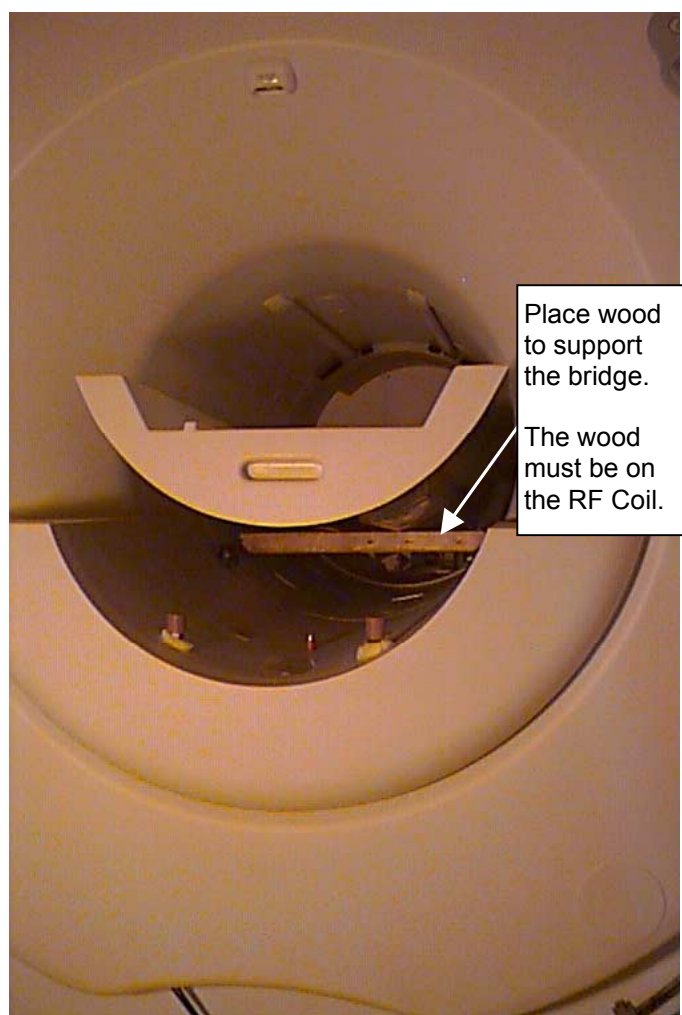


PLACEMENT OF WOOD TO SUPPORT BRIDGE
ILLUSTRATION 2-3

3- FRONT END BELL REMOVAL

1. Each control panel has (2) two latches that are accessed with a 3mm allen wrench. Insert allen wrench into one hole in control panel and turn counter clockwise $\frac{1}{2}$ turn. Insert allen wrench into the other hole in control panel and turn counter clockwise $\frac{1}{2}$ turn.


See Illustration 3-1.

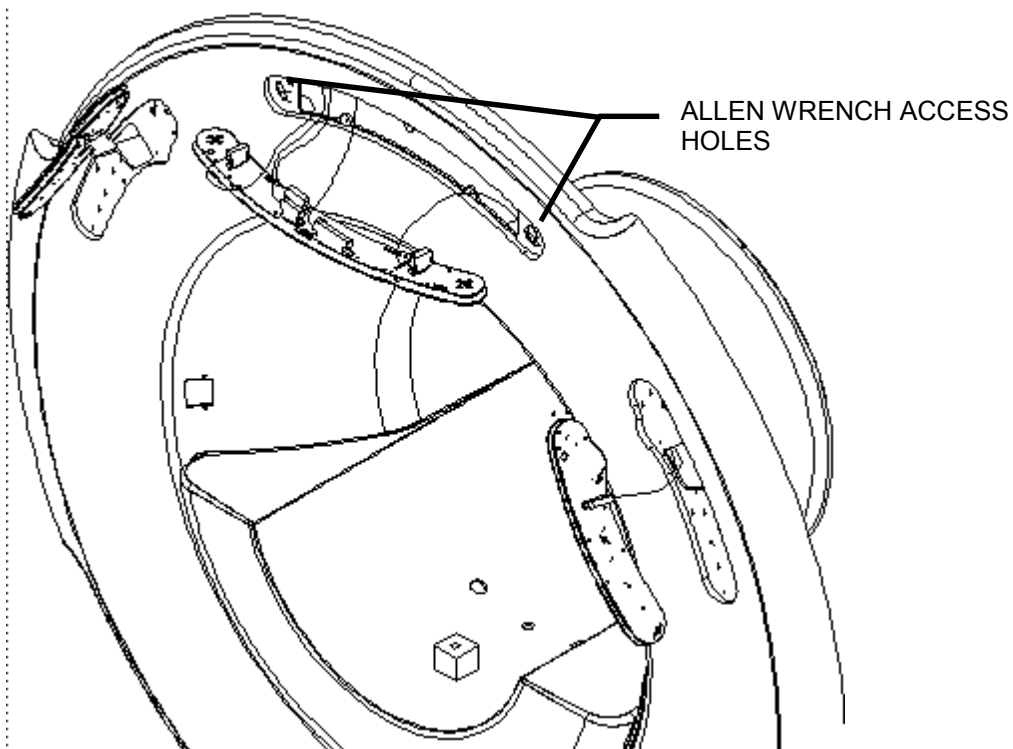

CONTROL PANEL LOCATIONS
ILLUSTRATION 3-1


2. Lift control panel out and remove SCSI type II connectors. There are (5) connectors on the middle control panel and (1) one each on the left and right control panel.

See Illustration 3-2.

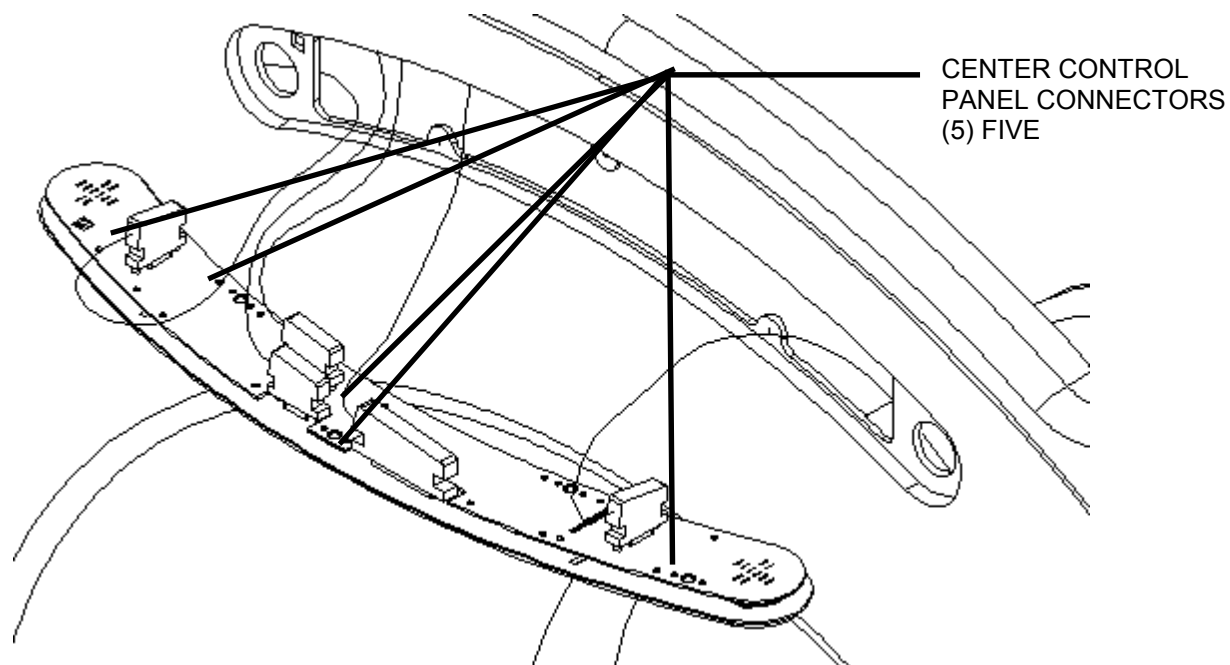


CENTER CONTROL PANEL DETAIL
ILLUSTRATION 3-2

3. Remove front enclosure covers. See Illustration 3-3.

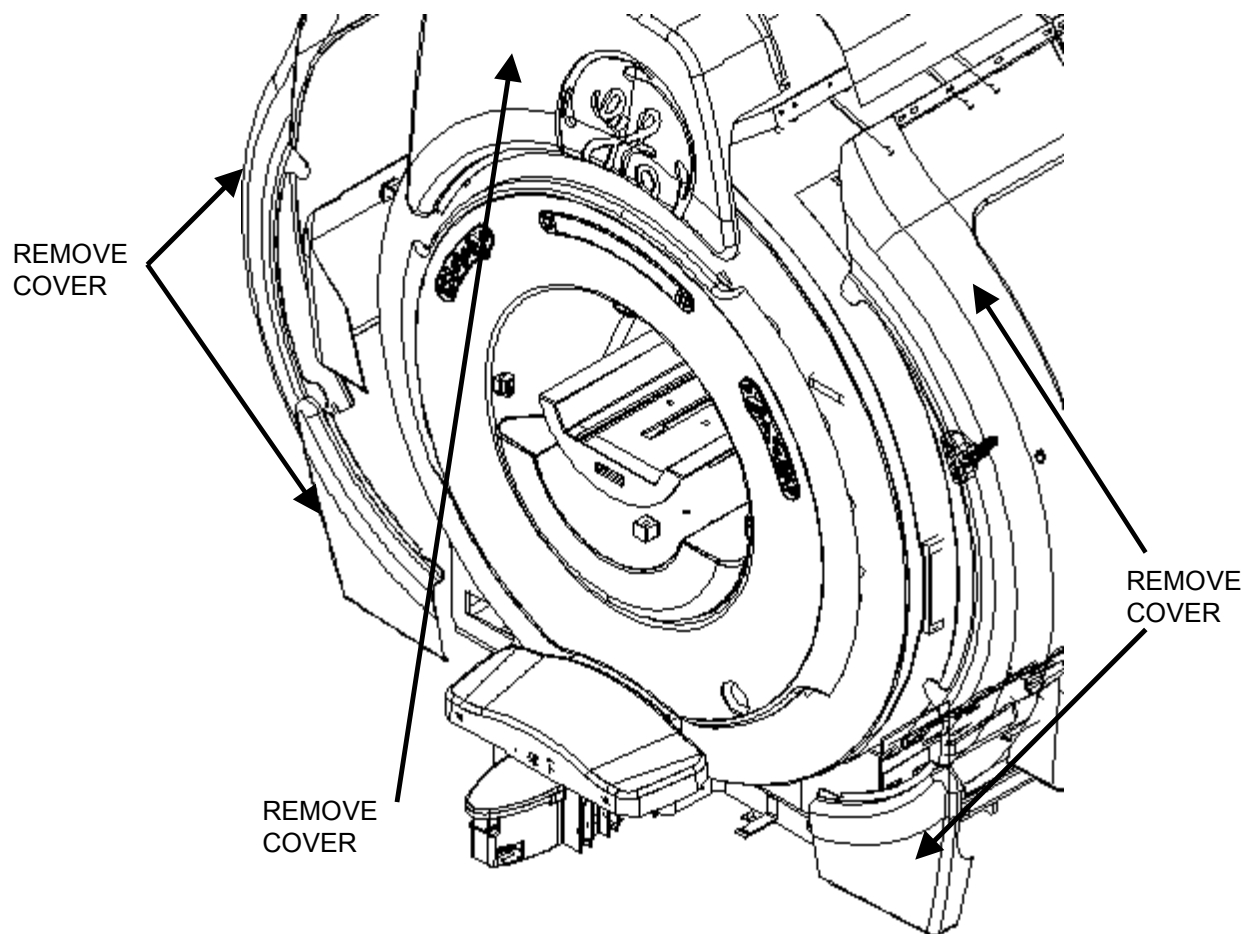

FRONT VIEW ENCLOSURE
ILLUSTRATION 3-3


4. Lift open (2) two latches connecting front end bell and RF tube. See Illustration 3-4.

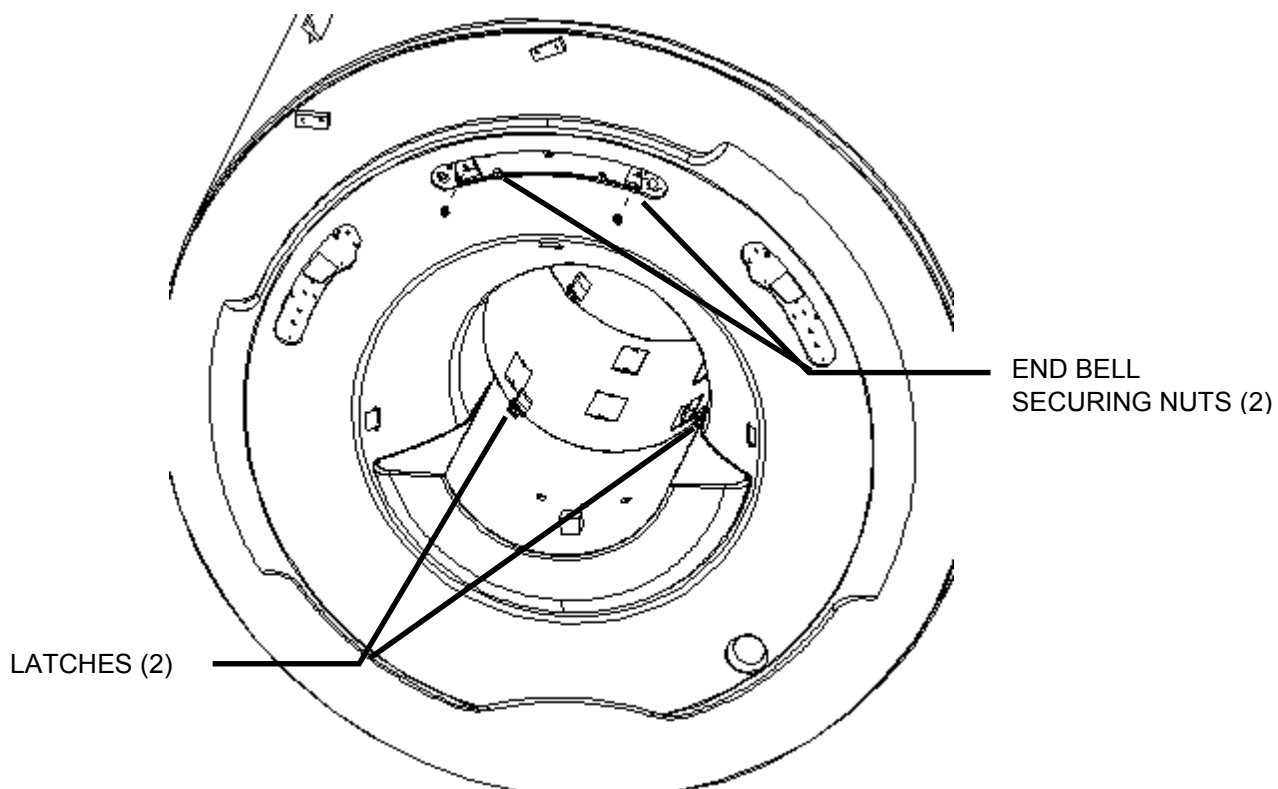

FRONT VIEW END BELL
ILLUSTRATION 3-4

5. Remove (2) two 17mm nuts holding front end bell on. See illustration 3-4.
6. Remove front end bell by pulling top out past studs, then lifting vertically to clear end bell inserts, then pulling out the rest of the way.

7. The bore temperature sensor is located on the front end bell. See Illustration 3-5.

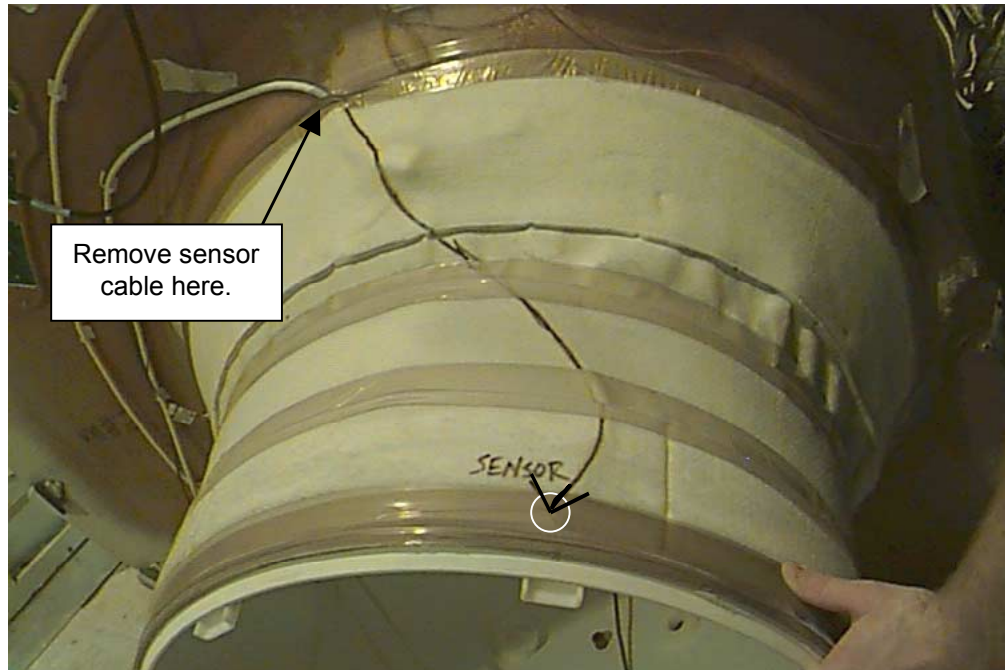


BORE TEMPERATURE SENSOR LOCATION
ILLUSTRATION 3-5

8. Carefully remove the tape that the sensor is located underneath.
9. Remove the sensor by breaking the epoxy.
10. Pull sensor out by the cable from the felt lining. See Illustration 3-5.
11. Thread new cable through felt lining.
12. Place the adhesive backed fastener, from the temperature sensor cable kit, on the end bell for sensor placement.
13. Place sensor on the fastener and secure with cable tie.
14. Seal the felt liner.

4- SYSTEM RESTORATION

1. Replace Front End Bell.
2. Remove wood that was supporting bridge.
3. Install front covers.
4. Re-install the four bolts securing the bridge. See Illustration 4-1.

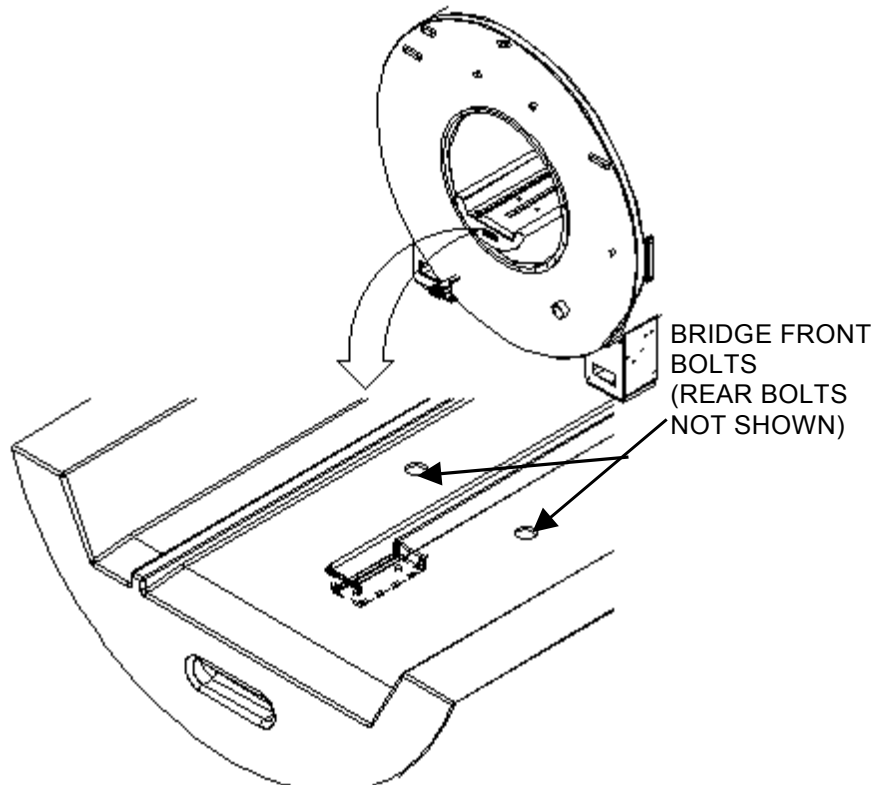

FRONT BRIDGE BOLTS
ILLUSTRATION 4-1

4. Install covers on rear pedestal.
5. Remove tag-out tag from circuit breaker MR1 A14 CB6.

For **RF/Pen cabinet**, Switch on circuit breaker MR1 A14 CB6 at rear of RF/Pen Cabinet (MR1) on MEPS module.

For **RF/Pen II** and **RF/PDU Cabinet**: Remove tag-out tag from circuit breaker MR1 A20 CB4 at rear of RF/Pen II and RF/PDU Cabinet on System Support Module (SSM).

For **SRF Cabinets**, place the breaker in the rear of the cabinet in the ON position.

REVISION HISTORY

REV	DATE	AUTHOR	PRIMARY REASONS FOR CHANGE
A	Nov.3, 2000	K.Keshena/ D.Reichley	Preliminary release.
0	December 19, 2000	K.Keshena/ D.Reichley	Initial release.