

TABLE OF CONTENTS

TABLE OF CONTENTS	1
1- BEFORE STARTING ANY WORK ON THE WORKSTATION CABINET	3
1-1 Remove Power From The Operator Workspace Cabinet.....	3
1-2 ESD Precautions and Tools.....	3
2- OPERATOR WORKSPACE CABINET.....	4
2-1 Security Key Cable Replacement	4
2-1-1 Tools Required.....	4
2-1-2 Removal Procedures.....	5
2-1-3 Installation Procedures.....	5
2-2 PC Replacement.....	6
2-2-1 Tools Required.....	6
2-2-2 Removal Procedures.....	6
2-2-3 Installation Procedures.....	7
2-3 Model 800 Hub Replacement	7
2-3-1 Tools Required.....	7
2-3-2 Removal Procedures.....	7
2-3-3 Installation Procedures.....	8
2-4 Bit3 Fiber Optic Interface Replacement.....	9
2-4-1 Tools Required.....	9
2-4-2 Removal Procedures.....	9
2-4-3 Installation Procedures.....	10
2-5 SCSI Expansion Box.....	10
2-5-1 Tools Required.....	10
2-5-2 Removal Procedures.....	10
2-5-3 Installation Procedures.....	12
2-6 CD-ROM/DVD-ROM Drive (located in SCSI Expansion Box)	12
2-6-1 Tools Required.....	12
2-6-2 Removal Procedures.....	13
2-6-3 Installation Procedures.....	14
2-7 MOD Drive (located in SCSI Expansion Box)	15
2-7-1 Tools Required.....	15
2-7-2 MOD Drive Removal Procedures.....	15
2-7-3 MOD Installation Procedures	16
2-8 DAT Drive Replacement (part of Legacy Option)	19
2-8-1 Tools Required.....	19
2-8-2 Removal Procedures.....	19
2-8-3 Installation Procedures.....	19
2-9 Pioneer MOD Drive Replacement (part of Legacy Option)	20
2-9-1 Tools Required.....	20
2-9-2 Removal Procedures.....	20
2-9-3 Installation Procedures.....	21
2-10 AC Distribution Box.....	21
2-10-1 Tools Required.....	21
2-10-2 Removal Procedures.....	21
2-10-3 Installation Procedures.....	23
2-11 Milan MIL-S800i Switch Replacement	23
2-11-1 Tools Required.....	23
2-11-2 Removal Procedures.....	23
2-11-3 Installation Procedures.....	24
2-12 RJ-45 568B Cable Pinouts.....	25
APPENDIX A - OPERATOR WORK SPACE CABINET COVER	26
Tools Required.....	26
Front Cover Removal.....	26
Front Cover Installation	26
OW Cabinet - SCSI Box Side - Cover Removal	27
OW Cabinet - SCSI Box Side - Cover Installation.....	27

OW Cabinet - PC Side - Cover Removal	28
OW Cabinet - PC Side - Cover Installation	28
Rear Cover Removal.....	29
Rear Cover Installation.....	29
REVISION HISTORY	30

1- BEFORE STARTING ANY WORK ON THE WORKSTATION CABINET

1-1 Remove Power From The Operator Workspace Cabinet



FATAL ELECTRIC SHOCK HAZARD!! ENSURE THAT POWER IS OFF TO THE INVOLVED UNITS BEFORE STARTING ANY PROCEDURE IN THIS DOCUMENT.

1. Log out from Host Computer.
2. Shut down the Host Computer.
3. Select **[Start]** from the lower left corner and select "Shutdown" from the menu. Then, select "Shutdown the Computer" and press **[Yes]**.
4. As applicable, open the circuit breaker(s) that power the Operator Workspace to turn power off.
5. Lock and tag the circuit breaker(s). (Refer to CD-ROM *Dir. 2187583-3 [or -2], MR Release Signa 5x/8x Service Methods, Renewal Parts and Service Tools*, Safety, Section 6, OSHA LOCKOUT/TAGOUT REQUIREMENTS.)
6. Open computer cabinet door and verify that power is off by twice pressing (on/off) the Host Computer power button; the LED should remain off

1-2 ESD Precautions and Tools



Use proper ESD precautions when working on this hardware. The components within the cabinet may be ESD sensitive and damage will occur to the hardware if proper ESD measures are not followed.


Tools Required:

Standard ESD Kit:

- Wrist Ground Strap.
- Red Ground Mat.
- ESD Storage Bag.

2- OPERATOR WORKSPACE CABINET

The Operator Workspace Cabinet houses the Security Key, PC, Model 800 Hub, Bit3 Fiber Optic Interface, the AC Power Distribution Box, and the SCSI Expansion Box.

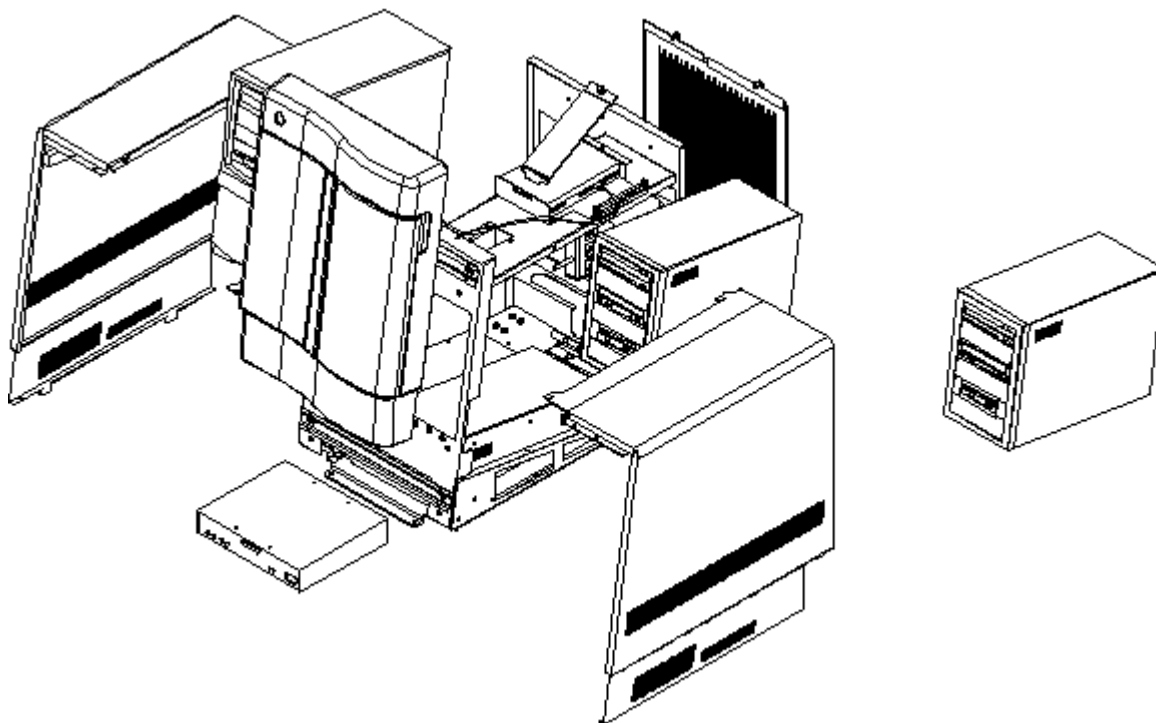

OPERATOR WORKSPACE CABINET
ILLUSTRATION 2-1


2-1 Security Key Cable Replacement

2-1-1 Tools Required

- Small flat head screwdriver
- Small Phillips screwdriver
- Small wrench
- Container for screws

2-1-2 Removal Procedures

1. Locate the existing Security Key Cable on the left front of the Workspace cabinet. See Illustration 2-2.

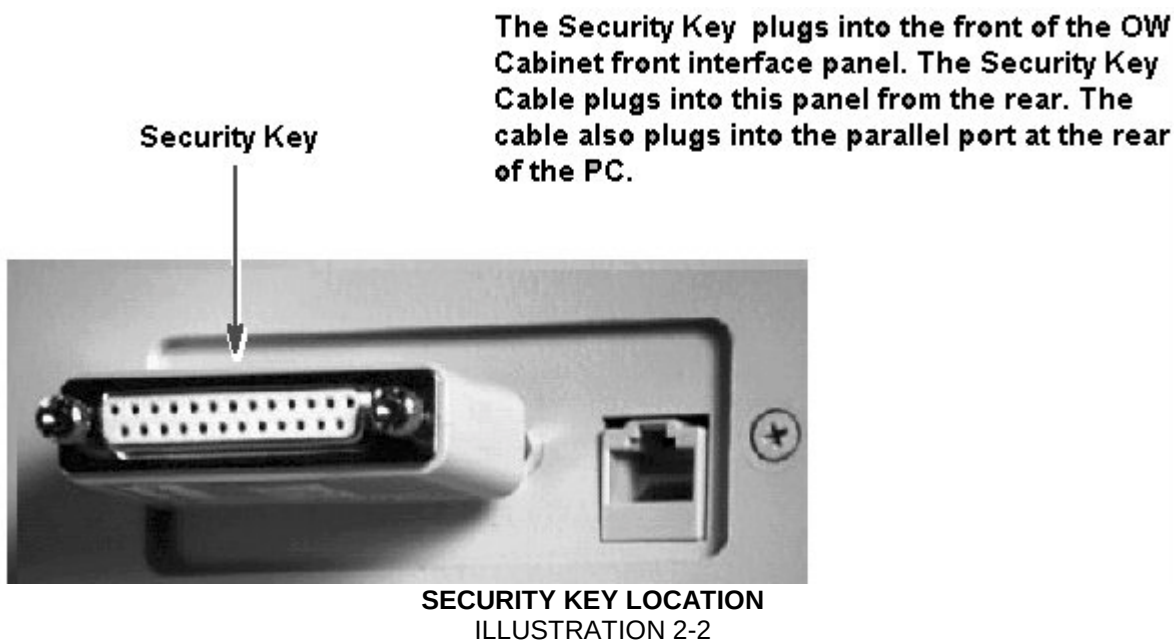

2. Unscrew the connector screws and remove the Security Key.
3. At the front of the cabinet, unscrew the two nuts located on either side of the Security Key connector. Then pull the connector and cable out from the rear of the front cabinet.
4. Follow the cable to a second connector at the rear bottom of the PC.
5. Unscrew the cable connector to release the cable.
6. Set the old key/cable aside.

2-1-3 Installation Procedures

1. Remove the replacement Security Key Cable from the ESD Storage Bag and/or original carton, as applicable.
2. At the rear bottom of the PC, locate the original Security Key Cable connector.
3. Reinstall the replacement Security Key Cable connector to the port and tighten the connector screws. Then extend the cable to the front of the cabinet.
4. At the rear of the front cabinet, reinstall the connector and cable.
5. Re-screw the two nuts located on either side of the Security Key Cable connector.
6. Reinstall the Security Key connector and tighten the screws.
7. Place the old Security Key Cable in the ESD Storage Bag and/or original carton, as applicable.

2-2 PC Replacement

2-2-1 Tools Required

- Medium Phillips screwdriver
- Small flat head screwdriver

2-2-2 Removal Procedures

1. Disconnect all external cables on the rear of the PC located on the left side of the Operator workspace cabinet.
2. Unscrew the two screws from the metal bracket (screws remain with the bracket). Refer to Illustration 2-3.



PC BRACKET
ILLUSTRATION 2-3

3. Remove the bracket (pull away upper half to release the bottom hook).
4. To remove the PC from the cabinet, pull the PC out of the side of the cabinet.
5. Set the old PC aside.

2-2-3 Installation Procedures

1. Remove the replacement PC from the ESD Storage Bag and/or original carton, as applicable.
2. Pick up the PC and slide it into the middle of the cabinet. Gently lift up the back of the unit and slide it towards the front of the cabinet until the PC is flush with the front of the cabinet.
3. Replace the holding bracket so that the screw holes align with the bracket. Be sure to have the bracket hook attached to the cabinet. Screw the bracket into place.
4. Reconnect all external cables on the rear of the PC.
5. Return power to unit.
6. See the Procedure for Software Install/Configure LX 8.2 Host and PC.
7. Place the old PC in the ESD Storage Bag and/or original carton, as applicable.

2-3 Model 800 Hub Replacement

Remove the Front Cover, the SCSI Box Side Cover, and the PC Side Cover of the OW Cabinet as shown in Appendix A of this document.

2-3-1 Tools Required

- Medium Phillips screwdriver
 - Small flat head screwdriver
- Container for screws

2-3-2 Removal Procedures

1. Locate the Model 800 Hub on the right side of the Operator Workspace cabinet, above the SCSI Expansion Box.
2. On the top of the Hub, remove the holding bracket (screws remain with bracket) and set the bracket aside. Refer to Illustration 2-4.
3. On the front of the Hub, unscrew the two screws located on either end of the cable clamp. Set the cable clamp aside.
3. Disconnect the external cables located on the front and rear of the Hub.
4. Lift the old Hub out of the bracket shelf and set aside.

2-3-3 Installation Procedures

1. Remove the replacement Model 800 Hub from the ESD Storage Bag and/or original carton, as applicable.
2. On the Hub, reconnect the external cables located on the front and rear of the unit.
3. Reinstall the Hub so that it is level and flush with the back of the bracket shelf.



LAN HUB BRACKET AND CLAMP
ILLUSTRATION 2-4

4. Re-install the top bracket to hold the Hub in place. Refer to Illustration 2-4
5. Position the cables over the lower bracket of the cable clamp. Reposition the top bracket over the cables. Then re-screw the two screws on either end.
6. Return power to the unit.
7. Place the old Model 800 Hub in the ESD Storage Bag and/or original carton, as applicable.

2-4 Bit3 Fiber Optic Interface Replacement

Remove the Front Cover, the SCSI Box Side Cover, and the PC Side Cover of the OW Cabinet as shown in Appendix A of this document.

2-4-1 Tools Required

- Medium Phillips screwdriver
- Small flat head screwdriver
- Container for screws


2-4-2 Removal Procedures

1. Locate the Bit3 Fiber Optic Interface at the bottom front of the cabinet, under the PC and SCSI Expansion Box units. See Illustration 2-1 on page 3 of this document.
2. Remove the sides of the cabinet if you encounter difficulties servicing the Bit3 Interface from the front.



The Bit3 Fiber Optic Interface contains eight glass fiber cables, four in use and four extra. Use extreme caution when handling these cables. Damage to these cables may cause erroneous readings when the MRI unit is in use.

3. Disconnect the external cables.
4. Unscrew the two screws on either end of the metal bracket located above the Interface. Once the screws are loose, pull the Interface forward and out of the cabinet. Then re-screw the metal bracket so it remains in the up position. This will allow for easier installation of the replacement Interface. See Illustration 2-5.

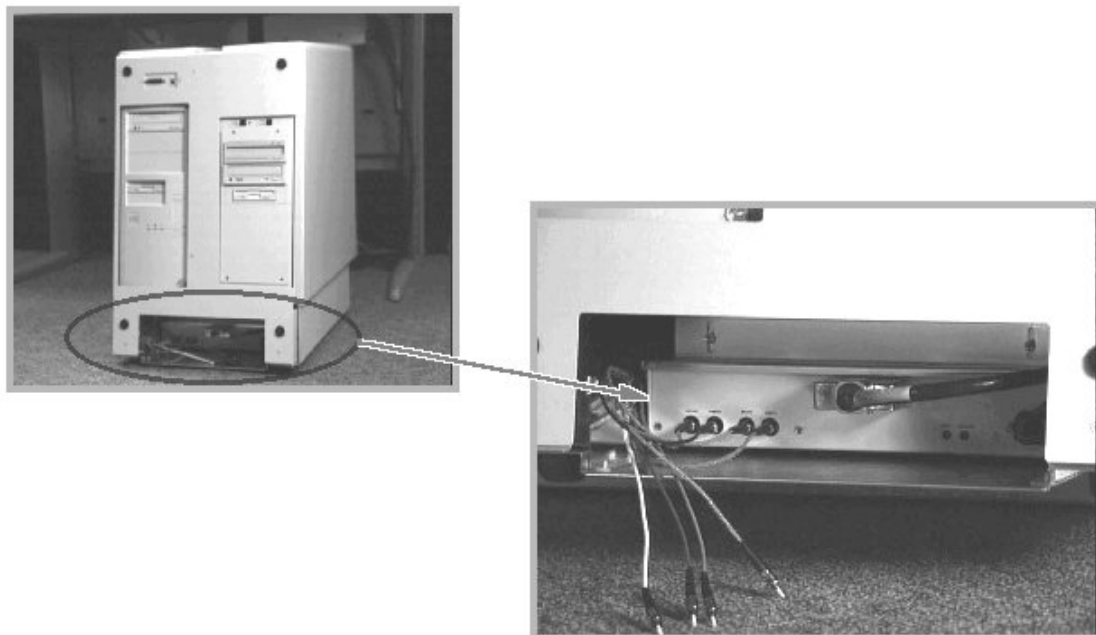

BIT3 FIBER OPTIC INTERFACE LOCATION
ILLUSTRATION 2-5

5. Slide the old Bit3 Fiber Optic Interface out of the case and set aside.

2-4-3 Installation Procedures

1. Remove the replacement Bit3 Fiber Optic Interface from the ESD Storage Bag and/or original carton, as applicable.
2. Install the Bit3 Fiber Optic Interface by carefully sliding it back into the cabinet until the front of the unit resides under the metal bracket. Position the Interface equally from side-to-side.
3. Unscrew the two screws on the bracket so it rests over the front of the Interface.
4. Adjust the Interface so the front of the unit is secured by the metal bracket. Then tighten the screws.
5. Carefully reconnect the external cables.
6. Return power to the unit. (The on/off switch is located on the right rear of the Interface if needed.)
7. Place the old Bit3 Fiber Optic Interface into the ESD Storage Bag and/or original carton, as applicable.

2-5 SCSI Expansion Box

Remove the Front Cover, the SCSI Box Side Cover, and the PC Side Cover of the OW Cabinet as shown in Appendix A of this document. This procedure is for the enclosure only.

2-5-1 Tools Required

- Medium Phillips screwdriver
- Small flat head screwdriver
- Grounding wrist strap
- ESD Kit
- Container for screws


2-5-2 Removal Procedures

1. Unscrew the 3 screws on the bottom plate (screws remain with bracket). Refer to Illustration 2-6.
2. Remove the top bracket as shown in Illustration 2-7 and set aside.
3. To remove the SCSI box from the cabinet, pull the box out of the side of the cabinet.
4. Remove the external terminator.
5. Lay the box on its side to remove the bottom plate.
6. If just the enclosure is being replaced, the power supply internal to the SCSI box must be removed and placed in the new SCSI box. To do this, slide the cover off of the enclosure and remove the supply.

2-5-2 Removal Procedures (continued)



SCSI BOTTOM BRACKET REMOVAL
ILLUSTRATION 2-6

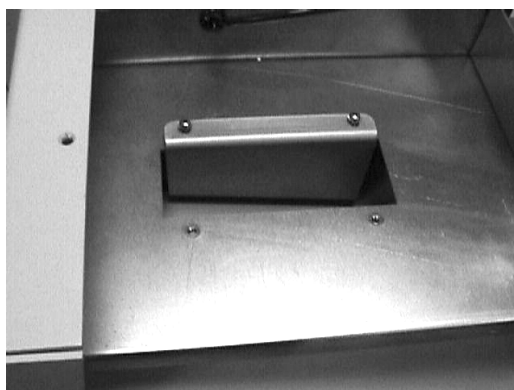

SCSI TOP BRACKET
ILLUSTRATION 2-7

2-5-3 Installation Procedures

1. Remove the replacement SCSI Box from the ESD storage bag and/or original carton, as applicable. Set the SCSI address to SCSI 4 as shown in illustration 2-5-3.

- D3 – SERIAL EXPANSION BOX SET UP

- ① Connect the following cables to the SCSI Expansion Box (OW A16).

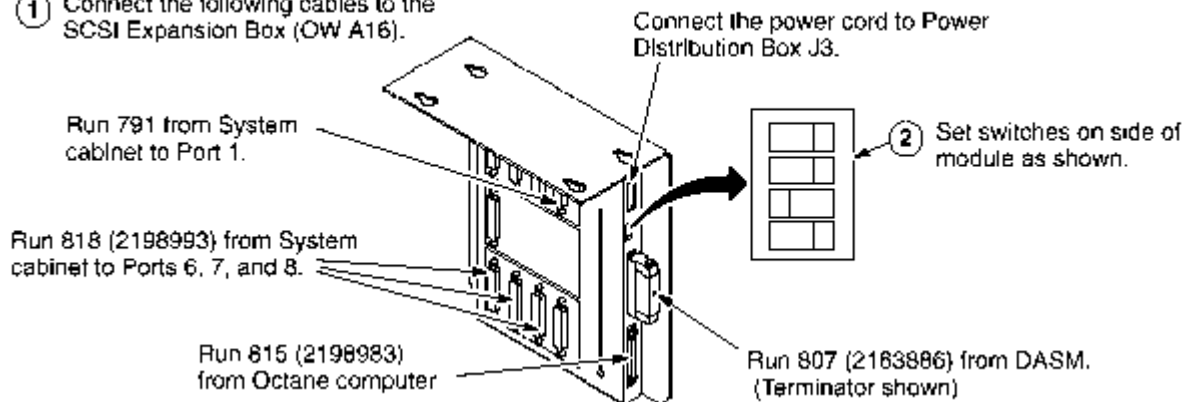


ILLUSTRATION 2-5-3

SCSI EXPANSION BOX SWITCH SETTINGS

2. If the power supply needs to be installed, remove the cover and install the supply. Then, replace the cover.
3. Attach the bracket to the bottom of the box.
4. Pick up the SCSI box and slide it into the cabinet. Gently lift up the back of the unit and slide it towards the front of the cabinet until the box is flush with the front of the cabinet.
5. Attach the top bracket.
6. Reattach external terminator.
7. Reattach all cables to the SCSI Expansion box and return power to the unit.
8. Place the old SCSI box in the ESD Storage Bag and/or original carton, as applicable.

2-6 CD-ROM/DVD-ROM Drive (located in SCSI Expansion Box)

There are two types of ROM Drives, one is a CDROM which has been discontinued. One is a DVDROM. The DVDROM is a Toshiba Model SD-M1401. It will NOT read any DVD Media. Signa Software does not allow it.

Remove the Front Cover, the SCSI Box Side Cover, and the PC Side Cover of the OW Cabinet as shown in Appendix A of this document.


2-6-1 Tools Required

- Medium Phillips screwdriver
- Small flat head screwdriver
- Grounding wrist strap
- ESD Kit

2-6-2 Removal Procedures

Remove the SCSI Expansion Box First:


1. Unscrew the three screws on the bottom plate of SCSI Box (screws remain with bracket). Refer to Illustration 2-6 of this document.
2. Remove the top bracket. Refer to Illustration 2-7 of this document.
3. Disconnect the cables and remove the external terminator.
4. To remove the SCSI box from the cabinet, pull the box out of the side of the cabinet.
5. Lay the box on its side to remove the bottom plate.
6. Slide the cover off (there is a retaining latch at the front so the cover may have to be pulled on slightly). Refer to Illustration 2-8.
7. Remove the ribbon cable and the power connector from the back of the drive that is being replaced.
8. Remove the four screws (two on each side) to remove the drive.
9. Place the old drive on the red ESD mat.

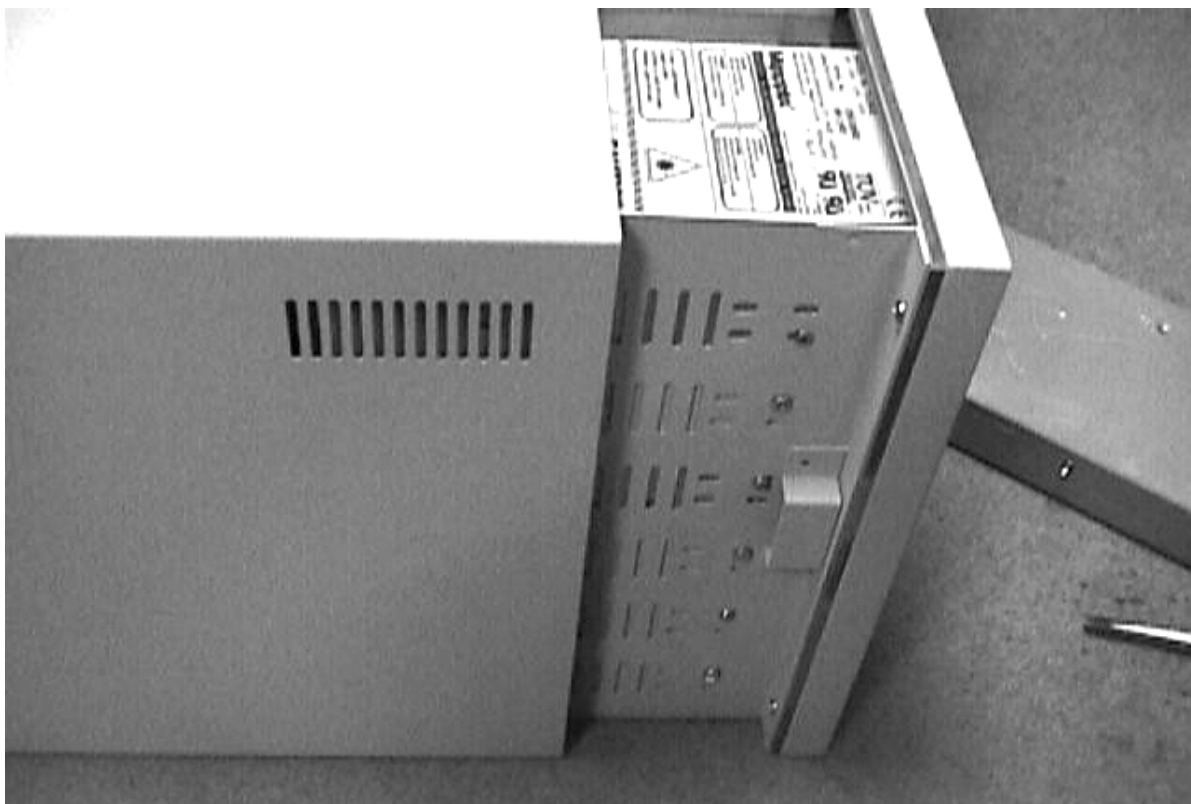


SCSI COVER
ILLUSTRATION 2-8

2-6-3 Installation Procedures

1. Configure the jumpers for the CDROM OR the DVDROM as follows:
 - a. For the CDROM drive verify that the jumpers are in the correct position. Refer to Illustration 2-9A.

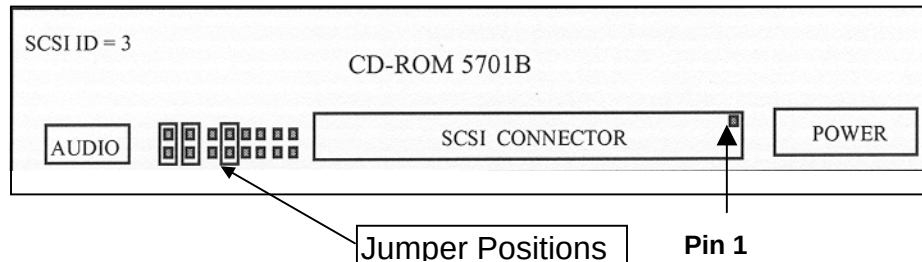

CDROM SCSI ID JUMPER POSITIONS
ILLUSTRATION 2-9A

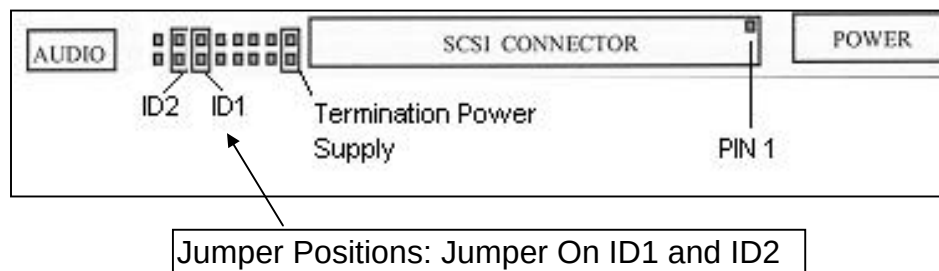

DVD-ROM SCSI ID JUMPER POSITIONS
ILLUSTRATION 2-9B

- b. For the Toshiba DVDROM drive verify that the jumpers are in the correct position. (SCSI ID 3) Refer to Illustration 2-9B.

Note:

- The DVD-ROM drive will NOT read or write to DVD disk media. Signa Software does not accommodate the use of DVD media. This DVD-ROM Reader will read data CDROM disks (CD-R) only.
- The DVD-ROM drive is factory set as SCSI ID 0. (No pins jumped). It must be configured as SCSI ID 3.
- Power Supply (Termination Power Jumper)- At least one device on the SCSI chain must supply power to the terminator. If you are not sure if any other device is supplying power to the terminator it is ok to have one or more devices configured to provide power. When in doubt, leave the jumper in place.

2. Place drive into slot of SCSI box until it is flush with the front.
3. Reattach drive to bracket using the 4 screws (2 on each side)

4. Reattach ribbon cable and the power connector to the drive.
5. Slide the cover back onto the SCSI box enclosure.
6. Attach the bracket to the bottom of the box.
7. Pick up the SCSI box and slide it into the cabinet. Slide it towards the front of the cabinet until the box is flush with the front of the cabinet.
8. Attach the top bracket as shown in Illustration 2-7 of this document.
9. Reattach the Power cable, SCSI Cable and external terminator.
10. Replace the covers on the workspace.
11. Return power to the unit.

2-7 MOD Drive (located in SCSI Expansion Box)

Remove the Front Cover, the SCSI Box Side Cover, and the PC Side Cover of the OW Cabinet as shown in Appendix A of this document.

2-7-1 Tools Required

- Medium Phillips screwdriver
- Small flat head screwdriver
- Grounding wrist strap
- ESD Kit
- If replacing a Maxoptix with a Sony Drive you should get the MOD Installation Kit. (Part number - 2334581). It contains a longer SCSI ribbon cable pre-twisted for correct operation of the Sony Drive. The existing SCSI ribbon cable can be used but is very tight due to its shorter length. If necessary, make this work until the correct ribbon cable is ordered. This longer cable ONLY needs to be replaced once, and only when you are replacing a Maxoptix drive with a Sony Drive for the first time.

2-7-2 MOD Drive Removal Procedures

Note

If you are replacing a Maxoptix MOD drive with a Sony MOD drive for the first time, make sure you have also received the Sony MOD Installation Kit (Part number - 2334581). This kit contains a data ribbon cable that is longer to accommodate a necessary twist in the data ribbon cable for correct connection of the Sony MOD drive.

Remove the SCSI Expansion Box first:

1. Unscrew the 3 screws on the bottom plate (screws remain with bracket). Refer to Illustration 2-6 of this document.
2. Remove the top bracket and set it aside. Refer to Illustration 2-7 of this document.
3. Remove the power cable, SCSI Cable from the SCSI Box.




4. Remove the SCSI box from the cabinet, pull the box out of the side of the cabinet.
5. Lay the SCSI box on its side to remove the bottom plate.
6. Slide the cover off (there is a retaining latch at the front so the cover may have to be pulled on slightly). Refer to Illustration 2-8 of this document.
7. Remove the ribbon cable and the power connector from the back of the MOD drive.
8. Remove the 4 screws (2 on each side) to remove the drive.


2-7-3 MOD Installation Procedures

1. Verify that the SCSI ID jumpers are in the correct position. Refer to Illustration 2-10A for Sony SMO-F551-SD MOD drive, Illustration 2-10B for Maxoptix T5-2600 MOD drive (GE Part 2199817-2), Illustration 2-10C for Maxoptix T5-2600 Star Series MOD drives (GE Part 2199817-9). For pin count conventions see Illustration 2-11.

Note

Maxoptix MOD drives have been discontinued. However, the Maxoptix configurations may be useful if a working Maxoptix MOD is temporarily removed. They have been retained in this document.

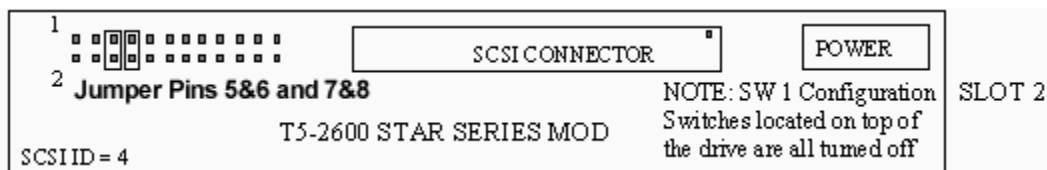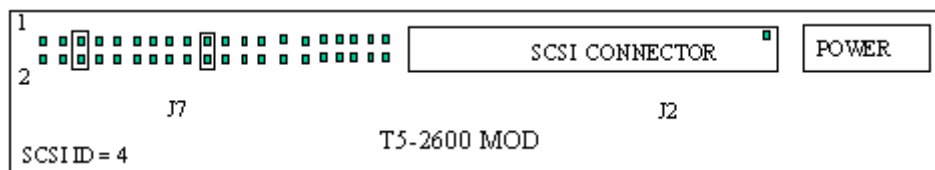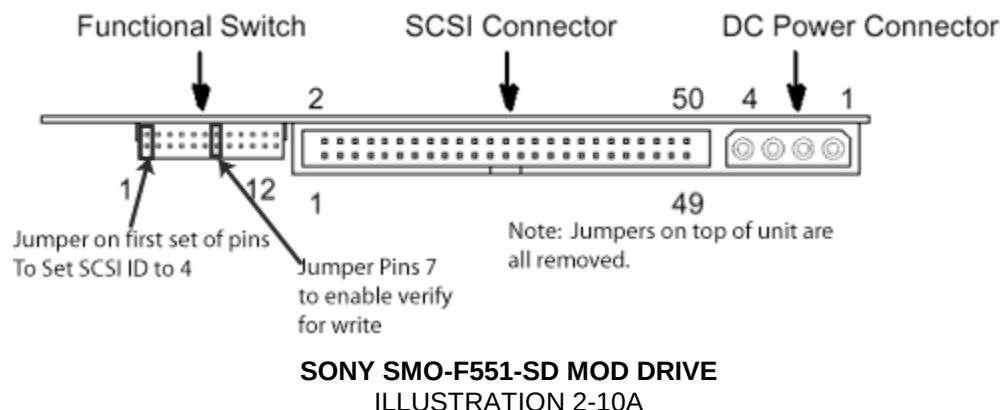

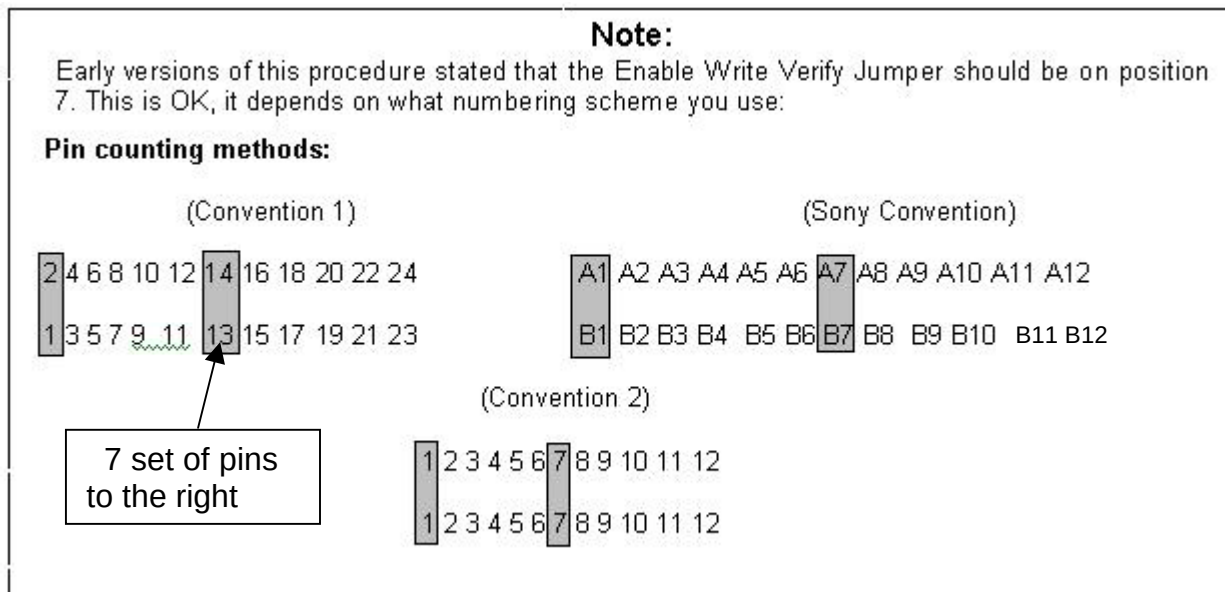


**NOTE: ALL CONVENTIONS WILL
PLACE THE JUMPERS IN THE CORRECT CONFIGURATION**
ILLUSTRATION 2-11

3. Place drive into slot of SCSI box until it is flush with the front.
4. Re-attach drive to bracket using the 4 screws (2 on each side)
5. For the Sony drive if necessary, remove the old ribbon cable and Re-attach the new ribbon cable. If the cable is not already twisted and clipped, make sure to twist the cable to line up pin 1 of the MOD drive to pin 1 of the cable (located near the red stripe on the ribbon cable). See illustration 2-12.

Note

If you are installing a Sony MOD for the first time, it will be necessary to replace the data ribbon cable with one from Sony MOD Installation Kit. (Part number - 2334581). Some systems may not need the cable, or may have the longer cable already installed.

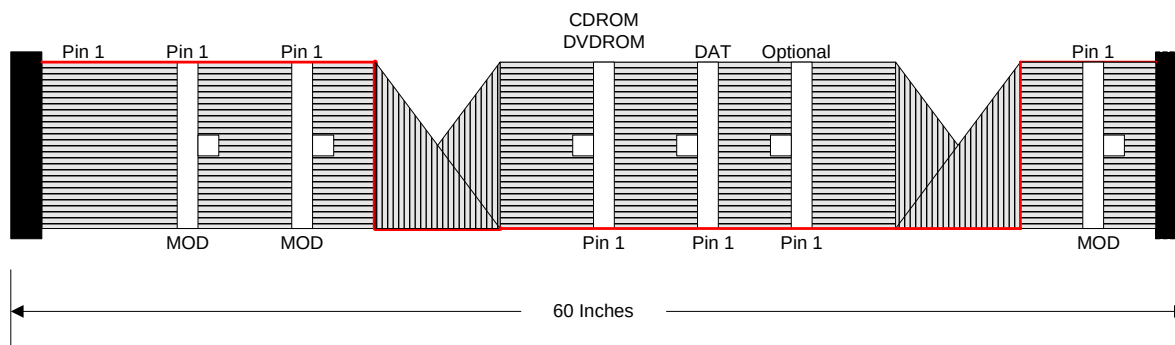

RIBBON CABLE (2199817-16)
ILLUSTRATION 2-12A



SHOWN IN CORRECT CONFIGURATION FOR SONY DRIVE ONLY
ILLUSTRATION 2-12B

6. Attach the power connector to the drive, make sure none of the pins in the connector are pushed back.
7. Attach the bracket to the bottom of the box and slide the cover back onto the SCSI box enclosure.
8. Pick up the SCSI box and slide it into the cabinet. Slide it towards the front of the cabinet until the box is flush with the front of the cabinet.
9. Attach the top bracket as shown in Illustration 2-7 of this document.
9. Re-attach all cables, and Terminator if removed , to the SCSI Expansion box.
10. Replace the covers on the workspace cabinet.
11. Return power to the unit.
12. Boot signa
13. To insure the proper driver is being used for the MOD, you must reinitialize the Operating System Driver:

Note

UNIX/IRIX is case sensitive. Use the commands exactly as shown.

WITH SIGNA APPLICATIONS UP, AND RUNNING:

1. From the Tools Menu, open a **C-shell**.
2. Type: **su root** Password: **operator**
- 3 . Type: **cd /export/home/sdc/install** (change to directory install)
4. Type: **uninstall.mod** (essential to release the MOD from the Operating System).

System response:

setenv SDC_REMOTEHOST \$PREFS/SdCRHosts

done updating. SdCrc with mod.edit

application removed.

5. Type: **install.mod** [enter] (essential to re-attach the MOD to the Operating System.)

System response:

```
setenv SDC_REMOTEHOST $PREFS/SdCRHosts
```

application declared

...done.

6. Type **exit** (Exit root owner)

7. Type **exit** (exit C-shell)

8. Select **Shutdown** (To reboot the system).

2-8 DAT Drive Replacement (part of Legacy Option)

Remove the Front Cover, the SCSI Box Side Cover, and the PC Side Cover of the OW Cabinet as shown in Appendix A of this document.

2-8-1 Tools Required


- Medium Phillips screwdriver
- Small flat head screwdriver
- Grounding wrist strap
- ESD Kit

2-8-2 Removal Procedures

1. Unscrew the 3 screws on the bottom plate (screws remain with bracket) of the SCSI box. Refer to Illustration 2-6 of this document.
2. Remove the top bracket holding the SCSI box in place as shown in Illustration 2-7 of this document and set aside.
3. To remove the SCSI box from the cabinet, pull the box out of the side of the cabinet.
5. Lay the box on its side to remove the bottom plate.
6. Slide the cover off (there is a retaining latch at the front so the cover may have to be pulled on slightly). Refer to Illustration 2-8 of this document.
7. Remove the ribbon cable and the power connector from the back of the DAT drive.
8. Remove the 4 screws (2 on each side) to remove the drive.

2-8-3 Installation Procedures

1. Remove the replacement DAT drive from the ESD storage bag and/or original carton, as applicable and set jumper and bottom switches as shown.

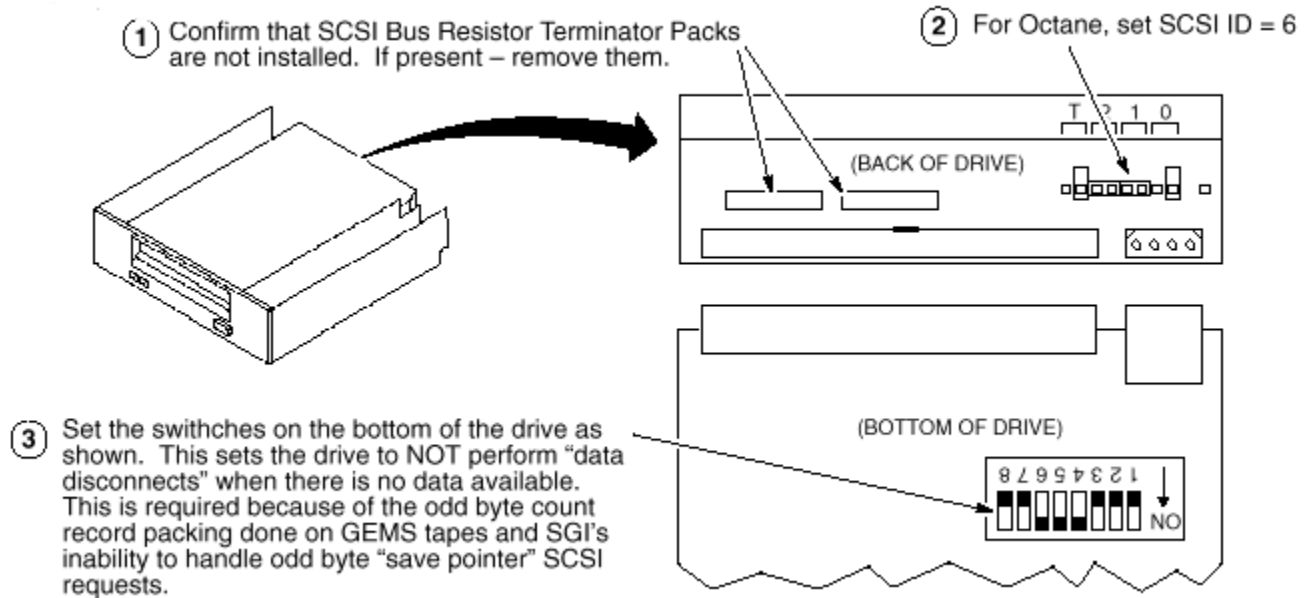

CONFIGURING THE DAT DRIVE
ILLUSTRATION 2-13

2. Place drive into slot of SCSI box until it is flush with the front.
3. Re-attach drive to bracket using the 4 screws (2 on each side)
4. Re-attach ribbon cable and the power connector to the drive.
5. Slide the cover back onto the SCSI box enclosure.
6. Attach the bracket to the bottom of the box.
7. Reinstall the SCSI box into the cabinet. Slide it towards the front of the cabinet until the box is flush with the front of the cabinet.
8. Attach the top bracket as shown in Illustration 2-7 of this document.
10. Re-attach all cables to the SCSI Expansion box and return power to the unit.

2-9 Pioneer MOD Drive Replacement (part of Legacy Option)

2-9-1 Tools Required

- Small flat head screwdriver
- Medium Phillips screwdriver
- Grounding wrist strap
- ESD Kit

2-9-2 Removal Procedures

1. Unscrew the 3 screws on the bottom plate (screws remain with bracket) of the SCSI box. Refer to Illustration 2-6 of this document.

2. Remove the top bracket holding the SCSI box in place as shown in Illustration 2-7 of this document and set aside.
3. Remove the SCSI box out from the cabinet.
5. Lay the box on its side to remove the bottom plate.
6. Slide the cover off (there is a retaining latch at the front so the cover may have to be pulled on slightly). Refer to Illustration 2-8 of this document.
7. Remove the ribbon cable and the power connector from the back of the MOD drive.
8. Remove the 4 screws (2 on each side) to remove the drive.

2-9-3 Installation Procedures

1. Slide the drive into slot the slot of the SCSI box until it is flush with the front.
2. Re-attach drive to bracket using the 4 screws (2 on each side)
3. Re-attach ribbon cable and the power connector to the drive.
4. Slide the cover back onto the SCSI box enclosure.
5. Attach the bracket to the bottom of the box.
6. Reinstall the SCSI Box into the cabinet. Slide it towards the front of the cabinet until the box is flush with the front of the cabinet.
7. Attach the top bracket as shown in Illustration 2-7 of this document.
8. Re-attach all cables to the SCSI Expansion box and return power to the unit.

2-10 AC Distribution Box


Remove the Front Cover, the SCSI Box Side Cover, and the PC Side Cover of the OW Cabinet as shown in Appendix A of this document. This procedure is for the enclosure only.

2-10-1 Tools Required

- Medium Phillips screwdriver
- Small flat head screwdriver


2-10-2 Removal Procedures

1. Remove SCSI Expansion Box from the workspace.
2. Unplug all power cords from the outlet box. Remove connections from the back of the Distribution Box.
3. Remove plug from fan.
4. Unscrew the bracket at the back of the Distribution Box. Refer to Illustration 2-14.

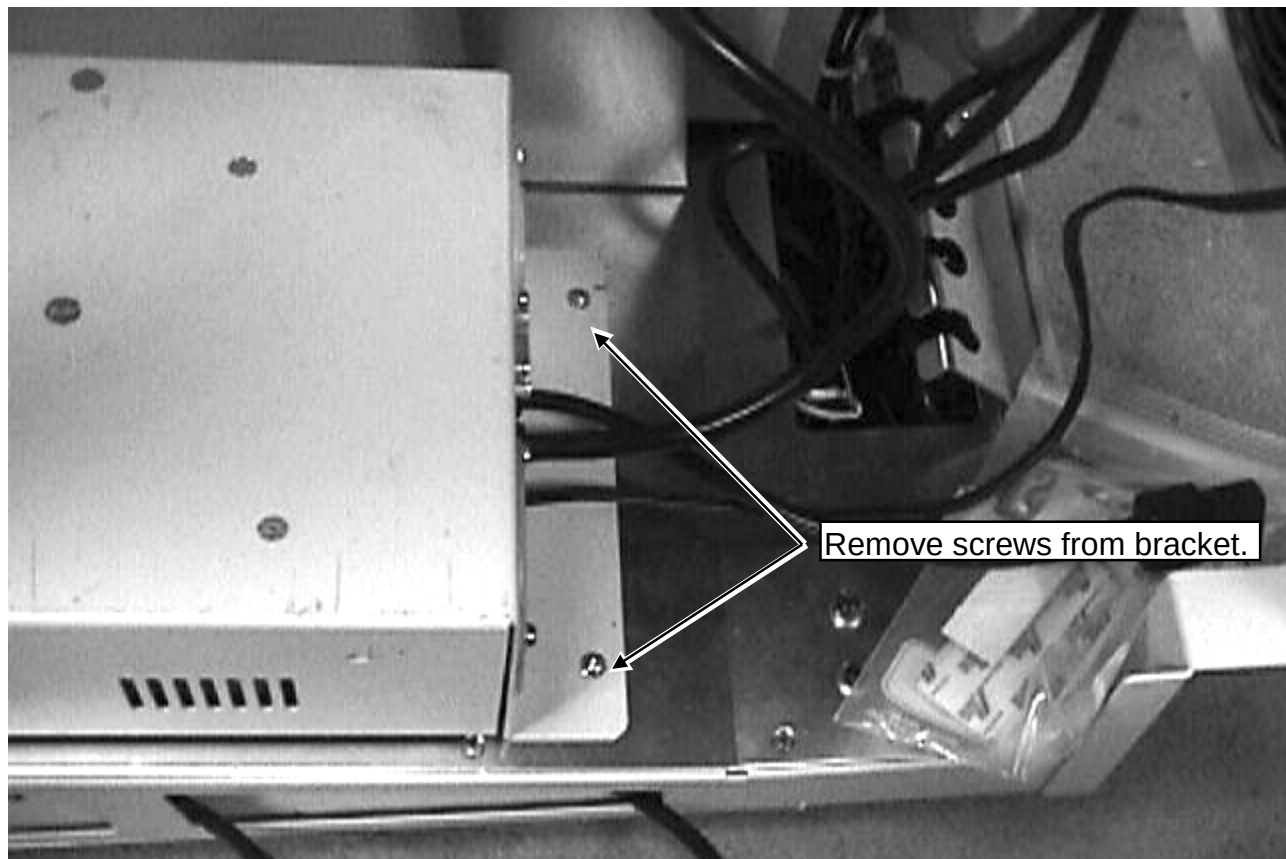

AC DISTRIBUTION BOX BRACKET
ILLUSTRATION 2-14

5. Unscrew front screws (by LEDs). Refer to Illustration 2-15.

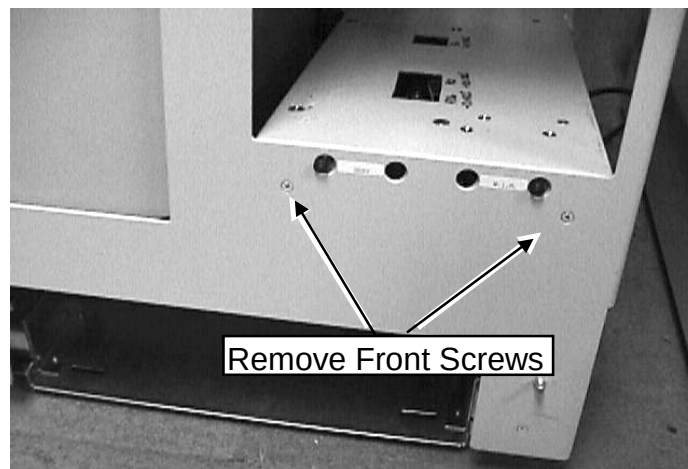

AC DISTRIBUTION FRONT SCREWS
ILLUSTRATION 2-15

6. The outlet box and the AC Distribution box are connected together, remove both. Slide the AC Distribution Box back and lift out.

2-10-3 Installation Procedures

1. Remove the replacement AC Distribution Box (and outlet box) from the ESD storage bag and/or original carton, as applicable.
2. Place the box in the workspace cabinet being careful to align the LEDs with the holes in the chassis.
3. Screw the front mounting screws and rear bracket screws.
4. Mount the outlet box to the inner metal plate aligning the mounting holes to the flange on the outlet box and screw in.
5. Re-connect all power cords to the outlet box. Reconnect all the power connections to the AC Distribution Box.
6. Connect fan plug to the fan module.
7. Return power to the unit.
8. Place the old AC Distribution Box in the ESD Storage Bag and/or original carton, as applicable.

2-11 Milan MIL-S800i Switch Replacement

Remove the Front Cover, the SGI Host Side Cover, and the PC Side Cover of the OW Cabinet as shown in Appendix A of this document.

2-11-1 Tools Required

- Medium Phillips screwdriver
- Small flat head screwdriver

2-11-2 Removal Procedures

1. Locate the current Hub/Switch on the left side of the Operator Workspace cabinet, above the PC. See Illustration 2-1 of this document.
2. On the front of the Hub, remove the two screws located on either end of the cable clamp. Set the cable clamp aside.
3. Disconnect the external cables located on the front and rear of the Hub or switch depending on which model is present.
4. Lift the old Hub/Switch out of the bracket shelf and set aside.

2-11-3 Installation Procedures

1. Reconnect the external cables to the rear of the new unit.
2. Install the Switch.
3. Position the cables over the lower bracket of the cable clamp. Reposition the top bracket over the cables. Then install the two screws on either end.
4. Return power to the unit. Refer to Table 2-1 for LED functions.

Note

“Auto-negotiation” automatically sets the best possible bandwidth when connection is established with another network device. Each port supports Half/Full Duplex function.

TABLE 2-1
LED INDICATORS


LED Indicators	Color	Description
Power	Green	Lit: Power On Unlit: Power off
10/100 M Speed	Green	Lit: Link at 100 Mbs Unlit: Link at 10Mbs or no link
Link/Activity	Green	Lit: Good link on port. Blinking: Port receiving and transmitting Unlit: No link is occurring on the port
Full Duplex/Collison	Green	Lit: Full-Duplex mode Unlit: Half-duplex mode Blinking: Data collision

2-12 RJ-45 568B Cable Pinouts

This Sub-section explains the RJ 45 (10/100Base-T) Cable Pin configurations.

TABLE 2-2
568B NETWORK CABLE MAP

Straight Through cable wiring		Crossover Cable Wiring	
RJ-45 connector pins:		RJ-45 connector pins:	
1 Tx+ ORN/WHT	1 Rc+ ORN/WHT	1 Rx+ ORANGE/WHITE	3 Tx+ GREEN/WHITE
2 Tx- ORN	2 Rc ORN	2 Rc- ORANGE	6 Tx- BROWN
3 Rc+ GRN/WHT	3 Tx+ GRN/WHT	3 Tx+ GREEN/WHITE	1 Rc+ ORANGE/WHITE
6 Rc- BRN	6 Tx- BRN	6 Tx- BROWN	2 Rc- ORANGE

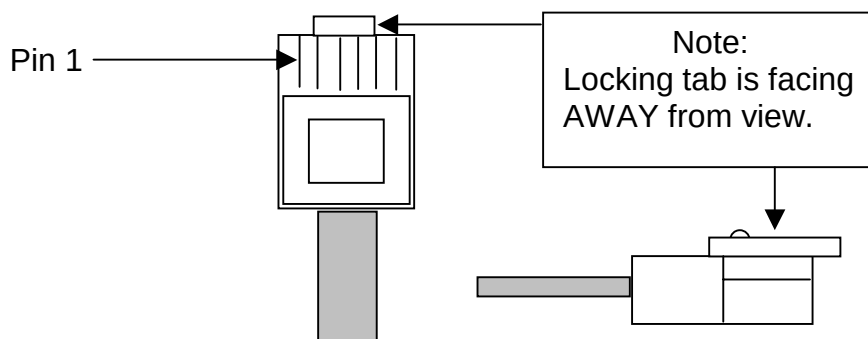

568B WIRING CHART
ILLUSTRATION 2-16

APPENDIX A - OPERATOR WORK SPACE CABINET COVER

Tools Required

- Phillips head screwdrivers
- Container for screws

Front Cover Removal

1. Grasp the front cover from the sides (preferred) or from the top and bottom.
2. Pull the cover straight toward you. The ball and socket clips should release with as little as 8lbs. of pressure.

Front Cover Installation


1. To replace, align the ball studs with the clips in the front cover.
2. Support the rear of the cabinet to prevent it from rolling backward, and push straight back.



FRONT COVER REMOVAL/INSTALLATION
ILLUSTRATION A-1

APPENDIX A - OPERATOR WORK SPACE CABINET COVER (continued)


OW Cabinet - SCSI Box Side - Cover Removal

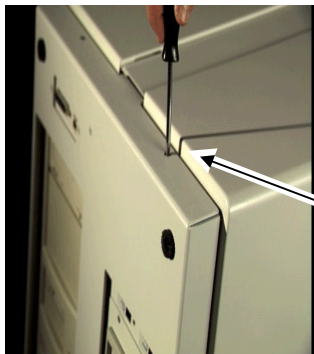

1. Always remove the cover over the SCSI box first.
2. Loosen the rear thumbscrew but do not remove it.
3. Remove the Phillips head screw at the top of the front cover.

FRONT COVER SCREW LOCATION
ILLUSTRATION A-2

4. Lift the bottom of the cover slightly and slide the cover to the rear of the cabinet about 1/2" (13mm).

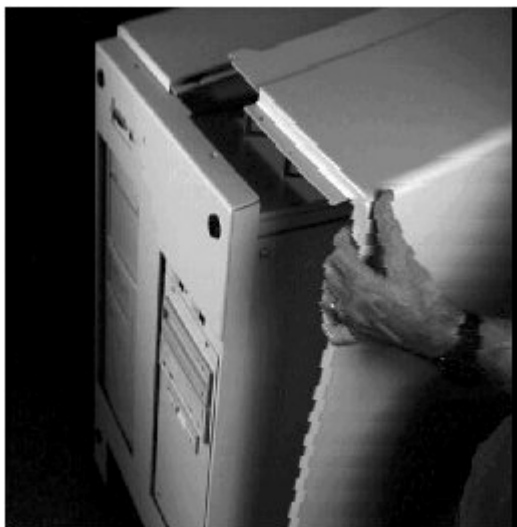

5. Pull the cover toward you until the tabs clear the two top slots.


REMOVING SIDE COVER
ILLUSTRATION A-3

OW Cabinet - SCSI Box Side - Cover Installation

1. Reverse the removal procedures.
2. Ensure the PC side cover is replaced first.
3. Make sure all screws are installed before replacing the OW Cabinet - SGI (Host) side - cover.

APPENDIX A - OPERATOR WORK SPACE CABINET COVER (continued)

OW Cabinet - PC Side - Cover Removal

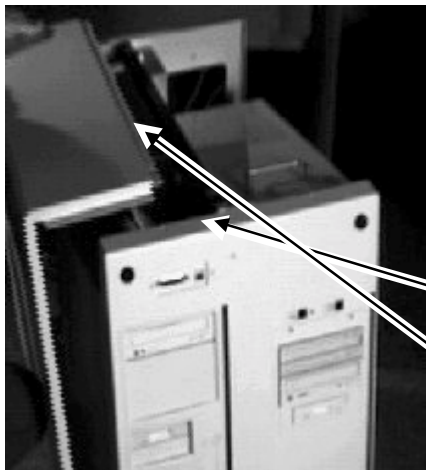

1. Always remove the cover over the Host computer first.
2. Loosen the rear thumbscrew but do not remove it.
3. Remove the Phillips head screw at the top of the front cover.
4. Remove the two Phillips head screws from the top of the cover.

SCREW LOCATION FOR REMOVING SIDE COVER

ILLUSTRATION A-4


5. Lift the bottom of the cover slightly and slide the cover to the rear of the cabinet about 1/2" (13mm).
6. Pull the cover toward you until the tabs clear the two top slots.

OW Cabinet - PC Side - Cover Installation

1. Reverse the removal procedures.
2. Make sure all screws are installed before replacing the OW Cabinet - PC side - cover.

APPENDIX A - OPERATOR WORK SPACE CABINET COVER (continued)

Rear Cover Removal

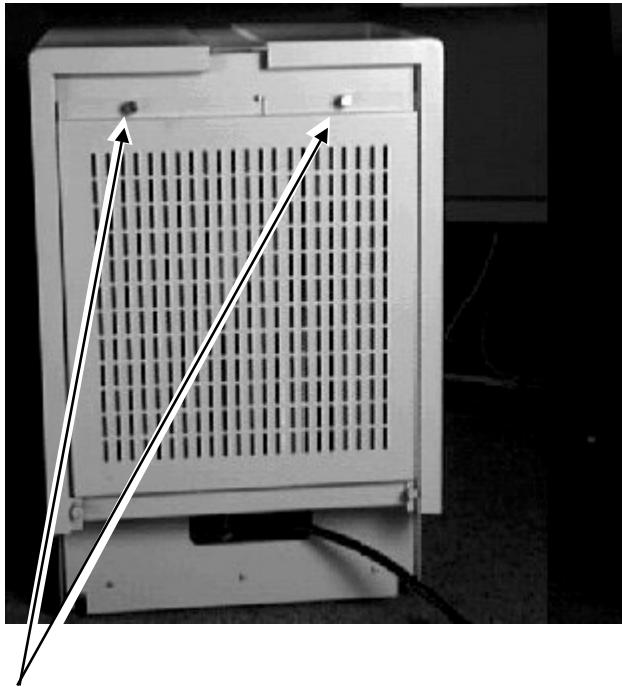

THUMB SCREWS ON REAR PANEL
ILLUSTRATION A-5

1. Loosen the two thumb screws at the top of the cover.
2. Pull the top of the cover toward you slightly and lift the cover out of the way.

Rear Cover Installation

1. Replace the cover.
2. Tighten the two thumb screws at the top of the cover.

REVISION HISTORY

REV	DATE	AUTHOR	PRIMARY REASONS FOR CHANGE
A	Apr 30, 1998	K. L-P	Initial revision
0	May 18, 1998	wek	Updated loc out/tag out info
1	Sept 3, 1998	Hawthorne	Updated Section 2-5-3 to include SCSI switch settings.
2	Aug 2, 1999	Hawthorne	Updated section 2-8-3 with DAT Switch and jumper setup illustration. Added MOD driver update commands in section 2-7.
3	Dec 13, 1999	Hawthorne	Added jumper config for Maxoptix T5-2600 Star Series MOD drive section 2-7-3 Page 18.
4	Sept 1, 2001	Hawthorne	Added SCSI jumper information for Sony SMO-F551-SD in section 2-7-3.
5	July 2, 2002	D. Hofstetter	Added reinitialization process to the MOD drive installation section.
6	Oct 10, 2002	D. Hofstetter	Added Milan Switch replacement.
7	Dec 16, 2002	D. Hofstetter	Added DVD-ROM Drive replacement.
8	Feb 22, 2003	D. Hofstetter	Streamlined this document. Removed unnecessary steps in the first 5 sub-sections.