

TABLE OF CONTENTS

TABLE OF CONTENTS	1
1- LOGIC BOARD	2
2- SCR (SILICON-CONTROLLED RECTIFIER).....	3
REVISION HISTORY.....	5

Description - The Full-Size PDU is a two-bay cabinet, and the Compact PDU is a single-bay cabinet. Procedures for the Full-Size PDU do not apply to the Compact PDU.

1- LOGIC BOARD



FATAL ELECTRIC SHOCK HAZARD!!
LETHAL VOLTAGES ARE PRESENT WITHIN THE PDU, EVEN WHEN ALL PDU BREAKERS ARE OFF. ENSURE THAT POWER AT MAIN DISCONNECT IS OFF, LOCKED, AND TAGGED BEFORE REPLACING PARTS.

1. Lock out and tag out facility circuit breaker (main disconnect) using appropriate OSHA procedure. (Refer to CD-ROM *Dir. 2187583-3 [or -2], MR Release Signa 5x/8x Service Methods, Renewal Parts and Service Tools*, Procedure for Safety, Section 6, OSHA LOCKOUT/TAGOUT REQUIREMENTS.)
2. Verify that the three Phase indicator lights are off.
3. Remove connectors from logic board. See Illustration L2707A below.

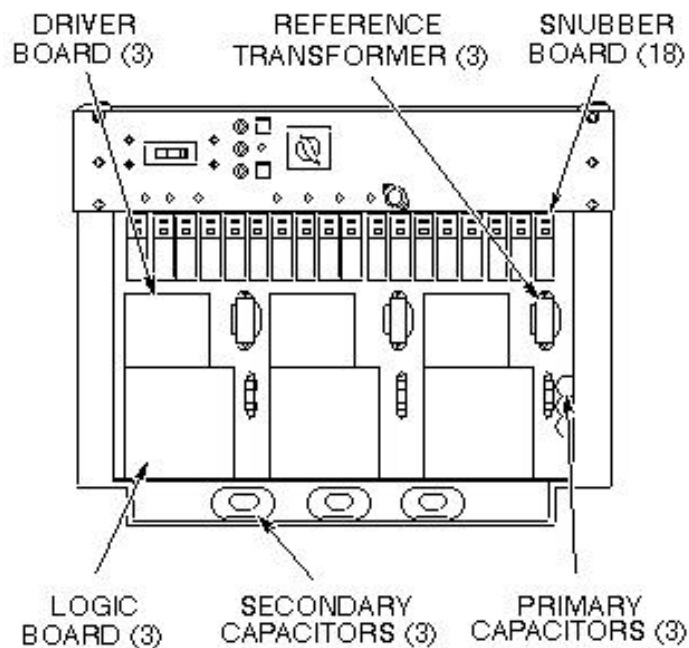


ILLUSTRATION L2707A
LOGIC BOARDS LOCATION

4. Remove board from standoffs.
5. Place replacement board on standoffs.

6. Connect connectors on circuit board.
7. Refer to Setup and Calibration tab, Procedure PDU (Standard PDU) Powertech Regulator, Section 1- Logic Board Adjustments.

2- SCR (SILICON-CONTROLLED RECTIFIER)

DANGER!!

FATAL ELECTRIC SHOCK HAZARD!!
LETHAL VOLTAGES ARE PRESENT WITHIN THE PDU EVEN WHEN ALL
PDU BREAKERS ARE OFF. ENSURE THAT POWER AT MAIN DISCONNECT
IS OFF, LOCKED, AND TAGGED BEFORE REPLACING PARTS.

1. Lock out and tag out facility circuit breaker (main disconnect) using appropriate OSHA procedure. (Refer to CD-ROM *Dir. 2187583-3 [or -2], MR Release Signa 5x/8x Service Methods, Renewal Parts and Service Tools, Procedure for Safety, Section 6, OSHA LOCKOUT/TAGOUT REQUIREMENTS.*)
2. Verify that the three Phase indicator lights are off.
3. Disconnect transformer wire from failed SCR. See Illustration L2708A below.

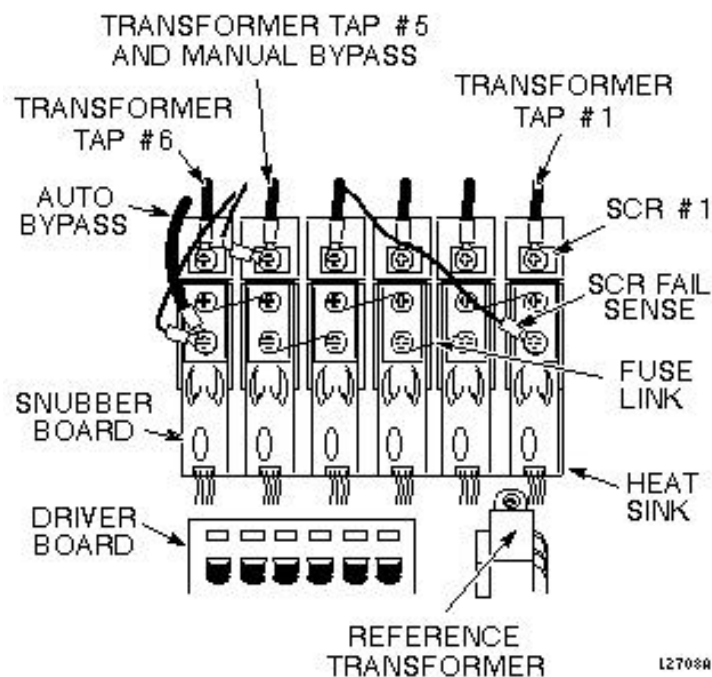


ILLUSTRATION L2708A
SCR BANK

4. Remove the fuselinks and snubber board from the SCR.

5. Remove the SCR from the heat sink.
6. Spread a thin film of heat sink compound on the replacement SCR.
7. Mount SCR to heat sink.
8. Refer to Functional Checks tab, Procedure PDU (Standard PDU) Powertech Regulator Checks, Section 5- SCR Check.

REVISION HISTORY

REV	DATE	AUTHOR	PRIMARY REASONS FOR CHANGE
0	June16, 1998	M. Whitlow	Initial Conversion from Toolbook to Word.