

TABLE OF CONTENTS

TABLE OF CONTENTS	1
1- LOGIC BOARD ADJUSTMENTS	2
REVISION HISTORY	4

Description- The Full-Size PDU is a two-bay cabinet and the Compact PDU is a single-bay cabinet. Procedures for the Full-Size PDU do not apply to the Compact PDU.

1- LOGIC BOARD ADJUSTMENTS



FATAL ELECTRIC SHOCK HAZARD!!

LETHAL VOLTAGES ARE PRESENT WITHIN THE PDU EVEN WHEN ALL PDU BREAKERS ARE OFF. ENSURE THAT POWER AT MAIN DISCONNECT IS OFF, LOCKED, AND TAGGED BEFORE PROCEEDING.

1. Lock out and tag out facility circuit breaker (main disconnect) using appropriate OSHA procedure. (Refer to CD-ROM *Dir. 2187583-3 [or -2], MR Release Signa 5x/8x Service Methods, Renewal Parts and Service Tools*, Procedure for Safety, Section 6, OSHA LOCKOUT/TAGOUT REQUIREMENTS.)
2. Verify that the three Phase indicator lights on the PDU are off.

Note

These adjustments must be made on all three logic boards.

3. Turn off 15A PDU power breaker.
4. Attach ohmmeter leads to the top of R32 and the left of C21 (see Illustration L2698A below).

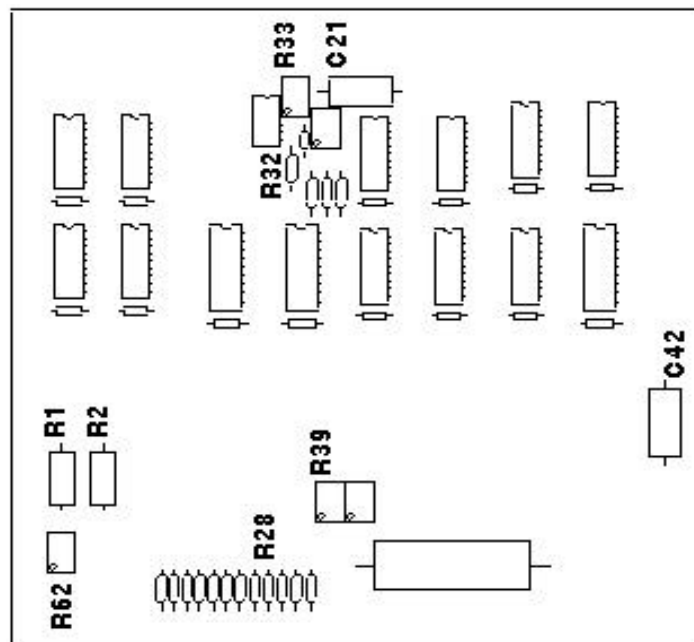


ILLUSTRATION L2698A

LOGIC BOARD

5. Adjust R33 for ohmmeter to read a value of 105 K ohms.
6. Remove ohmmeter leads from circuit board.
7. Turn on 15A PDU power breaker.
8. Set voltage across C42 to 8.5V by adjusting R62.
9. Adjust R39 counterclockwise until LED 6 on the appropriate driver board is lit.
10. Check DC voltage across C42 again and set to 8.5V by adjusting R62.
11. Monitor neutral-to-phase output voltage
12. Adjust R39 as necessary to set output voltage to $1.20 \pm 0.03V$.

REVISION HISTORY

REV	DATE	AUTHOR	PRIMARY REASONS FOR CHANGE
0	June17, 1998	M. Whitlow	Initial Conversion from Toolbook to Word.