

TABLE OF CONTENTS


TABLE OF CONTENTS	1
1- CRADLE RELEASE FROM CARRIAGE ADJUSTMENT.....	2
2- CRADLE RELEASE FROM PATIENT TRANSPORT ADJUSTMENT.....	3
REVISION HISTORY	4

Description - The head coil carriage mechanism allows the cradle to be released from the head coil carriage by squeezing the handle of the patient cradle. The threaded actuator on the carriage must be adjusted so that the carriage latch hook engages cradle sufficiently, yet allows hook to be raised to release cradle.

1- CRADLE RELEASE FROM CARRIAGE ADJUSTMENT

Procedure

1. Remove head coil carriage cover.
2. Dock patient transport.
3. Latch carriage to cradle.
4. Check that the carriage meets the following criteria:
 - a. Carriage latch hook must be low enough to positively engage cradle.
 - b. Carriage latch hook must be high enough to be disengaged from cradle when cradle handle is squeezed
5. If needed, adjust Cradle Release mechanism tension, see Illustration below.

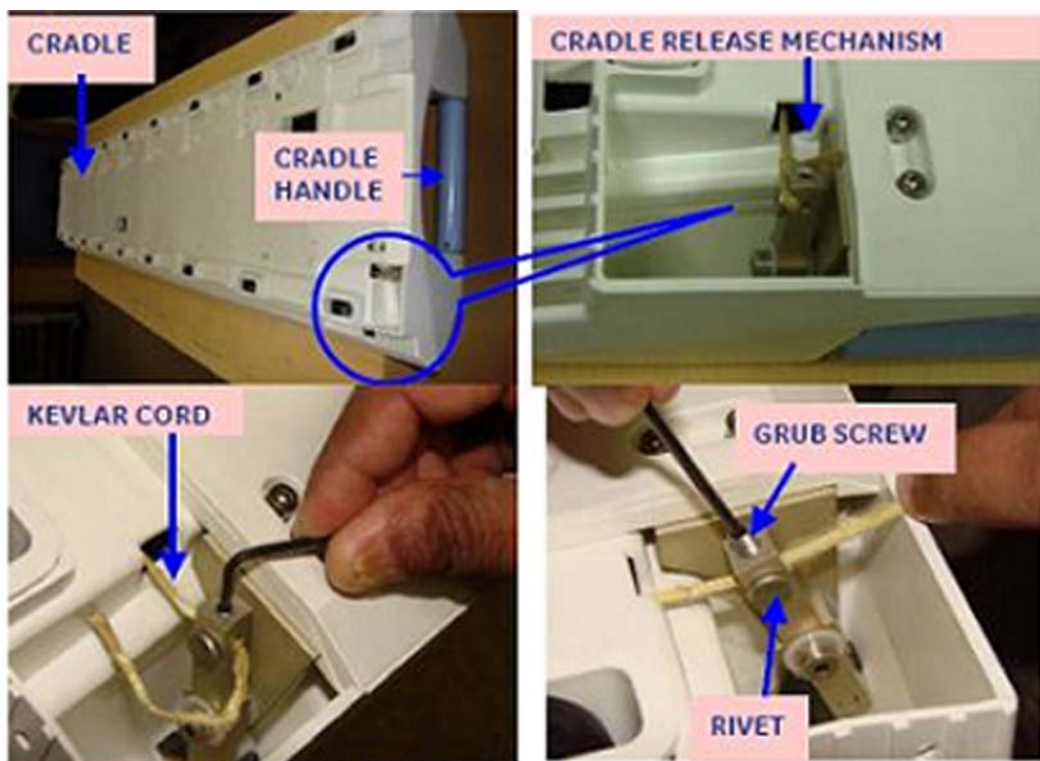


CRADLE RELEASE MECHANISM TENSION ADJUSTMENT
ILLUSTRATION

2- CRADLE RELEASE FROM PATIENT TRANSPORT ADJUSTMENT

For systems with a Lightweight Patient Transport, the actuator on the longitudinal drive carriage must be set so that it presses a button on the cradle to mechanically release the cradle from the patient transport, allowing it to move forward into the magnet bore. If needed, adjust threaded actuator rod at end of carriage, see Illustration L2595A.

1. To properly adjust the cradle release, slide the plunger back as far as it can go from the front of the carriage (see Illustration L2595A).

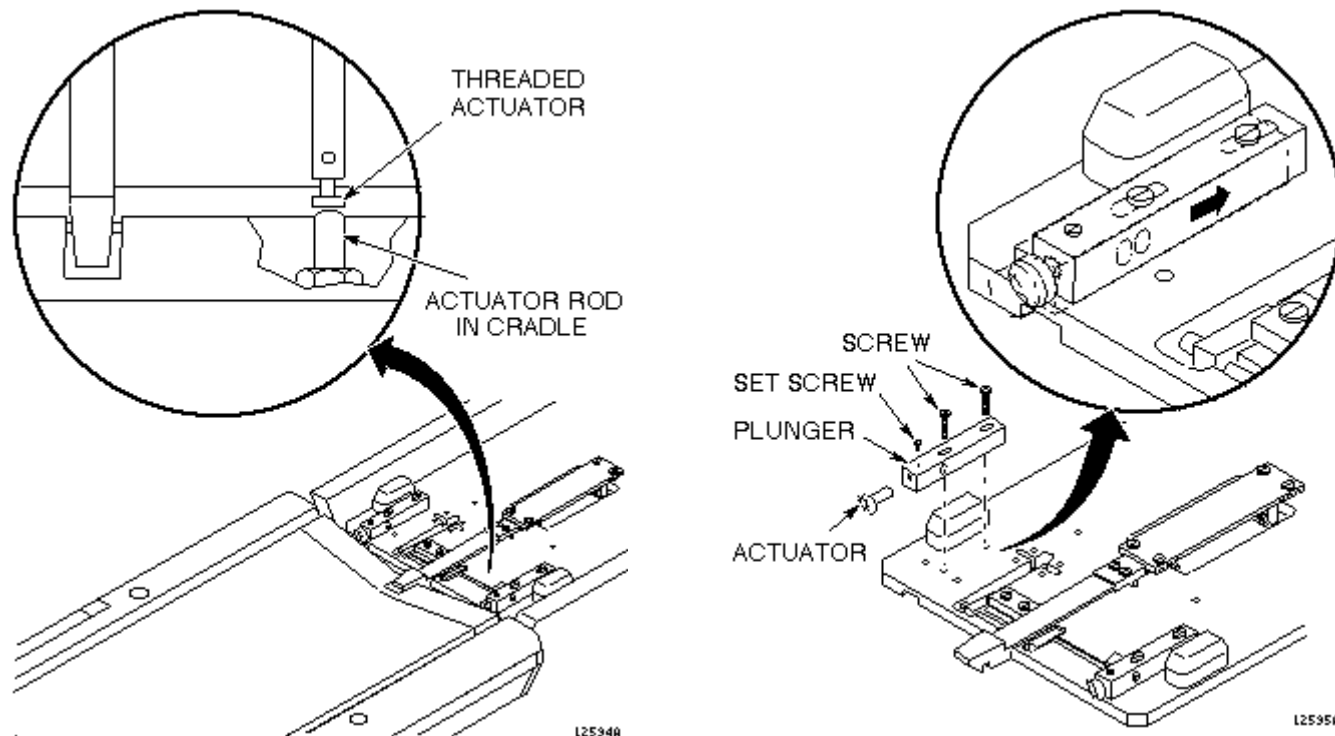

CRADLE RELEASE FROM TRANSPORT ADJUSTMENT
ILLUSTRATION L2595A

2. Loosen the set screw and rotate the threaded actuator in or out as needed, then tighten the set screw.

REVISION HISTORY

REV	DATE	AUTHOR	PRIMARY REASONS FOR CHANGE
A	April 17, 1998	W. Pasciak	Initial release converted to Word
1	Oct. 1, 2007	K.Kumar	Per PSR 13108468, Section 1 Cradle Release from Carriage Adjustment procedure was updated in step 5, with a new illustration for the Cradle Release mechanism adjustment. Section 2, step 1 a new illustration for adjusting the actuator rod.