



Total Thermal Solutions™

55 Dragon Court, Woburn, MA 01801, Tel: (781-933-7300), www.Lytron.com



820-0231 – Installation Instructions Chilled Air Blower Mixing Valve P/N 205-0121-03 (GE P/N 5156320)

People Required:

2 People

Procedure Timing:

Chilled Air Mixing Value Replacement: 3 hours

Tools Required:


- 7/8 in. Open End Wrench
- 7/16 in. Deep-well Socket
- Wet/Dry Vacuum or Bucket for Draining
- Absorbent Towels

NOTE:

Old systems may have valve different from those in this kit. For that reason, hoses were supplied. Review entire procedure before beginning.

Removal Procedure:

1. Perform shutdown and apply Lockout/Tagout to the system in accordance with the GE *LOTO for Heat Exchanger Cabinet (HEC)* procedure (power needs to be removed for the electronics and facility water should be Locked and Tagged).
2. Open the door to the HEC. If necessary, the door can be removed from its hinges by lifting up on the door.
3. Swing out the Power Box and remove the Chilled Air Blower to gain access to the mixing valve and fittings. (See Lytron Procedure 820-0232.)

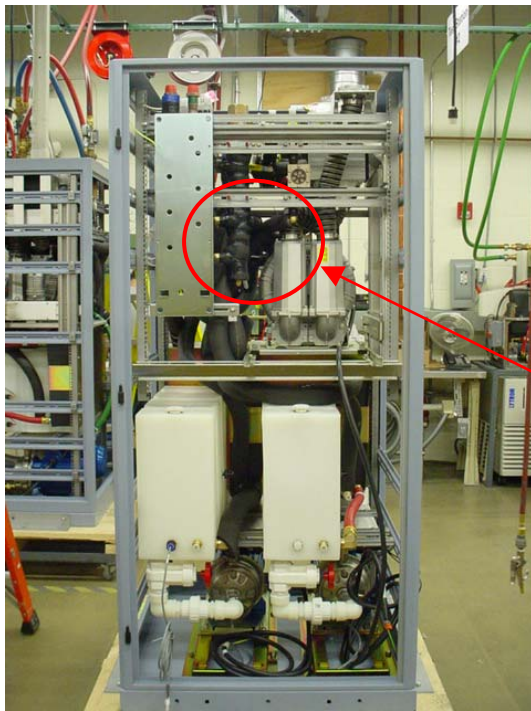

Blower
Connections for
Facility Supply
and Return

Facility Supply
Header Connections
for 3-Way Valves
(Port B to Header)

Facility Return
Header Connections
for 3-Way Valves
(Port AB to Header)


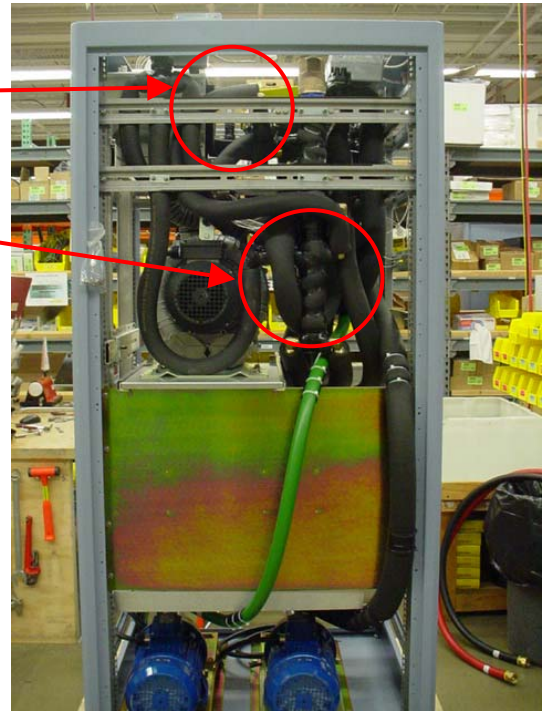


Illustration 1: Header Connections for Facility Supply and Return Hoses from Three-Way Valve

4. Disconnect the 5-pin connector near the mixing valve body. The mixing valves are located at the top right side of the cabinet when viewing from the front. See Illustration 2 below.

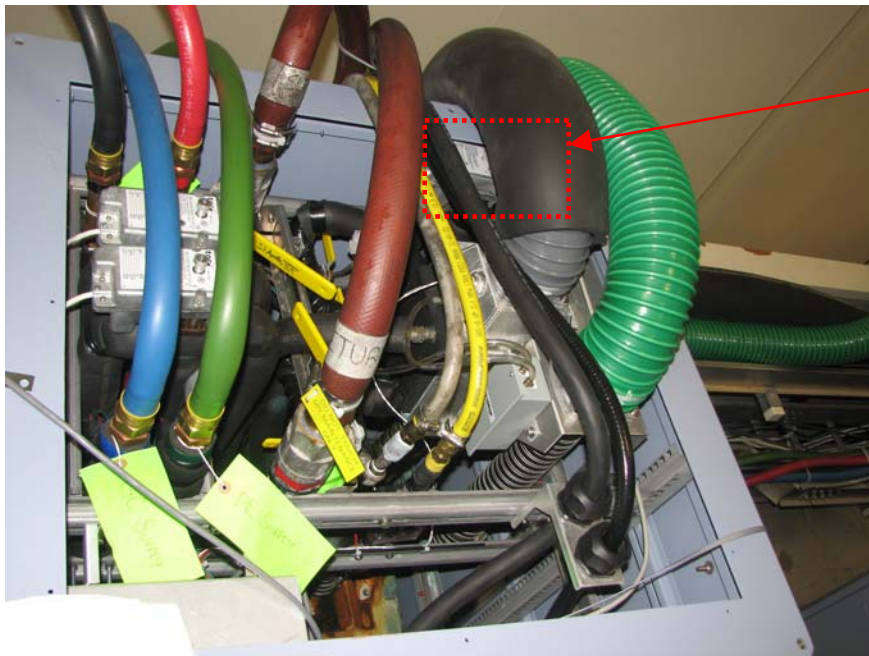

Chilled Air Blower Mixing Valve

Illustration 2: Location of Chilled Air Blower Mixing Valve

5. Drain the Facility-side plumbing per GE draining procedures.
6. Refer to the illustration that follows for the locations to connect Ports A, AB, and B to the system.

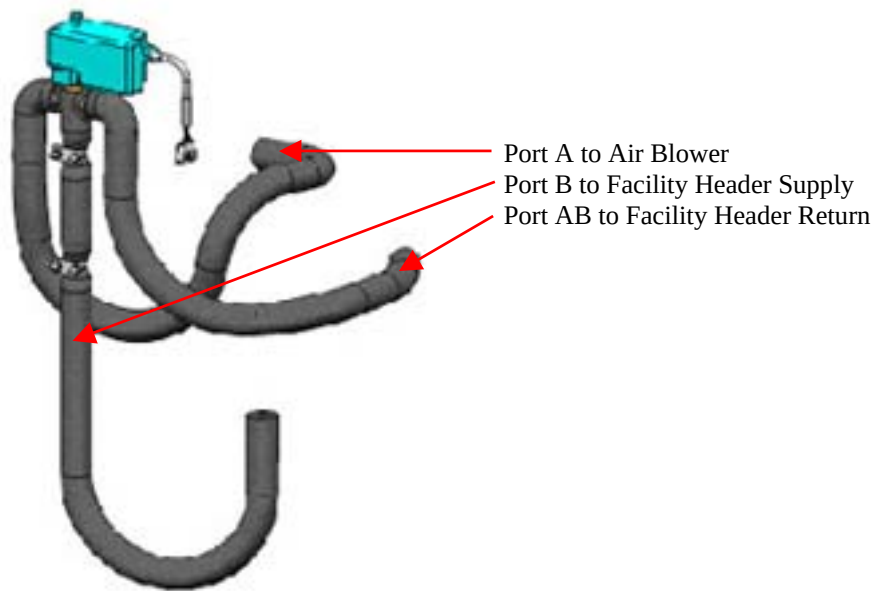


Illustration 3: Detail of Three-Way Mixing Valve Assembly Showing Port Connections

7. Remove the Air Blower hose (Port A) from the Blower Heat Exchanger by using a 7/8 in. wrench.
8. Remove the Facility Return hose (Port AB) of the mixing valve on the Facility Return Header by using a 7/8 in. wrench.
9. Remove the Facility Supply hose (Port B) of the mixing valve on the Facility Supply Header by using 7/8 in. wrench.
10. Remove the 3-way valve assembly by removing the U-bolts mounted to the rails in the back of the cabinet using a 7/16 in. deep socket wrench.

Installation Procedure:

1. Mount the new 3-way Valve Assembly by securing the valve body to the frame using a 7/16 in. wrench. (Ensure the aluminum nut atop the mixing valve body has freedom to move up and down without hitting the cabinet frame.)
2. Reconnect the 5-pin connector to the valve.
3. Attach the Port A hose to the Blower by using a 7/8 in. wrench. Tighten until hand tight, then tighten an additional 1/4 turn.

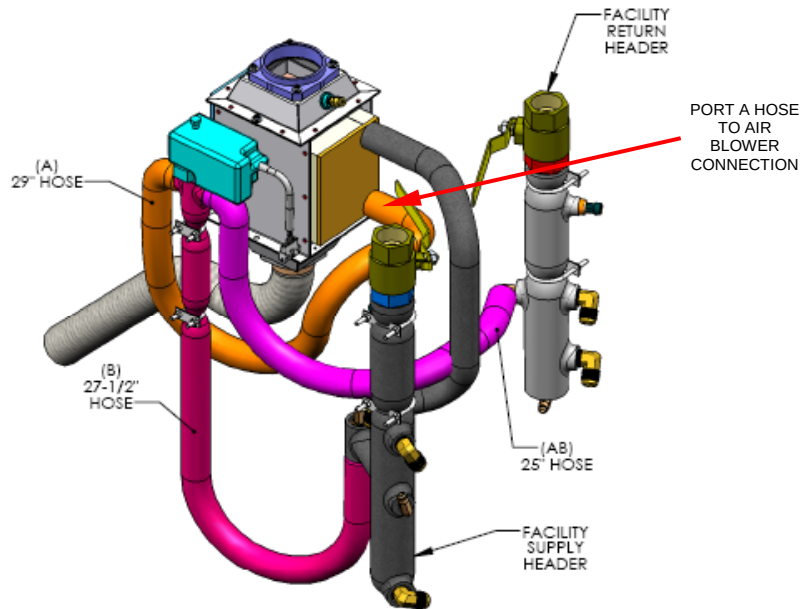


Illustration 4: View of Three-Way Mixing Valve Assembly Connections

4. Attach the Port AB hose to the Facility Return Header by using a 7/8 in. wrench. Tighten until hand tight, then tighten an additional 1/4 turn.
5. Attach the Port B hose to the Facility Supply Header by using a 7/8 in. wrench. Tighten until hand tight, then tighten an additional 1/4 turn.
6. Restart facility water flow by removing LOTO from the facility water ball valves and opening the valves fully.
7. Check the newly made connections for leaks.
8. Reinstall the Blower and reconnect the Power Box.
9. Remove LOTO to the Electronics in the HEC.
10. Confirm the temperature set points and actual values are within 1 degree Celsius on the display on the front of the cabinet.