

APPENDIX C - DISK DRIVE LOW-LEVEL FORMAT


This section describes how to do a low-level format of the disk drives. A low-level format should only be done if you're loading a different Operating System (OS), or if suspected bad blocks on a disk drive are causing system problems. Depending on the system and disk drives, this procedure can last as long as one hour per drive or as little as 20 minutes per drive.

1. Insert the **IRIX 6.5** CD labeled "**Boot/Update**" into the CD-ROM drive on the workstation (right side).

Note

User responses are bolded text

2. With the system up and running, go to the Service Desktop and select [**Shutdown**]. If the system is not up and running, switch on the power.
3. When prompted, click on the [**Restart**] button. Stop the reboot process by clicking on the [**Stop For Maintenance**] button when it appears.

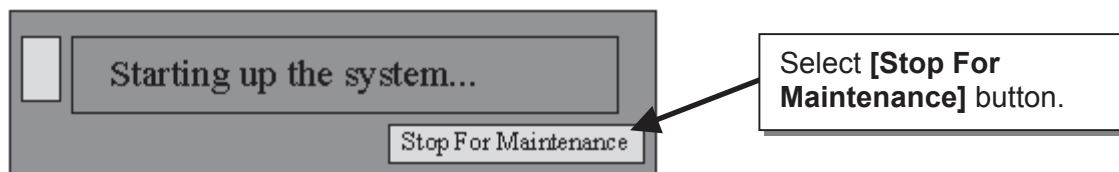

4. Next, click on the [**Enter Command Monitor**] button when it becomes available. Type the following:

```
>> boot -f dksc(1,3,8)sash64 dksc(1,3,7)stand/fx.64 --x <Enter>
```

5. Continue typing or pressing keys as indicated below:

```
fx: "device-name" = (dksc) <Enter>
fx: ctrlr# = (0) <Enter>
fx: drive# = (1) <Enter> or 2 <Enter> (if you're doing the second drive)
fx: d/fo <Enter>
```

6. Press <Enter> to accept the current parameters.
7. Type **Yes** <Enter> to start the format.

8. The format can take up to 1 hour, depending on the system and disk drives that are being formatted. There will be no prompts to the user while the format is running. Be patient and do not interfere with the system. When the formatting is finished, the system will prompt with:

Format completed successfully

.

.

fx/debug>

9. Reset or power cycle the computer to exit debug. Go to Section 2 of this document to load the operating system.