

INTRODUCTION



SYSTEM LEVEL



MAINS DISTRIBUTION



MAGNET



PATIENT SUPPORT



GRADIENT AMPLIFIER



DATA ACQUISITION SYSTEM



PHYSIOLOGY



OPERATOR CONSOLE



COMPUTER




OPTIONS




CONTENTS:

Standard/Omni Mains Distribution Plan.....	Z1-3.1
Power/Master Mains Distribution Plan.....	Z1-3.2
Standard/Omni Mains Distribution Unit H.	Z3-3.1
Power/Master Mains Distribution Unit H. and Mains Distribution Extended HA.	Z3-3.2

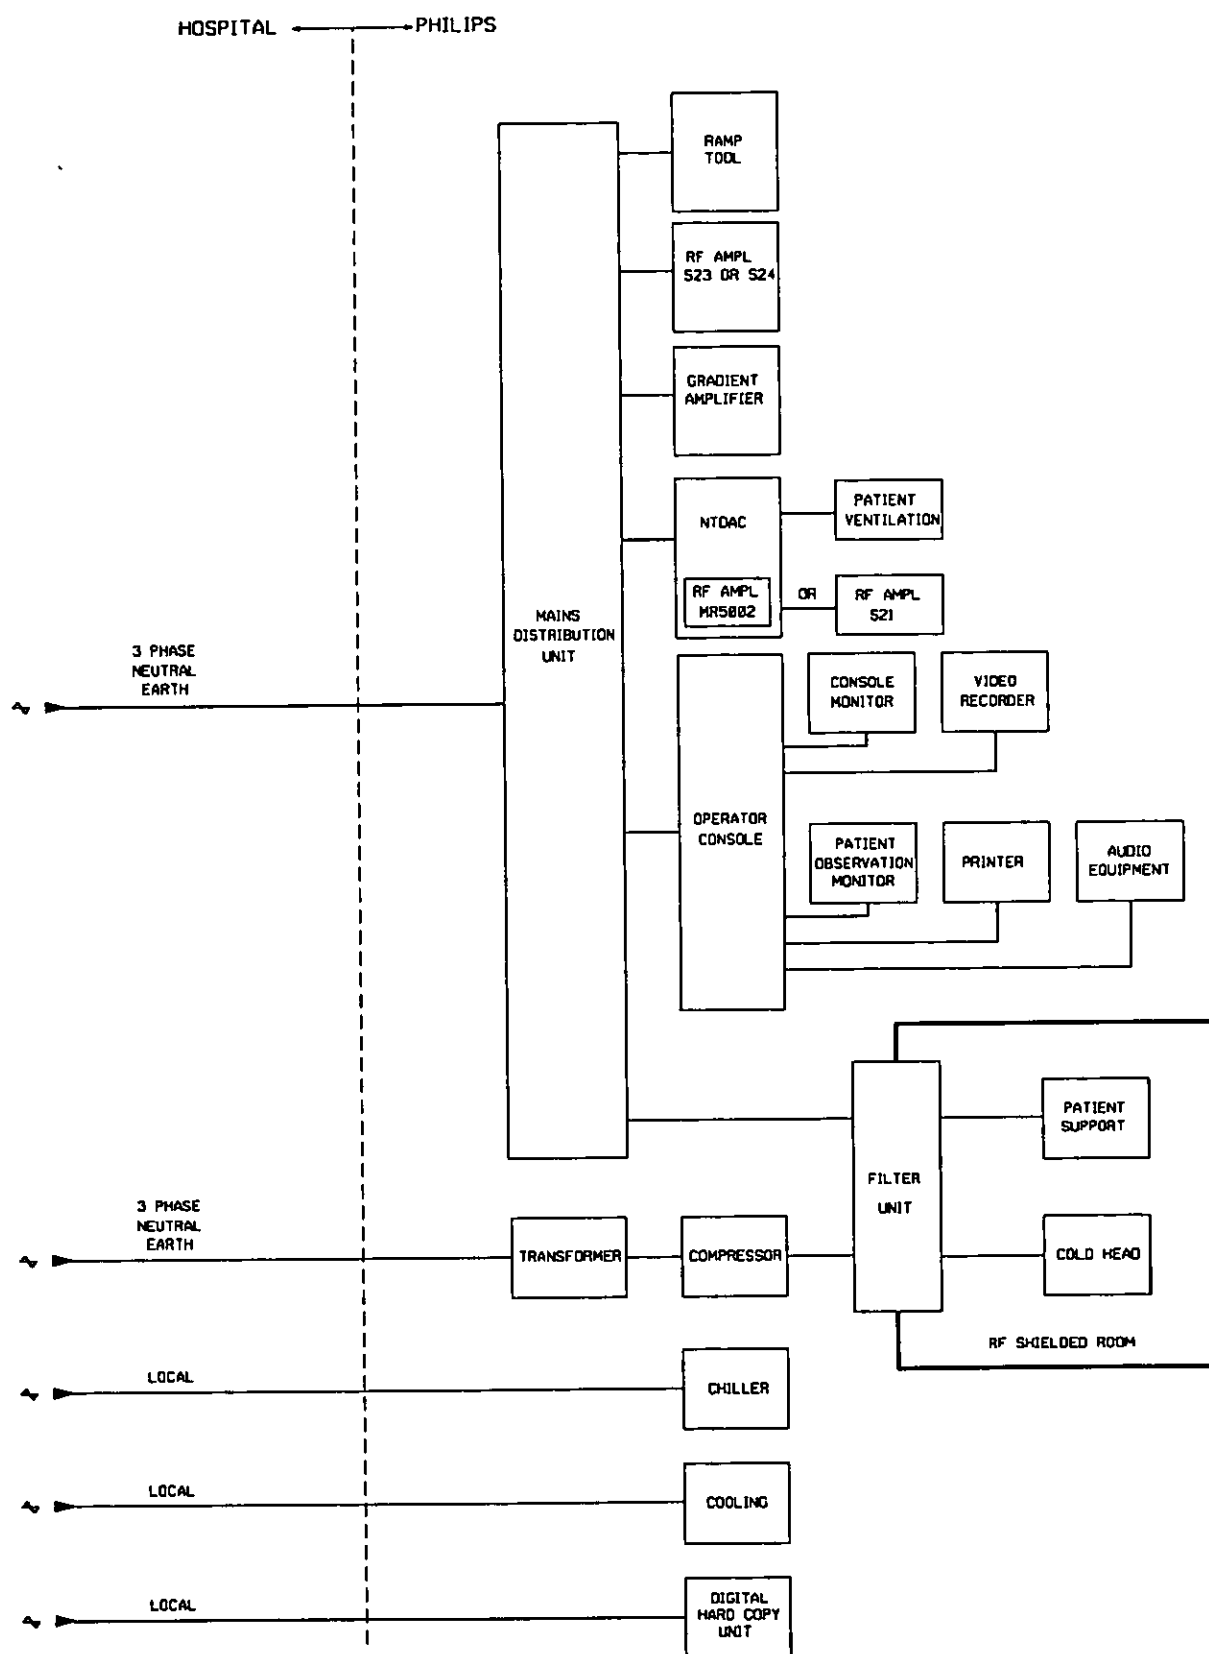


Intera 0.5 T	Intera 1.0 T	Intera 1.5 T
Standard	Omni	Omni

MAINS DISTRIBUTION PLAN

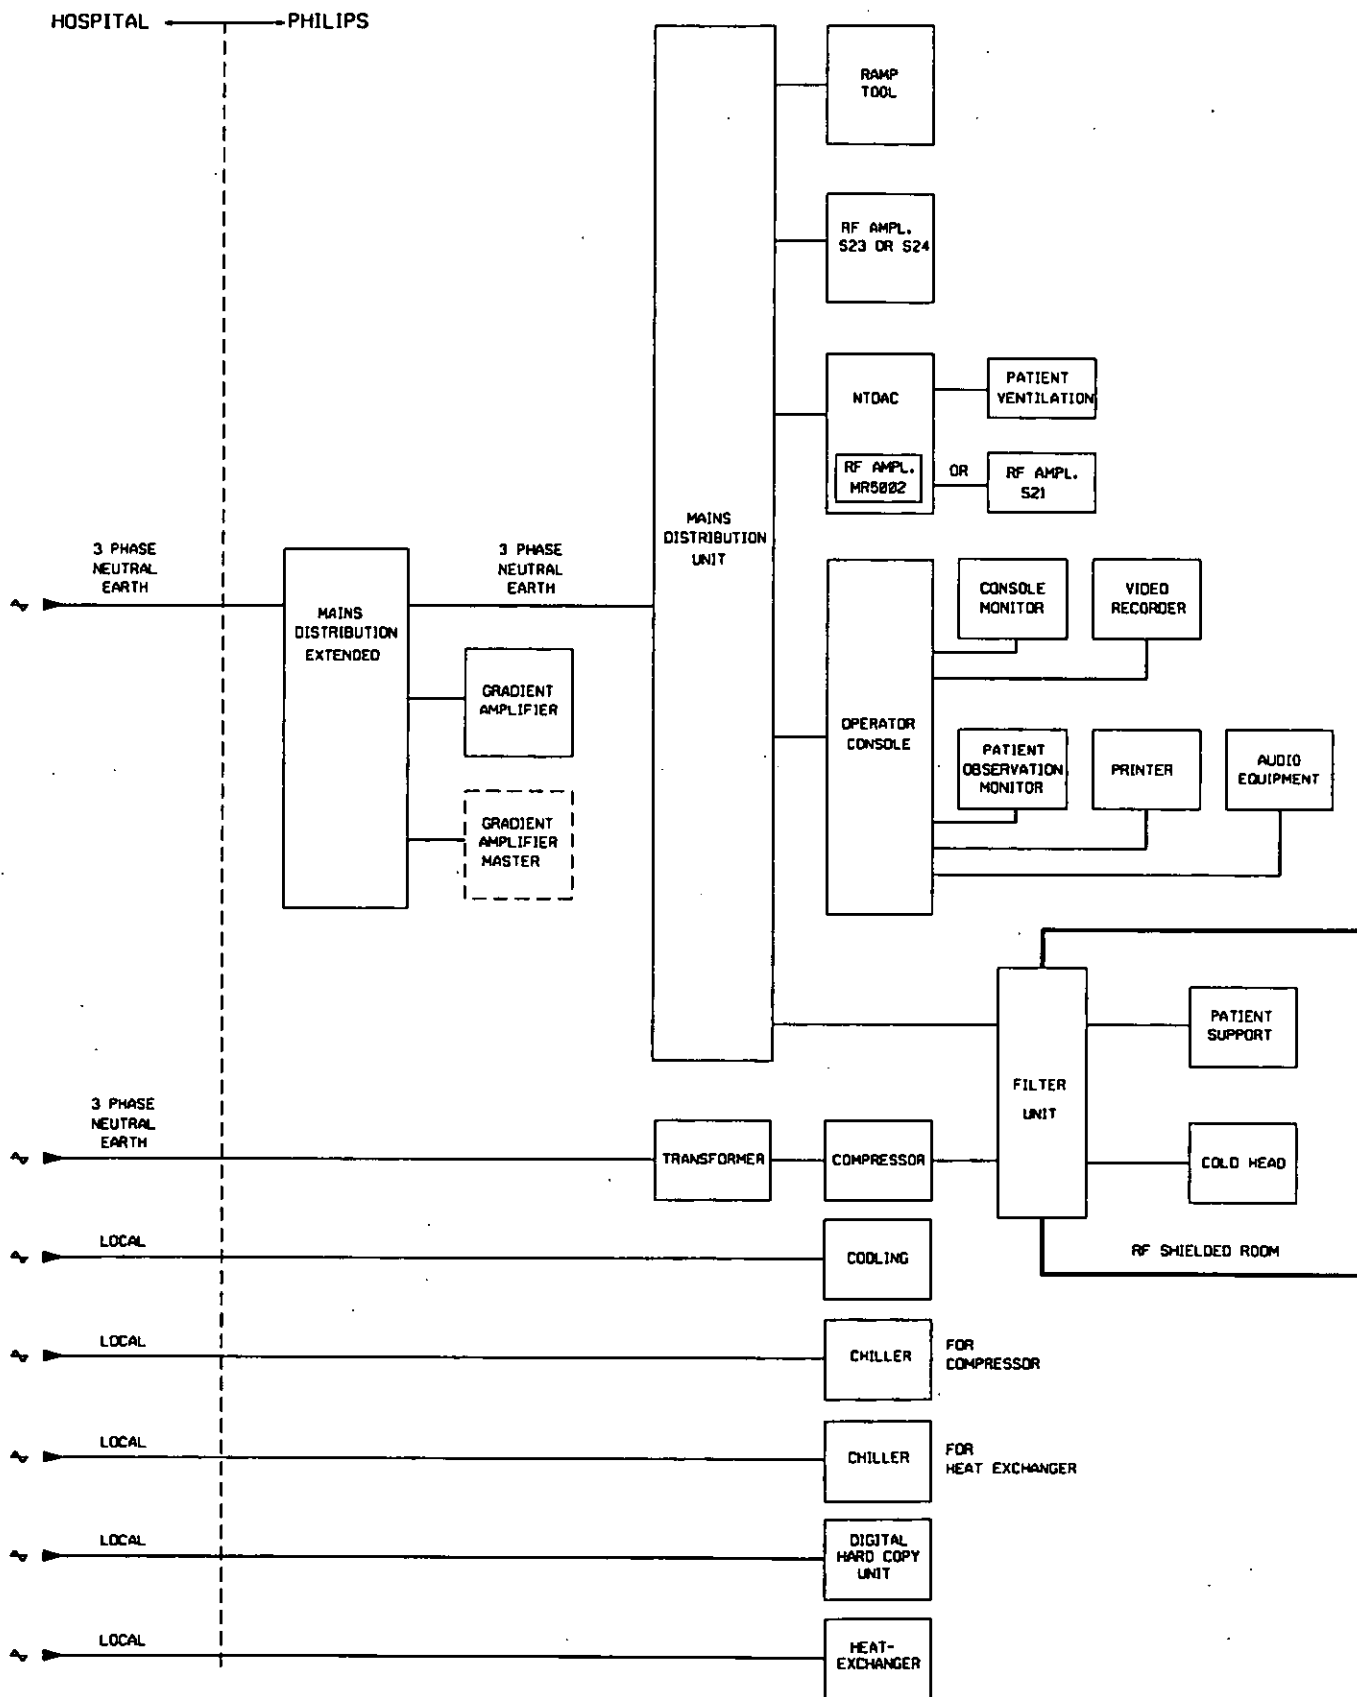


Intera 0.5 T	Intera 1.0 T	Intera 1.5 T
	Power	Power Master

MAINS DISTRIBUTION PLAN

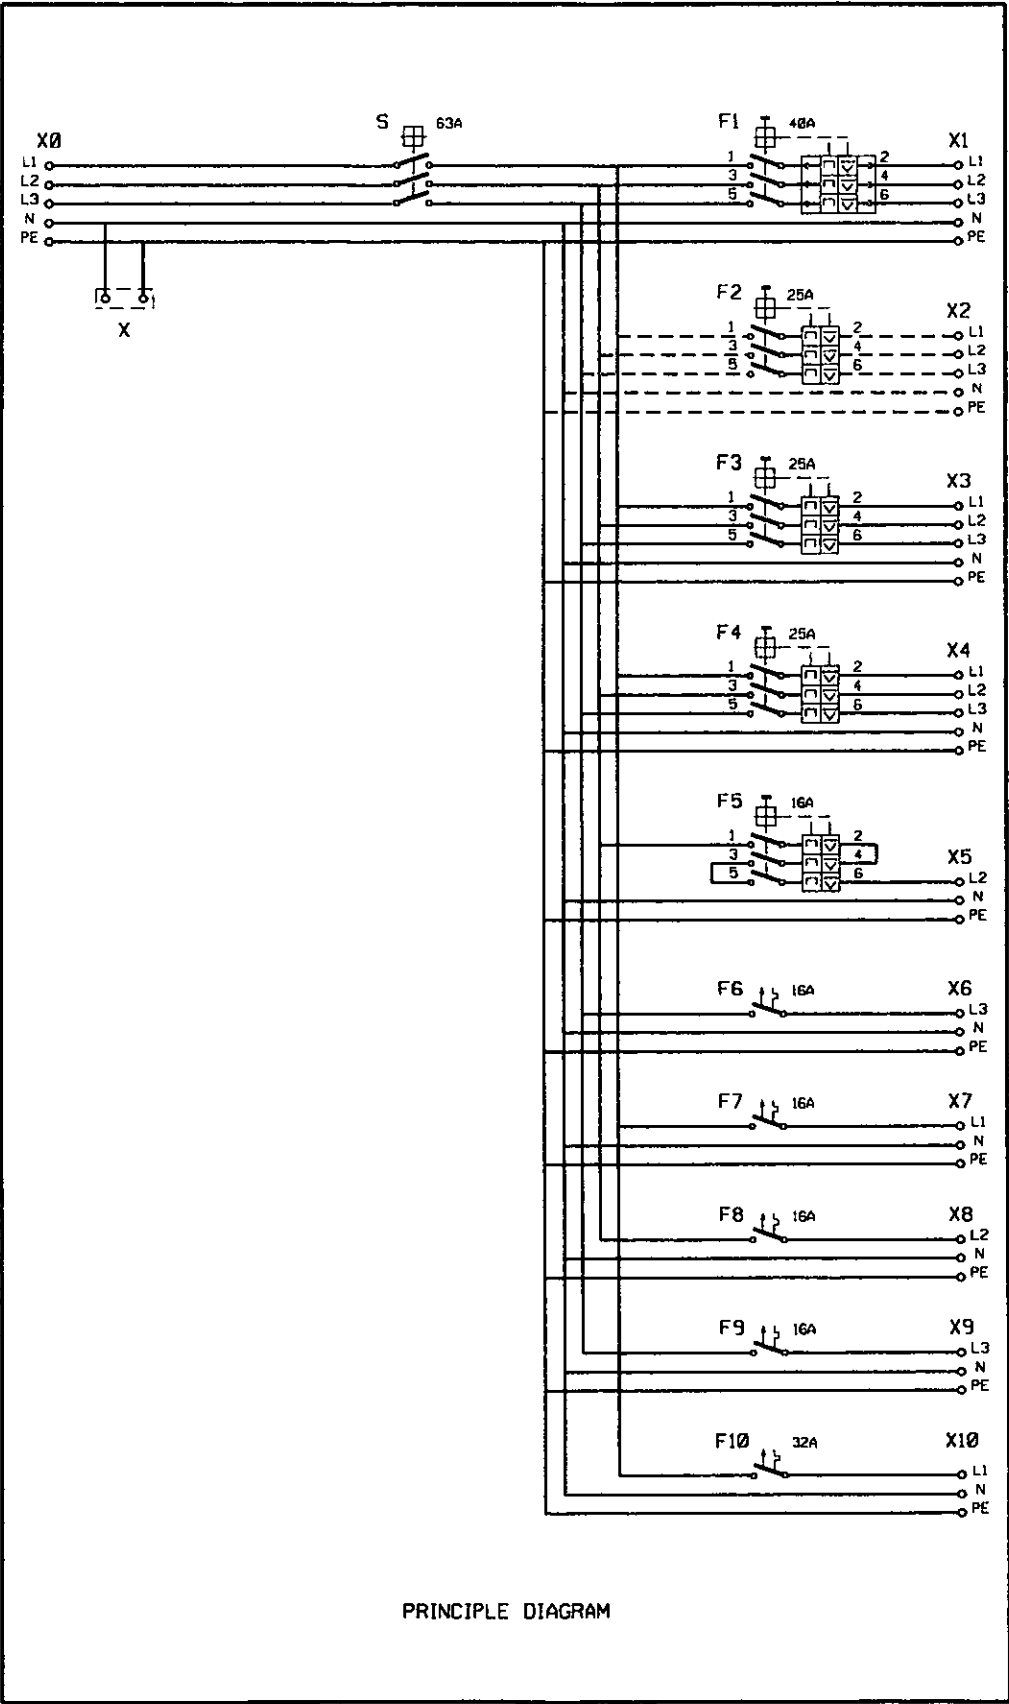

PRINCIPLE DIAGRAM

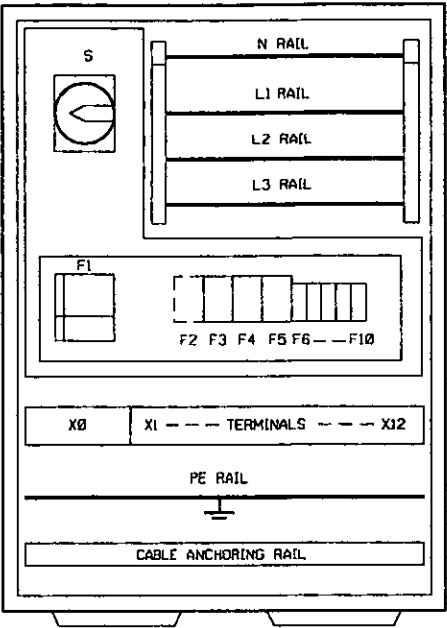



FRONT VIEW

SWITCH FUSE	USED FOR	FUSE (A)	TERMINAL
S	SYSTEM	63	
F1	GRADIENT AMPLIFIER STANDARD/OMNI	40	X1
F2	(SPACE)	25	X2
F3	DATA ACQUISITION SYSTEM	25	X3
F4	MAGNET POWER SUPPLY / RAMP TOOL	25	X4
F5	CONSOLE	16	X5
F6	FILTER BOX (PATIENT TABLE)	16	X6
F7	SPARE	16	X7
F8	SPARE	16	X8
F9	SPARE	16	X9
F10	RF AMPL S23/S24	32	X10


SERVICE KEY

Intera 05 T	Intera 1.0 T	Intera 1.5 T
Standard	Omni	Omni


MAINS DISTRIBUTION UNIT H.

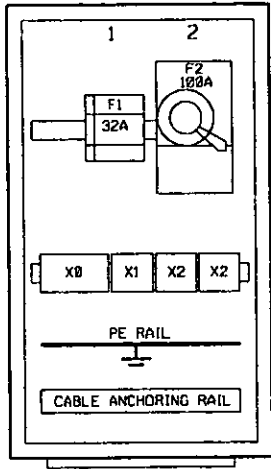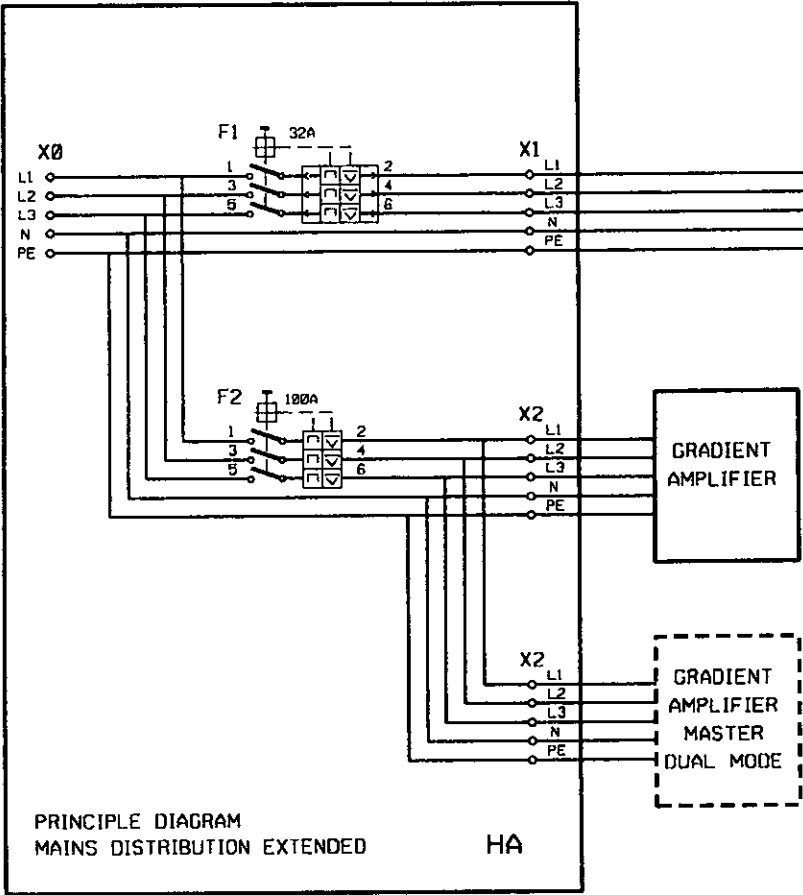

FRONT VIEW MDU EXTENDED HA

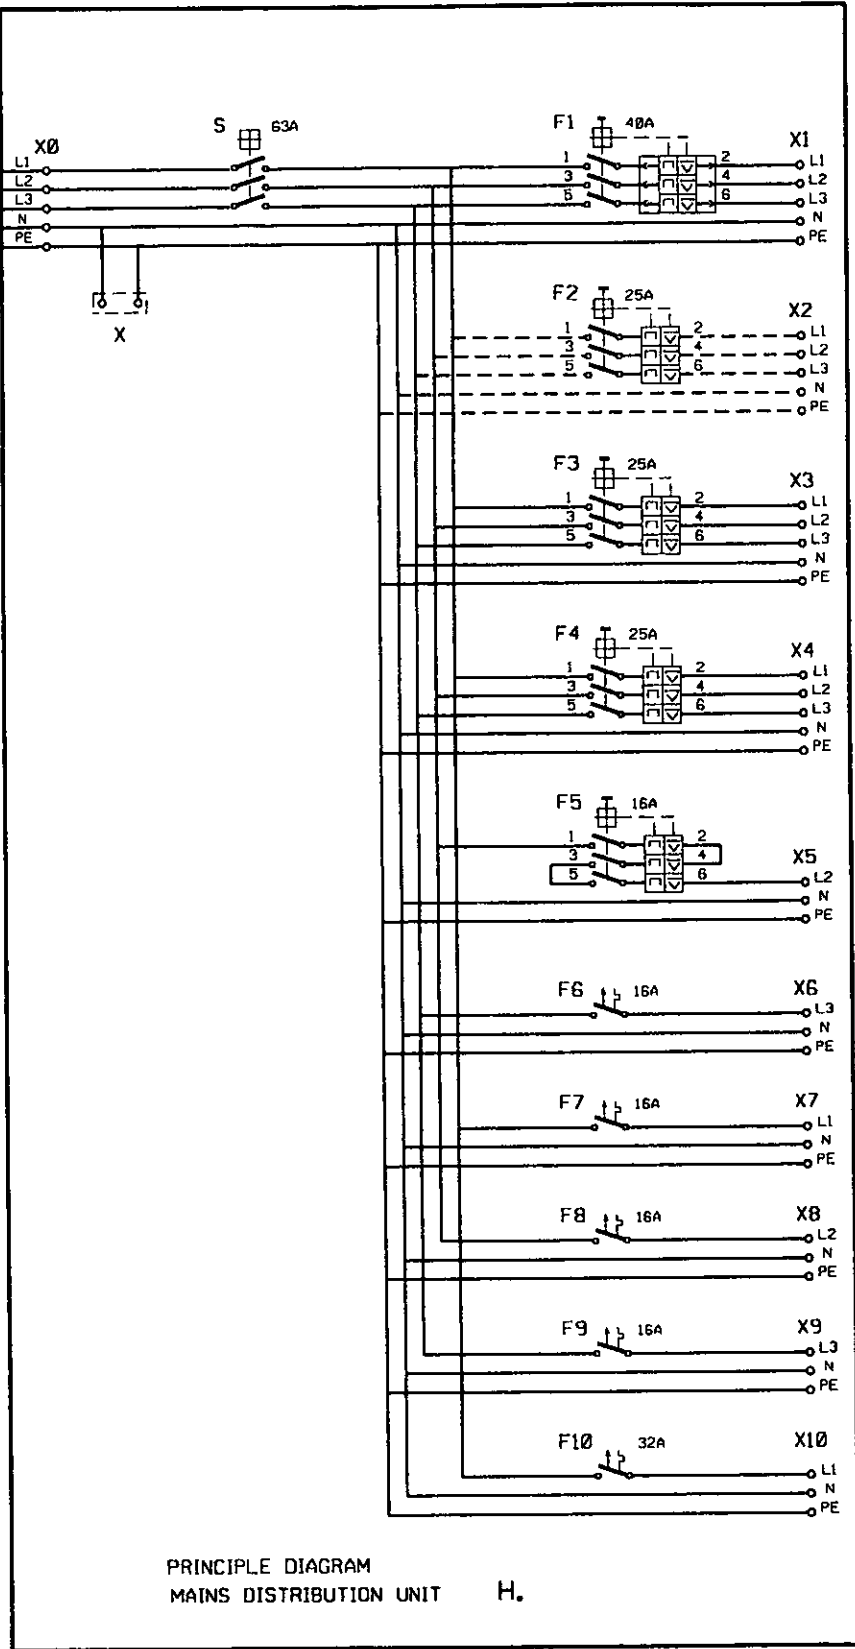

PRINCIPLE DIAGRAM
MAINS DISTRIBUTION UNIT H.

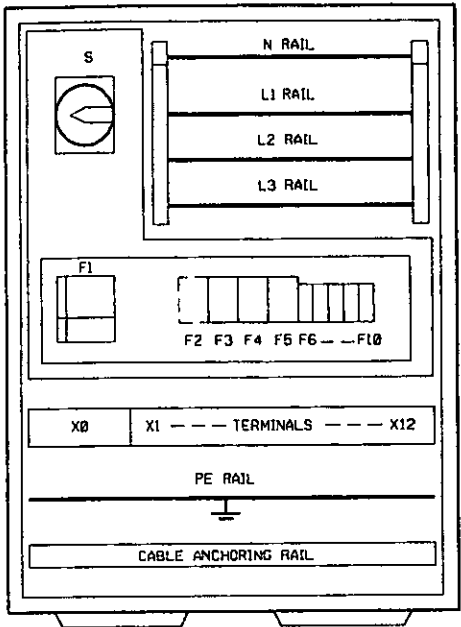

FRONT VIEW MDU H

SWITCH FUSE	USED FOR	FUSE (A)	TERMINAL
S	SYSTEM	63	
F1	SPARE	40	X1
F2	(SPACE)	25	X2
F3	DATA ACQUISITION SYSTEM	25	X3
F4	MAGNET POWER SUPPLY / RAMP TOOL	25	X4
F5	CONSOLE	16	X5
F6	FILTER BOX (PATIENT TABLE)	16	X6
F7	SPARE	16	X7
F8	SPARE	16	X8
F9	SPARE	16	X9
F10	RF AMPL S23/S24	32	X10

SERVICE KEY MDU H

Intera 05 T	Intera 10 T	Intera 15 T
	Power	Power Master

MAINS DISTRIB. UNIT H. AND
MAINS DISTRIB. UNIT EXT. HA