


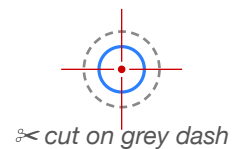
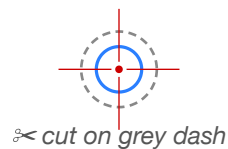
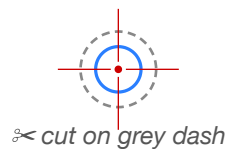
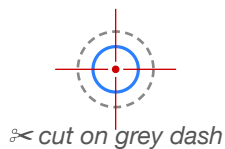
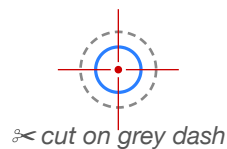
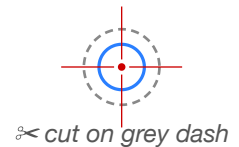
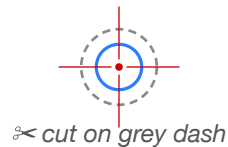


CWM Experiment Guide — PZT Centering Template

Print at 100% (no scaling) on US Letter paper. Verify the ruler below measures 50 mm.

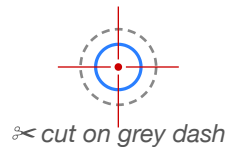

Template T.4 — PZT Disc Centering Guide (1:1 scale)

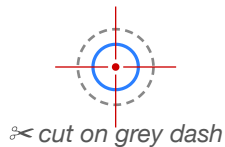

Legend

-  Grey dashed circle = 10 mm PZT disc outline (cut here)
-  Blue circle = 6 mm rod end (your rod sits inside this ring)
-  Red crosshair + dot = exact center — place your glue drop here

How to use:

1. Print this page at 100% scale. Verify the 50 mm ruler above with a physical ruler.
2. Cut out one centering guide along the grey dashed circle.
3. Place the paper disc on the flat end of your glass rod, aligning the blue circle with the rod's edge. The red dot marks the exact center of the 6 mm face.
4. Place one tiny drop of cyanoacrylate (<0.5 mm) on the red center dot.
5. Remove the paper guide. Press the PZT disc onto the rod end, centering the disc so the rod end (6 mm) sits in the middle of the PZT disc (10 mm). There should be 2 mm of PZT overhang uniformly around the rod.

6. Hold firm pressure for 30 seconds. Cure 24 hours before use.

PZT disc: 10 mm dia (E-outstanding B08R581G3H or uxcell B07RK2V1P2) · Rod: 6 mm dia × 150 mm borosilicate (PATIKIL B0F93