## Question 1(A) [3 marks]

**Draw The Bus Organization Of 8085.** 

#### **Answer**:

## **Bus Types:**

- Address Bus: 16-bit unidirectional bus for memory addressing
- Data Bus: 8-bit bidirectional bus for data transfer
- Control Bus: Control signals like RD, WR, ALE, IO/M

Mnemonic: "ADC - Address, Data, Control"

## Question 1(B) [4 marks]

**Compare Microprocessor With Microcontroller.** 

Feature	Microprocessor	Microcontroller
Architecture	External components needed	All components on single chip
Memory	External RAM/ROM required	Internal RAM/ROM available
Cost	Higher system cost	Lower system cost
Power	Higher power consumption	Lower power consumption
Size	Larger system size	Compact system
Applications	General purpose computing	Embedded control applications

## **Key Points:**


- Microprocessor: CPU only, requires external support chips
- Microcontroller: Complete computer system on chip

Mnemonic: "MICRO - Memory Internal, Compact, Reduced cost, Optimized"

## Question 1(C) [7 marks]

Draw And Explain Each Block Of 8085 Microprocessor.

#### Answer:

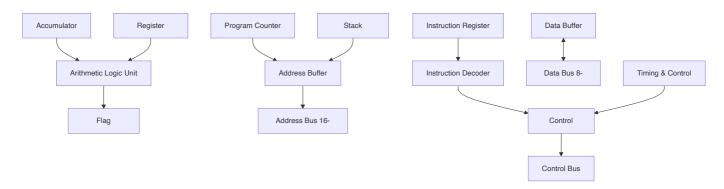

#### **Block Functions:**

- **ALU**: Performs arithmetic and logical operations
- Accumulator: Primary working register for data processing
- Register Array: B, C, D, E, H, L general purpose registers
- **Program Counter**: Holds address of next instruction
- Stack Pointer: Points to top of stack in memory
- Control Unit: Controls overall operation of processor

Mnemonic: "APRIL - ALU, Program counter, Registers, Instruction decoder, Logic control"

## Question 1(C) OR [7 marks]

## Draw Pin Diagram Of 8085 Microprocessor And Explain Any 4(Four) Pins.

#### Answer:

```
8085 PIN DIAGRAM
      1 +----+ 40 Vcc
  X2
     2
            39 HOLD
RESET 3
             38 HLDA
 SOD 4 | 37 CLK(OUT)
 SID 5 | 8085 | 36 RESET IN
TRAP 6 | 35 READY
            | 34 IO/M
RST7.5 7
             | 33 S1
RST6.5 8
RST5.5 9
            | 32 RD
            | 31 WR
INTR 10
             30 ALE
INTA 11
AD0-7 12-19
            23-29 A8-A15
 Vss 20 +----+ 21 A15-A8
```

### **Pin Explanations:**

- ALE (Pin 30): Address Latch Enable separates address and data on multiplexed bus
- RD (Pin 32): Read control signal active low, indicates read operation
- WR (Pin 31): Write control signal active low, indicates write operation
- RESET (Pin 36): Reset input initializes processor when low

Mnemonic: "ARWA - ALE, Read, Write, rAset"

## Question 2(A) [3 marks]

Define: (1) Opcode (2) Operand

Answer:

#### **Definitions:**

- **Opcode**: Operation Code specifies the operation to be performed (ADD, MOV, JMP)
- Operand: Data or address on which operation is performed

### **Example:**

Mnemonic: "OO - Operation + Operand"

## Question 2(B) [4 marks]

## Give Differences Between RISC And CISC.

#### Answer:

Feature	RISC	CISC
Instructions	Simple, fixed format	Complex, variable format
Execution	Single cycle execution	Multiple cycle execution
Addressing	Few addressing modes	Many addressing modes
Memory	Load/Store architecture	Memory-to-memory operations
Compiler	Complex compiler design	Simple compiler design

## **Key Points:**

• RISC: Reduced Instruction Set Computer - simpler, faster


• **CISC**: Complex Instruction Set Computer - feature rich


Mnemonic: "RISC is SLIM - Simple, Load-store, Instruction reduced, Memory efficient"

# Question 2(C) [7 marks]

Give Differences Between Von-Neumann & Harvard Architecture.

Feature	Von-Neumann	Harvard
Memory	Single memory for data and instructions	Separate memory for data and instructions
Bus Structure	Single bus system	Dual bus system
Access	Sequential access to data and instructions	Simultaneous access possible
Cost	Lower cost	Higher cost
Speed	Slower due to bus conflicts	Faster parallel access
Examples	8085, General computers	8051, DSP processors

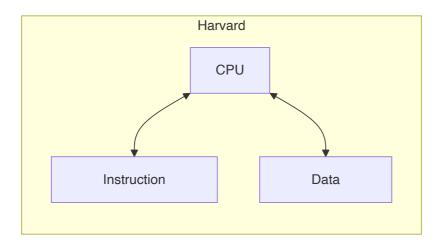

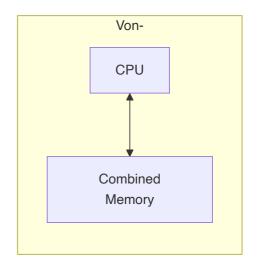

Mnemonic: "VH - Von has one bus, Harvard has two"

## Question 2(A) OR [3 marks]

Define: (1) T-State (2) Instruction Cycle (3) Machine Cycle

Answer:

#### **Definitions:**

• **T-State**: Time state - basic timing unit, one clock period

• Instruction Cycle: Complete execution of one instruction

• Machine Cycle: Group of T-states required for one memory operation


### Relationship:

```
Instruction Cycle = Multiple Machine Cycles
Machine Cycle = Multiple T-States (3-6 T-states)
```

Mnemonic: "TIM - T-state, Instruction cycle, Machine cycle"

# Question 2(B) OR [4 marks]

Explain De-Multiplexing Of Address And Data Bus Of 8085.

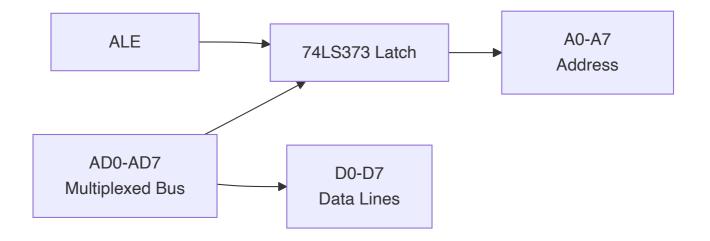

#### **Process:**

- Step 1: During T1, AD0-AD7 contains lower 8-bit address
- Step 2: ALE goes high, latches address in external latch
- Step 3: AD0-AD7 becomes data bus for remaining T-states

## **Components Required:**

- 74LS373: Octal latch IC for address latching
- ALE: Address Latch Enable signal for timing

Mnemonic: "LAD - Latch Address with Data separation"

## Question 2(C) OR [7 marks]

Draw And Explain Flag Register Of 8085.

#### Answer:

## Flag Descriptions:

- CY (D0): Carry flag Set when carry occurs
- P (D2): Parity flag Set for even parity
- AC (D4): Auxiliary carry Set for BCD operations
- **Z (D6)**: Zero flag Set when result is zero
- **S (D7)**: Sign flag Set when result is negative

### **Flag Operations:**

• **Conditional Jumps**: Based on flag status (JZ, JC, JP)

• Arithmetic Results: Automatically updated after ALU operations

Mnemonic: "SZAPC - Sign, Zero, Auxiliary, Parity, Carry"

## Question 3(A) [3 marks]

What Is SFR? List Out Any Three SFR.

Answer:

**SFR Definition:** 

Special Function Register - Dedicated registers with specific functions in microcontroller

**Three SFRs:** 

• ACC (E0H): Accumulator register

• PSW (D0H): Program Status Word

• SP (81H): Stack Pointer register

#### **Characteristics:**

• Address Range: 80H to FFH in internal RAM

• Bit Addressable: Some SFRs allow individual bit access

• Function Specific: Each has dedicated hardware function

Mnemonic: "APS - ACC, PSW, Stack Pointer"

## Question 3(B) [4 marks]

Explain Program Counter (PC) And Data Pointer (DPTR) Register.

Answer:

### **Program Counter (PC):**

• Size: 16-bit register

• Function: Holds address of next instruction to be executed

• **Auto-increment**: Automatically increments after instruction fetch

• Range: 0000H to FFFFH

## Data Pointer (DPTR):

• Size: 16-bit register (DPH + DPL)

• Function: Points to external data memory locations

• Usage: Used with MOVX instructions for external memory access


• Components: DPH (83H) and DPL (82H)

PC: ++   PCH   PCL   ++	16-bit
DPTR: ++	
DPH   DPL	16-bit
++	
83Н   82Н	

Mnemonic: "PD - PC Points to Program, DPTR Points to Data"

# Question 3(C) [7 marks]

**Draw And Explain Architecture Of 8051.** 

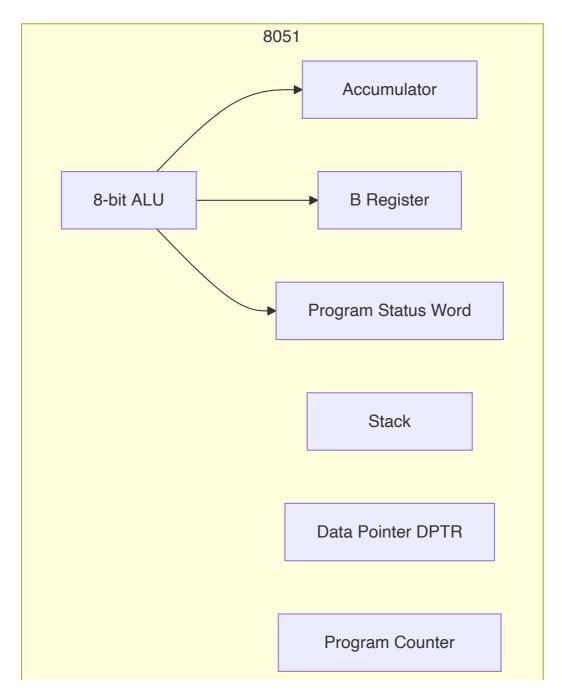

4KB ROM 0000-128B RAM SFR Area Port 0 Port 1 Port 2 Port 3 Timer 0



#### **Architecture Components:**

- CPU: 8-bit ALU with accumulator and B register
- Memory: 4KB internal ROM, 128B internal RAM
- **I/O Ports**: Four 8-bit bidirectional ports (P0-P3)
- **Timers**: Two 16-bit timers/counters (T0, T1)
- **Serial Port**: Full duplex UART for communication
- Interrupts: 5 interrupt sources with priority levels

### **Special Features:**

- Boolean Processor: Bit manipulation capabilities
- Addressing Modes: 8 different addressing modes
- Power Management: Idle and power-down modes

Mnemonic: "MIPTIS - Memory, I/O, Processor, Timers, Interrupts, Serial"

## Question 3(A) OR [3 marks]

Explain Following Pins Of 8051: (1) ALE (2) PSEN (3) XTAL1 & XTAL2

#### Answer:

#### **Pin Functions:**

- ALE (Pin 30): Address Latch Enable
  - Output pulse for latching lower address byte
  - Active high signal at 1/6 of oscillator frequency
- PSEN (Pin 29): Program Store Enable
  - Active low output for external program memory read

- Connected to OE pin of external EPROM
- XTAL1 & XTAL2 (Pins 19, 18): Crystal connections
  - Connect external crystal for clock generation
  - o Typical frequency: 11.0592 MHz or 12 MHz

Mnemonic: "APX - ALE latches Address, PSEN enables Program, XTAL generates clock"

## Question 3(B) OR [4 marks]

**Describe Internal RAM Organization Of 8051 Microcontroller.** 

#### Answer:

```
8051 Internal RAM Organization (128 Bytes)
7FH +----+
   General Purpose
    Scratch Pad Area | 78H-7FH (8 bytes)
78H +----+
   General Purpose 30H-77H (72 bytes)
    Data Memory
30H +----+
  Bank 3 (R0-R7)
20H +----+
  Bank 2 (R0-R7) | 10H-17H
18H +----+
  | Bank 1 (R0-R7) | 08H-0FH
10H +----+
  Bank 0 (R0-R7)
               00H-07H
08H +----+
  Default Register Bank
```

#### **RAM Sections:**

- Register Banks: 4 banks × 8 registers each (00H-1FH)
- **Bit Addressable**: 16 bytes with individual bit access (20H-2FH)
- General Purpose: 80 bytes for user data (30H-7FH)
- Stack Area: Usually starts from 08H upward

### Addressing:

- Direct: Using actual address (MOV 30H, A)
- Indirect: Using register pointer (MOV @R0, A)

Mnemonic: "RBGS - Register banks, Bit addressable, General purpose, Stack"

## Question 3(C) OR [7 marks]

Draw Pin Diagram Of 8051 And Explain Any 04(Four) Pins.

#### Answer:

	8	051 PIN	D
P1.0	1 +	+ 40	Vcc
P1.1	2	39	P0.0/AD0
P1.2	3	38	P0.1/AD1
P1.3	4	37	P0.2/AD2
P1.4	5   805	1   36	P0.3/AD3
P1.5	6	35	P0.4/AD4
P1.6	7	34	P0.5/AD5
P1.7	8	33	P0.6/AD6
RESET	9	32	P0.7/AD7
P3.0/R	XD 10	31	EA/VPP
P3.1/T	XD 11	30	ALE/PROG
P3.2/I	NT0 12	29	PSEN
P3.3/I	NT1 13	28	P2.7/A15
P3.4/T	10 14	27	P2.6/A14
P3.5/T	15	26	P2.5/A13
P3.6/W	TR 16	25	P2.4/A12
P3.7/R	RD 17	24	P2.3/A11
XTAL2	18	23	P2.2/A10
XTAL1	19	22	P2.1/A9
VSS	20+	+ 21	P2.0/A8

#### **Pin Explanations:**

- RESET (Pin 9): Reset input Active high, initializes microcontroller
- EA/VPP (Pin 31): External Access Controls program memory selection
- P0 (Pins 32-39): Port 0 Multiplexed address/data bus for external memory
- P2 (Pins 21-28): Port 2 High-order address bus for external memory

Mnemonic: "REPP - REset, External Access, Port 0, Port 2"

## Question 4(A) [3 marks]

Write A Program To Multiply Data Stored In R0 Register With Data Stored In R1 Register. Store The Result In R2 Register (LSB) And R3 Register (MSB).

#### Answer:

```
ORG 0000H

MOV R0, #05H ; Load first number

MOV R1, #03H ; Load second number

MOV A, R0 ; Move R0 to accumulator

MOV B, R1 ; Move R1 to B register

MUL AB ; Multiply A and B

MOV R2, A ; Store LSB in R2

MOV R3, B ; Store MSB in R3

END
```

### **Program Flow:**

- Load operands into R0 and R1
- Transfer to A and B registers for multiplication
- Execute MUL AB instruction
- **Store** 16-bit result (A=LSB, B=MSB)

### **Result Storage:**

- R2: Contains lower 8 bits of product
- R3: Contains upper 8 bits of product

Mnemonic: "LTSE - Load, Transfer, multiply, Store result"

## Question 4(B) [4 marks]

List Out Data Transfer Instructions And Explain Any Two Data Transfer Instructions With Suitable Examples.

#### **Answer**:

#### **Data Transfer Instructions:**

Instruction	Function
MOV	Move data between registers/memory
MOVX	Move data to/from external memory
MOVC	Move code byte to accumulator
PUSH	Push data onto stack
POP	Pop data from stack
XCH	Exchange accumulator with register
XCHD	Exchange lower nibble

### **Detailed Examples:**

#### 1. MOV Instruction:

```
MOV A, #50H ; Load immediate data 50H into accumulator
MOV RO, A ; Copy accumulator content to RO
MOV 30H, A ; Store accumulator content at address 30H
```

#### 2. PUSH/POP Instructions:

```
PUSH ACC ; Push accumulator onto stack

PUSH 00H ; Push R0 content onto stack

POP 01H ; Pop stack content to R1

POP ACC ; Pop stack content to accumulator
```

Mnemonic: "Move Makes Programs Possible - MOV, MOVX, PUSH, POP"

## Question 4(C) [7 marks]

**Define And Explain Addressing Modes Of 8051.** 

**Answer**:

### 8051 Addressing Modes:

Mode	Description	Example	Usage
Immediate	Data is part of instruction	MOV A, #50H	Constant values
Register	Uses register directly	MOV A, R0	Fast access
Direct	Uses direct address	MOV A, 30H	RAM locations
Indirect	Uses register as pointer	MOV A, @R0	Dynamic addressing
Indexed	Base + offset addressing	MOVC A, @A+DPTR	Table lookup
Relative	PC + offset	SJMP LOOP	Branch instructions
Absolute	Direct jump address	LJMP 1000H	Long jumps
Bit	Individual bit access	SETB P1.0	Control operations

## **Detailed Examples:**

```
; Immediate Addressing
MOV A, #25H ; Load 25H into A

; Register Addressing
MOV A, R1 ; Copy R1 to A

; Direct Addressing
```

```
MOV A, 40H ; Load from address 40H

; Indirect Addressing
MOV R0, #40H ; R0 points to 40H
MOV A, @R0 ; Load from address pointed by R0

; Indexed Addressing
MOV DPTR, #TABLE ; Point to table
MOV A, #02H ; Index value
MOVC A, @A+DPTR ; Load from TABLE+2
```

Mnemonic: "IRIDRAB - Immediate, Register, Indirect, Direct, Relative, Absolute, Bit"

## Question 4(A) OR [3 marks]

Write A Program To Find 2's Complement of Data Stored in R0 Register.

#### Answer:

```
ORG 0000H

MOV R0, #85H ; Load test data

MOV A, R0 ; Copy data to accumulator

CPL A ; Complement all bits (1's complement)

INC A ; Add 1 to get 2's complement

MOV R1, A ; Store result in R1

END
```

#### Algorithm:

- Step 1: Load data from R0 to accumulator
- Step 2: Complement all bits using CPL A
- Step 3: Add 1 using INC A for 2's complement
- Step 4: Store result back

#### **Verification:**

```
Original: 85H = 10000101B
1's Comp: 7AH = 01111010B
2's Comp: 7BH = 01111011B
```

Mnemonic: "CCI - Complement, aCd 1, Include result"

## Question 4(B) OR [4 marks]

List Logical Instructions And Explain Any Two Logical Instructions With Suitable Examples.

#### Answer:

**Logical Instructions:** 

Instruction	Function
ANL	Logical AND operation
ORL	Logical OR operation
XRL	Logical XOR operation
CPL	Complement operation
RL/RLC	Rotate left
RR/RRC	Rotate right
SWAP	Swap nibbles

## **Detailed Examples:**

### 1. ANL (AND Logic):

```
MOV A, #0F0H ; A = 11110000B
ANL A, #0AAH ; AND with 10101010B
; Result: A = 10100000B = A0H
```

Usage: Masking specific bits, clearing unwanted bits

### 2. ORL (OR Logic):

```
MOV A, #0F0H ; A = 11110000B

ORL A, #00FH ; OR with 00001111B

; Result: A = 111111111B = FFH
```

**Usage**: Setting specific bits, combining bit patterns

Mnemonic: "AXOR - AND masks, XOR toggles, OR sets, Rotate shifts"

## Question 4(C) OR [7 marks]

Explain Following Instructions: (1)ADDC (2) INC (3) DEC (4) JZ (5) SUBB (6) NOP (7) RET

Answer:

**Instruction Explanations:** 

### 1. ADDC (Add with Carry):

```
MOV A, #80H
ADDC A, #90H ; A = A + 90H + Carry flag
```

Function: Adds source, destination, and carry flag

### 2. INC (Increment):

```
INC A ; A = A + 1

INC RO ; RO = RO + 1

INC 30H ; (30H) = (30H) + 1
```

Function: Increases operand by 1

3. DEC (Decrement):

```
DEC A ; A = A - 1

DEC R1 ; R1 = R1 - 1

DEC 40H ; (40H) = (40H) - 1
```

Function: Decreases operand by 1

4. JZ (Jump on Zero):

```
DEC A

JZ ZERO_LABEL ; Jump if A = 0
```

Function: Conditional jump when zero flag is set

5. SUBB (Subtract with Borrow):

```
MOV A, #50H
SUBB A, #30H ; A = A - 30H - Carry flag
```

**Function**: Subtracts source and carry from accumulator

6. NOP (No Operation):

```
NOP ; Do nothing, consume 1 cycle
```

Function: Provides timing delay, placeholder

7. RET (Return):

```
CALL SUBROUTINE
...
SUBROUTINE:
MOV A, #10H
RET; Return to caller
```

Function: Returns from subroutine to calling address

Mnemonic: "AIDS NR - Add, Increment, Decrement, Subtract, No-op, Return"

Question 5(A) [3 marks]

**Explain DJNZ And CJNE Instructions With Suitable Examples.** 

#### Answer:

#### DJNZ (Decrement and Jump if Not Zero):

```
MOV R0, #05H ; Initialize counter

LOOP:

MOV A, #00H ; Some operation

DJNZ R0, LOOP ; Decrement R0, jump if not zero
```

**Function**: Combines decrement and conditional jump operations

### **CJNE** (Compare and Jump if Not Equal):

```
MOV A, #30H
CJNE A, #30H, NOT_EQUAL ; Compare A with 30H
MOV R0, #01H ; Equal case
SJMP CONTINUE
NOT_EQUAL:
MOV R0, #00H ; Not equal case
CONTINUE:
```

Function: Compares two operands and jumps if not equal

## **Applications:**

- DJNZ: Loop control, counting operations
- CJNE: Decision making, condition checking

**Mnemonic:** "DC - Decrement count, Compare jump"

## Question 5(B) [4 marks]

Write An Assembly Language Program To Generate The Time Delay Of 30ms Using Timer 0. Assume Crystal Frequency Is 12 MHz

```
ORG 0000H
MAIN:
   CALL DELAY_30MS ; Call 30ms delay
   SJMP MAIN
                     ; Repeat
DELAY 30MS:
   MOV TMOD, #01H ; Timer 0, Mode 1 (16-bit)
   MOV TH0, #8AH
MOV TL0, #23H
                     ; Load high byte for 30ms
                     ; Load low byte
   SETB TRO
                     ; Start Timer 0
WAIT:
   JNB TF0, WAIT ; Wait for timer overflow
   CLR TR0
                     ; Stop timer
   CLR TF0
                     ; Clear timer flag
```

```
RET
END
```

### Calculation for 30ms delay:

```
Crystal Frequency = 12 MHz Machine Cycle = 12/12 MHz = 1 \mus For 30ms = 30,000 \mus = 30,000 machine cycles Timer Count = 65536 - 30000 = 35536 = 8A23H TH0 = 8AH, TL0 = 23H
```

## **Timer Configuration:**

- **TMOD**: Timer mode register configuration
- TH0/TL0: Timer 0 high/low byte registers
- TRO: Timer 0 run control bit
- **TF0**: Timer 0 overflow flag

Mnemonic: "CLSW - Calculate, Load, Start, Wait"

## Question 5(C) [7 marks]

Draw The Interfacing Diagram Of LCD With 8051. Explain Pins Of LCD Which Are Necessary For Interfacing.

#### Answer:

#### **LCD Pin Functions:**

- RS (Pin 4): Register Select 0=Command, 1=Data
- RW (Pin 5): Read/Write 0=Write, 1=Read

- EN (Pin 6): Enable High to low pulse for data transfer
- D4-D7 (Pins 11-14): 4-bit data lines for commands/data

### **Interface Requirements:**

- Power Supply: VCC=+5V, VSS=GND, VEE=Contrast control
- Control Lines: 3 pins (RS, RW, EN) for LCD control
- Data Lines: 4 pins (D4-D7) for 4-bit mode operation

### **Basic LCD Commands:**

- 0x38: Function set (8-bit, 2 lines)
- **0x0E**: Display ON, cursor ON
- 0x01: Clear display
- 0x80: Set cursor to first line

Mnemonic: "REED - RS selects, RW reads, EN enables, Data transfers"

## Question 5(A) OR [3 marks]

Write A Program To Perform OR Operation On Data Stored In 65h Memory Location With Data Stored In 75h Memory Location. Store The Result In R6 Register.

#### Answer:

```
ORG 0000H

MOV 65H, #0F0H ; Store test data at 65H

MOV 75H, #0AAH ; Store test data at 75H

MOV A, 65H ; Load data from 65H to accumulator

ORL A, 75H ; OR with data at 75H

MOV R6, A ; Store result in R6 register

END
```

### **Operation Details:**

- Load: First operand from memory location 65H
- OR: Perform logical OR with second operand at 75H
- Store: Result in R6 register

### **Example Calculation:**

```
Data at 65H: F0H = 11110000B

Data at 75H: AAH = 10101010B

OR Result: FAH = 11111010B
```

Mnemonic: "LOS - Load, OR, Store result"

## Question 5(B) OR [4 marks]

Write An Assembly Language Program To Generate A Square Wave Of 2khz On P1.3. Crystal Frequency Is 11.0592 Mhz.

#### Answer:

```
ORG 0000H
MAIN:
   SETB P1.3
                     ; Set P1.3 high
   CALL DELAY_250US ; Delay for half period
   CLR P1.3
                      ; Set P1.3 low
   CALL DELAY_250US ; Delay for half period
   SJMP MAIN
                     ; Repeat continuously
DELAY 250US:
   MOV TMOD, #01H
                     ; Timer 0, Mode 1
   MOV THO, #0FEH
                     ; Load high byte
   MOV TLO, #0CBH
                     ; Load low byte
   SETB TRO
                     ; Start Timer 0
WATT:
   JNB TF0, WAIT ; Wait for overflow
   CLR TR0
                      ; Stop timer
   CLR TF0
                     ; Clear flag
   RET
END
```

#### **Calculation for 2KHz Square Wave:**

```
Frequency = 2\text{KHz}, Period = 500\mu\text{s}

Half Period = 250\mu\text{s}

Crystal = 11.0592 MHz

Machine Cycle = 11.0592/12 = 0.921 MHz = 1.085\mu\text{s}

Timer Count = 250\mu\text{s} / 1.085\mu\text{s} = 230 cycles

Timer Value = 65536 - 230 = 65306 = \text{FECBH}

THO = FEH, TLO = CBH
```

### **Square Wave Generation:**

• **High Period**: Set pin high, wait 250µs

Low Period: Set pin low, wait 250μs

• **Frequency**: 1/(250μs + 250μs) = 2KHz

Mnemonic: "SCDW - Set high, Clear low, Delay, Wait"

## Question 5(C) OR [7 marks]

Draw & Explain The Interfacing Of 7-Segment Display With 8051.

#### Answer:

```
8051 to 7-Segment Display Interfacing
8051 Port 1
                        7-Segment Display
-----
                         _____
P1.0 ----[R]----> a (Pin 7)
P1.1 ----[R]----> b (Pin 6) aaaa P1.2 ----[R]----> c (Pin 4) f b
P1.3 ----[R]----> d (Pin 2)
                                 f b
P1.4 ----[R]----> e (Pin 1) gggg
P1.5 ----[R]----> f (Pin 9) e c
P1.6 ----[R]----> g (Pin 10) e c
P1.7 ----[R]---> dp (Pin 5) dddd dp
[R] = Current limiting resistor (330\Omega)
For Common Cathode:
Common pin (Pin 3,8) ---> GND
For Common Anode:
Common pin (Pin 3,8) ---> +5V
```

## **Display Configuration:**

Character	Common Cathode Code	Common Anode Code
0	3FH	СОН
1	06H	F9H
2	5BH	A4H
3	4FH	ВОН
4	66H	99H
5	6DH	92H
6	7DH	82H
7	07H	F8H
8	7FH	80H
9	6FH	90H

## **Sample Program:**

```
ORG 0000H

MOV DPTR, #DIGIT_TABLE; Point to lookup table

MOV A, #05H; Display digit 5

MOVC A, @A+DPTR; Get 7-segment code

MOV P1, A; Send to display

SJMP $; Stay here

DIGIT_TABLE:

DB 3FH, 06H, 5BH, 4FH, 66H; 0,1,2,3,4

DB 6DH, 7DH, 07H, 7FH, 6FH; 5,6,7,8,9

ENDS
```

## **Interface Components:**

- Current Limiting Resistors: 330Ω to limit LED current
- Common Connection: Cathode to GND or Anode to +5V
- Data Lines: 8 bits for segments a-g and decimal point

## **Multiplexing for Multiple Digits:**

- **Digit Select**: Additional pins for digit selection
- Time Division: Rapidly switch between digits
- Persistence of Vision: Creates illusion of simultaneous display

Mnemonic: "CRAM - Common connection, Resistors limit, Address segments, Multiplex digits"