

5G RAN

SAI-based Service Experience Improvement Feature Parameter Description

Issue	Draft B
Date	2026-01-30



Copyright © Huawei Technologies Co., Ltd. 2026. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

Trademarks and Permissions



HUAWEI and other Huawei trademarks are trademarks of Huawei Technologies Co., Ltd.

All other trademarks and trade names mentioned in this document are the property of their respective holders.

Notice

The purchased products, services and features are stipulated by the contract made between Huawei and the customer. All or part of the products, services and features described in this document may not be within the purchase scope or the usage scope. Unless otherwise specified in the contract, all statements, information, and recommendations in this document are provided "AS IS" without warranties, guarantees or representations of any kind, either express or implied.

The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute a warranty of any kind, express or implied.

Huawei Technologies Co., Ltd.

Address: Huawei Industrial Base
Bantian, Longgang
Shenzhen 518129
People's Republic of China

Website: <https://www.huawei.com>

Email: support@huawei.com

Security Declaration

Vulnerability

Huawei's regulations on product vulnerability management are subject to the *Vul. Response Process*. For details about this process, visit the following web page:

<https://www.huawei.com/en/psirt/vul-response-process>

For vulnerability information, enterprise customers can visit the following web page:

<https://securitybulletin.huawei.com/enterprise/en/security-advisory>

Contents

1 Change History.....1

2 About This Document.....3

2.1 General Statements.....3

2.2 Features in This Document.....3

2.3 Differences.....4

3 Overview.....5

4 SAI-based Service Experience Improvement.....6

4.1 Principles.....6

4.2 Network Analysis.....9

4.2.1 Benefits.....9

4.2.2 Impacts.....10

4.3 Requirements.....10

4.3.1 Licenses.....10

4.3.2 Functions.....10

4.3.2.1 Prerequisite Functions.....10

4.3.2.2 Mutually Exclusive Functions.....11

4.3.2.3 Function Impacts.....12

4.3.3 Hardware.....13

4.3.4 Networking.....14

4.3.5 Cells.....14

4.3.6 Others.....14

4.4 Operation and Maintenance.....14

4.4.1 Data Configuration.....14

4.4.1.1 Data Preparation.....14

4.4.1.2 Using MML Commands.....15

4.4.1.3 Using the MAE-Deployment.....17

4.4.2 Activation Verification.....17

4.4.3 Network Monitoring.....18

5 Parameters.....19

6 Counters.....21

7 Glossary.....22

8 Reference Documents.....23

1 Change History

The following describes the specific changes in different issues.

5G RAN10.1 Draft B (2026-01-30)

This issue includes the following changes.

- Technical changes

Change Description	Parameter Change	RAT	Base Station Model
Optimized the equivalent QCI mapping mechanism for SAI-based service experience improvement. For details, see: • 4.1 Principles • 4.3.2.3 Function Impacts • 4.4.1.1 Data Preparation • 4.4.1.2 Using MML Commands	Added the gNodeBAlgo.QciAlgoOptSw parameter.	Low-frequency TDD	• 3900 and 5900 series base stations (macro base stations) • DBS3900 LampSite and DBS5900 LampSite

- Editorial changes

Added compatibility of the UMPThb series boards. For details, see [4.3.3 Hardware](#).

Revised the description of core network version requirements. For details, see [4.3.6 Others](#).

Added descriptions of the impact relationship between SAI-based service experience improvement and differentiated QoS management for RedCap UEs. For details, see [4.3.2.3 Function Impacts](#).

Revised other descriptions in this document, which do not involve changes in meanings and therefore are not detailed.

5G RAN10.1 Draft A (2025-12-31)

This issue does not introduce any changes to 5G RAN9.1 03 (2025-08-30).

2 About This Document

2.1 General Statements

Purpose

Feature Parameter Description documents are intended to acquaint readers with:

- The technical principles of features and their related parameters
- The scenarios where these features are used, the benefits they provide, and the impact they have on networks and functions
- Requirements that must be met before feature activation
- Parameter configuration required for feature activation, verification of feature activation, and monitoring of feature performance

NOTE

This document only provides guidance for feature activation. Feature deployment and feature gains depend on the specifics of the network scenario where the feature is deployed. To achieve optimal gains, contact Huawei professional service engineers.

Functions mentioned in this document work properly only when enabled in the specified applicable scenarios (such as RAT and networking). If a function not mentioned in this document is enabled or a function is enabled in a scenario not specified as applicable, exceptions or other impacts may occur.

Software Interfaces

Any parameters, alarms, counters, or managed objects (MOs) described in Feature Parameter Description documents apply only to the corresponding software release. For future software releases, refer to the corresponding updated product documentation.

2.2 Features in This Document

This document describes the following feature.

Feature ID	Feature Name	Chapter/Section
N/A	SAI-based Service Experience Improvement	4 SAI-based Service Experience Improvement

2.3 Differences

Differences Between NSA and SA

Function Name	Difference	Chapter/Section
SAI-based service experience improvement	None	4 SAI-based Service Experience Improvement

Differences Between High Frequency Bands and Low Frequency Bands

This document refers to frequency bands belonging to FR1 (410–7125 MHz) as low frequency bands, and those belonging to FR2 (24250–71000 MHz) as high frequency bands. For details about FR1 and FR2, see section 5.1 "General" in 3GPP TS 38.104 V17.8.0.

Function Name	Difference	Chapter/Section
SAI-based service experience improvement	Supported only in low frequency bands	4 SAI-based Service Experience Improvement

3 Overview

The rapid evolution of 5G networks has triggered a surge in services like short videos, web browsing, and gaming. Each service presents distinct demands on user experience. To meet these varied demands, service awareness indicator (SAI)-based service experience improvement is introduced. When Huawei's core network and base station are co-deployed, this function allows the core network to intelligently identify services through service awareness (SA) and assign an SAI to each service type. The SAI is then included in a proprietary GPRS Tunneling Protocol-User Plane (GTP-U) extension header and sent to the base station, which then uses it to determine the corresponding service type and improve the service experience accordingly.

4 SAI-based Service Experience Improvement

4.1 Principles

SAI-based service experience improvement can be enabled by setting the **gNBSchAdaptToTfcMdl.SchAdaptToTfcModelPol** parameter to **SAI**. This function includes the following three parts:

1. Service identification on the Huawei core network: After identifying a service type, the core network includes an SAI in a proprietary GTP-U extension header and sends it to the Huawei base station (gNodeB).
2. Equivalent QCI mapping: After receiving the SAI, the gNodeB maps the corresponding service type to an equivalent QoS class identifier (QCI), allowing for the differentiation of services that require specific assurance methods.
3. Service assurance: Services with an equivalent QCI are provided with differentiated assurance.

Service Identification on the Huawei Core Network

The core network intelligently identifies services through SA. Once a service type is identified, it is assigned an SAI, which is then included in a proprietary GTP-U extension header and sent to the gNodeB. If the core network fails to interact with the gNodeB due to excessive proprietary GTP-U extension header transmissions, it will not send the SAI. The maximum number of such transmissions is specified by the **gNBSchAdaptToTfcMdl.PvtGtpuExtHdrMaxTransNum** parameter. The gNodeB then maps the corresponding service type identified by the core network to a service type specified by the **gNBServExpGroup.ServiceType** parameter based on the mapping rules listed in [Table 4-1](#).

Table 4-1 Mapping between SAI values and service types


SAI Value (Configured on the Core Network)	Protocol Type (Configured on the Core Network)	gNodeB-Identified Service Type (Specified by gNBServExpGroup.ServiceType)
3	IM	INSTANT_MESSAGE
4	Web_Browsing	WEB_BROWSING
8	Game	MOBILE_GAMING
31	EMBB_SHORT_VIDEO	EMBB_SHORT_VIDEO
32	EMBB_CLOUD_GAMING	EMBB_CLOUD_GAMING
34	EMBB_LONG_VIDEO	EMBB_LONG_VIDEO
36	EMBB_LIVE_VIDEO	EMBB_LIVE_VIDEO
37	EMBB_CLOUD_PHONE	EMBB_CLOUD_PHONE

Equivalent QCI Mapping

During the specified validity period for scheduling adaptation to traffic models, the gNodeB identifies services that require differentiated assurance methods based on the equivalent QCI specified for each service type mapped to the SAI of IP flows in NSA or SA networking. The validity period is specified by the **gNBSchAdaptToTfcMdl.SchAdaptToTfcMdlValidPrd** parameter, and the equivalent QCI is specified by the **gNBServExpGroup.EquivalentQci** parameter.

- In SA networking (with **gNBServExpGroup.NrUserNetworkingOption** set to **SA**), the gNodeB uses the **gNBServExpGroup.Nr5qi** parameter to map the service type (specified by the **gNBServExpGroup.ServiceType** parameter) identified by the core network through SA to a **gNBServExpGroup.EquivalentQci** parameter value, as shown in [Figure 4-1](#).
- In NSA networking (with **gNBServExpGroup.NrUserNetworkingOption** set to **NSA**), the gNodeB uses the **gNBServExpGroup.Qci** parameter to map the service type (specified by the **gNBServExpGroup.ServiceType** parameter) identified by the core network through SA to a **gNBServExpGroup.EquivalentQci** parameter value.

Figure 4-1 Example of equivalent QCI mapping in SA networking

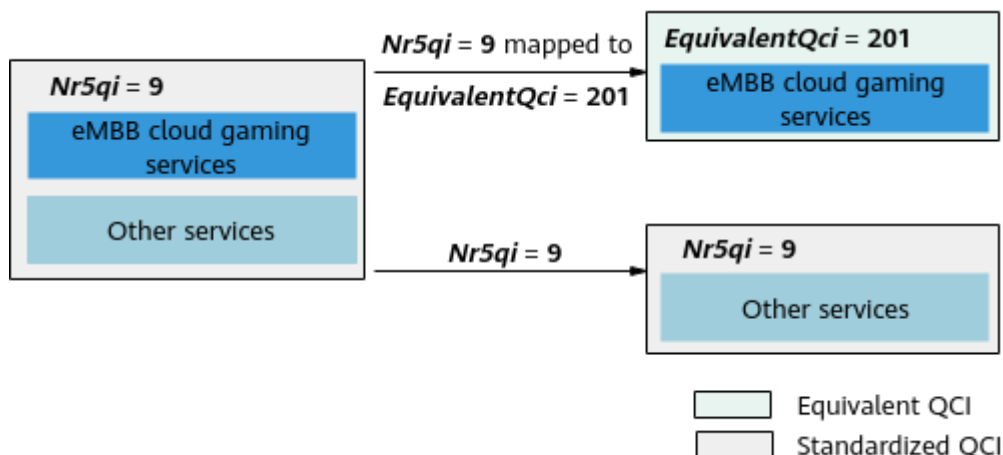

If a bearer is configured with a QCI for differentiated QoS management for RedCap UEs (specified by **gNBOP5qiConfig.RedCapQci**) and requires service assurance using the equivalent QCI for SAI-based service experience improvement (specified by **gNBServExpGroup.EquivalentQci**), QCI mapping policy optimization must be enabled by selecting the **QCI_MAP_POLICY_OPT_SW** option of the **gNodeBAlgo.QciAlgoOptSw** parameter.

- If **gNBOP5qiConfig.RedCapQci** is set to **65535** and **gNBOP5qiConfig.Qci** is set to a value other than **65535**, the equivalent QCI for SAI-based service experience improvement can be used for bearers of RedCap UEs.
- If **gNBOP5qiConfig.RedCapQci** is set to a value other than **65535** and **gNBOP5qiConfig.Qci** is set to **65535**, the equivalent QCI for SAI-based service experience improvement can be used for bearers of non-RedCap UEs.

Service Assurance

The differentiated assurance methods for the services (specified by the **gNBServExpGroup.ServiceType** parameter) that are mapped to an equivalent QCI are specified by the **gNBQciBearer.ServiceType** parameter.

- If the **gNBQciBearer.ServiceType** parameter is set to **NORMAL**, service-differentiated low latency can be enabled to provide basic service assurance. For details about service-differentiated low latency, see *Service-differentiated Experience Guarantee*.

For example, if eMBB cloud gaming services are mapped to an equivalent QCI and the **gNBQciBearer.ServiceType** parameter is set to **NORMAL**, service-differentiated low latency can be enabled to provide assurance for eMBB cloud gaming services.

- If the **gNBQciBearer.ServiceType** parameter is set to a value listed in [Table 4-2](#), additional service assurance methods can be applied.

Table 4-2 Additional service assurance methods

Services Mapped to an Equivalent QCI (Value of gNBServiceType)	Configurable Service Type Requiring Assurance (Value of gNBQciBearer.ServiceType)	Allowable Service Assurance Method
EMBB_CLOUD_GAMING	EMBB_CLOUD_GAMING	Basic service assurance ^a + Cloud X service experience improvement ^b
EMBB_LIVE_VIDEO	EMBB_LIVE_VIDEO	Basic service assurance + live streaming service improvement ^c
a: Basic service assurance is provided by enabling service-differentiated low latency, which is detailed in <i>Service-differentiated Experience Guarantee</i>. b: For details about Cloud X service experience improvement, see <i>Ultimate Cloud X Experience</i>. c: For details about live streaming service improvement, see <i>Ultimate Video Experience</i>.		

4.2 Network Analysis

4.2.1 Benefits

After SAI-based service experience improvement takes effect, the core network identifies service types and maps them to equivalent QCIs, enabling the existing methods for differentiated service assurance to improve the experiences of these services.

The benefits of this function are the same as those of the service assurance method in use.

- When basic service assurance is used, the benefits are the same as those provided by service-differentiated low latency.
- When Cloud X service experience improvement or live streaming service improvement is used for service assurance, the benefits are the same as those of the respective function.

The user-perceived rates of services mapped to equivalent QCIs will increase.

- In NSA networking, the following indicators are involved:
 - Downlink user-perceived rate = $(N.ThpVol.DL.QCI - N.ThpVol.DL.LastSlot.QCI) / N.ThpTime.DL.RmvLastSlot.QCI$
 - Uplink user-perceived rate = $(N.ThpVolForRate.UL.QCI - N.ThpVolForRate.UL.SmallPkt.QCI) / N.ThpTimeForRate.UL.RmvSmallPkt.QCI$
- In SA networking, equivalent QCIs need to be configured as flexible performance counter objects. In this case, the user-perceived rates of services mapping to equivalent QCIs are indicated by those of flexible performance

counter objects. A flexible performance counter object is configured using the **gNBFlexCounterObjCfg** MO with **gNBFlexCounterObjCfg.QciValidPolicy** set to **SA** or **NSA_SA**, **gNBFlexCounterObjCfg.FlexCounterObjType** set to **NRDUCELL_FLEX**, and **gNBFlexCounterObjCfg.Qci** set to an equivalent QCI.

- Downlink user-perceived rate for a flexible performance counter object =
$$\frac{(N.ThpVol.DL.Flex - N.ThpVol.DL.LastSlot.Flex)}{N.ThpTime.DL.RmvLastSlot.Flex}$$
- Uplink user-perceived rate for a flexible performance counter object =
$$\frac{(N.ThpVolForRate.UL.Flex - N.ThpVolForRate.UL.SmallPkt.Flex)}{N.ThpTimeForRate.UL.RmvSmallPkt.Flex}$$

4.2.2 Impacts

The impacts between this function and other functions are described in [4.3.2.3 Function Impacts](#).

On both the core network and base station, enabling SAI-based service experience improvement results in an increase in the GTP-U packet length. In this case, you need to assess whether the planned maximum transmission unit (MTU) needs to be adjusted to prevent packet fragmentation issues over the NG or S1 interface. For more information on the MTU, see *IPv4 Transmission*.

4.3 Requirements

4.3.1 Licenses

This function is not under license control.

4.3.2 Functions

Before activating this function, ensure that its prerequisite functions have been activated and mutually exclusive functions have been deactivated, if there are any. For detailed operations, see the relevant feature documents.

Additionally, understand any potential function impacts before activating this function. To deactivate any impacted functions, follow the operations described in the relevant feature documents.

4.3.2.1 Prerequisite Functions

Function Name	Function Switch	Reference	Description
Service-differentiated low latency	SERV_DIFF_LOW_LATENCY_SW option of the NRDUCellAlgoSwitch.LowLatencySwitch parameter	<i>Service-differentiated Experience Guarantee</i>	Service-differentiated low latency must be enabled when basic service assurance is required.

Function Name	Function Switch	Reference	Description
Cloud X service experience improvement	CLOUD_VR_SERVICE_SWITCH option of the NRCellAlgoSwitch.CloudVrSwitch parameter	<i>Ultimate Cloud X Experience</i>	The CLOUD_VR_SERVICE_SWITCH option must be selected when the gNBQciBearer.ServiceType parameter is set to EMBB_CLOUD_GAMING for eMBB cloud gaming services.

4.3.2.2 Mutually Exclusive Functions

Function Name	Function Switch	Reference	Description
GNBIS Application Type	APPLICATION.A7 set to EXTAPPTYPE for GNBIS	None	If the APPLICATION.A7 parameter is set to EXTAPPTYPE for GNBIS, the gNBSchAdaptToTfcMdl.SchAdaptToTfcModelPol parameter can only be set to DEFAULT .

4.3.2.3 Function Impacts

RAT	Function Name	Function Switch	Reference	Description
Low-frequency TDD	Differentiated QoS management for RedCap UEs	gNBOP5qiConfig.RedCapQci set to a value other than 65535	<i>RedCap</i>	- When the QCI_MAP_POLICY_OPT_SW option of the gNodeBAlgo.QciAlgorithmOptSw parameter is deselected and the corresponding gNBOP5qiConfig MO is configured for a bearer, the equivalent QCI for SAI-based service experience improvement (specified by gNBServExpGroup.EquivalentQci) does not apply to that bearer, and SAI-based service experience improvement does not take effect. - When the QCI_MAP_POLICY_OPT_SW option of the gNodeBAlgo.QciAlgorithmOptSw parameter is selected and a bearer is configured with a QCI for differentiated QoS management for RedCap UEs (specified by gNBOP5qiConfig.RedCapQci): - If gNBOP5qiConfig.RedCapQci is set to 65535,

RAT	Function Name	Function Switch	Reference	Description
				SAI-based service experience improvement does not take effect for non-RedCap UEs. - If gNBOp5qiConfig.RedCapQci is set to a value other than 65535: - With gNBOp5qiConfig.Qci set to 65535, SAI-based service experience improvement does not take effect for RedCap UEs. - With gNBOp5qiConfig.Qci set to a value other than 65535, SAI-based service experience improvement does not take effect for any UE.

4.3.3 Hardware

For details about the compatibility between the hardware described in this section, see the technical specifications and hardware description of the corresponding hardware in *3900 & 5900 Series Base Station Product Documentation*.

Base Station Models

- 3900 and 5900 series base stations (macro base stations). 3900 series base stations must be configured with the BBU3910.

- DBS3900 LampSite and DBS5900 LampSite. DBS3900 LampSite must be configured with the BBU3910.

Boards

Main control boards: Only the UMPTg, UMPTga, UMPTha, and UMPThb series boards support this function.

Baseband processing units: All NR-capable boards support this function. For details, see the BBU technical specifications in *3900 & 5900 Series Base Station Product Documentation*.

RF Modules

All NR-capable RF modules support this function. For details, see the technical specifications of RF modules in *3900 & 5900 Series Base Station Product Documentation*.

4.3.4 Networking

None

4.3.5 Cells

None

4.3.6 Others

The core network must be provided by Huawei, with an earliest version of UDG 20.15.0.

4.4 Operation and Maintenance

4.4.1 Data Configuration

4.4.1.1 Data Preparation

Table 4-3 describes the parameters used for function activation.

Table 4-3 Parameters used for activation

Parameter Name	Parameter ID	Option	Setting Notes
Schedule Adapt to Traffic Model Policy	gNBSchAdaptToTfcMdl.SchAdaptToTfcModelPol	None	Set this parameter to SAI if SAI-based service experience improvement is required.

Parameter Name	Parameter ID	Option	Setting Notes
Sch Adapt to Tfc Model Validity Period	gNBSchAdaptToTfcMdl.SchAdaptToTfcMdlValidityPrd	None	Retain the default value.
Private GTP-U Extension Header Max Trans Num	gNBSchAdaptToTfcMdl.PvtGtpuExtHdrMaxTransNum	None	Retain the default value.
Qci Algorithm Optimization Switch	gNodeBAlgo.QciAlgoOptSw	QCI_MAP_POLICY_OPT_SW	Select this option if a bearer is configured with a QCI specified by either gNBOp5qiConfig.Qci or gNBOp5qiConfig.RedCapQci set to 65535 and requires service assurance using the equivalent QCI for SAI-based service experience improvement (specified by gNBServExpGroup.EquivalentQci).
Service Type Group ID	gNBServExpGroup.ServiceTypeGroupId	None	Set this parameter based on the network plan.
NR User Networking Option	gNBServExpGroup.NrUserNetworkingOption	None	Set this parameter based on the network plan.
QoS Class Identifier	gNBServExpGroup.Qci	None	Set this parameter based on the network plan.
NR 5G QoS Indicator	gNBServExpGroup.Nr5qi	None	Set this parameter based on the network plan.
Service Type	gNBServExpGroup.ServiceType	None	Set this parameter based on the network plan.
Equivalent QoS Class Identifier	gNBServExpGroup.EquivalentQci	None	Set this parameter based on the network plan.
Service Type	gNBQciBearer.ServiceType	None	Set this parameter based on the network plan.

4.4.1.2 Using MML Commands

Before using MML commands, refer to [4.3 Requirements](#) and complete the parameter configurations for related functions based on the impact, dependency,

and mutually exclusive relationships between the functions, as well as the actual network scenario. In addition, ensure that the license, hardware, networking, and cell requirements are met.

Before using MML commands, confirm the related parameter modification precautions by referring to the fields including "Service Interrupted After Modification" and "Caution" for the corresponding parameters in the parameter reference.

Activation Command Examples

1. To enable SAI-based service experience improvement:
//Enabling SAI-based service experience improvement
MOD GNBSCHADAPTOTFCMDL: SchAdaptToTfcModelPol=SAI, SchAdaptToTfcMdlValidPrd=5, PvtGtpuExtHdrMaxTransNum=100;
//(Optional) Enabling QCI mapping policy optimization if a bearer is configured with a QCI specified by either **gNBOP5qiConfig.Qci** or **gNBOP5qiConfig.RedCapQci** set to **65535** and requires service assurance using the equivalent QCI for SAI-based service experience improvement (specified by **gNBServExpGroup.EquivalentQci**).
MOD GNODEBALGO: QciAlgoOptSw=QCI_MAP_POLICY_OPT_SW-1;
 2. To configure the mapping between a 5QI/QCI and an equivalent QCI (for cloud gaming services as an example):
//SA networking
ADD GNBSERVEXPGROUP: ServiceTypeGroupId=1, NrUserNetworkingOption=SA, Nr5qi=9, ServiceType=EMBB_CLOUD_GAMING, EquivalentQci=201;
//NSA networking
ADD GNBSERVEXPGROUP: ServiceTypeGroupId=1, NrUserNetworkingOption=NSA, Qci=9, ServiceType=EMBB_CLOUD_GAMING, EquivalentQci=201;
 3. To provide differentiated assurance methods for the services mapped to the equivalent QCI:
 - Setting the parameter specifying the assurance method for services mapped to the equivalent QCI to **NORMAL**
ADD GNBQCIBEARER: Qci=201, ServiceType=NORMAL;
 - Setting the parameter specifying the assurance method for services mapped the equivalent QCI to another value (for example, **EMBB_CLOUD_GAMING**)
ADD GNBQCIBEARER: Qci=201, ServiceType=EMBB_CLOUD_GAMING;
 4. To enable basic service assurance: Configurations for basic service assurance are the same as those for service-differentiated low latency. The following example only displays how to turn on the switch for service-differentiated low latency. For details about how to enable sub-functions of service-differentiated low latency, including QCI-based uplink preallocation and QCI-specific scheduling based on the target IBLER, see *Service-differentiated Experience Guarantee*.
//Adding a gNodeB DU scheduling parameter group
ADD GNBDUSCHPARAMGROUP: ScheduleParamGroupId=9;
//Mapping the gNodeB DU scheduling parameter group to a bearer of the equivalent QCI
ADD NRDUCELLQCIBEARER: NrDuCellId=1, Qci=201, ScheduleParamGroupId=9;
//Turning on the switch for service-differentiated low latency
MOD NRDUCELLALGOSWITCH: NrDuCellId=1, LowLatencySwitch=SERV_DIFF_LOW_LATENCY_SW-1;
-  **NOTE**
- The configurations of other QCI-specific parameters for QCI 201 are the same as those for QCI 9, involving MOs **gNBDUSchParamGroup**, **gNBOperatorQciParam**, **gNBQciBearer**, **NRCelOpQciBearer**, **NRCelQciBearer**, and **NRDUCellQciBearer**.
5. To configure additional service assurance methods for some services: The following uses Cloud X service experience improvement for cloud gaming

services as an example. For details about other methods, such as uplink ROHC-TCP compression and DAPS handover enhancement for Cloud X services, see *Ultimate Cloud X Experience*.

```
//Enabling Cloud X service experience improvement  
MOD NRCELLALGOSWITCH: NrCellId=1, CloudVrSwitch=CLOUD_VR_SERVICE_SWITCH-1;
```

Deactivation Command Examples

The following provides only deactivation command examples. You can determine whether to restore the settings of other parameters based on actual network conditions.

```
//Disabling Cloud X service experience improvement  
MOD NRCELLALGOSWITCH: NrCellId=1, CloudVrSwitch=CLOUD_VR_SERVICE_SWITCH-0;  
//Turning off the switch for service-differentiated low latency  
MOD NRDUCELLALGOSWITCH: NrDuCellId=1, LowLatencySwitch=SERV_DIFF_LOW_LATENCY_SW-0;  
//Disabling QCI mapping policy optimization  
MOD GNODEBALGO: QciAlgoOptSw=QCI_MAP_POLICY_OPT_SW-0;  
//Disabling SAI-based service experience improvement  
MOD GNBSCHADAPTOTFCMDL: SchAdaptToTfcModelPol=DEFAULT;
```

4.4.1.3 Using the MAE-Deployment

For detailed operations, see Feature Configuration Using the MAE-Deployment.

NOTE

Due to differences between OSS versions, the GUIs in the interactive video may differ from the actual OSS GUIs and are thus for reference only.

4.4.2 Activation Verification

Using Counters

If the average or maximum number of active UEs for an equivalent QCI is not 0, this function has taken effect. This involves the following counters:

- NSA networking: **N.User.RRConn.Active.QCI.Avg** and **N.User.RRConn.Active.QCI.Max**
- SA networking: A flexible performance counter object needs to be configured as described in [4.2.1 Benefits](#). In this case, the average and maximum numbers of active UEs for an equivalent QCI are indicated by **N.User.RRConn.Active.Flex.Avg** and **N.User.RRConn.Active.Flex.Max**, respectively.

Using Signaling Tracing

If the Huawei proprietary IE *serviceSAI* sent from the core network to the gNodeB carries the SAI value of the corresponding services, the core network has successfully identified the service type and sent the SAI to the gNodeB.

Using MML Commands

You can run the **DSP NRCELLUENUMBER** command to determine whether SAI-based identification has taken effect. If the values of **Cell Cloud Gaming UE Number** are not 0 in the command output, the core network has successfully identified eMBB cloud gaming services.

4.4.3 Network Monitoring

After this function is enabled, network monitoring is performed in the same way as the service assurance method in use.

- When basic service assurance is used, network monitoring is performed in the same way as service-differentiated low latency.
- When Cloud X service experience improvement or live streaming service improvement is used for service assurance, network monitoring is performed in the same way as the respective function.

In NSA networking, the user-perceived rates of services mapped to equivalent QCI (as mentioned in [4.2.1 Benefits](#)) can also be used to monitor fluctuations in user-perceived rates on the network after this function is enabled.

5 Parameters

The following hyperlinked EXCEL files of parameter reference match the software version with which this document is released.

- Node Parameter Reference: contains device and transport parameters.
- Node Used Reserved Parameter List: contains the reserved parameters that are in use and those that have been disused.
- gNodeBFunction Parameter Reference: contains all parameters related to radio access functions, including air interface management, access control, mobility control, and radio resource management.
- 3900 & 5900 Series Base Station gNodeBFunction Used Reserved Parameter List: contains the reserved parameters that are in use and the reserved parameters that fall into disuse in the current R version.

NOTE

You can find the EXCEL files of parameter reference and used reserved parameter list for the software version used on the live network from the "Man-Machine Interface Reference" node in the *3900 & 5900 Series Base Station Product Documentation* delivered with that version.

FAQ 1: How do I find the parameters related to a certain feature from parameter reference?

- Step 1** Open the EXCEL file of parameter reference.
- Step 2** On the **Parameter List** sheet, filter the **Feature ID** column. Click **Text Filters** and choose **Contains**. Enter the feature ID, for example, FBFD-010011.
- Step 3** Click **OK**. All parameters related to the feature are displayed.

----End

FAQ 2: How do I find the information about a certain reserved parameter from the used reserved parameter list?

- Step 1** Open the EXCEL file of the used reserved parameter list.

Step 2 On the **Used Reserved Parameter List** sheet, use the **MO**, **Parameter ID**, and **BIT** columns to locate the reserved parameter. View its information, including the meaning, values, and impacts.

----End

6 Counters

The following hyperlinked EXCEL files of performance counter reference match the software version with which this document is released.

- Node Performance Counter Summary: contains device and transport counters.
- gNodeBFunction Performance Counter Summary: contains all counters related to radio access functions, including air interface management, access control, mobility control, and radio resource management.
- gNodeBFunction Used Reserved Counter List: contains the reserved counters that are in use and those that have been disused.

NOTE

You can find the EXCEL files of performance counter reference and used reserved counter list for the software version used on the live network from the "Man-Machine Interface Reference" node in the *3900 & 5900 Series Base Station Product Documentation* delivered with that version.

FAQ: How do I find the counters related to a certain feature from performance counter reference?

- Step 1** Open the EXCEL file of performance counter reference.
- Step 2** On the **Counter Summary(En)** sheet, filter the **Feature ID** column. Click **Text Filters** and choose **Contains**. Enter the feature ID, for example, FBFD-010011.
- Step 3** Click **OK**. All counters related to the feature are displayed.

----End

7 Glossary

For the acronyms, abbreviations, terms, and definitions, see *Glossary*.

8 Reference Documents

- *Service-differentiated Experience Guarantee*
- *Ultimate Cloud X Experience*
- *Ultimate Video Experience*
- *IPv4 Transmission*
- *RedCap*