HEXIS INTERIOR · GUIDE

User guide

Interior design at true dimensions: floor plan, 3D model, furnishing, materials, windows and doors, and bill of quantities in one environment. Tap an image with ▶ to open its video.

`Plan` → `3D` → `Furnishing` → `Materials & light` → `Walkthrough` → `Cost`

Contents

1 Homeowner or Engineer
2 New project · outline
3 Walls, windows, doors
4 Curved & slanted walls
5 Columns & beams
6 From a sketch, PDF or DXF
7 From a scan
8 AI furnishing
9 Kitchen & island
10 Materials, tiles, light
11 Walkthrough & photoreal
12 Cost
13 PDF: drawings & setting out
14 3D file viewer
15 Shortcuts

1 Homeowner or Engineer

The switch at the top right changes which tools you see. Projects and drawings stay the same, and your choice is remembered.

Homeowner

- 3 steps: space, style & materials, result
- Pick and retail materials, same as Engineer
- Cost total per group
- Morning, afternoon, evening in one tap

Engineer

- Scan, X-ray, Calibrate
- Materials per wall area, kitchen, windows and doors
- Detailed budget with your own prices




Homeowner: three steps and the cost total.

2 New project · outline

1. The app opens on an empty project, in **Outline**. To try something ready-made, press **Sample**.
2. Click the corners of the plan in order. Close the outline by clicking the first corner again or pressing `Enter`.
3. Click a dimension (e.g. `9.40`) and type the real length. The opposite side adjusts.
4. Drag a side to move it. **Undo** / **Redo** are always at the top right.

> In step 1 you set the storey height and the thickness of outer and inner walls before going to 3D.

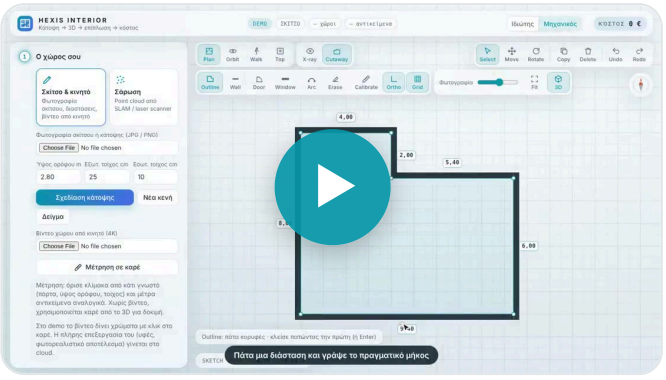


▶ Tap to play the video

An outline in five clicks, then a length correction.

3 Walls, windows, doors


1. **Wall** : click the start and end of an inner wall. It snaps to corners and walls.
2. **Window** : click on a wall. The app asks for the type: casement, tilt-and-turn, sliding or fixed window, or a balcony door that is hinged, sliding, lift-and-slide or minimal.
3. In the same dialog you choose the profile system (ALUMIL, EUROPA, ELVIAL), sashes, glazing, RAL colour, anodised or wood-effect finish, and shading.
4. **Door** : for an interior door it asks whether it has a **perimeter frame** (frame and architraves) or **none**, with a concealed frame flush with the wall.
5. **Swing direction:** with Door active, click next to the door, on the side and at the end you want it to open towards. Clicking on the door's wall cycles through the four swings.

> Click an opening's label (e.g. `BD 140`) to change anything. **Erase** removes it.

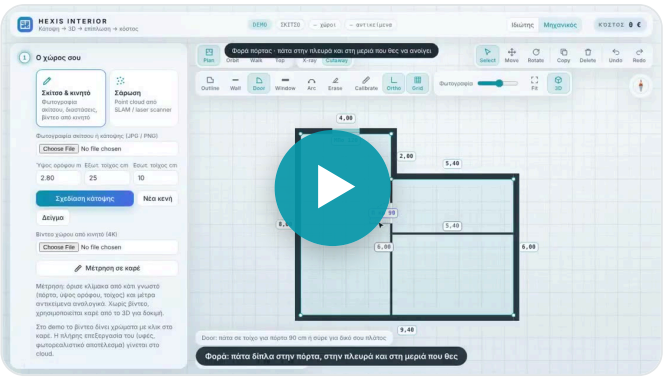


▶ **Tap to play the video**

Inner walls, a sliding balcony door, a frameless door and its swing.

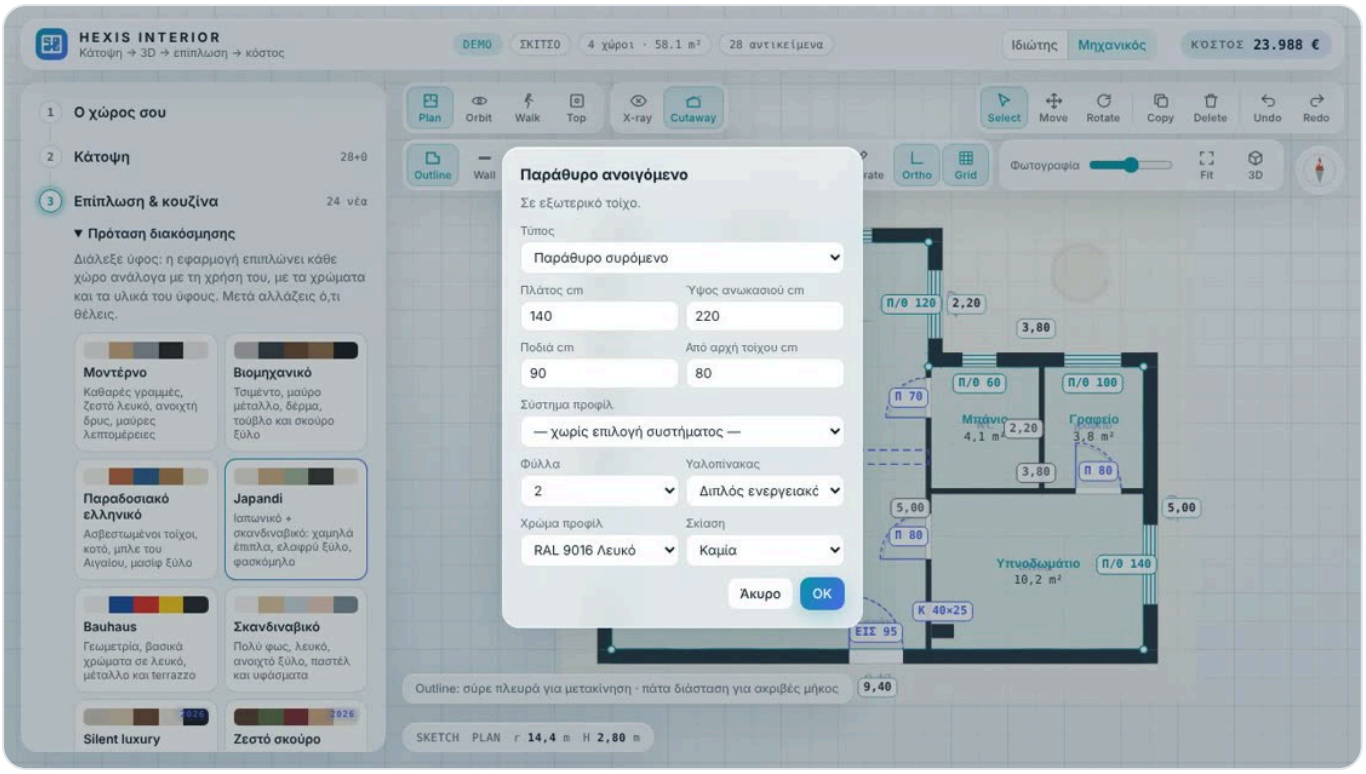

Window: type, system, sashes, glazing, colour, shading.

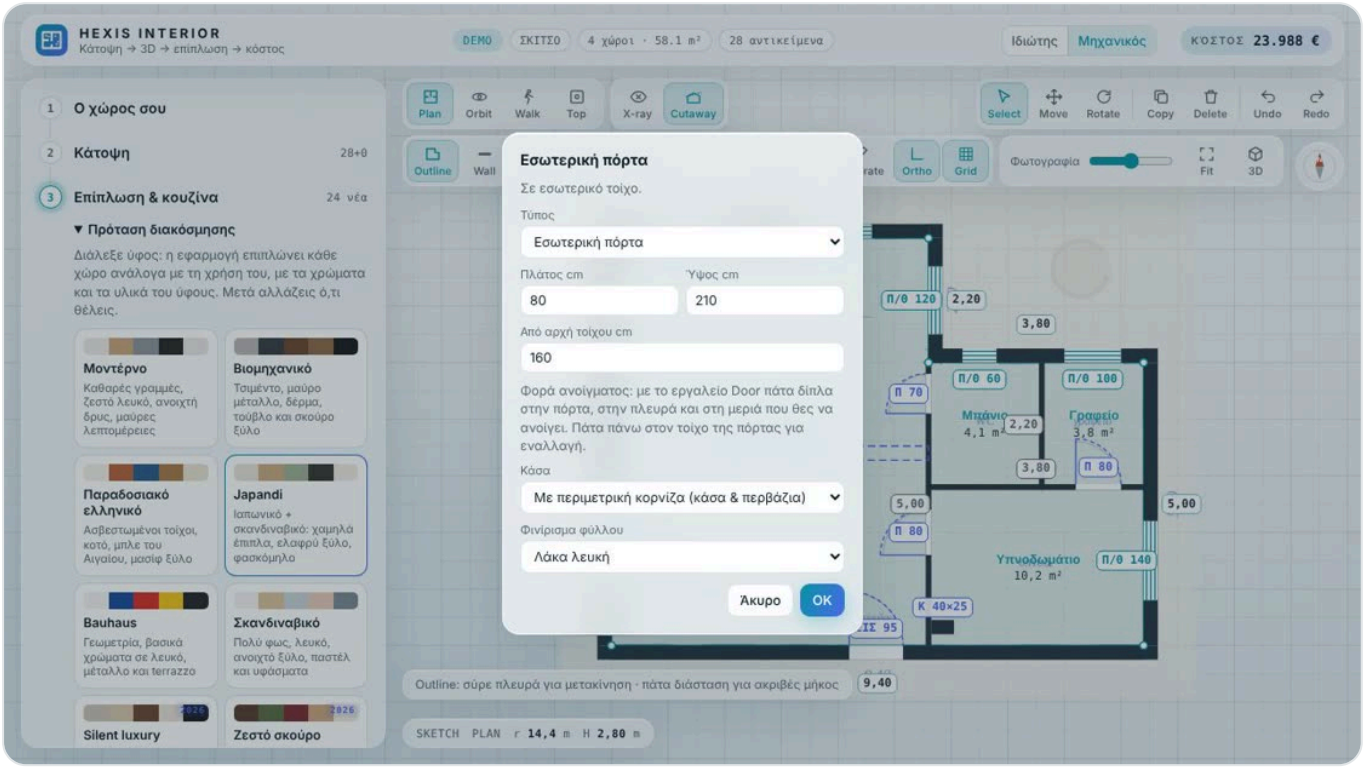


Interior door: with frame or concealed frame, and finish.

4 Curved & slanted walls

1. **Arc** : drag a side of the outline outwards or inwards. Click it to type the exact rise in metres.
2. Turn off **Ortho** for walls at any angle, outer or inner.
3. Press **3D** . Curved walls are built smoothly, with openings that follow the curve.

> An inner wall separates two rooms only if both its ends touch walls. On a curved wall, bring the end inside the wall's thickness.

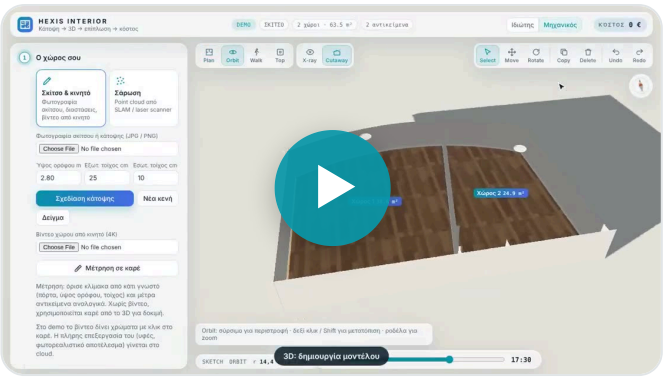


▶ Tap to play the video

A curved side, a slanted inner wall and the 3D.

5 Columns, nibs & beams

1. **Column** : click next to a wall. The nib sticks to the wall; type its width along the wall and how far it projects. Away from a wall you get a free-standing column, rotated if needed.
2. **Beam** : click the start and end of the beam, then its width and drop below the ceiling.
3. In plan the beam is dashed, as in drawings. In 3D it hangs from the ceiling.

> They count everywhere: room areas exclude them, nibs are painted and tiled like walls, and AI furnishing does not put tall wardrobes under a low beam.

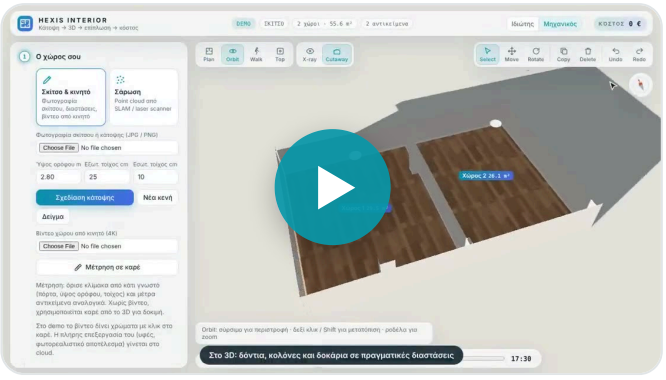


▶ Tap to play the video

A 45×30 nib on an outer wall, a column on an inner one, a beam with a 45 cm drop.

6 From a sketch, PDF or DXF


1. Step 1 → upload a photo or a **PDF** of a plan, sketch or furniture/kitchen drawing. For a multi-page PDF you choose the page.
2. **Calibrate** : click both ends of a known dimension and type its length.
3. **DXF (Engineer):** upload a plan as DXF. Choose units (m, cm, mm, detected automatically) and layers, and the drawing is placed at 1:1, with no Calibrate. Click inside the inner face of the outer walls and the outline is created from the closed polyline, arcs included. If you click the outer face, enter the wall thickness and it is offset inwards. Outline, Wall, Door, Window snap to the DXF's vertices and lines.
4. If the plan already exists, e.g. you bring the cabinet maker's PDF: **Align** → click a point on the drawing, then the same point on the plan, and again for a second point. The drawing moves, rotates and scales onto your plan.
5. Tick “Also show the drawing in 3D, on the floor” and switch to **Top** : place the kitchen and furniture exactly on the drawing with Move / Rotate.
6. Draw on top with Outline, Wall, Door, Window. The `Photo` slider in the bar sets its opacity.
7. **Video per room:** once the 3D exists, step 1 lists every room with a **Video** button. Film each room separately (stand at the door, slow 360º, 20–40 s) and upload it to its room. From the video you pick colours for that room's walls and measure on frames. Four frames go into the PDF automatically as “Existing condition”; **+ Frame for the PDF** adds any frame you like.

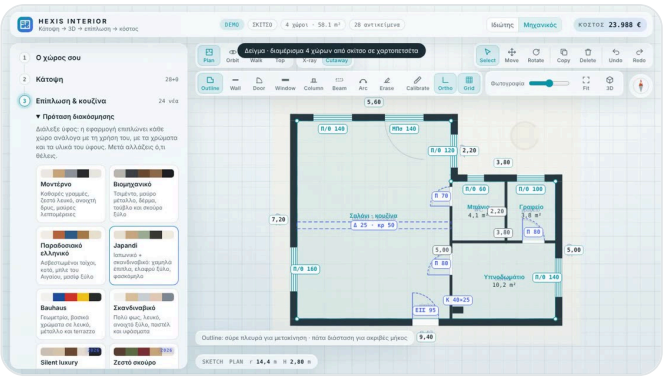

The sample: a plan drawn over a sketch.

7 From a scan (Engineer)

1. Step 1 → **Scan** : load a point cloud in LAS, PLY or XYZ, from SLAM or a laser scanner.
2. Step 2 → **Auto-recognition** : floor, ceiling, walls, doors, windows, rooms, furniture and small objects come out as separate entities.
3. **Scan** / **Classes** / **Model** switch the view; **X-ray** shows through the walls.

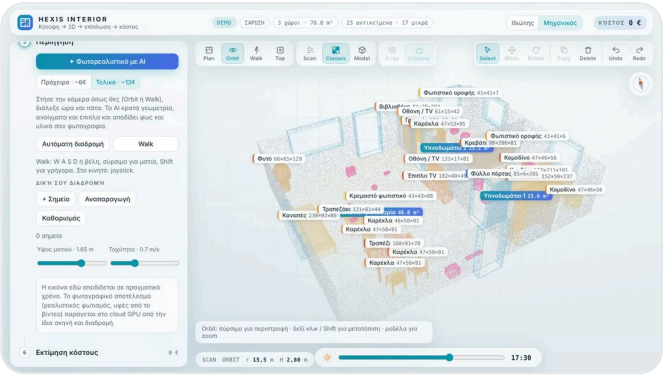


Detection from a scan, with the dimensions of each object.

8 AI furnishing

1. Step 3 → choose a style: Modern, Industrial, Traditional Greek, Japandi, Bauhaus, Scandinavian and the three 2026 styles.
2. Write what you want, e.g. “desk in the small room, table for 6”.
3. Press **✦ AI layout**. The designer sees the real geometry, the openings, columns and beams, names the rooms and places furniture with collision checks.
4. Change anything with **Select**, **Move**, **Rotate**, **Copy**, **Delete**. **Undo** reverts the whole proposal.

> “Quick suggestion (rules)” does the same without AI, using rules. It is instant, but simpler in slanted rooms.

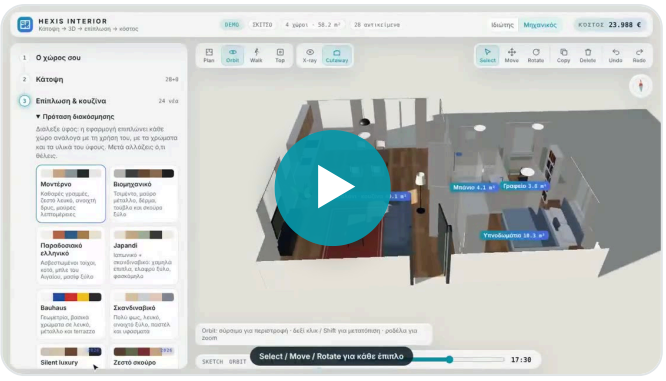


▶ **Tap to play the video**

Style, instructions and a furnishing proposal.

9 Kitchen, L-corner, island & appliances

1. Step 3 → **Kitchen**: length, **L-return cm** and **Return to** left or right for a corner kitchen.
2. Appliances: built-in fridge left or right, oven under the hob or in a tall unit, chimney or built-in hood, dishwasher.
3. Hob and sink position in cm from the left end; leave empty for automatic placement.
4. Fronts (veneer, laminate, lacquer) and worktop (engineered stone, quartz, wood), or your own sample from a photo.
5. **Island placement**: length, depth and what sits on it: worktop, hob, sink or a bar with stools.


> Click the kitchen in 3D and change values in the form; it updates instantly, together with the cost.

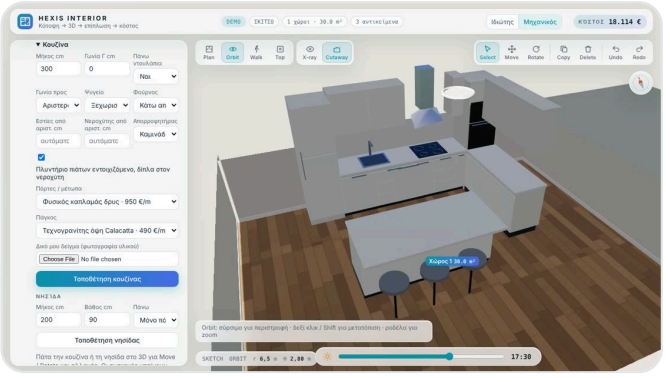

L-return to the right, fridge on the left, oven column, chimney hood, bar island.

10 Materials, tiles, light

1. Press **Pick** at the top right, then a wall or floor. Pick sees through furniture and shows the surface's current material. Choose **Wall**, **Room** or **All**.
2. **Paint** from the palette or your own colour, or **Wall tiles** with a height.
3. **Area on wall**: drag a rectangle (e.g. 2.00 × 1.20 m) to tile only that part.
4. **Retail material:** open “Retail material (your own product)”, enter the company and series/code, tile size, price in €/m² and upload a photo of one tile from the catalogue. For paint, the colour code and price. It joins the list under its name and counts in the cost.
5. Floors per room, time and season for the sun, lighting intensity and colour temperature, image quality **Fast** / **High** / **Ultra**.

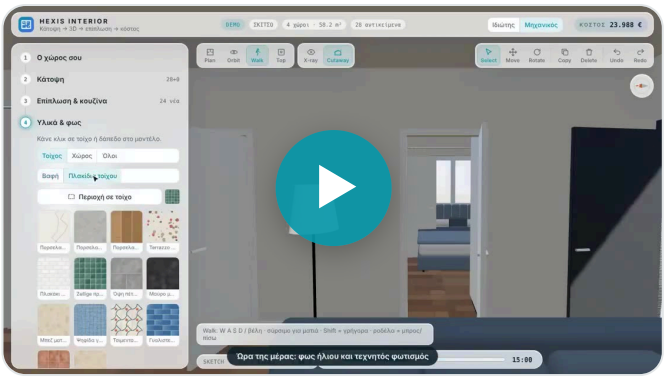


▶ **Tap to play the video**

Wall colour, tiles and light from noon to evening.

11 Walkthrough & photoreal

1. **Walk**: `W` `A` `S` `D` or arrows, drag to look, `Shift` to go faster. On a phone, with the joystick.
2. Step 5 → **Auto path**, or your own with **+ Point**.
3. Set up the camera and press **✦ Photoreal with AI**. **Draft** for tests, **Final** for presentation. Geometry and furniture stay the same; light and materials change.
4. Compare with the 3D and press **Download**.
5. **On site with AR:** choose the kitchen, the selected item, all furniture or the whole house and press **AR · View in the room**. On a phone or tablet it appears at real size in the room through the camera: tap the floor, drag to position, two fingers to rotate. On a computer you see the model in 3D.
6. **● Record video** records what the screen shows until you stop it; **Walkthrough video** records the whole walkthrough automatically.

> The AI may slightly “beautify” a piece of furniture or a texture. Dimensions and cost always come from the 3D.

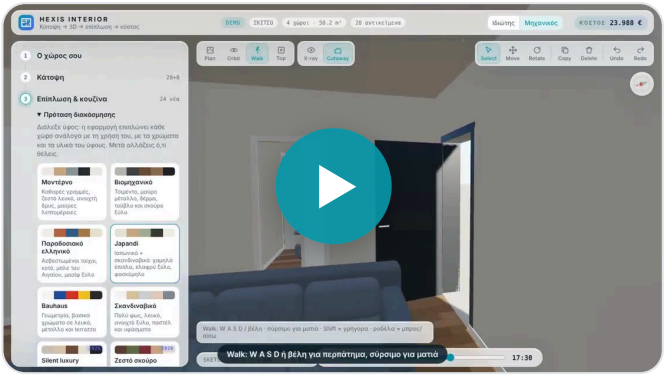

▶ **Tap to play the video**


Walking through the house.

12 Cost

The cost at the top right updates with every change. In step 6 you see the detail: furniture, kitchen, appliances, windows and doors, paint, tiles, floors, with or without 24% VAT.

Prices are indicative. Enter your own unit price, e.g. from a supplier's quote, and the total changes instantly.

> **EL / EN** at the top right switches the language of the app and of the PDF; it opens in the browser's language automatically.

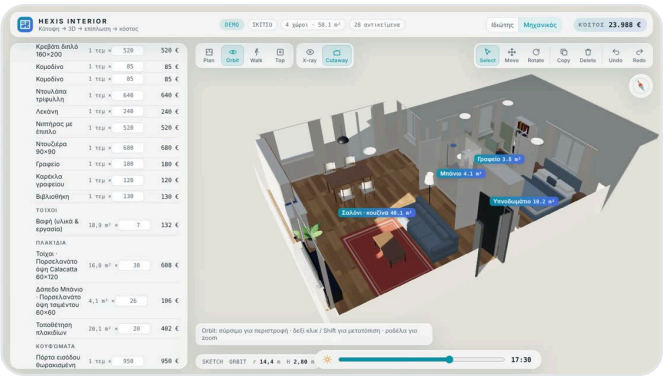


Detailed estimate with editable prices.

13 PDF: drawings, elevations & setting out


Step 6 → enter the project or client, choose which rooms get elevations (wet rooms, all or none) and press **PDF · scaled plans & bill of quantities**. Output is A3:

1. Furniture and openings plan and floor finishes plan, at 1:50 or 1:100.
2. Window and door schedule with codes, system, colour and swing.
3. **Elevations** for bathroom and kitchen (or all rooms): every wall at 1:25 or 1:50, with dimensions, openings, tile height and furniture heights. Then an **axonometric** of the room.
4. **Floor per room:** a top-view photo of the floor without furniture. Where it is tiled, a **tile setting-out plan** with the **starting point S**, the two setting-out lines, distances from the walls, edge cuts, joint, pattern, pieces and waste.
5. On tiled elevations, the wall's S: a vertical starting line (on the window axis or with symmetrical cuts) and a ledger for the first row, so the top row comes out whole.
6. “Existing condition” frames from each room's video, 4 photos per room, materials per room and the full bill of quantities with code, unit, quantity, waste, price and total.

> Setting out is chosen so that cuts on opposite sides are equal and as large as possible. Print at 100%, without “fit to page”, to measure with a scale rule.

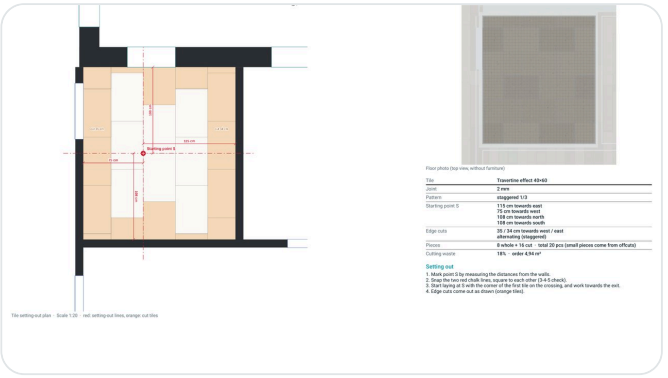

Bathroom floor: starting point S, setting-out lines, cuts and photo.

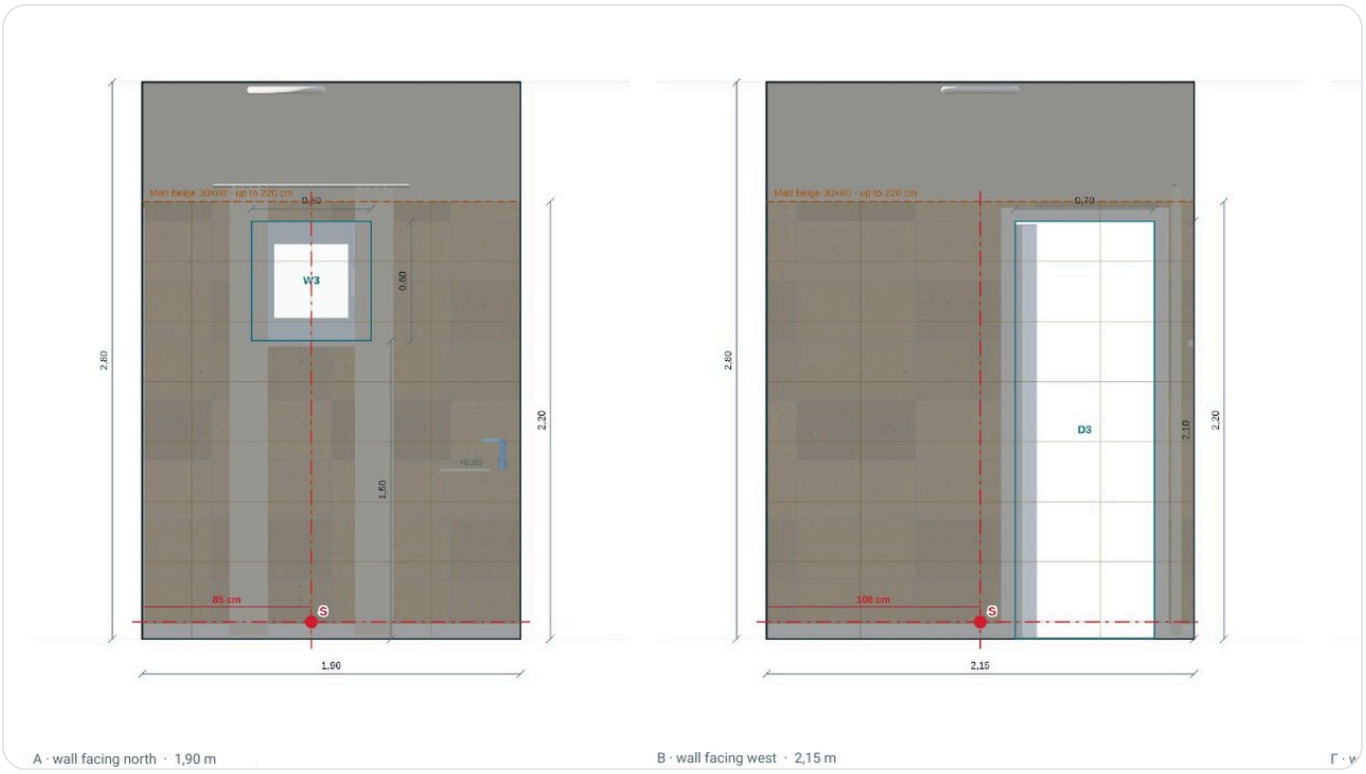


Bathroom elevations at 1:25, with the starting line and the ledger for the first row of tiles.

14 3D file viewer (Engineer)

1. Step 1 → `3D file viewer` → choose a **GLB, glTF, FBX, OBJ (with MTL and textures), DAE, 3DS, 3DM, STL, PLY or DXF** file. Select its texture files at the same time if they are separate.
2. Units and up axis are detected automatically; if the model looks huge or lies on its side, change `Units` or `Up axis`.
3. The model goes to the centre of the plan or to its original coordinates. View it with Orbit, Top, X-ray and Walk, and send it to AR on a phone.
4. `Hide my own model` to see only the file; `Zoom to` and `Remove`.

> From a 3D program that saves in its own file type, export to GLB, FBX, OBJ or DAE first. GLB keeps materials and textures best.

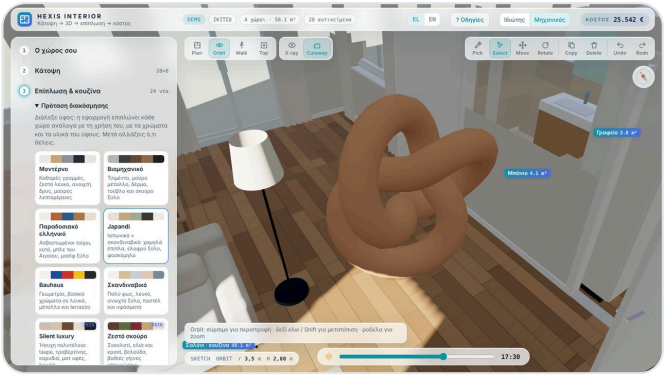

A GLB file inside the house model.

15 Shortcuts

`Ctrl` `Z` / `Ctrl` `Y`	Undo / Redo, in plan and 3D
`Enter`	Close the outline
`Shift` in plan	Temporary orthogonal drawing
`Delete`	Delete the selected item or material area
Wheel	Zoom in plan and Orbit · forward/back in Walk
Right click / `Shift` + drag	Pan in Orbit
`R`	Rotate the selected item by 90°
`Esc`	Cancel the current drawing or selection
`Fit`	Whole plan on screen