HEXIS INTERIOR · GUIDE

User guide

Interior design at true dimensions: floor plan, 3D model, furnishing, materials, windows and doors, and bill of quantities in one environment. Tap an image with ▶ to open its video.

`Plan` → `3D` → `Furnishing` → `Materials & light` → `Walkthrough` → `Cost`

Contents

1 Homeowner or Engineer
2 New project · outline
3 Walls, windows, doors
4 Curved & slanted walls
5 Columns & beams
6 From a sketch, PDF or DXF
7 From a scan
8 AI furnishing
9 Kitchen & island
10 Materials, tiles, light
11 Walkthrough & photoreal
12 Cost
13 PDF: drawings & setting out
14 3D file viewer
15 Object library
16 Spaces: name & use
17 Light fittings
18 Drywall
19 Electrical
20 Tool families
21 Objects from video
22 Account & balance
23 Shortcuts

1 Homeowner or Engineer

The switch at the top right changes which tools you see. Projects and drawings stay the same, and your choice is remembered.

Homeowner

- 3 steps: space, style & materials, result
- Pick and retail materials, same as Engineer
- Cost total per group
- Morning, afternoon, evening in one tap

Engineer

- Scan, X-ray, Calibrate
- Materials per wall area, kitchen, windows and doors
- Detailed budget with your own prices




Homeowner: three steps and the cost total.

2 New project · outline

1. The app opens on an empty project, in **Outline**. To try something ready-made, press **Sample**.
2. Click the corners of the plan in order. Close the outline by clicking the first corner again or pressing `Enter`.
3. Click a dimension (e.g. `9.40`) and type the real length. The opposite side adjusts.
4. Drag a side to move it. **Undo** / **Redo** are always at the top right.
5. **Close:** tap the first vertex or the **Close outline** button in the guide at the bottom.
6. **Vertices:** with **Select** or **Outline** drag a corner; the adjacent sides stretch or shrink and stay square, and walls touching them follow. **Square corners** makes nearly square corners exact.
7. **With a finger:** tap a vertex; a panel opens at the bottom with arrows and a 1 / 5 / 10 cm step, **Coordinates** for an exact position and **90°** for a right angle.

> In step 1 you set the storey height and the thickness of outer and inner walls before going to 3D.

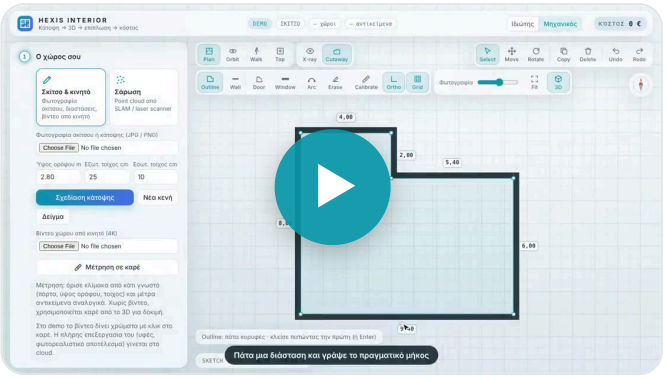


▶ Tap to play the video

An outline in five clicks, then a length correction.

3 Walls, windows, doors


1. **Wall** : click the start and end of an inner wall. It snaps to corners and walls.
2. **Window** : click on a wall. The app asks for the type: casement, tilt-and-turn, sliding or fixed window, or a balcony door that is hinged, sliding, lift-and-slide or minimal.
3. In the same dialog you choose the profile system (ALUMIL, EUROPA, ELVIAL), sashes, glazing, RAL colour, anodised or wood-effect finish, and shading.
4. **Door** : for an interior door it asks whether it has a **perimeter frame** (frame and architraves) or **none**, with a concealed frame flush with the wall.
5. **Everything with Select :** click a door or window to select it, drag to slide it along the wall (`Alt` for 1 mm steps), the orange distances to the wall ends take an exact position, `Delete` removes it.
6. **Swing direction:** with the door selected, click again on the side and at the end you want it to open towards. Clicking on the opening itself cycles through the four swings.
7. **Moving a wall:** with **Select** tap and drag the wall. The **clear distances** to the opposite walls on each side are shown; tap one for an exact value. In the panel at the bottom: arrows with a 1 / 5 / 10 cm step, **Distance** , **Delete** . On a computer also with the keyboard arrows.

> Click an opening's label (e.g. `BD 140`) to change anything. **Erase** removes it.

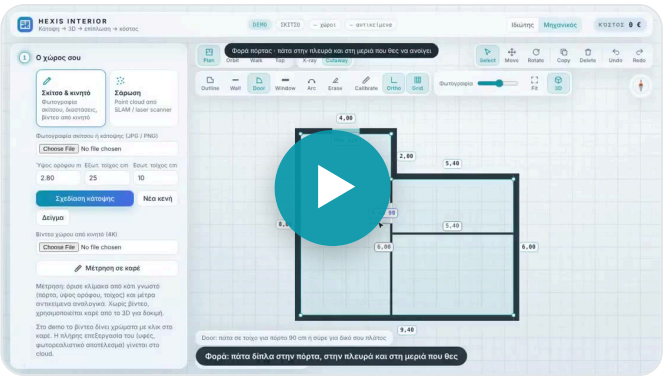


▶ **Tap to play the video**

Inner walls, a sliding balcony door, a frameless door and its swing.

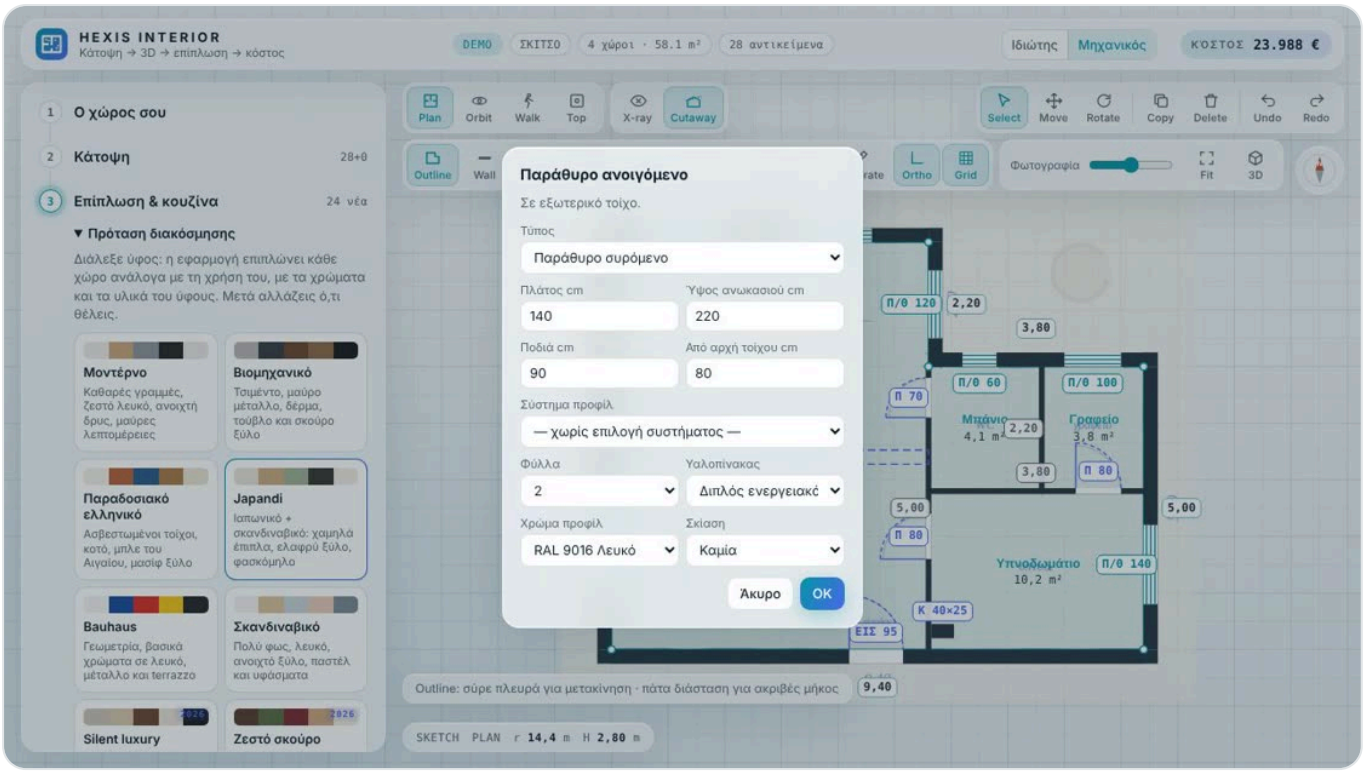

Window: type, system, sashes, glazing, colour, shading.

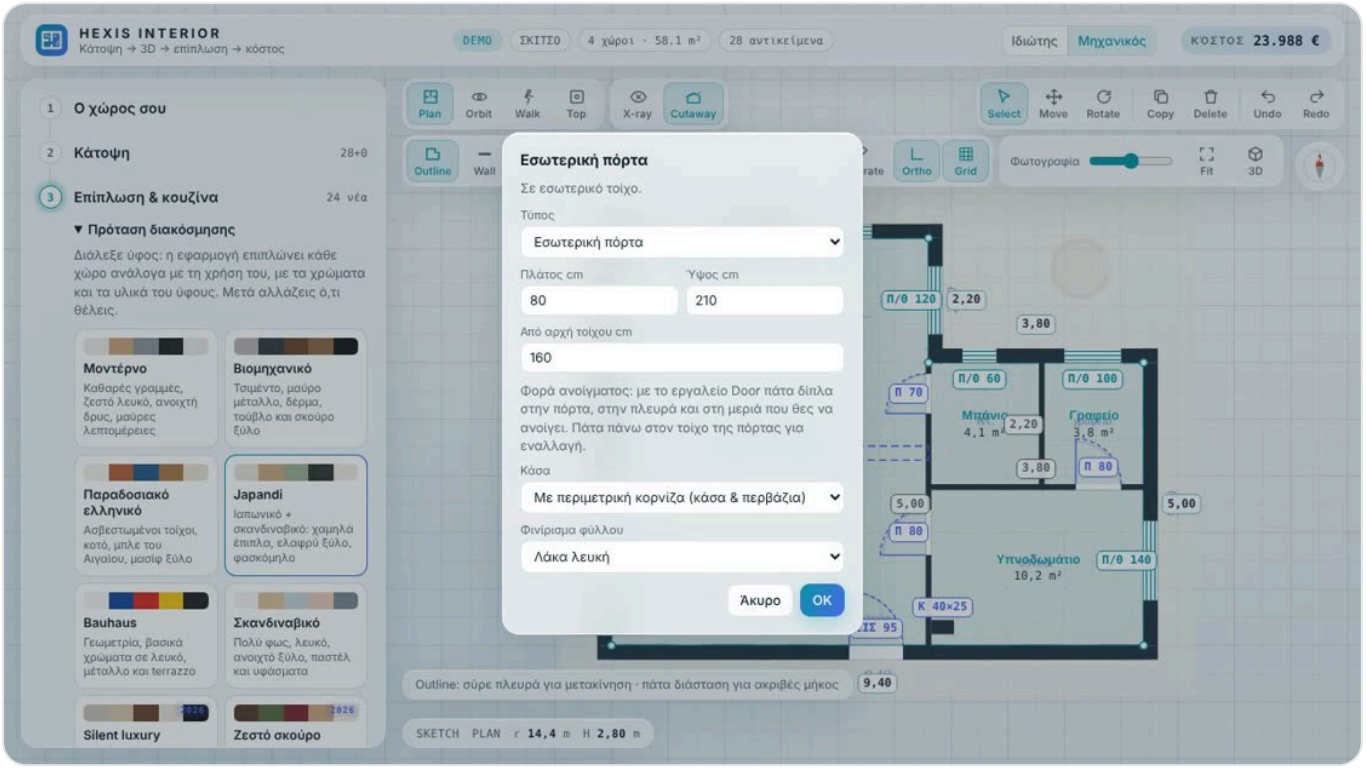


Interior door: with frame or concealed frame, and finish.

4 Curved & slanted walls

1. **Arc** : drag a side of the outline outwards or inwards. Click it to type the exact rise in metres.
2. Turn off **Ortho** for walls at any angle, outer or inner.
3. Press **3D** . Curved walls are built smoothly, with openings that follow the curve.

> An inner wall separates two rooms only if both its ends touch walls. On a curved wall, bring the end inside the wall's thickness.

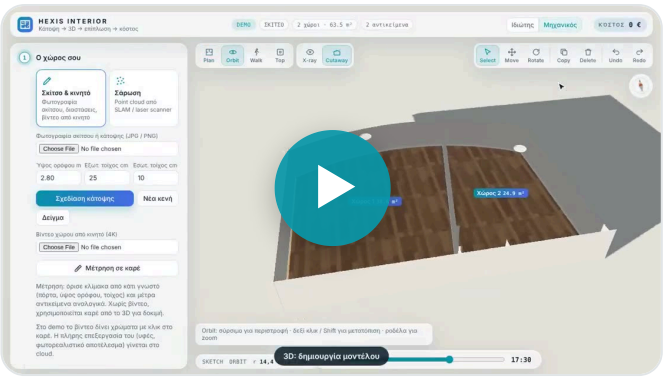


▶ Tap to play the video

A curved side, a slanted inner wall and the 3D.

5 Columns, nibs & beams

1. **Column** : click next to a wall. The nib sticks to the wall; type its width along the wall and how far it projects. Away from a wall you get a free-standing column, rotated if needed.
2. **Beam** : click the start and end of the beam, then its width and drop below the ceiling.
3. In plan the beam is dashed, as in drawings. In 3D it hangs from the ceiling.

> They count everywhere: room areas exclude them, nibs are painted and tiled like walls, and AI furnishing does not put tall wardrobes under a low beam.

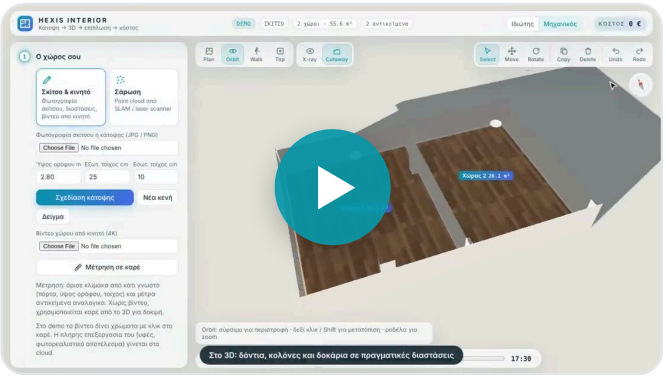


▶ Tap to play the video

A 45×30 nib on an outer wall, a column on an inner one, a beam with a 45 cm drop.

6 From a sketch, PDF or DXF


1. Step 1 → upload a photo or a **PDF** of a plan, sketch or furniture/kitchen drawing. For a multi-page PDF you choose the page.
2. **Calibrate** : click both ends of a known dimension and type its length.
3. **DXF (Engineer):** upload a plan as DXF. Choose units (m, cm, mm, detected automatically) and layers, and the drawing is placed at 1:1, with no Calibrate. Click inside the inner face of the outer walls and the outline is created from the closed polyline, arcs included. If you click the outer face, enter the wall thickness and it is offset inwards. Outline, Wall, Door, Window snap to the DXF's vertices and lines.
4. If the plan already exists, e.g. you bring the cabinet maker's PDF: **Align** → click a point on the drawing, then the same point on the plan, and again for a second point. The drawing moves, rotates and scales onto your plan.
5. Tick “Also show the drawing in 3D, on the floor” and switch to **Top** : place the kitchen and furniture exactly on the drawing with Move / Rotate.
6. Draw on top with Outline, Wall, Door, Window. The `Photo` slider in the bar sets its opacity.
7. **Video per room:** once the 3D exists, step 1 lists every room with a **Video** button. Film each room separately (stand at the door, slow 360º, 20–40 s) and upload it to its room. From the video you pick colours for that room's walls and measure on frames. Four frames go into the PDF automatically as “Existing condition”; **+ Frame for the PDF** adds any frame you like.

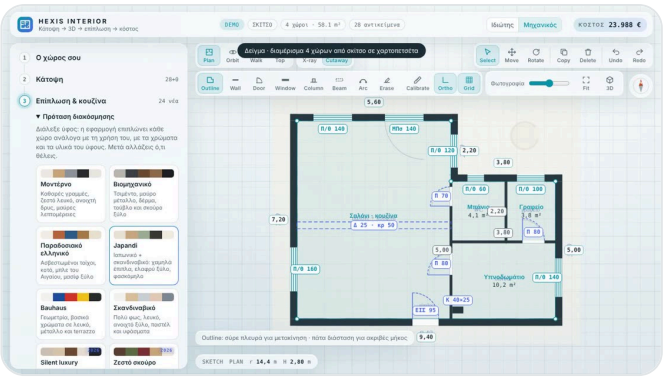

The sample: a plan drawn over a sketch.

7 From a scan (Engineer)

1. Step 1 → **Scan** : load a point cloud in LAS, PLY or XYZ, from SLAM or a laser scanner.
2. Step 2 → **Auto-recognition** : floor, ceiling, walls, doors, windows, rooms, furniture and small objects come out as separate entities.
3. **Scan** / **Classes** / **Model** switch the view; **X-ray** shows through the walls.

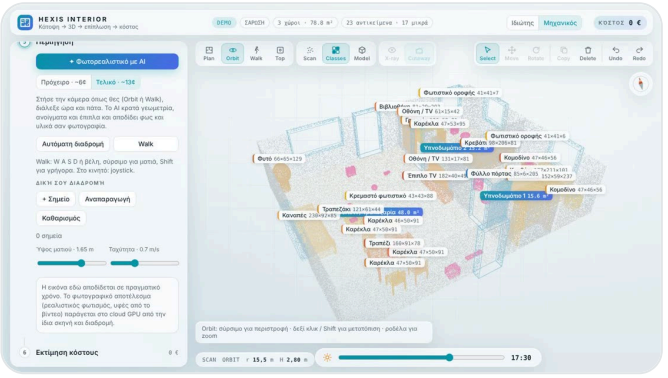


Detection from a scan, with the dimensions of each object.

8 AI furnishing

1. Step 3 → choose a style: Modern, Industrial, Traditional Greek, Japandi, Bauhaus, Scandinavian, and the 2026 trends from international magazines: Silent luxury, Warm dark, Neo Deco, Found luxury, Colour drenching, Coastal chic, Summer silver, Statement stone, Curves & warm minimal, At-home retreat, Refined maximalism, Book-lined, Vintage barber · Speakeasy.
2. Write what you want, e.g. “desk in the small room, table for 6”. Press **✦ Improve description**: the AI turns it into a precise professional brief (spaces, furniture, materials and colours, lighting in K and lumen, what to avoid) without losing anything you wrote. Edit it freely; **↺ Original text** restores yours. Your brief always takes priority over the style. Improving uses no units.
3. Press **✦ AI layout**. The designer sees the real geometry, the openings, columns and beams, names the rooms and places furniture with collision checks.
4. Change anything with **Select**, **Move**, **Rotate**, **Copy**, **Delete**. **Undo** reverts the whole proposal.

> Each style has its own signature pieces, layered lighting with lumen, rugs, plants and decor, and respects the space names. “Quick suggestion (rules)” does the same without AI, using rules. It is instant, but simpler in slanted rooms.

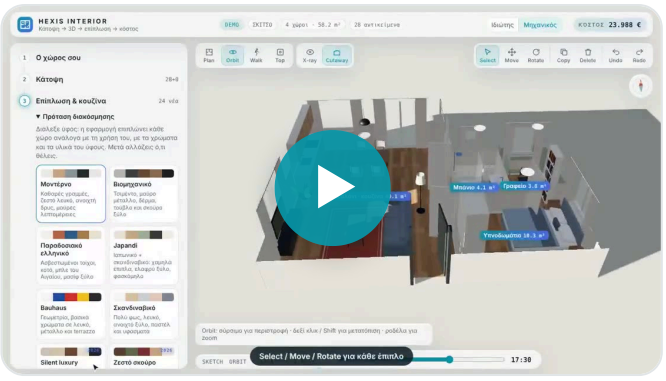


▶ **Tap to play the video**

Style, instructions and a furnishing proposal.

9 Kitchen, L-corner, island & appliances

1. Step 3 → **Kitchen**: length, **L-return cm** and **Return to** left or right for a corner kitchen.
2. Appliances: built-in fridge left or right, oven under the hob or in a tall unit, chimney or built-in hood, dishwasher.
3. Hob and sink position in cm from the left end; leave empty for automatic placement.
4. Fronts (veneer, laminate, lacquer) and worktop (engineered stone, quartz, wood), or your own sample from a photo.
5. **Island placement**: length, depth and what sits on it: worktop, hob, sink or a bar with stools.


> Click the kitchen in 3D and change values in the form; it updates instantly, together with the cost.

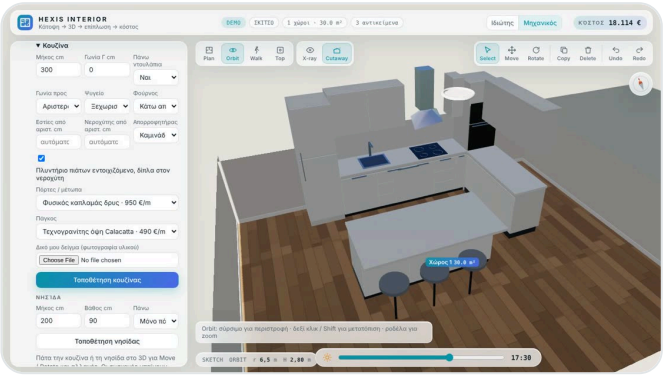

L-return to the right, fridge on the left, oven column, chimney hood, bar island.

10 Materials, tiles, light

1. Press **Pick** at the top right, then a wall or floor. Pick sees through furniture and shows the surface's current material. Choose **Wall**, **Room** or **All**.
2. **Paint** from the palette or your own colour, or **Wall tiles** with a height.
3. **Area on wall**: drag a rectangle (e.g. 2.00 × 1.20 m) to tile only that part.
4. **Retail material:** open “Retail material (your own product)”, enter the company and series/code, tile size, price in €/m² and upload a photo of one tile from the catalogue. For paint, the colour code and price. It joins the list under its name and counts in the cost.
5. **High-fidelity materials:** in hexis-app, at High or Ultra quality, floors (light and dark wood, marble, screed) get real photo textures with relief and roughness, and walls, fabrics and furniture wood get real relief while keeping their colour. Textures are free to use (CC0). Turn off with “High-fidelity materials”.
6. **Wall junctions:** at the floor **Skirting** (height in cm), **Shadow gap with aluminium profile** (10, 15 or 20 mm) or **None**; at the ceiling a shadow gap with aluminium profile or a plaster cornice where the wall begins. They appear in 3D, in the bill of quantities in metres and in the PDF materials per room.
7. Materials open only with **Pick**. With **Select** you can click walls and floors without the menu jumping, so no material is applied by mistake.
8. Floors per room, time and season for the sun, lighting intensity and colour temperature (default 4000 K, neutral white), image quality **Fast** / **High** / **Ultra**.

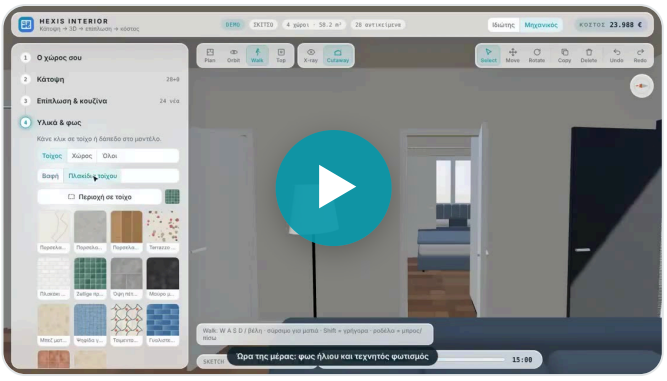


▶ **Tap to play the video**

Wall colour, tiles and light from noon to evening.

11 Walkthrough & photoreal

1. **Go into a room:** double-click inside a room in the plan, click the room label in 3D, or use the **Go into room...** list next to Walk. You stand at the door, facing the centre, and see the whole room, with a wider lens in small rooms. **Room** shows the whole room from above. At doors, Walk pulls you onto the door axis so you pass through easily.
2. **Walk** : `W` `A` `S` `D` or arrows, drag to look, `Shift` to go faster. On a phone, with the joystick.
3. Step 5 → **Auto path** , or your own with **+ Point** .
4. Set up the camera and press **✦ Photoreal with AI** . **Draft** for tests, **Final** for presentation. Choose how freely the AI works: **Faithful** (light and materials only), **Photoreal** (simple 3D furniture becomes real products with fabrics, wood, stone and details, in the same positions and sizes), **Creative** (the 3D is a layout guide and the AI styles the room like a magazine shoot). Products you added from shops ("Put it in the project") that are in view, up to 6, are sent with their photo and position, so the AI renders those actual pieces. Final is rendered at 2K, in your screen proportions. Geometry and furniture stay the same; light and materials change.
5. Compare with the 3D and press **Download** .
6. **Remodeling from a photo:** **✦ Remodeling from a photo** → upload a plain photo of one side, choose **Interior** or **Building facade**, a style (for facades: Mediterranean white, Mixed natural cladding, Dark & warm, Contemporary minimal, Biophilic, Restored traditional) and what changes; **✦ Improve description** works here too. The shot, perspective, walls and openings stay the same. No plan or 3D needed. Charged like one photoreal image.
7. **On site with AR:** choose the kitchen, the selected item, all furniture or the whole house and press **AR · View in the room** . On a phone or tablet it appears at real size in the room through the camera: tap the floor, drag to position, two fingers to rotate. On a computer you see the model in 3D.
8. **● Record video** records what the screen shows until you stop it; **Walkthrough video** records the whole walkthrough automatically.

> The AI may slightly "beautify" a piece of furniture or a texture. Dimensions and cost always come from the 3D.

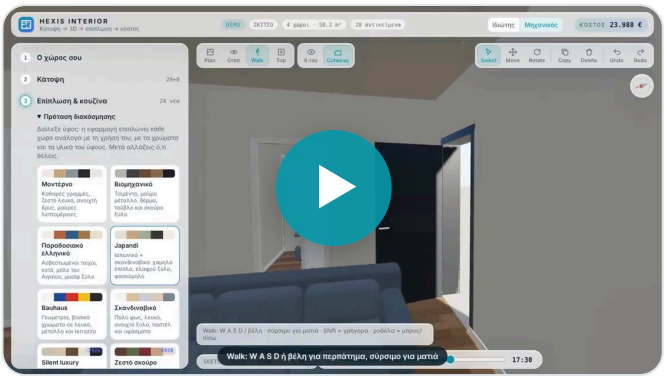

▶ Tap to play the video


Walking through the house.

12 Cost

The cost at the top right updates with every change. In step 6 you see the detail: furniture, kitchen, appliances, windows and doors, paint, tiles, floors, with or without 24% VAT.

Prices are indicative. Enter your own unit price, e.g. from a supplier's quote, and the total changes instantly.

> **EL / EN** at the top right switches the language of the app and of the PDF; it opens in the browser's language automatically.

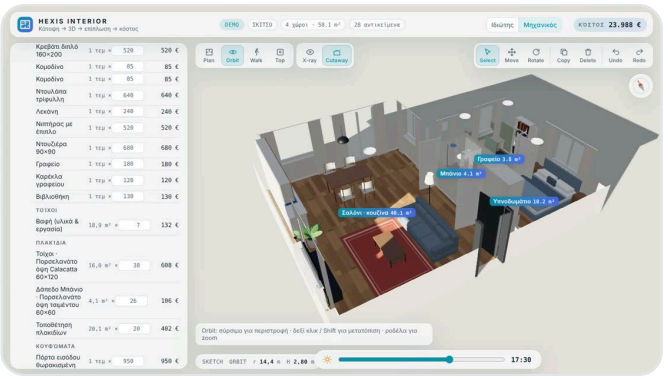


Detailed estimate with editable prices.

13 PDF: drawings, elevations & setting out


Step 6 → enter the project or client, choose which rooms get elevations (wet rooms, all or none) and press **PDF · scaled plans & bill of quantities**. Output is A3:

1. Furniture and openings plan and floor finishes plan, at 1:50 or 1:100.
2. Window and door schedule with codes, system, colour and swing.
3. **Elevations** for bathroom and kitchen (or all rooms): every wall at 1:25 or 1:50, with dimensions, openings, tile height and furniture heights. Then an **axonometric** of the room.
4. **Floor per room:** a top-view photo of the floor without furniture. Where it is tiled, a **tile setting-out plan** with the **starting point S**, the two setting-out lines, distances from the walls, edge cuts, joint, pattern, pieces and waste.
5. On tiled elevations, the wall's S: a vertical starting line (on the window axis or with symmetrical cuts) and a ledger for the first row, so the top row comes out whole.
6. “Existing condition” frames from each room's video, 4 photos per room, materials per room and the full bill of quantities with code, unit, quantity, waste, price and total.

> Setting out is chosen so that cuts on opposite sides are equal and as large as possible. Print at 100%, without “fit to page”, to measure with a scale rule.

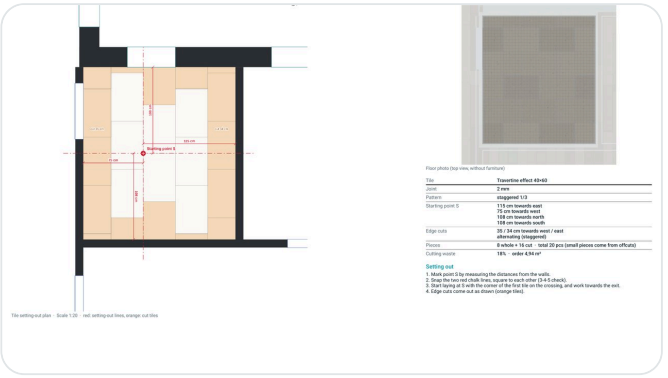

Bathroom floor: starting point S, setting-out lines, cuts and photo.

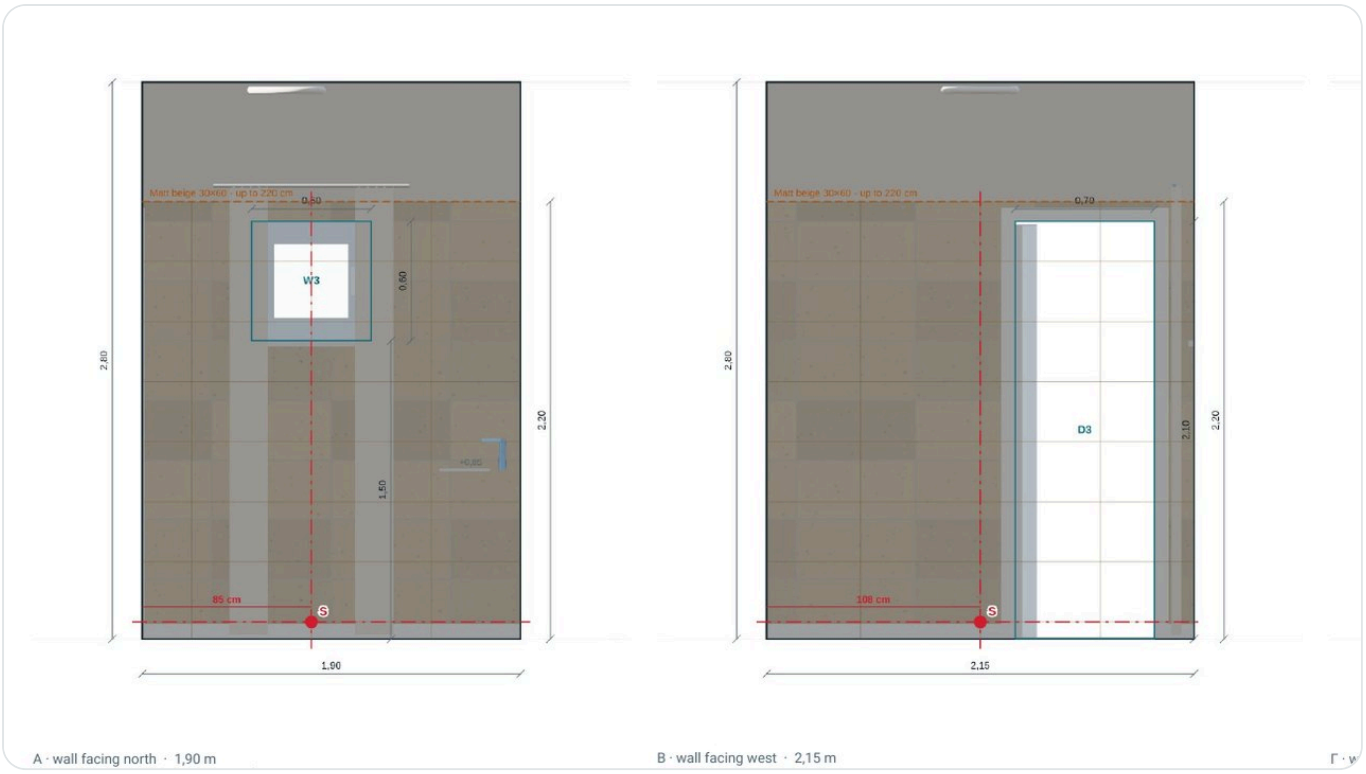


Bathroom elevations at 1:25, with the starting line and the ledger for the first row of tiles.

14 3D file viewer (Engineer)

1. Step 1 → `3D file viewer` → choose a **GLB, glTF, FBX, OBJ (with MTL and textures), DAE, 3DS, 3DM, STL, PLY or DXF** file. Select its texture files at the same time if they are separate.
2. Units and up axis are detected automatically; if the model looks huge or lies on its side, change `Units` or `Up axis`.
3. The model goes to the centre of the plan or to its original coordinates. View it with Orbit, Top, X-ray and Walk, and send it to AR on a phone.
4. `Hide my own model` to see only the file; `Zoom to` and `Remove`.

> From a 3D program that saves in its own file type, export to GLB, FBX, OBJ or DAE first. GLB keeps materials and textures best.

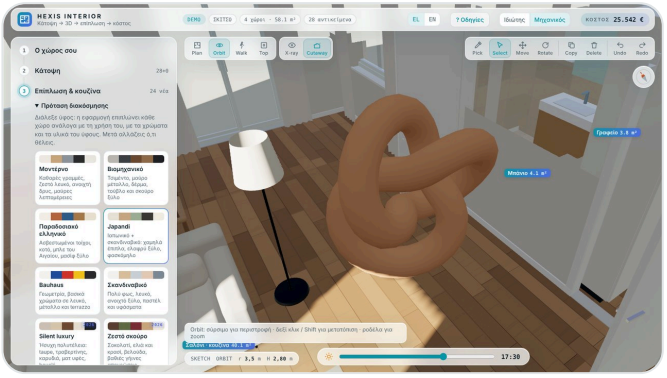

A GLB file inside the house model.

15 Object library & collisions

1. Step 3 → **Object library**: choose a **Space** (Home, Bathroom · WC, Indoor plants, Outdoor, Decor · vases, Office, Engineering office, Clinic · dental, Shop, Barber · hair salon, Restaurant · café · bar, Lighting) or type in **Search**, e.g. “stool”.
2. Bathroom: floor-standing and wall-hung WCs, bidets, vanity basins, bathtubs, shower enclosures, walk-in, towel radiators, radiators, water heater, washing machine.
3. Press an item: it goes into a suitable space and you drag it with **Move** .
4. **Real product:** on the object's card click the title and type brand and code; change size, colour and price to match the catalogue.
5. **In shops:** every object's card has buttons for 3–4 online shops chosen by type (furniture, sanitary ware, appliances, lighting, garden, professional equipment), with a ready search by name and size. With **✦ Find in shops** the AI searches the web first and suggests, inside the app, up to 4 real products from different Greek shops, with photo, price and size; **Put it in the project** replaces the object: name, shop, price, size, colour from the photo, and the product photo stays on its card. You do not need to open the shop. It uses one AI use; if nothing reliable is found, it is refunded.
6. **Wardrobes:** a “Wardrobes” category with 1- to 6-door units (50–300 cm), with top cupboards, with mirror, sliding, built-in floor-to-ceiling, children's, chest of drawers and shoe cabinet. On the wardrobe card you change the number of doors, hinged or sliding, top cupboards and mirror.
7. **Relief / mural** (Decor): carved plaster, painted mural or patterned wallpaper, at any size on the wall; counts in the cost. New tiles: black & white checkerboard and exposed brick.
8. **Collisions:** objects do not go into each other or into walls. Chairs and stools fit under tables and counters. Hold `Alt` to move freely.

16 Spaces: name and use

1. In the plan press **Room** and click inside each space.
2. Pick a name from the list (Living room, Kitchen, Bathroom, WC, Bedroom, Office, Dental surgery, Shop, Veranda...) or type your own. The name shows on the plan with its use below.
3. From the name the app knows what belongs: no bed or bookcase in a bathroom, no WC in a bedroom. If you pick something that does not fit, it goes to the right space.
4. The library opens on the category of the space you named.
5. **Ready room types:** in the room name, tap a button: Living room, Kitchen, Dining room, Bedroom, Children's room, Bathroom, WC, Hall, Corridor, Entrance, Study, Storage, Laundry, Semi-open space, Veranda, Balcony, Shop. For anything else, type it under “Other”.

> New space outside the original outline: drag the side outwards with **Outline** , divide with **Wall** and name it with **Room** .

17 Light fittings and light

1. Step 4 → **Light fittings**: choose a type (Recessed spot, Ceiling light, Pendant, Wall sconce, Floor lamp), **luminous flux in lumen** and light colour (2700–6000 K).
2. Press **+ Place by click** and click the floor under each fitting; spots and ceiling lights go on the ceiling. For a sconce, click the wall. `Esc` finishes.
3. Select a fitting to change its lumen and K on its card.
4. **LED strip:** choose "LED strip", enter **lm per metre** and pick a position: ceiling cove (concealed), suspended-ceiling recess, under cabinets, skirting, or shelf/niche at your own height. Clicking a wall runs the strip along its full length; with "Around the whole room" it goes on every wall of the room. It counts in the cost per metre.
5. **Remove automatic** deletes the fittings the app added.
6. **Light from video** : stop the video on a frame with the lights on; the app estimates colour temperature (K) and intensity. Positions are placed by click.

> Strip for concealed light: 600–1000 lm/m · task light under cabinets: 1000–1500 lm/m. Typical: living room 150 lm/m², bedroom 100 lm/m², bathroom 200 lm/m², office 300 lm/m².

18 Drywall · walls & ceilings

1. Step 4 → **Drywall · walls & ceilings**: choose the **Construction**, enter dimensions and press **+ Draw** . **Esc** ends.
2. **Wall: Wall lining**, **Lining with niche** (a recess with its own W × H), **Drywall shelf**, **Box-out**: drag a rectangle on the wall. **Thickness / projection** sets how far it comes out of the wall.
3. **Column cladding:** click near a column of the plan; it is clad all round, full height.
4. **Ceiling: Suspended ceiling (room)** = click inside a room; it drops by the **Drop from ceiling**. **Perimeter drop with concealed lighting** = click in a room; a band all round, **Band width** wide, with LED on its inner edge.
5. **Ceiling bulkhead** and **LED ceiling channel** (a light line in the suspended ceiling): drag on the floor to set position and length.
6. **Curtain / blind pocket:** click the window wall; it runs its full length, at the ceiling.
7. With **Concealed LED lighting** ticked, niches, shelves, perimeter drops and curtain pockets get an LED strip that lights the 3D.
8. Each construction is an object: select it for dimensions and price, **Move** , **Delete** , **Undo** . It counts in the cost per m² or per metre, LED strip included.
9. **Board per room:** bathroom, WC and laundry always get **moisture-resistant (green)** board; other rooms **standard (beige)**. Change it under “Drywall” in the panel or the card.
10. **Frame:** every construction has a metal frame with CW 50 studs and UW 50 tracks at **60 or 40 cm**. Suspended ceilings use CD 60/27, a UD perimeter track and hangers. With tile or marble the studs go to 40 cm automatically.
11. **View** **Frame** · **Board** · **Finish** : only the frame (board faded), the board without finish, or the final material. The builder sees what is behind the surface.
12. **Final finish** on the card: paint in any colour, a tile from the list, marble / stone or wood, at real scale.
13. **Special constructions:** bench / seating, table, desk, bookcase, TV wall unit, fireplace, cabinet. Choose it, enter the height and drag the length and depth on the floor; the back snaps to the nearest wall. Change dimensions on the card.
14. **Take-off:** on the card, “Take-off · materials & labour”: m² of board, metres of profiles, hangers, corner beads, screws, compound, tape, and the cost of materials, labour and finish. The project cost lists them all together, with unit prices you can change.

> Constructions sit in front of walls and below the ceiling; they do not cut the wall. For a niche inside a wall, use **Lining with niche** with a thickness at least the depth you want.

19 Electrical · sockets, switches, lights

1. Left side of the 3D → **Electrical**. At the top choose the **series** (e.g. BTicino Living Now, Legrand Valena Life, Schneider Sedna), **colour** and **height**: standard (socket 30 cm, switch 110 cm), 110 cm for the kitchen worktop, or where you click.
2. Press **Socket**, **Double socket**, **Switch**, **Dimmer** etc. and click the wall, a drywall lining or the kitchen backsplash. `Esc` ends.
3. A socket or switch on tiles sits on the tile surface and a **tile cut** is added to the cost.
4. A **switch** links itself to the room's lights that have no switch yet. To change it: card → **Link to lights** and click each light (click again = unlink).
5. In **Walk**, clicking a switch turns its lights on and off.
6. Light fittings (spot, ceiling light, pendant, wall light, floor lamp, LED strip) are in the same family.
7. On the card: series, colour, height from floor, and **In shops** with an electrical supplier (Kafkas) and others; the AI searches first and brings the product into the project.
8. In the cost: every socket and switch at its series price, an **electrical point** (line, conduit, box, connection) for every point and light, and tile cuts.

20 Tool families · buttons

1. **They appear when you need them:** in the floor plan you only see drawing tools, with the guide **Outline › Walls › Doors & windows › Rooms › 3D & furnishing** at the bottom; the next step is coloured and its button pulses. “Not needed” skips a step. Tool families appear only once the 3D exists; on a phone they also hide in Walk.
2. Top right, the basics are always there: **Select** **Move** **Rotate** **Pan** **Copy** **Delete** **Undo** **Redo**. With **Pan**, dragging moves the view.
3. Left side of the 3D, the **families**: **Structure** (outline, wall, door, window, column, beam), **Finishes** (colours, tiles, brick, floors, plaster, shadow gap), **Drywall**, **Electrical**, **Plumbing** (WCs, wall-hung WCs, basins, mirrors, cabins, walk-in, taps, ceiling shower, bathtubs, water heater), **Furniture**, **Kitchen**.
4. Press a family; a panel opens with its tools. Press a tool and work in the 3D. The panel closes by itself after a few seconds or with `Esc`.
5. Buttons are raised: they “sink” when pressed. The active tool stays pressed.
6. The selected item's card (right) hides by itself after 5 seconds without use. It comes back with ⓘ, with the mouse at the right edge or with a new selection.
7. **On a phone:** the families are one row of icons above “Steps”. In the floor plan, Move/Rotate are hidden to save space. In landscape, views and tools share one row. Swipe the top bar sideways for language, mode and cost.

21 Objects from the video

1. Step 1 → **Video per room**: upload a video of the room (360°, slowly).
2. Press **✦ Objects from the video**. The AI looks at the frames, recognises furniture, sanitary ware, appliances, radiators, lamps, plants and decor, and places them in 3D at their sizes.
3. Positions come from doors and windows, so they are approximate: adjust with **Move**. A new recognition in the same room replaces the previous one; **Undo** reverts it.
4. Add frames with **+ Frame for the PDF** for a better result (up to 8).

22 Account, key and balance

1. **Sign-in with a key:** HEXIS Interior opens only with an **access key** (HXI-XXXX-XXXX-XXXX) from the administrator: 48-hour demo, homeowner access or PRO. Sign in with your email and enter the key once; it is bound to your account.
2. **One device at a time:** if you open it on another device, press “Open here”; the previous one locks within a few minutes. Up to 5 device changes per 30 days; for more, contact the administrator.
3. The **active balance** is always shown at the top right: units and value in €, e.g. “12 images · €7.92”.
4. After each AI use you see what was used, e.g. “Final image · −1 unit · −€0.66”, or “free · €0”.
5. Press the label for **Activity per use**: when, what, from where, units and €. Failed uses are refunded.
6. 1 unit = 1 final image · 4K = 2 units. Draft images and AI layouts count against the pack's free allowance.
7. In the demo the wallet is local, with simulation buttons to see how the balance goes down.

23 Shortcuts

`Ctrl` `Z` / `Ctrl` `Y`	Undo / Redo, in plan and 3D
`Enter`	Close the outline
`Shift` in plan	Temporary orthogonal drawing
`Delete`	Delete the selected furniture, material area, or (in the plan) opening, column, beam, wall
`Alt` + drag	Move freely without collisions · in the plan, openings in 1 mm steps
Wheel	Zoom in plan and Orbit · forward/back in Walk
Right click / `Shift` + drag	Pan in Orbit
`R`	Rotate the selected item by 90°
`Esc`	Cancel the current drawing or selection
Fit	Whole plan on screen