V6Z80P Acrylic Case Assembly Guide

Before starting, please remove the protective plastic from the acrylic (if still attached) and wipe away any etching dust or carbon left from the cuttting process. If you have an opaque case, the light pipes should be press-fitted into the side and top panels as shown at the end of this document.













CLIPPING PROCEDURE DETAIL:

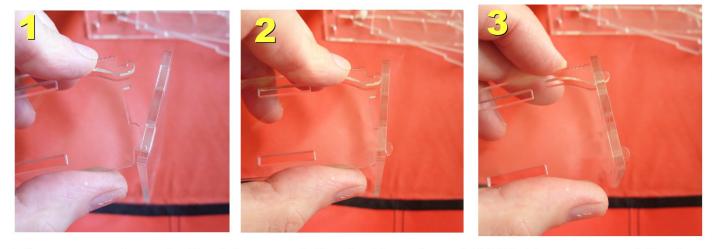


The non-springed clip (shown at the bottom here) MUST be engaged first. It is impossible to hook through the spring clip first without breaking things

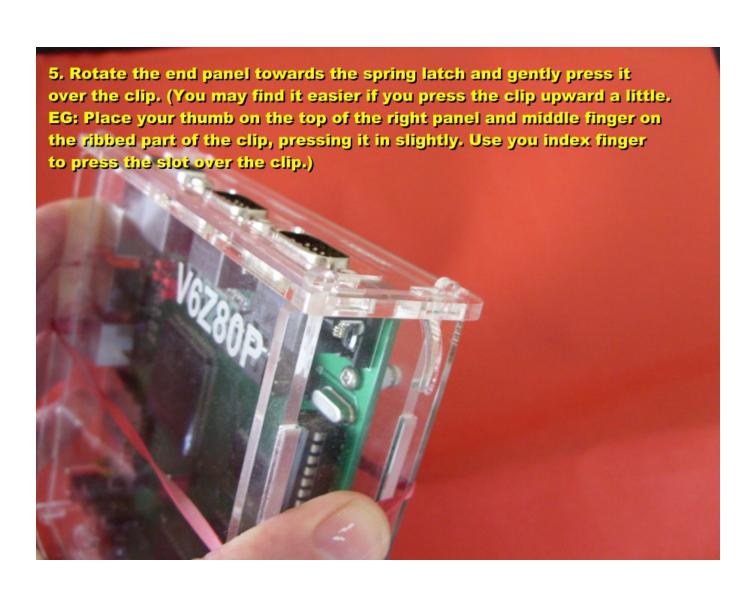

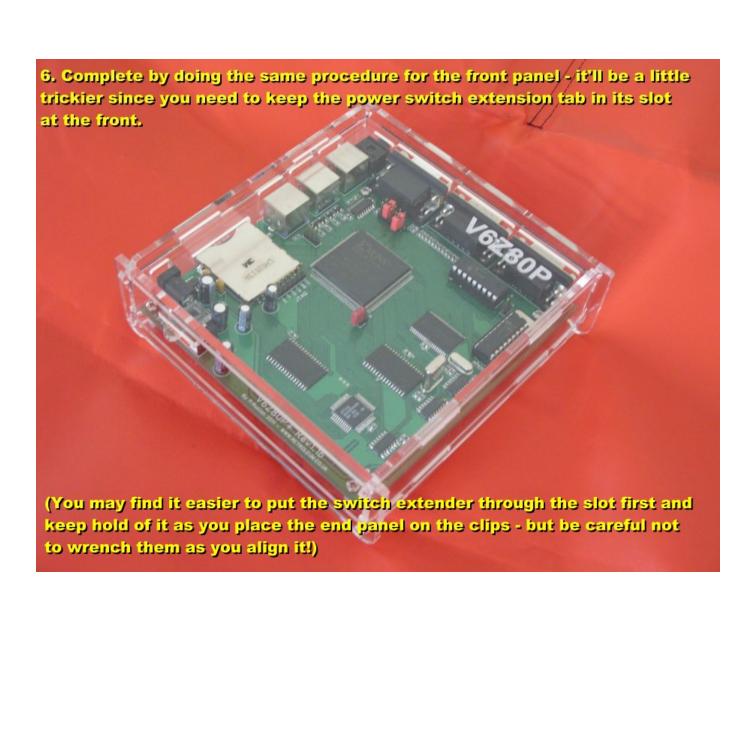

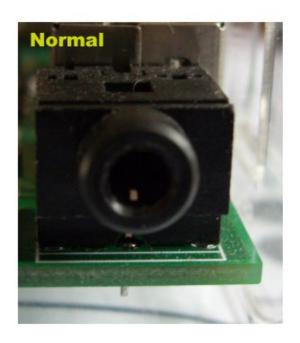

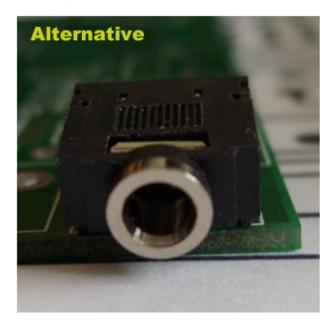

The alternative (silver) audio socket may mean that washers need be placed below the stand-offs to raise the PCB slightly.

Light Pipe fitting:

