# Kiến trúc MIPS

# Nội dung

- Phần I: Tổng quan dòng vi xử lý MIPS
- Phần II: Mô hình Lập trình

# Phần I: Tổng quan dòng vi xử lý MIPS

# Lịch sử phát triển:

- MIPS (Microprocessor without Interlocked Pipeline Stages) hình thành trên cơ sở RISC.
- Năm 1981: John L. Hennessy đứng đầu một nhóm bắt đầu một công trình nghiên cứu về bộ xử lý MIPS đầu tiên tại Stanford University
- Một thiết kế chủ chốt trong MIPS là yêu cầu các câu lệnh phải hoàn thành trong 1 chu kì máy.
- Hãng MIPS Technologies (<u>MIPS Computer Systems</u>)
   http://www.mips.com

http://en.wikipedia.org/wiki/MIPS\_architecture

# Các thế hệ của MIPS

- Ban đầu MIPS là kiến trúc 32 bit, sau này mở rộng ra 64bit.
- MIPS I, MIPS II, MIPS III, MIPS IV, MIPS V, MIPS 32 và MIPS 64. Hiện nay tồn tại MIPS 32 và MIPS 64.
- Các dòng vi xử lý thương mại MIPS đã được sản xuất:
  - R2000 năm 1985
  - R3000 năm 1988
  - R4000 năm 1991,mở rộng tập lệnh đầy đủ cho 64bit, 100MHz, 8kB.
  - R4400 năm 1993,16kB.
  - R8000 năm 1994: là thiết kế superscalar đầu tiên của MIPS

http://en.wikipedia.org/wiki/MIPS\_architecture

# • Các ứng dụng:

DVD players

Pioneer DVR-57-H

Kenwood HDV-810 Car Navigation System





### Networking

#### 3COM

3102 Business IP Phone

#### 3COM

3106 Cordless Phone

### **Apple**

Airport Extreme WLAN Access Points







## Portable Devices

Canon EOS 10D Digital

JVC GR-HD1





#### Residential and Small Office

#### Samsung

Digital Photo Frame

#### Sony

Media Server Vaio VGX-X90P

#### Pioneer

Pure Vision U Plasma Television 43" Pure Vision U Plasma Television 50"

#### Sony

KDP-51WS550 High Definition TV KDP-57WS550 High Definition TV KDP-65WS550 High Definition TV

#### **Hewlet Packard**

Color Laser Jet 2500 Laser Printer











#### Sony Playstation PSX



CPU
Type:LSI/MIPS R3000A
Architecture:32 Bit
Clockspeed:33,8 MHz

#### Sony Playstation Portable



CPU Type:MIPS R4000 32bit Core Clockspeed:333 MHz

# Phần II: Mô hình lập trình

- Quản lý bộ nhớ
- Các thanh ghi của MIPS
- Các khuôn dạng lệnh
- Các chế độ địa chỉ
- Một số lệnh cơ bản
- Khung chương trình hợp ngữ
- Sử dụng trình biên dịch và mô phỏng MIPS2000, MIPS

# Quản lý bộ nhớ

## Bộ nhớ:

32 bit địa chỉ, đánh địa chỉ theo byte

⇒ không gian 2<sup>32</sup> địa chỉ 0x0000000 đến 0xFFFFFFF


## Chia làm các vùng:

0x00400000	Text segment	program instructions
0x10000000	Data segment	
0x7FFFFFF	decreasing addresses	Stack segment

# Tập thanh ghi

#### a) Thanh ghi đa năng.

Tên	Số	Ý nghĩa
\$zero	\$0	Hằng số 0
\$at	\$1	Assembler Temporary
\$v0-\$v1	\$2-\$3	Giá trị trả lại của hàm hoặc biểu thức
\$a0-\$a3	\$4-\$7	Các tham số của hàm
\$t0-\$t7	\$8-\$15	Thanh ghi tạm ( không giữ giá trị trong quá trình gọi hàm)
\$s0-\$s7	\$16-\$23	Thanh ghi lưu trữ (giữ giá trị trong suốt quá trình gọi hàm)
\$t8-\$t9	\$24-\$25	Thanh ghi tạm
\$k0-\$k1	\$26-\$27	Dự trữ cho nhân OS
\$gp	\$28	Con trỏ toàn cục
\$sp	\$29	Con trỏ stack
\$fp	\$30	Con trỏ frame
\$ra	\$31	Địa chỉ trả về

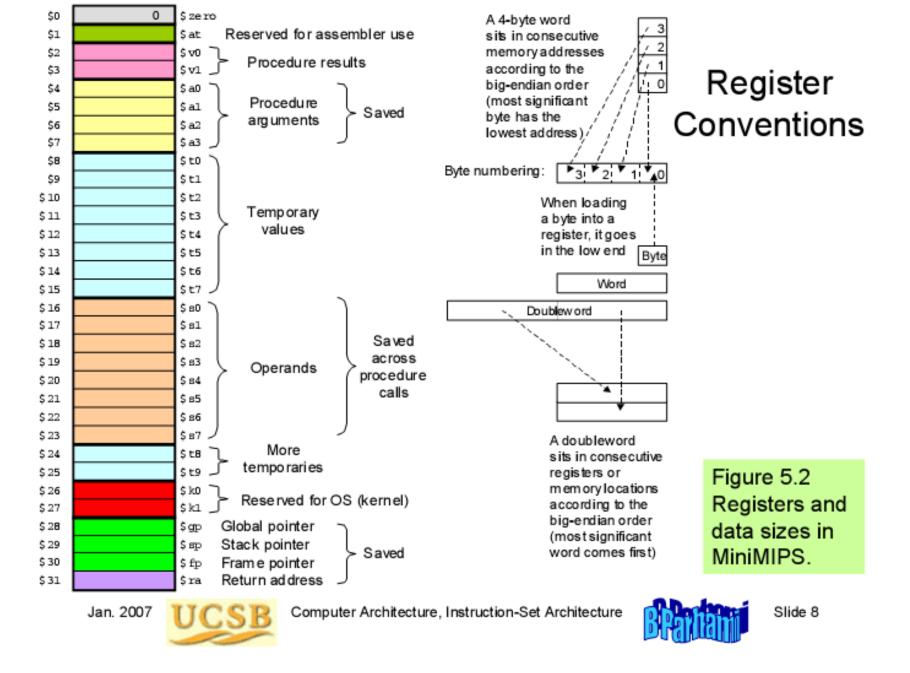

## Các thanh ghi của MIPS

#### b)Thanh ghi HI và LO

Thao tác nhân của MIPS có kết quả chứa 2 thanh ghi HI và LO, đây không phải là thanh ghi đa năng. Bit 32 đến 63 thuộc Hi và 0 đến 31 thuộc LO

	Χ	=		
op1	op2		hi	lo
Tương tự với	phép chia :			
			remainder	quotient
				•
	÷	=		<u>'</u>

# Sử dụng các thanh ghi trong MARS

- Phải có kí tự \$ ở trước
- Có 2 cách:
  - Địa chỉ thanh ghi. Ví dụ: \$8, \$19...
  - Tên gợi nhớ. Ví dụ \$s0, \$t3...
- Ví dụ:
  - add \$s0, \$6, \$zero

# Kiến trúc tập lệnh

## 3 loại lệnh:

- I-Type (Immediate)
- J-Type (Jump and branch)
- R-Type (Register)

### MiniMIPS Instruction Formats


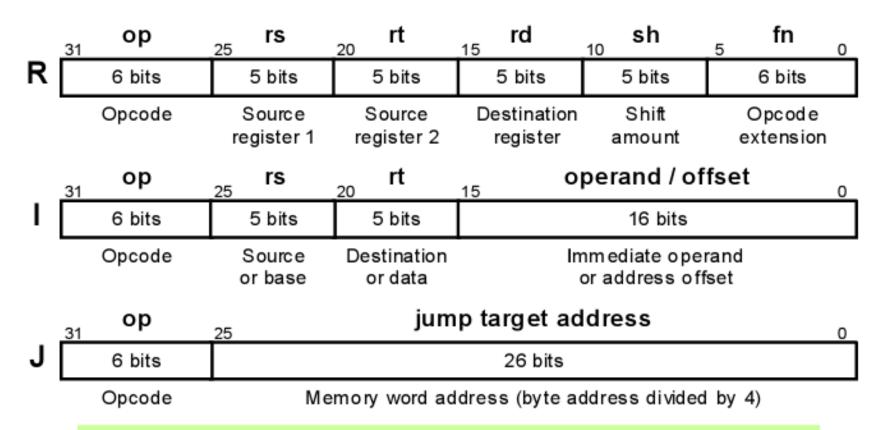


Figure 5.4 MiniMIPS instructions come in only three formats: register (R), immediate (I), and jump (J).

## Các khuôn dạng lệnh

# Phân tích khuôn dạng lệnh

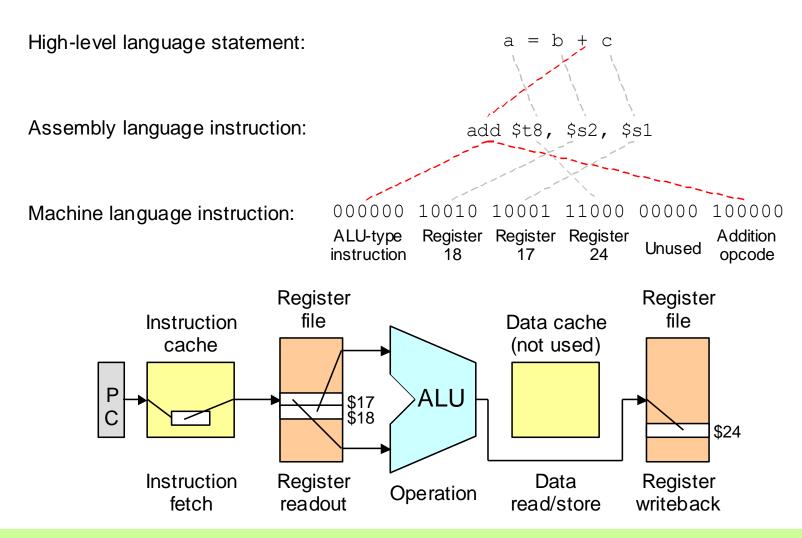

A typical instruction for MiniMIPS and steps in its execution.

## Simple Arithmetic/Logic Instructions

Add and subtract already discussed; logical instructions are similar

```
add $t0,$s0,$s1 # set $t0 to ($s0)+($s1)


sub $t0,$s0,$s1 # set $t0 to ($s0)-($s1)

and $t0,$s0,$s1 # set $t0 to ($s0)^($s1)

or $t0,$s0,$s1 # set $t0 to ($s0)^($s1)

xor $t0,$s0,$s1 # set $t0 to ($s0)^($s1)

nor $t0,$s0,$s1 # set $t0 to ($s0)^($s1)
```

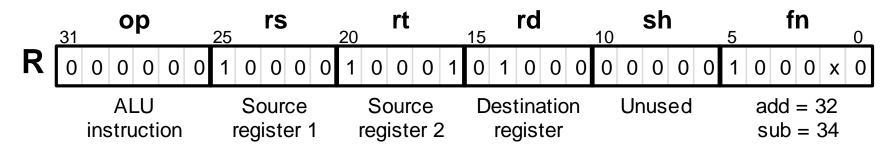

The arithmetic instructions add and sub have a format that is common to all two-operand ALU instructions. For these, the fn field specifies the arithmetic/logic operation to be performed.

## Arithmetic/Logic with One Immediate Operand

An operand in the range [–32 768, 32 767], or [0x0000, 0xfffff], can be specified in the immediate field.

```
addi $t0,$s0,61  # set $t0 to ($s0)+61

andi $t0,$s0,61  # set $t0 to ($s0)\wedge61

ori $t0,$s0,61  # set $t0 to ($s0)\vee61

xori $t0,$s0,0x00ff # set $t0 to ($s0)\oplus 0x00ff
```

For arithmetic instructions, the immediate operand is sign-extended


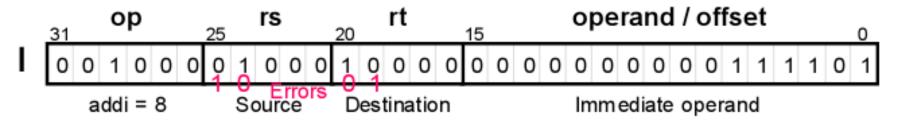


Figure 5.6 Instructions such as addi allow us to perform an arithmetic or logic operation for which one operand is a small constant.

## Load and Store Instructions

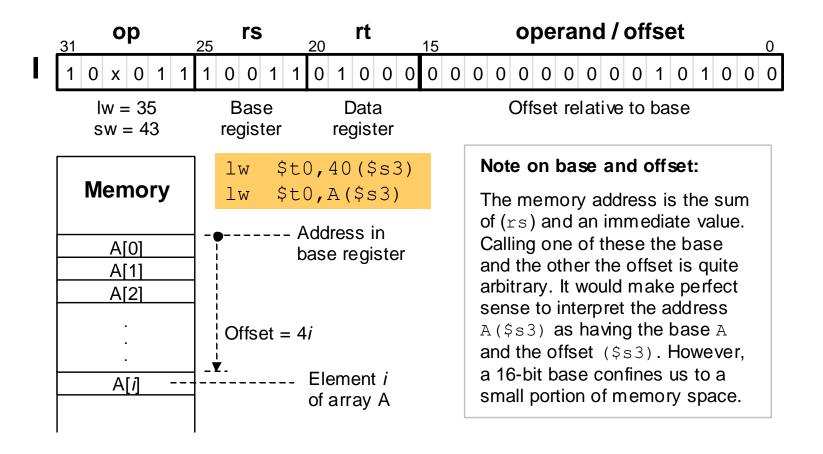

MiniMIPS  $1_W$  and  $s_W$  instructions and their memory addressing convention that allows for simple access to array elements via a base address and an offset (offset = 4i leads us to the ith word).

## lw, sw, and lui Instructions

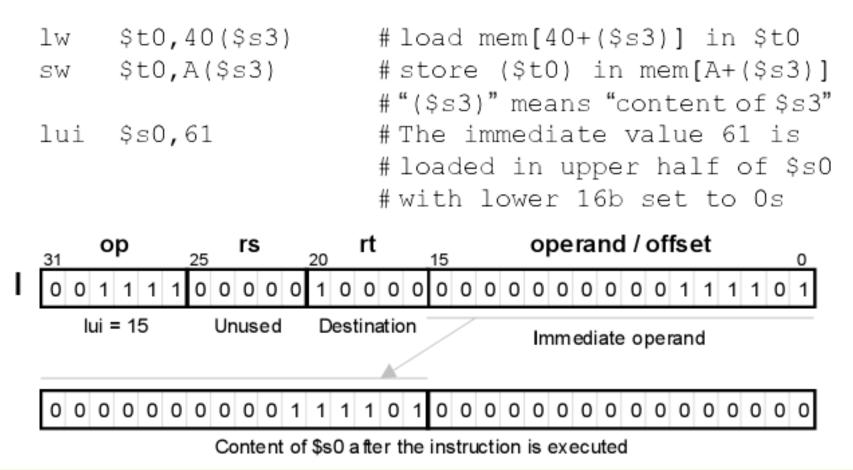


Figure 5.8 The lui instruction allows us to load an arbitrary 16-bit value into the upper half of a register while setting its lower half to 0s.



## Initializing a Register

#### Example 5.2

Show how each of these bit patterns can be loaded into \$s0:

```
0010 0001 0001 0000 0000 0000 0011 1101
1111 1111 1111 1111 1111 1111 1111
```

#### Solution

The first bit pattern has the hex representation: 0x2110003d

```
lui $s0,0x2110  # put the upper half in $s0
ori $s0,0x003d  # put the lower half in $s0
```

Same can be done, with immediate values changed to <code>0xffff</code> for the second bit pattern. But, the following is simpler and faster:

```
nor $s0,$zero,$zero #because (0 \ \ 0)' = 1
```



## 5.5 Jump and Branch Instructions

### Unconditional jump and jump through register instructions

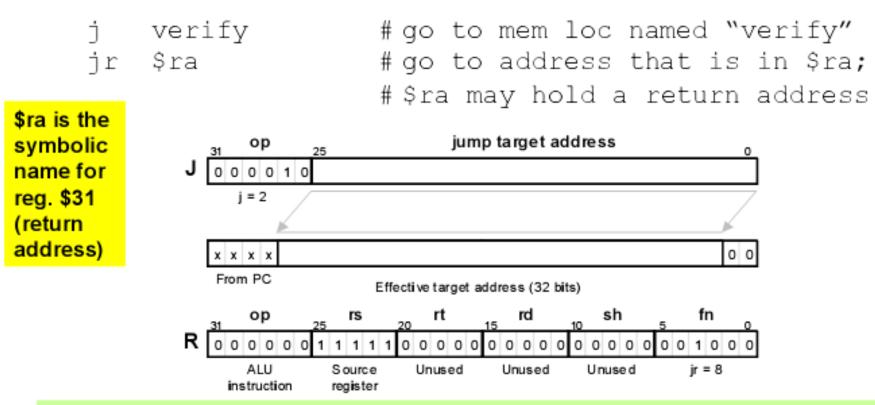


Figure 5.9 The jump instruction j of MiniMIPS is a J-type instruction which is shown along with how its effective target address is obtained. The jump register (jr) instruction is R-type, with its specified register often being \$ra.

### Conditional Branch Instructions

### Conditional branches use PC-relative addressing

```
# branch on (\$s1) < 0
bltz $s1,L
beq $s1,$s2,L
                         # branch on (\$s1) = (\$s2)
bne $s1,$s2,L
                         # branch on ($s1)≠($s2)
                                   operand / offset
                       rt
              rs
    op
                            15
  bltz = 1
             Source
                      Zero
                               Relative branch distance in words
                                   operand / offset
                       rt
    op
              rs
                            15
                    1 0 0 1
                            0 0 0 0 0 0 0 0 0 1
            Source 1
                               Relative branch distance in words
   beq = 4
                    Source 2
   bne = 5
```

Figure 5.10 (part 1) Conditional branch instructions of MiniMIPS.



## Comparison Instructions for Conditional Branching

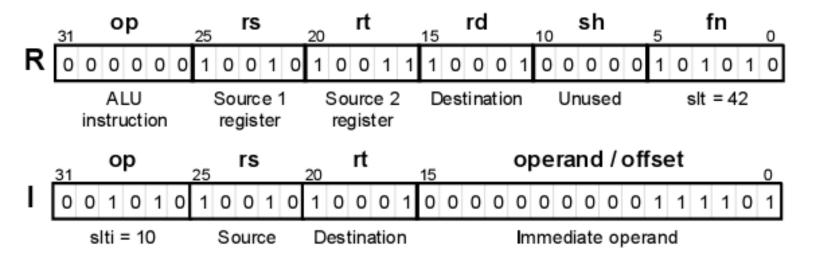


Figure 5.10 (part 2) Comparison instructions of MiniMIPS.





# **Examples for Conditional Branching**

If the branch target is too far to be reachable with a 16-bit offset (rare occurrence), the assembler automatically replaces the branch instruction beq \$s1,\$s2,L1 with:

```
bne \$s1,\$s2,L2 # skip jump if (s1) \neq (s2)
j L1 # goto L1 if (s1) = (s2)
L2: ...
```

Forming if-then constructs; e.g., if (i == j) x = x + y

```
bne \$s1,\$s2,endif \# branch on i\neq j add \$t1,\$t1,\$t2 \# execute the "then" part endif: ...
```

If the condition were (i < j), we would change the first line to:

```
slt $t0,$s1,$s2  # set $t0 to 1 if i<j
beq $t0,$0,endif  # branch if ($t0)=0;
# i.e., i not< j or i≥j</pre>
```

### Compiling if-then-else Statements

### Example 5.3

Show a sequence of MiniMIPS instructions corresponding to:

```
if (i<=j) x = x+1; z = 1; else y = y-1; z = 2*z
```

#### Solution

Similar to the "if-then" statement, but we need instructions for the "else" part and a way of skipping the "else" part after the "then" part.

```
slt $t0,$s2,$s1  # j<i? (inverse condition)
bne $t0,$zero,else # if j<i goto else part
addi $t1,$t1,1  # begin then part: x = x+1
addi $t3,$zero,1  # z = 1
j endif # skip the else part
else: addi $t2,$t2,-1  # begin else part: y = y-1
add $t3,$t3,$t3  # z = z+z
endif:...</pre>
```





### while Statements

### Example

```
The simple while loop: while (A[i]==k) i=i+1;
Assuming that: i, A, k are stored in $s1,$s2,$s3
```

#### **Solution**

```
loop: add $t1,$s1,$s1 # t1 = 4*i
    add $t1,$t1,$t1 #
    add $t1,$t1,$s2 # t1 = A + 4*i
    lw $t0,0($t1) # t0 = A[i]
    bne $t0,$s3,endwhl #
    addi $s1,$s1,1 #
    j loop #
endwhl: ... #
```

### switch Statements

### Example

#### The simple switch

```
switch(test) {
    case 0:
        a=a+1; break;
    case 1:
        a=a-1; break;
    case 2:
        b=2*b; break;
    default:
}
```

Assuming that: test, a, b are stored in \$s1,\$s2,\$s3

```
beq
             s1,t0,case 0
      beq s1,t1,case 1
      beq s1,t2,case 2
             default
      b
case 0:
      addi s2,s2,1
                           #a = a + 1
             continue
      b
case 1:
      sub s2,s2,t1
                           \#a = a - 1
             continue
      b
case 2:
      add s3,s3,s3
                           \#b = 2 * b
             continue
      b
default:
continue:
```

## 5.6 Addressing Modes

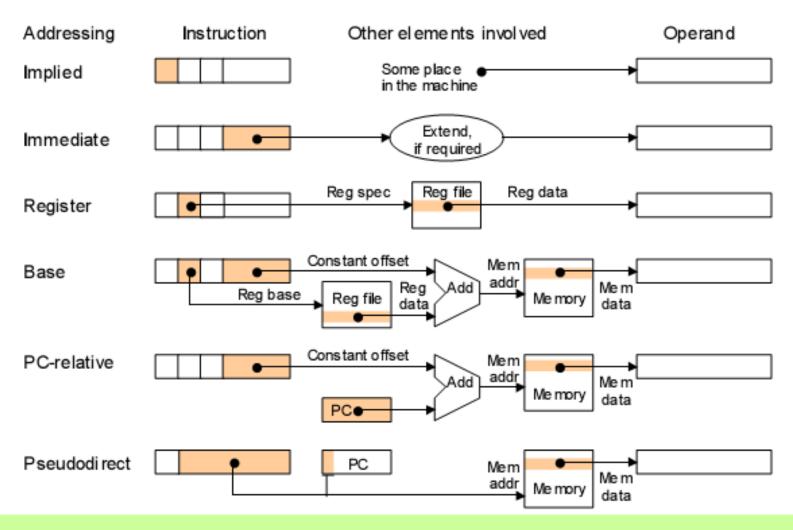


Figure 5.11 Schematic representation of addressing modes in MiniMIPS.



#### The 20 MiniMIPS Instruction Usage op 15 Instructions rt,imm Load upper immediate lui Copy 32 Add add rd, rs, rt Covered So Far 34 Subtract sub rd, rs, rt 42 0 Set less than slt rd, rs, rt Arithmetic 8 Add immediate addi rt, rs, imm 10 Set less than immediate sltí rd, rs, imm 0 36 AND and rd, rs, rt 37 OR rd, rs, rt or 38 XOR rd, rs, rt xor 0 39 NOR rd, rs, rt Logic nor 12 AND immediate andi rt, rs, imm 13 OR immediate ori rt, rs, imm 14 XOR immediate rt, rs, imm xori 35 rt, imm(rs) Load word lw Memory access 43 Store word rt,imm(rs) SW 2 L Jump 0 8 Jump register jr rs Control transfer Branch less than 0 bltz rs,L 4 Branch equal beg rs,rt,L





rs,rt,L

bne

Table 5.1

Branch not equal

5

### **PSEUDO INSTRUCTION**

- · Là "lệnh giả"
- Thực chất khi thực hiện "lệnh giả", vi xử lý phải thực hiện 1 hay 1 số Real Instruction nào đó.
- **Ví dụ:** abs \$t0,\$s0

```
# $t0=|$s0|
```

## chính là các lệnh real sau:

```
add $t0,$s0,$zero # lưu giá trị x vào $t0 slt $at,$t0,$zero # x có là số âm?
beq $at,$zero,+4 # nếu x không âm nhảy đến lệnh tiếp theo
sub $t0,$zero,$s0 # x có là số dương?
```


# Chương trình con và Stack

Để gọi chương trình con: ta sử dụng lệnh

```
jal ( jump and link)
```


 Khi đó để trở lại thân hàm chính, ta dùng lệnh †r \$ra

# Gọi chương trình con

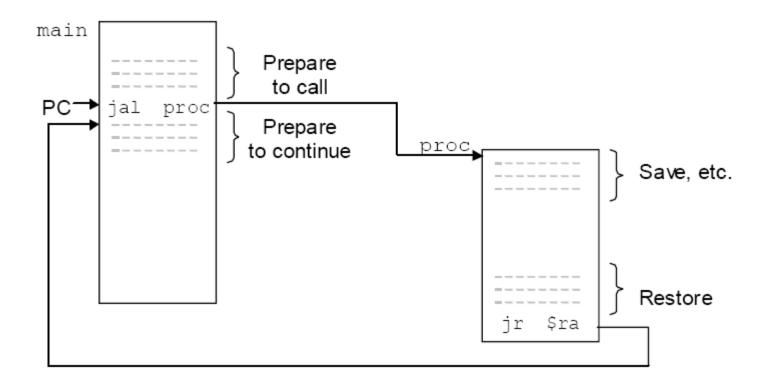


## Hàm lồng trong hàm


### **Nested Procedure Calls**

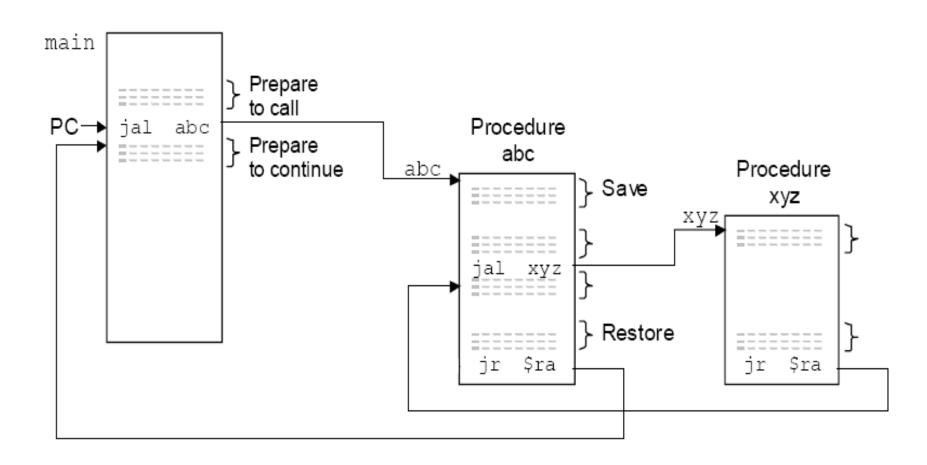


# Stack

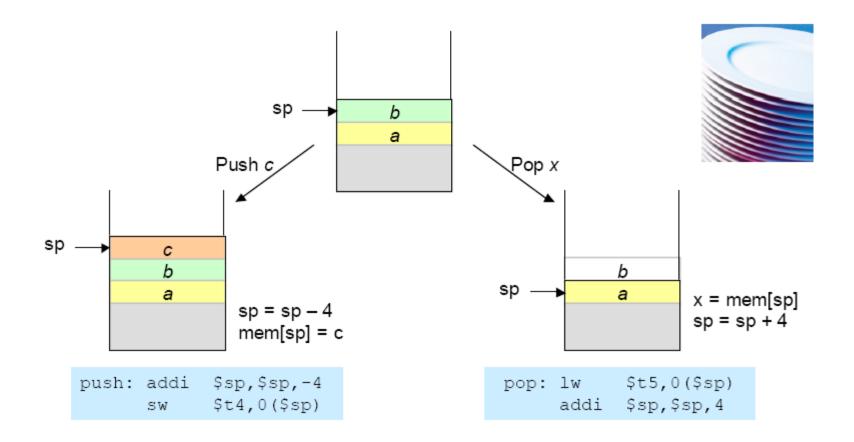

# Memory Map

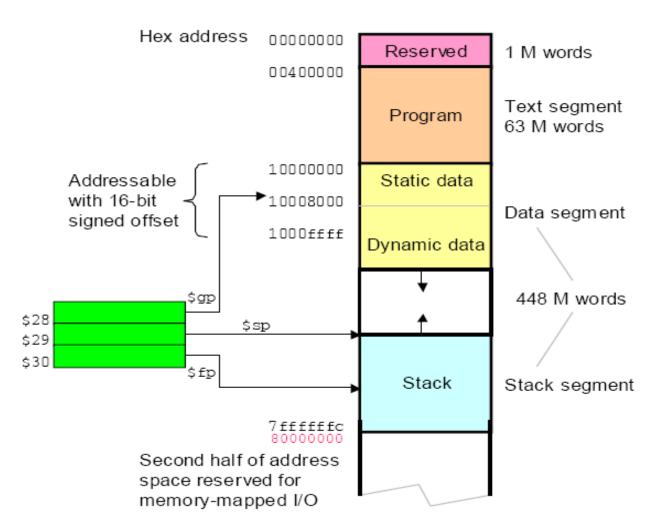

# \$sp và \$fp

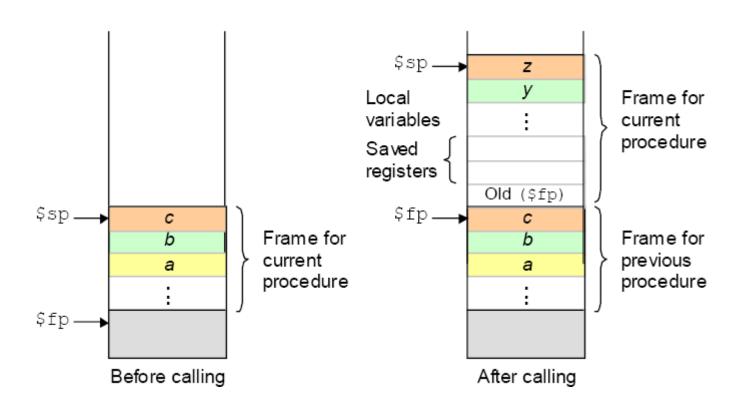

# Ví dụ về \$sp và \$fp

```
proc: sw $fp,-4($sp) # save the old frame pointer
                addi $fp,$sp,0  # save ($sp) into $fp
                addi $sp,$sp,-12 # create 3 spaces on top of stack
                     $ra,-8($fp) # save ($ra) in 2nd stack element
                SW
                     $s0,-12($fp) # save ($s0) in top stack element
                SW
$sp -
       ($s0)
       (Şra)
       ($fp)
                     $s0,-12($fp) # put top stack element in $s0
                lw
$sp
$fp
                lw
                     $ra,-8($fp) # put 2nd stack element in $ra
                addi $sp,$fp, 0  # restore $sp to original state
$fp →
                     $fp,-4($sp) # restore $fp to original state
                lw
                jr
                     $ra # return from procedure
```

# Khung chương trình hợp ngữ

Giống 8086, chương trình hợp ngữ cho MIPS bao gồm các thành phần

- >Định hướng biên dịch
- ≻Lệnh
- ➤Giả lệnh

# Khung chương trình hợp ngữ

```
#include <iregdef.h>
.data
#Khai báo biến
.text
.globl start
.ent start
start:
#Nội dung chương trình chính
.end start
.ent CTCon
CTCon:
#Nội dung chương trình con
.end CTCon
```

# Chương trình ví dụ

```
#include <iregdef.h>
.data
test: .asciiz "Hello World"
.text
.set noreorder
.globl start
.ent start
start:
                   #load the address of test string to a0
  la a0,test
  jal printf
                   #print test tring to console
.end start
```

# Pipelined MIPS

