


SDA TAKEOVER / REPEATED START

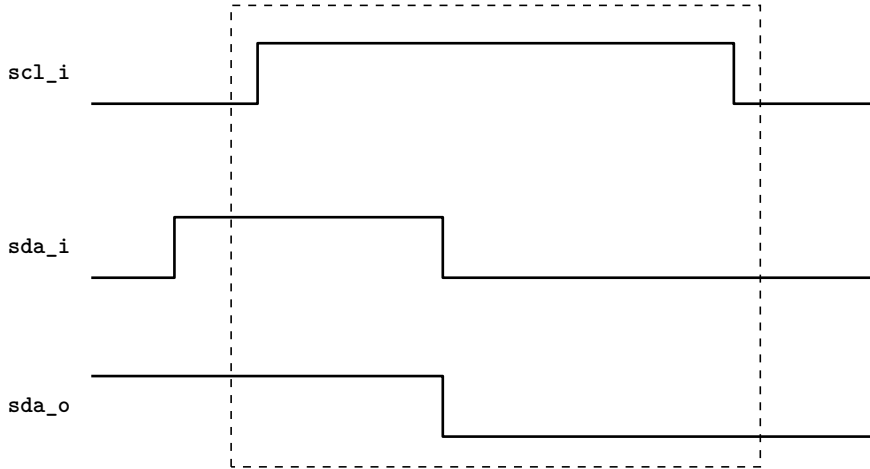

The Controller samples `sda_i=1`, waits for the Target release time, then drives `sda_o=0`. Therefore `sda_i`: 1 $\rightarrow$ 0 while `scl_i=1`, forming a Repeated START (Sr).

`sda_o`: 1 = release (high-Z) 0 = open-drain low