
L7 7-track looper for the M8 · cheatsheet

[A] = EDIT [B] = OPT

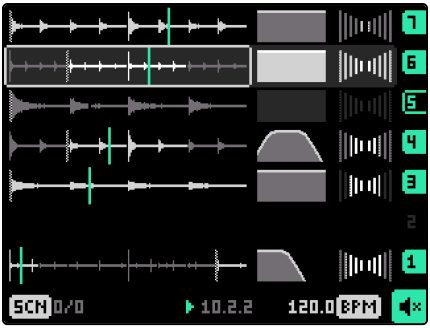

- **Tracks 7–1**, top to bottom: **waveform** (bright part plays), **filter**, **volume** (level, balance, meter), then the track's button (filled: playing, outlined: muted).
- **Status row**: scene SCN 3/7, clock (bar.beat.step), tempo, and the **action button**, which shows what [A] will do.
- Arrows off any edge: the **menu** (projects, export, storage mode, settings, help).

MOVE

[▲] [▼] [◀] [▶]	Select a row / a cell
Off any edge	The menu, once you let go; back the same way
[◀]+[▶] held	Menu / looper, from anywhere (press both)

TRACKS

[A] empty track	Record from the next bar line (stopped: starts the clock). Again: stop at the bar's end (0.1 s late: still that bar line)
[A] other track	While one records: stop it, the next starts where it ends
[A] full track	Mute / unmute (held +[▲] [▼]: swipe; back: undo)
[SHIFT]+[A]	Cut clip / paste onto an empty track / cancel a recording
[SHIFT]+[◀] [▶]	Previous / next recording on the card
[B]+[A] empty track	Resample what you hear (a new scene)

Loops are whole bars, up to 32. A metronome clicks in a new project until the first loop is done.

STATUS ROW WITH A

Scene cell	[A] next scene (on release) · [SHIFT]+[A] duplicate it
Clock cell	[A] play / stop · [B]+[A] (any cell) metronome on/off
Tempo cell	[A] tap tempo · [SHIFT]+[A] audio follow

CLOCK

[START]	Play from 1.1.1 / stop
[SHIFT]+[START]	Resume (playing: restart)
MIDI / USB	Follows a clock's tempo, Start and Stop; sends its own

ADJUST: HOLD B + ARROWS

CELL	◀ ▶	▲ ▼
Waveform	Move the range	Range longer / shorter
Any +A	Nudge ¼ beat (held: ms steps)	Move it
Filter	Move the band	Wider / narrower
Volume	Balance	Volume (1.875 dB steps)
Track	[B]+[A]+[▲] [▼]: move a track with a clip	
Clock	Master volume ▲▼ (to 200%), balance ◀▶ (per project)	
Tempo	±0.1 BPM	±1 BPM

[B] twice: reset the cell (whole loop, filter open, unity, centre; clock: master 100%; tempo: the scene's).

SCENES

[SHIFT]+[▲] [▼]	Next / previous scene, on the beat after you let go of SHIFT
…three quick taps	To the copy of the last (N+1*) / the empty one (0*)
[SHIFT]+[B] twice	Duplicate the scene
[SHIFT] [B] [A]	Cut the scene (in that order)
[B] [SHIFT] [A]	Paste it after this one

Changes save into the scene as you go.

MENU

[A] on a card	Load it (playing: on the next bar line, its card flashes until then). Hold: back to the looper too
[A] empty card	New project, straight to the looper
[A] loaded card	Back to the looper
[SHIFT]+[A]	Cut a project (hold) / paste into a slot
Export	Ableton Live set in /L7/EXPORTS
Storage mode	The card as a USB drive; any key to exit

[B] works as [A] in the menu.