
# L7 7-track looper for the M8 · cheatsheet

A = EDIT B = OPT

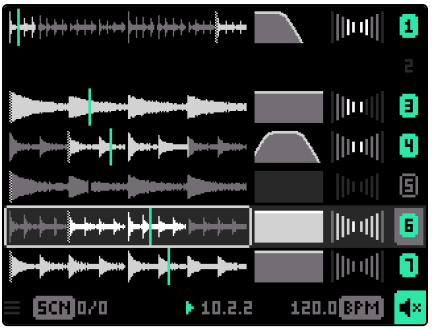


- **Tracks 7–1**, top to bottom: **waveform** (bright part plays), **filter**, **volume** (level, balance, meter), then the track's button (filled: playing, outlined: muted).
- **Status row**: scene SCN 3/7, clock (bar.beat.step), tempo, and the **action button**, which shows what A will do.
- The small icon at the bottom left: the **menu** (projects, export, storage mode).

## MOVE

| | |
|---|---|
| ▲ ▼ ◀ ▶ | Select a row / a cell |
| Off any edge | The menu, once you let go; back the same way |
| ◀ + ▶ held | Switch screens from anywhere (press both together) |

## TRACKS

| | |
|---|---|
| A empty track | Record from the next bar line (clock stopped: starts it, bar 1). Again: stop at the bar's end; within a beat after a bar line, there |
| A other track | While one records: stop it, the next starts where it ends |
| A full track | Mute / unmute (held + ▲ ▼: swipe; back: undo) |
| SHIFT + A | Cut clip / paste onto an empty track / cancel a recording |
| SHIFT + ◀ ▶ | Previous / next recording on the card |
| B + A empty track | Resample: record what you hear (needs a clip playing) |

Loops are whole bars, up to 32. A metronome clicks in a new project until the first loop is done.

## STATUS ROW WITH A

| | |
|---|---|
| Scene cell | A next scene (on release) · SHIFT + A duplicate it |
| Clock cell | A play / stop · B + A (any cell) metronome on/off |
| Tempo cell | A tap tempo · SHIFT + A audio follow |

## CLOCK

| | |
|---|---|
| START | Play from 1.1.1 / stop |
| SHIFT + START | Resume (playing: restart) |
| MIDI / USB | Follows a clock's tempo, Start and Stop; sends its own |

## ADJUST: HOLD B + ARROWS

| CELL | ◀ ▶ | ▲ ▼ |
|---|---|---|
| **Waveform** | Move the range | Range longer / shorter |
| **Any +A** | Nudge ¼ beat (held: ms steps) | Move it |
| **Filter** | Move the band | Wider / narrower |
| **Volume** | Balance | Volume (1.875 dB steps) |
| **Track** | B + A + ▲ ▼: move a track with a clip | |
| **Clock** | Master volume ▲▼, balance ◀ ▶ (all projects) | |
| **Tempo** | ±0.1 BPM | ±1 BPM |

B twice: reset the cell (whole loop, filter open, unity, centre; clock: master 100%; tempo: the scene's).

## SCENES

| | |
|---|---|
| SHIFT + ▲ ▼ | Next / previous scene, on the bar line after you let go of SHIFT |
| …three quick taps | To the copy of the last (N+1*) / the empty one (0*) |
| SHIFT + B twice | Duplicate the scene |
| SHIFT B A | Cut the scene (in that order) |
| B SHIFT A | Paste it after this one |

Changes save into the scene as you go.

## MENU

| | |
|---|---|
| A on a card | Load it (playing: on the next bar line, its card flashes until then). Hold: back to the looper too |
| A empty card | New project, straight to the looper |
| A loaded card | Back to the looper |
| SHIFT + A | Cut project / paste into an empty slot |
| Export | Ableton Live set in /L7/EXPORTS |
| Storage mode | The card as a USB drive; any key to exit |

B works as A in the menu.

Hold the power key to switch off: everything is saved first.

Full guide: L7 User Guide.pdf