Licensing the VM-Series Firewall

When you purchase a VM-Series firewall, you receive a set of auth-codes over email. Typically the email includes a capacity auth-code for the model purchased (VM-100, VM-200, VM300, VM-1000-HV), a software and support auth-code (for example, PAN-SVC-PREM-VM-100 SKU auth-code) that provides access to software/content updates and support. If you purchased additional subscriptions for Threat Prevention, URL Filtering, GlobalProtect, or WildFire, a list of the other auth-codes purchased with the order are included.

If you do not have an existing support account, you must use the capacity auth-code to register and create an account on the support portal. After your account is verified and the registration is complete, you will be able to log in and download the software package required to install the VM-Series firewall. If you have an existing support account, you can access the **VM-Series Authentication Code** link on the support portal to manage your VM-Series firewall licenses and download the software.

If you have an evaluation copy of the VM-Series firewall and would like to convert it to a fully licensed (purchased) copy, clone your VM-Series firewall and use the instructions to register and license the purchased copy of your VM-Series firewall. For instructions, see Upgrade the VM-Series Model (Standalone Version Only).

To license your VM-Series firewall, see the following sections:

- Create a Support Account
- Register the VM-Series Firewall
- Activate the License

For instructions on installing your VM-Series firewall, refer to the VM-Series Deployment Guide.

Create a Support Account

A support account is required to manage your VM-Series firewall licenses and to download the software package required to install the VM-Series firewall. If you have an existing support account, continue with Register the VM-Series Firewall.

Create a Support Account

1. Log in to https://support.paloaltonetworks.com.
2. Click **Register** and fill in the details in the user registration form. You must use the capacity auth-code and the purchase or sales order number to register and create an account on the support portal.
3. **Submit** the form. You will receive an email with a link to activate the user account; complete the steps to activate the account.


   After your account is verified and the registration is complete, you will be able to log in and download the software package required to install the VM-Series firewall.

Register the VM-Series Firewall

Use the instructions in this section to register your capacity auth-code with your support account.


Register the VM-Series Firewall

1. Log in to https://support.paloaltonetworks.com with your account credentials.
2. Select **Assets** and click **Add VM-Series Auth-Codes.**

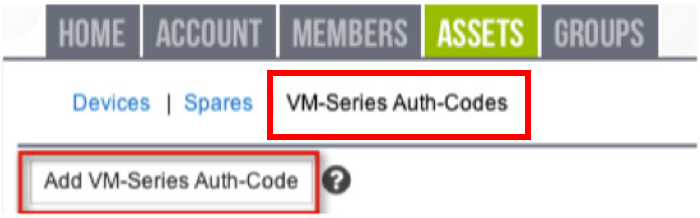

3. In the **Add VM-Series Auth-Code** field, enter the capacity auth-code you received by email, and click the checkmark to save your input. The page will display the list of auth-codes registered to your support account.

   You can track the number of VM-Series firewalls that have been deployed and the number of licenses that are still available for use against each auth-code. When all the available licenses are used, the auth-code does not display on the VM-Series Auth-Codes page. To view all the assets that are deployed, select **Assets > Devices**.

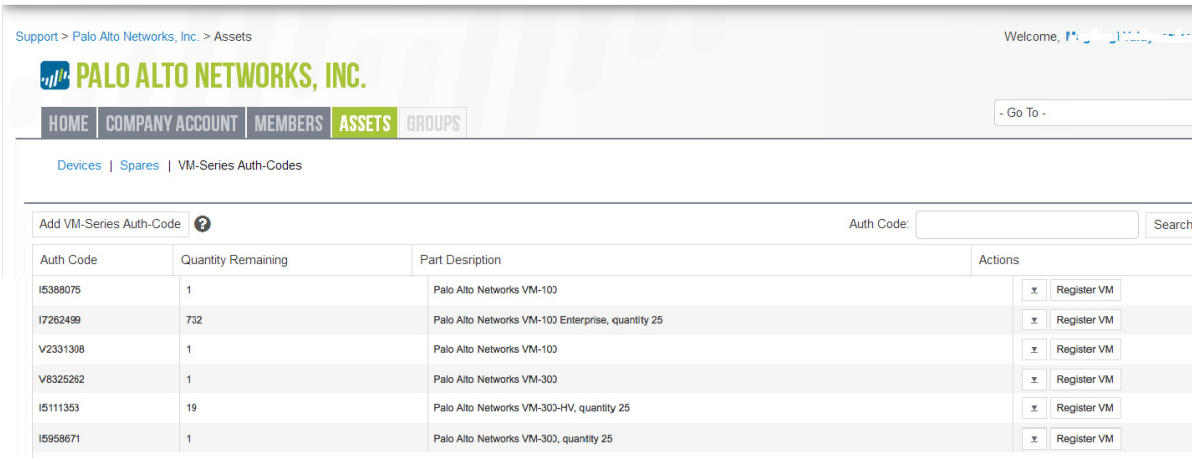

Activate the License

Until you activate the license on the VM-Series firewall, the firewall does not have a serial number, the MAC address of the dataplane interfaces are not unique, and only a minimal number of sessions are supported. Because the MAC addresses are not unique until the firewall is licensed, to prevent issues caused by overlapping MAC addresses, make sure that you do not have multiple, unlicensed VM-Series firewalls.

When you activate the license, the licensing server uses the UUID and the CPU ID of the virtual machine to generate a unique serial number for the VM-Series firewall. The capacity auth-code in conjunction with the serial number is used to validate your entitlement.

- Activate the License for the VM-Series Firewall (Standalone Version)
- Activate the License for the VM-Series NSX Edition Firewall


Activate the License for the VM-Series Firewall (Standalone Version)

To activate the license on your VM-Series firewall, you must have deployed the VM-Series firewall and completed initial configuration. For instructions to deploy the VM-Series firewall, refer to the VM-Series Deployment Guide.

Activate the License	
• If your VM-Series firewall has direct Internet access.	1. Select **Device >Licenses** and select the **Activate feature using authentication code** link. 2. Enter the capacity auth-code that you registered on the support portal. The firewall will connect to the update server (updates.paloaltonetworks.com), and download the license and reboot automatically. 3. Log back in to the web interface and confirm that the **Dashboard** displays a valid serial number. If the term *Unknown* displays, it means the device is not licensed. 4. On **Device > Licenses**, verify that **PA-VM** license is added to the device.

Activate the License

- If your VM-Series firewall does not have Internet access.

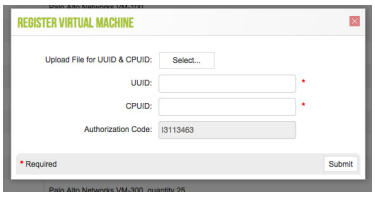

1. Navigate to **Device > Licenses** and click the **Activate Feature using Auth Code** link.
2. Click **Download Authorization File**, and download the *authorizationfile.txt* on the client machine.
3. Copy the *authorizationfile.txt* to a computer that has access to the Internet and log in to the support portal. Click **My VM-Series Auth-Codes** link and select the applicable auth-code from the list and click the **Register VM** link.
4. On the **Register Virtual Machine** tab upload the authorization file. This will complete the registration process and the serial number of your VM-Series firewall will be attached to your account records.
5. Navigate to **Assets > My Devices** and search for the VM-Series device just registered and click the **PA-VM** link. This will download the VM-Series license key to the client machine.
6. Copy the license key to the machine that can access the web interface of the VM-Series firewall and navigate to **Device > Licenses**.
7. Click **Manually Upload License** link and enter the license key. When the capacity license is activated on the firewall, a reboot occurs.
8. Log in to the device and confirm that the **Dashboard** displays a valid serial number and that the **PA-VM** license displays in the **Device > Licenses** tab.

Activate the License for the VM-Series NSX Edition Firewall

Panorama serves as the central point of administration for the VM-Series NSX edition firewalls and the license activation process is automated. When a new VM-Series NSX edition firewall is deployed, it communicates with Panorama to obtain the license. Therefore, you need to make sure that Panorama has internet access and can connect to the Palo Alto Networks update server to retrieve the licenses. For an overview of the components and requirements for deploying the VM-Series NSX edition firewall, refer to the VM-Series Deployment Guide.

In order to activate the capacity license, you must have completed the following tasks:

- Registered the auth-code to the support account. If you don't register the auth-code, the licensing server will fail to create a license.
- Configured the VMware Service Manager and entered this auth-code on Panorama. On Panorama, select **VMWare Service Manager** to add the **Authorization Code**.



Each evaluation auth-code allows you to license up to 5 VM-Series firewalls with the VM-1000-HV capacity license. Because this solution allows you to deploy one VM-Series firewall per ESXi host, when using an evaluation license, the ESXi cluster can include a maximum of 5 ESXi hosts.

For this integrated solution, the evaluation auth-code includes licenses for threat prevention, URL filtering and WildFire subscriptions and premium support for the requested evaluation period (typically for 30 or 60 days).

In order to activate the licenses, complete the following tasks:

- Verify that the VM-Series firewalls that you just deployed, display as **Managed Devices** and are connected to Panorama.
- Select **Panorama > Device Deployment > Licenses** and click **Refresh.** Select the VM-Series firewalls for which to retrieve subscription licenses and click **OK**.

  Panorama will apply the licenses to each firewall that has been deployed with the matching auth-code.

Upgrade the VM-Series Model (Standalone Version Only)

The licensing process for the VM-Series firewall uses the UUID and the CPU ID to generate a unique serial number for each VM-Series firewall. Hence, when you generate a license, the license is mapped to a specific instance of the VM-Series firewall and cannot be modified.

In order to apply a new capacity license to a firewall that has been previously licensed, you need to clone the existing (fully configured) VM-Series firewall and apply a new license to the cloned instance of the firewall.

Use the instructions in this section, if you are:

- Migrating from an evaluation license to a production license.
- Upgrading the model to allow for increased capacity. For example you want to upgrade from the VM-200 to the VM-1000-HV license.

Migrate the License on the VM-Series Firewall		
Step 1	Power off the VM-Series firewall.	
Step 2	Clone the VM-Series firewall.	If you are manually cloning, when prompted indicate that you are copying and not moving the firewall.
Step 3	Power on the new instance of the VM-Series firewall.	1. Launch the serial console of the firewall on the vSphere/SDX web interface and enter the following command: `show system info` 2. Verify that: • the serial number is unknown • the firewall has no licenses • the configuration is intact
Step 4	Register the new auth-code on the support portal.	See Register the VM-Series Firewall.
Step 5	Apply the new license.	See Activate the License.

Palo Alto Networks, Inc.
www.paloaltonetworks.com
© 2014 Palo Alto Networks. All rights reserved.
Palo Alto Networks, PAN-OS, and Panorama are trademarks of Palo Alto Networks, Inc. All other trademarks are the property of their respective owners.