1. CABLE ENTRY (RJ45 jack, field-crimped plug, NOT-ETHERNET T568B map) [P4, A4, ADR-0001/0004]

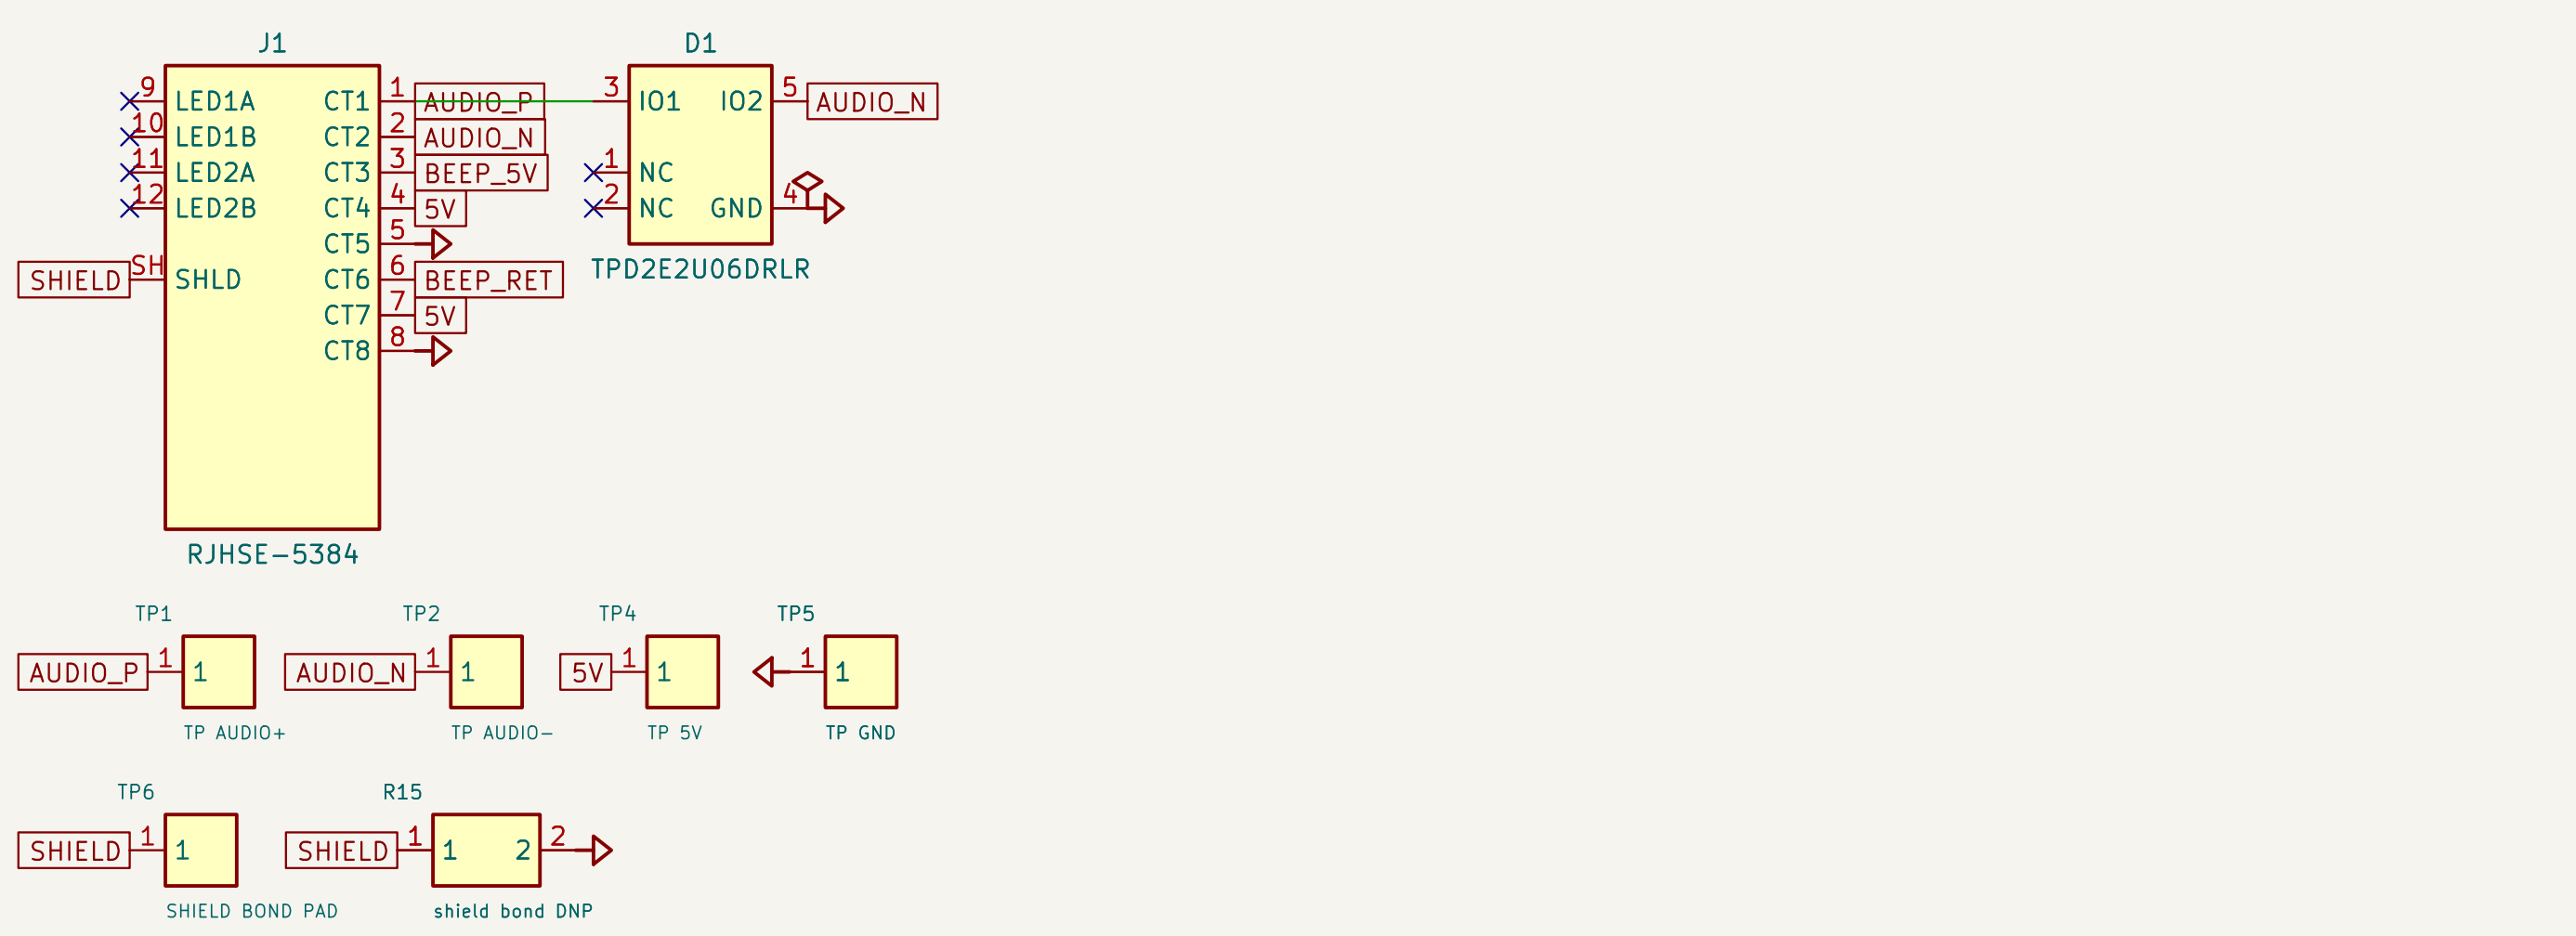

2. CALIBRATION BEEPER (central-switched; clamp: flyback pop., TVS empty) [ADR-0002]

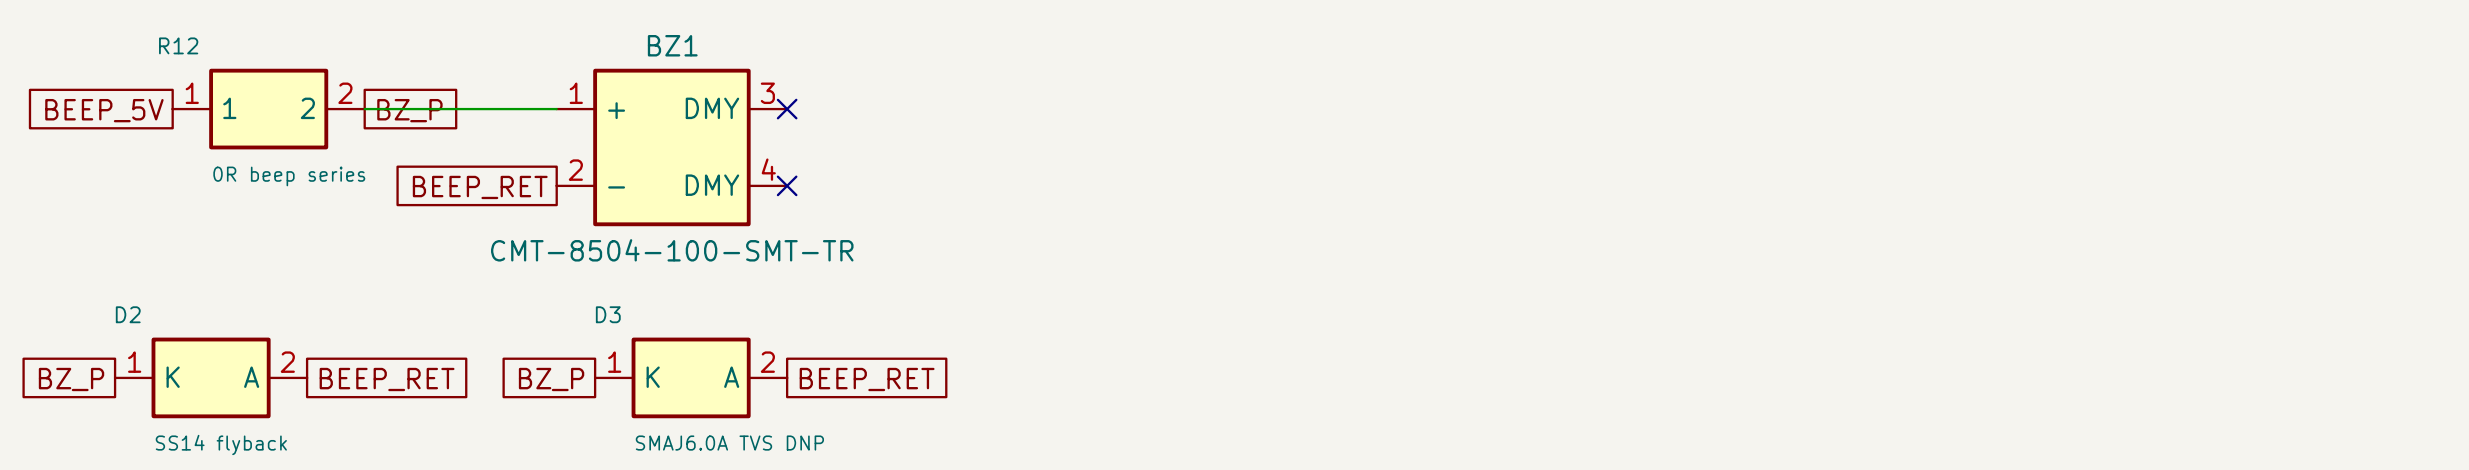

3. FILTERED 5VF: mic bias + midpoint reference supply [D9]



4. MIC INPUT: 3.9k bias, 1u coupling, 100k to midpoint [source doc table]

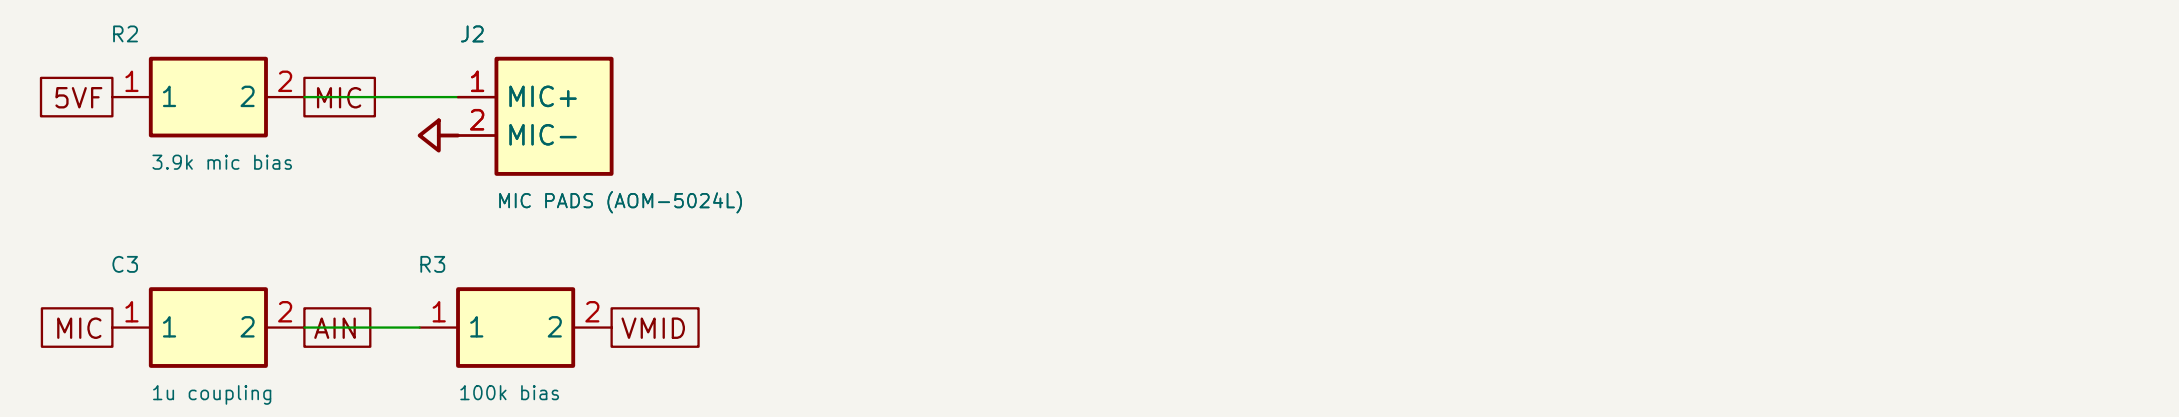

5. 2.5V MIDPOINT: 10k/10k from 5VF, 10u||100n [source doc table]

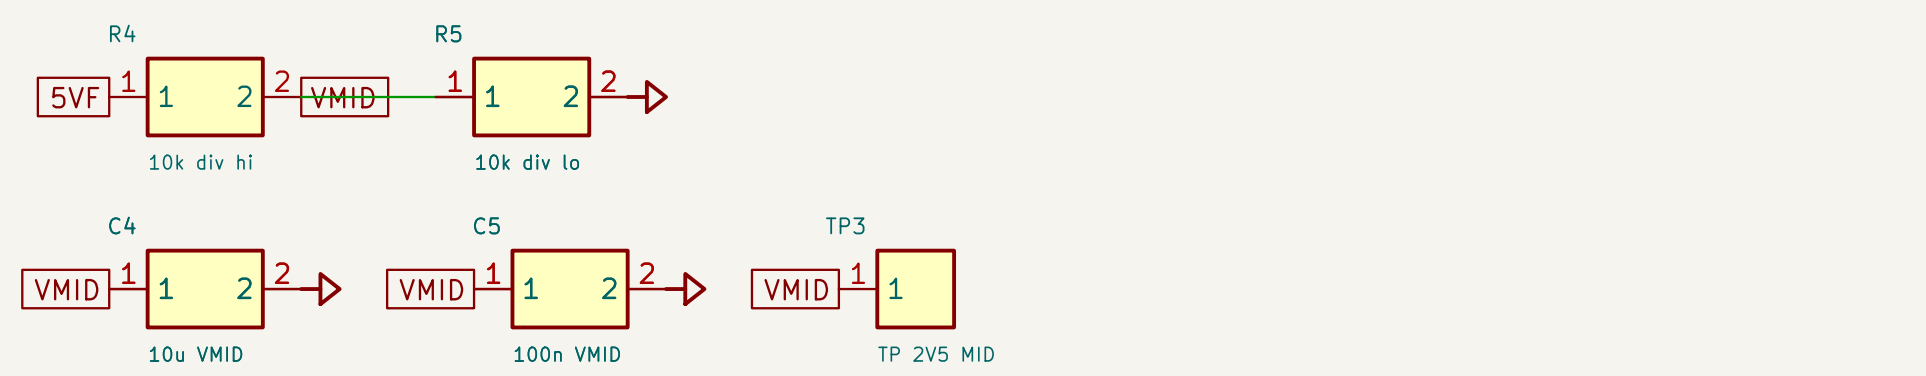

6. OPA1678: A = x1.5 non-inv, B = unity inverter -> diff x3 [source doc table]

7. OUTPUT: 68R/leg -> CM-choke reserve (0R bridged) -> pair [D7]

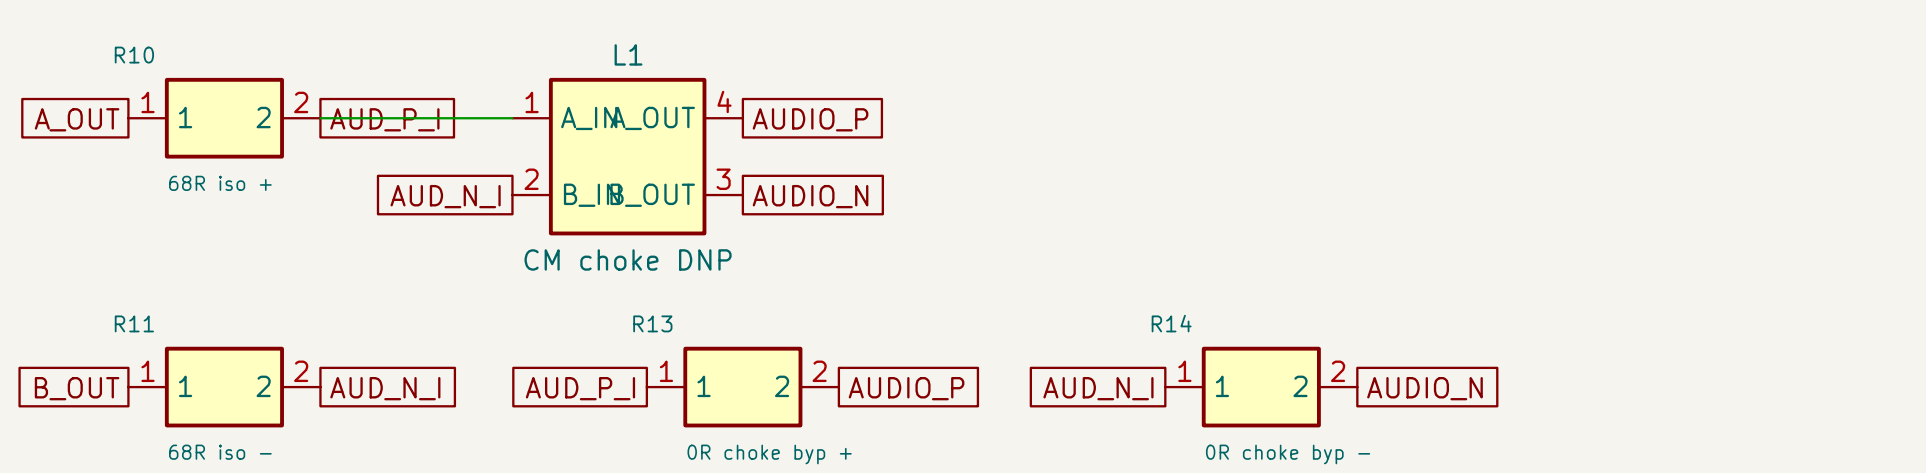

Remote mic pod: AOM-5024L + OPA1678 balanced driver + CMT-8504 beeper; crow-array commissio

Sheet: /
File: crow_array_pod.kicad_sch

Title: crow-array-pod

Size: A3 Date: 2026-07-19 Rev: v1.1
KiCad E.D.A. 10.0.4 Id: 1/1