




1. CABLE ENTRY (RJ45 jack, field-crimped plug, NOT-ETHERNET T568B map) [P4, A4, ADR-0001/0004]

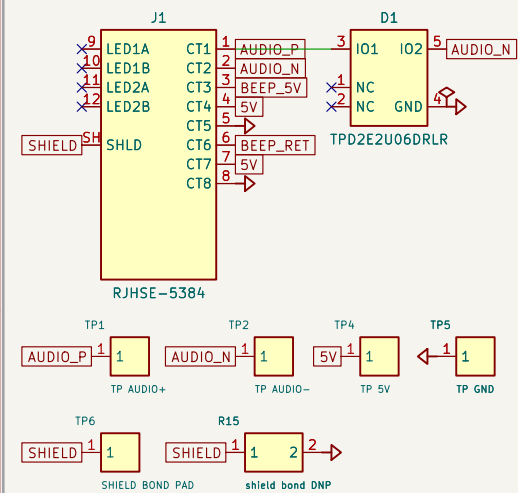


3. FILTERED 5VF: mic bias + midpoint reference supply [D9]




4. MIC INPUT: 3.9k bias, 1u coupling, 100k to midpoint [source doc table]

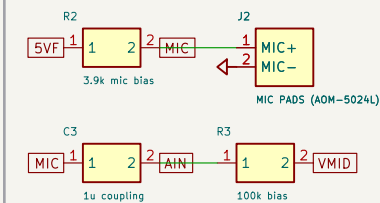


5. 2.5V MIDPOINT: 10k/10k from 5VF, 10u | 100n [source doc table]

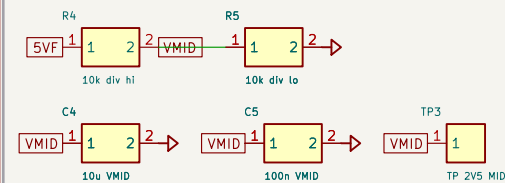


6. OPA1678: A = x1.5 non-inv, B = unity inverter $\rightarrow$ diff x3 [source doc table]

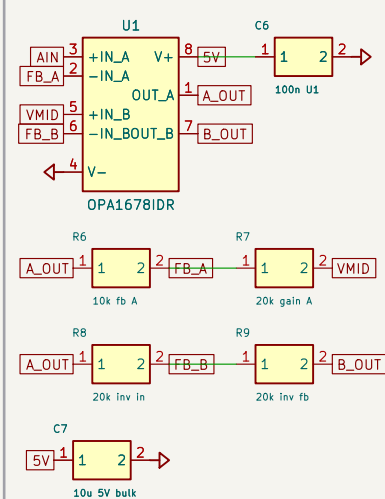

7. OUTPUT: 68R/leg -> CM-choke reserve (0R bridged) -> pair [D7]

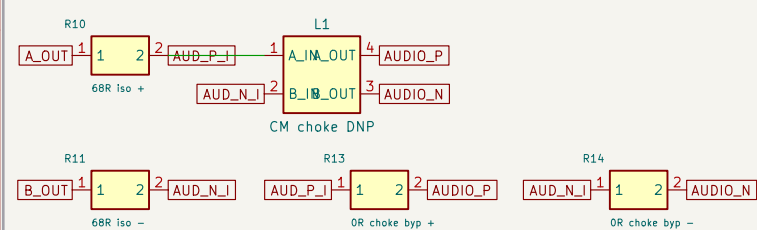

2. CALIBRATION BEEPER (central-switched; clamp: flyback pop., TVS empty) [ADR-0002]

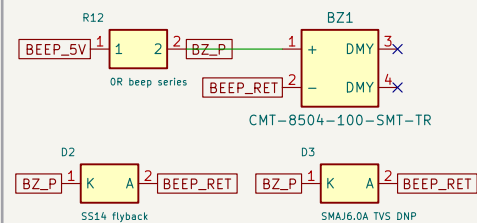

Remote mic pod: AOM-5024L + OPA1678 balanced driver + CMT-8504 beeper; crow-array commission

Sheet: /
File: crow_array_pod.kicad_sch

Title: *crow-array-pod*

Size: A3	Date: 2026-07-19
----------	------------------

KiCad E.D.A. 10.0.4

Date: 2026-07-19

Rev: dev

Id: 1/1