



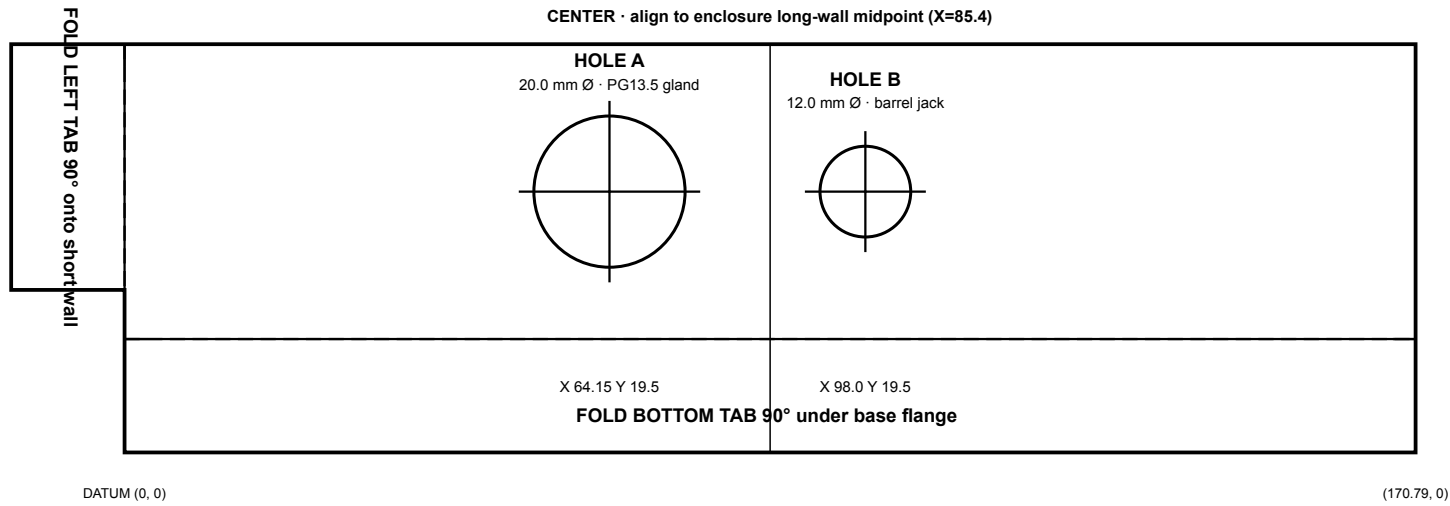

CALIBRATION

Verify with calipers BEFORE cutting. Must read 100.0 ± 0.1 mm.



Azul main-controller-v1 · enclosure drill template · v6 · 2026-08-25

Enclosure: Polycase WP-24BF*15 · target: long side wall opposite antenna

Datum (0, 0): top-left corner of long wall viewed from outside. Y grows downward.

Hole A · 20.0 mm Ø PG13.5 gland · center at (X=64.15, Y=19.5) mm · Bay 2 midpoint

Hole B · 12.0 mm Ø barrel jack · center at (X=98.0, Y=19.5) mm · Bay 3, tightest safe position (clears SSR + Bay 2/3 rib pair for nut swing)

Centerline at wall X=85.4 mm (long-wall midpoint) for pre-adhesive alignment.

PRINT INSTRUCTIONS

Letter or A4 · LANDSCAPE · 100% actual size · No fit-to-page · No auto-scaling

Verify the 100 mm calibration line above with calipers before proceeding.

If off by more than ±0.1 mm, reprint with a different driver setting.

APPLICATION

1. Wipe target wall + bottom flange + adjacent short wall with isopropyl alcohol.
2. Independently mark the long-wall midpoint on the enclosure (calipers from each corner).
3. Cut template along its solid outer outline. Peel adhesive backing.
4. Align template CENTERLINE (thin vertical line) to your enclosure center mark.
5. Fold BOTTOM tab under the base flange; fold LEFT tab 90° onto adjacent short wall.
6. Burnish flat. Center-punch through crosshairs before removing the template.