
Lab 8: Martin Kousal

Link to this file in your GitHub repository:

https://github.com/mkousal/Digital-electronics-2/blob/main/Labs/08-i2c/README.md

Arduino Uno pinout

- 1. In the picture of the Arduino Uno board, mark the pins that can be used for the following functions:
 - PWM generators from Timer0, Timer1, Timer2
 - o analog channels for ADC
 - UART pins
 - o I2C pins
 - SPI pins
 - external interrupt pins INT0, INT1

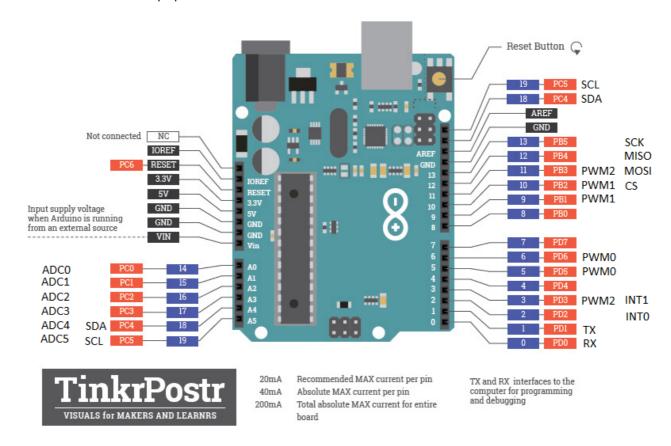

I2C

1. Code listing of Timer1 overflow interrupt service routine for scanning I2C devices and rendering a clear table on the UART.

```
/* Interrupt service routines -----*/
/*******************
* Function: Timer/Counter1 overflow interrupt
* Purpose: Update Finite State Machine and test I2C slave addresses
* between 8 and 119.
```

```
ISR(TIMER1_OVF_vect)
{
   static state_t state = STATE_IDLE; // Current state of the FSM
   static state_t = 7;
                                  // I2C slave address
                                 // ACK result from the bus
   uint8_t result = 1;
   char uart_string[2] = "00"; // String for converting numbers by itoa()
   // FSM
   switch (state)
   // Increment I2C slave address
   case STATE_IDLE:
      addr++;
      if (addr > 7 \&\& addr < 120)
          state = STATE_SEND;
      if (addr > 120)
          uart_puts_P("\r\nScan I2C-bus for devices:\r\n");
          addr = 0;
      // If slave address is between 8 and 119 then move to SEND state
      break;
   // Transmit I2C slave address and get result
   case STATE SEND:
      // I2C address frame:
      // +----+
      // | from Master | from Slave |
      // +----+
      // | 7 6 5 4 3 2 1 0 | ACK
      // a6 a5 a4 a3 a2 a1 a0 R/W result
      // +----+
      result = twi_start((addr<<1) + TWI_WRITE);</pre>
      twi_stop();
      /* Test result from I2C bus. If it is 0 then move to ACK state,
       * otherwise move to IDLE */
      if (result == 0)
          state = STATE ACK;
      else
          state = STATE_IDLE;
      break;
   // A module connected to the bus was found
   case STATE ACK:
      // Send info about active I2C slave to UART and move to IDLE
      itoa(addr, uart_string, 10);
      uart puts P("Found device at address: ");
      uart_puts(uart_string);
       uart_puts_P("\r\n");
       state = STATE IDLE;
```

```
break;

// If something unexpected happens then move to IDLE

default:
    state = STATE_IDLE;
    break;
}
```

2. (Hand-drawn) picture of I2C signals when reading checksum (only 1 byte) from DHT12 sensor. Indicate which specific moments control the data line master and which slave.



Meteo station

Consider an application for temperature and humidity measurement and display. Use combine sensor DHT12, real time clock DS3231, LCD, and one LED. Application display time in hours:minutes:seconds at LCD, measures both temperature and humidity values once per minut, display both values on LCD, and when the temperature is too high, the LED starts blinking.

1. FSM state diagram picture of meteo station. The image can be drawn on a computer or by hand. Concise name of individual states and describe the transitions between them.

